


TRÅDFRI

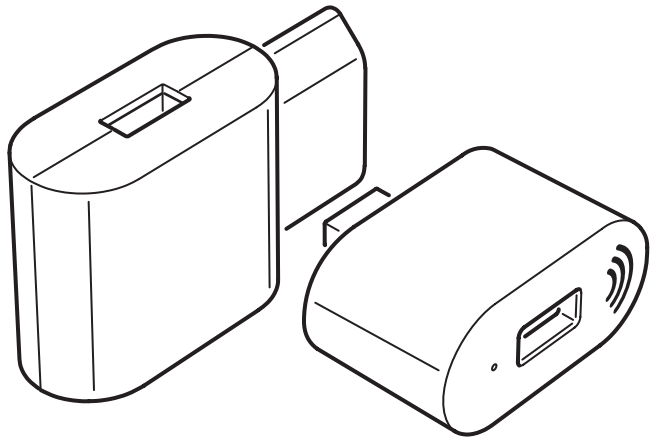

Design and Quality
IKEA of Sweden

English

4

עברית

6

WIRELESS SIGNAL REPEATER FUNCTIONS

With TRÅDFRI signal repeater you can expand the signal reach of your IKEA Home smart products.

 **Pairing:** Add IKEA Home smart products to your system. See instructions below.

ADDING STEERING DEVICE TO YOUR SIGNAL REPEATER

When the Signal Repeater is sold together with another IKEA Home smart product (in the same package), they are already paired.

You cannot add IKEA Home smart products directly to your signal repeater. A TRÅDFRI steering device is needed to add them.

To add steering devices, just follow the steps below:

Make sure that your signal repeater is plugged in and the main power is turned on.

1. Hold the steering device close to the signal repeater you want to add (no more than 5 cm away).
2. Press and hold the pairing button for at least 10 seconds, you can find the pairing button under the rear cover.

3. A red light will shine steadily on the steering device.
Then go to the product you want to steer and then repeat the pairing.

On your IKEA Home smart products a white light will begin to dim and flash one time to indicate that it has been successfully paired.

FACTORY RESET YOUR DEVICE

For wireless signal repeater:

Push a pin into the pinhole on bottom of the signal repeater for at least 5 seconds.

After reset the signal repeater you must pair your steering device to the signal repeater and then pair the steering device to your IKEA Home smart product again.

IMPORTANT!

- The Signal Repeater is for indoor use only and can be used in temperatures ranging from 0°C to 40 °C (32°F to 104 °F).
- Do not leave the wireless Signal Repeater in direct sunlight or near any heat source, as it may overheat.

- The range between the wireless Signal Repeater and the receiver are measured in open air. Different building materials and placement of the units can affect the wireless connectivity range.

WARNING:

- The wall socket must be located near the equipment and must be easily accessible.
- Only use in dry locations.
- Children should be supervised to ensure they do not play with the product.
- If the device is damaged it shall be destroyed.
- Never use a damage or faulty USB cable for charging, since this can damage the appliance and harm your device.

TECHNICAL DATA

Type: E1746 wireless Signal Repeater

Input: 5.0V DC

Range: 10 m in open air

For indoor use only

Operating frequency: 2405-2480MHz

Output power: 3 dBm

Instructions for use

- Connect the power adapter into the wall socket, insert the Signal Repeater into the free slot.
- When charging only use a recommended USB cable for your device and replace faulty cables imminently.

Good to know

- Can be used to charge the wireless roller blind battery-cell.
- USB cable length and quality influences charging speed and performance.
- Devices may get warm during charging; this is completely normal and they will gradually cool down again after they are fully charged.
- Storage temperature: -20°C to 25°C (4°F to 77°F).
- Operating temperature: 0°C to 40°C (32°F to 104°F).
- Unplug the power adapter from the power source before cleaning and when it is not in use.

Recommended precautionary measures and technical data, see the back of the power adapter.

CARE INSTRUCTIONS

To clean the Signal Repeater and the Power Adapter wipe with a soft dry cloth.

NOTE!

Never use abrasive cleaners or chemical solvents as this can damage the product.

Save these instructions for future use.

Product servicing

Do not attempt to repair this product yourself, as opening or removing covers may expose you to dangerous voltage points or other risks.

Technical data PSU

Type: ICPSW5-5EU-1

ICPSW5-5GB-1

Input: 100-240 VAC, 50/60Hz, 0.2A, 7.0W

Output: 5.0 V DC

Max total load: 1.0A, 5.0W

Average active efficiency: 78.5 %

Efficiency at low load (10 %): 68.0%

No load power consumption: 0.03 W

Indoor use only

Manufacturer: IKEA of Sweden AB

(commercial registration number: 556074-7551)

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

יצרן: IKEA of Sweden AB
(מספר רישום מסחרי: 556074-7551)

כתובת: Box 702, 343 81 Älmhult, SWEDEN



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

שימו לב!

אין להשתמש בחומרי ניקוי כימיים חזקים מאחר והם עלולים לגרום נזק למוצר.

שמרו את הוראות השימוש לעיון בעתיד.

שירות

אל תנסו לתקן את המוצר בעצמכם. פתיחת או הסרת הכיסוי עלול לחשוף אתכם לנזקודות מתח מסוכנות או סיכונים אחרים.

מידע טכני ספק כוח

דגם: ICPSW5-5EU-1

ICPSW5-5GB-1

קלט: VAC 100-240, 50 / 60Hz, 0.2A, 7W

פלט: DC 5.0 וולט

עומס מרבי: 1.0A, 5.0W

יעילות אנרגטית ממוצעת: 78.5%

יעילות אנרגטית בעומס נמוך (10%): 68.0%

עומס ללא צריכת חשמל: W 0.03

שימוש בתוך הבית בלבד

הוראות שימוש

- חברו את המתאם לשקע בקיר והכניסו את מגבר האותות לחריץ הפנוי.
- בעת טעינה, השתמשו רק בכבל USB המומלץ עבור ההתקן שברשותכם. החליפו כבלים פגומים באופן מיידי.

טוב לדעת

- ניתן לשימוש כדי להטעין את הסוללת וילון גלילה אלחוטי.
- אורך כבל USB ואיכותו משפיעים על מהירות הטעינה והביצועים.
- התקנים עשויים להתחמם במהלך הטעינה; זוהי תופעה תקינה לחלוטין. המכשירים יתקררו בהדרגה לאחר הטעינה.
- טמפרטורת אחסון: -20°C עד 25°C (4°F עד 77°F).
- טמפרטורת תפעולית: 0°C עד 40°C (32°F עד 104°F).
- יש לנתק את המתאם מהחשמל לפני הניקוי וכאשר אינו בשימוש.

ראו גב המתאם למידע על אמצעי זהירות מומלצים ונתונים טכניים.

הוראות טיפול

נגבו במטלית יבשה ורכה.

אופן השימוש במגבר אותות אלחוטי

ניתן להרכיב את טווח הקישוריות של מוצרי IKEA Home smart בעזרת מגבר אותות מסדרת TRÅDFRI.

 **התאמה:** הוסיפו מוצרי IKEA Home smart למערכת שלכם. עיינו בהוראות להלן.

צימוד מכשיר היגוי למגבר סיגנלים

מגבר סיגנלים ומוצר IKEA Home smart נוסף אשר נמכרים יחד באותה אריזה - הוצמדו עבורכם.

לא ניתן להוסיף מוצרי IKEA Home smart ישירות למגבר סיגנלים. יש להוסיף התקן היגוי TRÅDFRI כדי להוסיף אותם.

על מנת להוסיף התקני היגוי יש בצע את השלבים הבאים;

ודאו שמגבר הסיגנלים מחובר לשקע החשמל.

1. אחזו את התקן ההיגוי במרחק של עד 5 ס"מ ממגבר הסיגנלים אשר ברצונכם להוסיף.
2. לחצו על לחצן הצמדה שנמצא מתחת למכסה המוצר למשך 10 שניות לפחות.
3. נורית חיווי אדומה על גבי התקן ההיגוי תאיר בהתמדה. לאחר מכן עבור אל המוצר שברצונך להוסיף וחזור על תהליך ההצמדה.

נורית חיווי תהבהב באור לבן פעם אחת, על מנת לציין שמוצר IKEA Home smart הוצמד בהצלחה.

איפוס המוצר להגדרות יצרן

מגבר אותות אלחוטי:

כדי לבצע את איפוס, יש ללחוץ על הלחצן שבתוך חריץ האיפוס למשך 5 שניות.

לאחר איפוס מגבר אותות, יש לבצע התאמה בין התקן ההיגוי למגבר האותות ולאחר מכן להתאים שוב את התקן ההיגוי למוצר IKEA Home smart.

חשוב!

- מגבר סיגנלים מיועד לשימוש פנימי בלבד. ניתן לשימוש בטמפרטורות הנעות בין 0°C ל 32°F (40°C - ל - 104°F).
- אין לחשוף את מגבר סיגנלים אלחוטי לאור שמש ישיר או מקור חום כלשהו, מחשש להתחממות יתר.
- הטווח התפעולי בין מגבר סיגנלים אלחוטי למקלט נמדד באוויר הפתוח. חומרי בניין שונים ומיקום היחידות יכולים להשפיע על טווח הקישוריות האלחוטית.

אזהרה:

- על שקע הקיר להיות נגיש וממוקם בקרבת הציוד.
- השתמשו רק באיזורים יבשים.
- יש להשגיח על ילדים על מנת להבטיח שהם אינם משחקים עם המוצר.
- במידה והכבל פגום, יש להשמיד את המוצר.
- אין להשתמש בכבל USB פגום לטעינה, מכיוון שהדבר עלול להזיק למוצר ולפגוע במכשיר שברשותך.

מידע טכני

סוג: E1746 מגבר סיגנלים אלחוטי

מתח: 5.0V DC

טווח: 10 מ' באוויר הפתוח

לשימוש בתוך הבית בלבד

תדר פעילות: 2405-2480MHz

הספק: 3 dBm

