
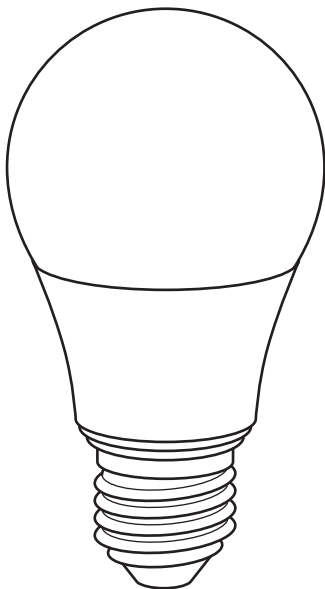


RODRET




E2201

TRÅDFRI

LED2103G5

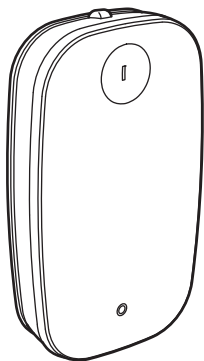

Design and Quality
IKEA of Sweden

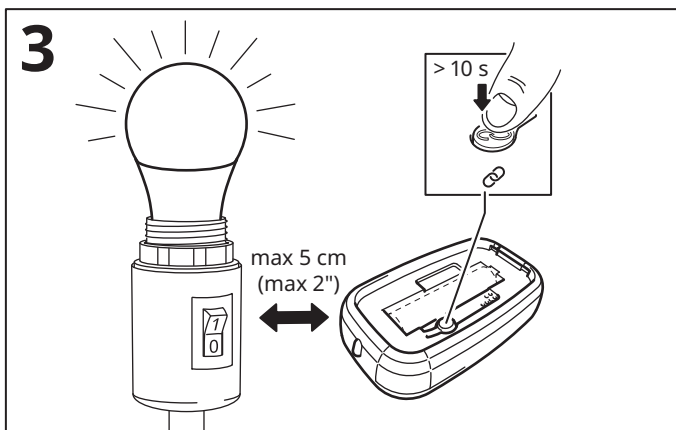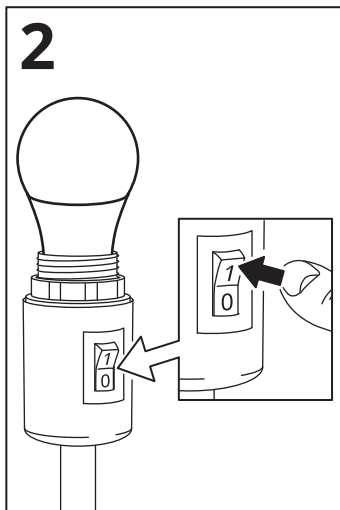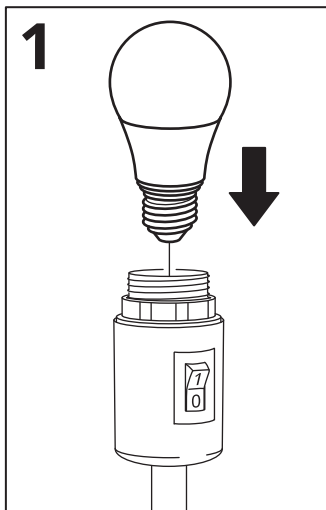

English	4
עברית	7

English

RODRET wireless dimmer/power switch works with smart lights and plugs from IKEA. It can be used with DIRIGERA hub to control smart products via the IKEA Home smart app.



IKEA Home smart app

For Apple devices, download the app using the App Store. For Android devices, download the app using Google Play store.

Note: If you have a TRÅDFRI gateway please use IKEA Home smart 1 app.

Getting started with DIRIGERA hub

Download the IKEA Home smart app and follow the instructions on screen to add the dimmer/switch to your IKEA Home smart system.

Getting started without DIRIGERA hub

1. Make sure the smart product you want to connect is installed and powered on.
2. Hold your dimmer/switch close to the smart product (less than 5 cm away).
3. Press and hold the pairing button  for at least 10 seconds. A red LED will show on the dimmer/switch. The smart product will pulse with a white LED once connected.

Good to know

Without DIRIGERA, you can connect a maximum of 10 smart products to one dimmer/switch. Remember to add one product at a time. If your products are close together, disconnect the ones you have already connected while adding the next product.

CAUTION:

DO NOT USE WITH STANDARD DIMMERS. Only use the control provided with or specified by these instructions to control this bulb. This bulb will not operate properly when connected to a standard (incandescent) dimmer or dimming control. Only controllable by IKEA Smart lighting products.

Get to know your product



Pairing button



Press to turn on, or long-press to increase brightness



Press to turn off, or long-press to decrease brightness

Changing the battery

A red LED light will blink when you press any button the dimmer/switch to show that a new battery is needed. Open the battery lid and replace with a new AAA/HR03 battery. We recommend using a LADDA rechargeable battery. Please note it is sold separately.

Factory reset

To reset and remove all connected products, quick-press the pairing button 4 times (within 5 seconds). Follow steps 1-3 to reconnect your smart products.

Care instructions

To clean the product, wipe it with a soft cloth moistened with a little mild detergent. Use another soft, dry cloth to wipe dry. Never use abrasive cleaners or chemical solvents as this can damage the product.

IMPORTANT!

- The wireless dimmer is for indoor use only and can be used in temperatures ranging from 0° C to 40 °C.
- Do not leave the wireless dimmer in direct sunlight or near any heat source, as it may overheat.
- Different building materials and placement of the units can affect the wireless connectivity range.

WARNING!

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Technical data

Model: RODRET wireless dimmer

Type: E2201

Input: 1.2 V, 1x AAA/HR03 LADDA battery

Range: 10 m in open air.

For indoor use only

Operating frequency: 2405-2480 MHz

Output power: 3 dBm

IP-class: IP44

Type: LED2103G5

Operating frequency: 2405 – 2480 MHz

Output power: 10 dBm

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

מפסק/דימר אלחוטי RODRET פועל עם מנורות ותקעים חכמים של IKEA. ניתן להשתמש בו עם רכזת DIRIGERA כדי לשלוט במוצרים חכמים דרך אפליקציית IKEA Home smart.

אפליקציית IKEA Home smart

עבור מכשירי Apple, יש להוריד את האפליקציה דרך ה-App Store. עבור מכשירי Android, יש להוריד את האפליקציה דרך ה-Google Play Store.



הערה: אם ברשותך שער TRÅDFRI, יש להשתמש באפליקציית IKEA Home smart 1.

תחילת עבודה עם רכזת DIRIGERA

יש להוריד את אפליקציית IKEA Home smart ולפעול לפי ההוראות שעל המסך כדי להוסיף את המפסק/דימר למערכת IKEA Home smart.

תחילת עבודה ללא רכזת DIRIGERA

1. ודא שהמוצר החכם שברצונך לחבר מותקן ומופעל.
2. החזק את המפסק/דימר קרוב למוצר החכם (מרחק קטן מ-5 ס"מ).
3. לחץ לחיצה ארוכה על לחצן ההתאמה (סמל) למשך 10 שניות לפחות. נורית אדומה תאיר במפסק/דימר. ברגע שהמוצר החכם מחובר, הוא יהבהב באור לבן.

טוב לדעת

ללא DIRIGERA, אפשר לחבר עד 10 מוצרים חכמים למפסק/דימר אחד. זכור להוסיף מוצר אחד בכל פעם. אם המוצרים קרובים זה לזה, נתק את אלו שכבר חיברת בזמן הוספת המוצר הבא.

זהירות:

אין להשתמש עם עמעם סטנדרטי. השתמשו רק בשלט שסופק או שצוין בהוראות אלה כדי לשלוט בנורה זו. נורה זו לא תפעל כהלכה כאשר היא מחוברת לעמעם סטנדרטי (ליבון) או שלט לעמעם. ניתן לשליטה על ידי מוצרי תאורה חכמה של IKEA בלבד.

לחצן התאמה 

|| לחץ כדי להפעיל, או לחץ לחיצה ארוכה כדי להגביר את הבהירות

○ לחץ כדי לכבות, או לחץ לחיצה ארוכה כדי להפחית את הבהירות

החלפת הסוללה

בלחיצה על לחצן כלשהו במפסק/דימר, נורית אדומה תהבהב כדי לציין שיש צורך בסוללה חדשה. פתח את מכסה הסוללה והחלף את הסוללה בסוללה חדשה מסוג AAA/HR03. אנו ממליצים להשתמש בסוללה נטענת מסוג LADDA. שים לב שהיא נמכרת בנפרד.

איפוס להגדרות היצרן

כדי לאפס ולהסיר את כל המוצרים שמחוברים, לחץ לחיצה מהירה על לחצן ההתאמה 4 פעמים (תוך 5 שניות). פעל לפי שלבים 1-3 כדי לחבר מחדש את המוצרים החכמים.

הוראות תחזוקה

לניקוי המוצר, נגב אותו במטלית רכה שהורטבה במעט חומר ניקוי עדין. כדי לייבש, יש להשתמש במטלית נוספת, רכה ויבשה. אין להשתמש בחומרי ניקוי שוחקים או בממסים כימיים, מכיוון שהם עלולים לגרום נזק למוצר.

חשוב לדעת!

- הדימר האלחוטי מיועד לשימוש בתוך מבנים בלבד בטווח טמפרטורות של 0°C עד 40°C .
- אין להשאיר את הדימר האלחוטי חשוף לאור שמש ישיר או בסמוך למקור חום, מכיוון שהוא עלול להתחמם יתר על המידה.
- חומרי בניין שונים ומיקום שונה של היחידות עשויים להשפיע על טווח הקישוריות האלחוטית.

אזהרה!

החלפת הסוללה בסוללה מהסוג הלא נכון עלולה לגרום לסכנת פיצוץ. יש להשליך סוללות משומשות בהתאם להנחיות.

נתונים טכניים

דגם: דימר אלחוטי RODRET

סוג: E2201

כניסה: 1.2 וולט, x1 סוללת LADDA AAA/HR03

טווח: 10 מ' באוויר הפתוח.

לשימוש פנימי בלבד

תדר הפעלה: 2,405-2,480 MHz

הספק יציאה: 3 dBm

סיווג IP: IP44

סוג: LED2103G5

תדר הפעלה: 2405 – 2480 MHz

עוצמת פלט: 10 dBm

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

