

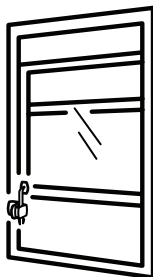
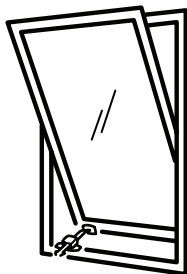
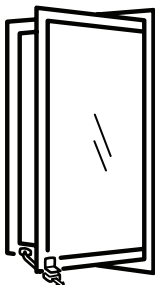


UNDVİKA

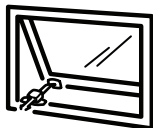

Design and Quality
IKEA of Sweden

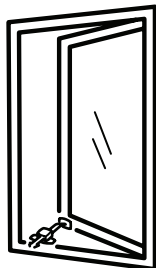

English

4

עברית

5

English

IMPORTANT – READ CAREFULLY – KEEP FOR FUTURE REFERENCE

Read these instructions carefully before mounting and using this locking device. The child protective function of the locking device may be affected if you do not follow the instructions. Keep the instructions for future reference.

Locking device suitable for inward/outward side hinged windows, top and middle hinged windows and single hung sliding windows only. See illustration.



WARNING

Check the locking device prior to use to secure it is intact. Replace the device if any part is broken, torn or missing.

This locking device does not automatically lock again after it has been completely released.

Some children will be able to operate the child resistant mechanism, especially children around four years and above.

עברית

חשוב! קראו בעיון ושמרו לשימוש עתידי.

קראו את ההוראה בזהירות לפני ההרכבה והשימוש באבזר הנעילה. יש להרכיב את מנגנון הנעילה לפי ההוראות כדי שיהיה יעיל בפני ילדים. שמרו על ההוראות לשימוש עתידי. אבזר הנעילה מתאים לחלון פנימי/חיצוני עם ציר צדדי, לחלונות עם צירים עליונים ואמצעיים וחלונות הזזה בתלייה יחידה בלבד. ראו אזור



אזהרה

בדקו את אבזר הנעילה לפני השימוש בו על מנת לוודא את תקינותו. החליפו אם אחד מהחלקים שבור או חסר. אבזר הנעילה אינו ננעל אוטומטית שוב לאחר ששוחרר לחלוטין. יש ילדים אשר יצליחו לתפעל את מנגנון האבזר, במיוחד ילדים מעל גיל 4.

