

UPPÅTVIND



Design and Quality
IKEA of Sweden

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved by a person responsible for their safety. Children shall not play with the appliance.
Cleaning and user maintenance shall not be made by children without supervision.

Electricity safety

- Do not use a damaged power plug or loose electrical outlet.
- Do not move the product by pulling the power cord.
- To prevent the power cord from being damaged or deformed, do not forcibly bend it or run it under a heavy object.
- If the electrical outlet is wet, carefully unplug the product and allow the electrical outlet to completely dry before subsequent use.
- Do not handle the power plug with a wet hand.
- Do not plug in and unplug the power plug repeatedly.
- Unplug the product before inspection or parts replacement.
- Remove any dust or water from the power plug.
- Unplug the product if it is not to be used for a long time.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not attempt to repair or modify the power cord.
- This product shall only be used together with the included power supply unit.
- If any part is damaged, the product should not be used.

Installation safety

- The product is only intended for household use under normal operating conditions.
- Do not install the air purifier near a heating device.
- Do not use the product in wet environments or in environments with high humidity, such as the bathroom or in a room with great variations in temperature.
- Leave at least 30 cm of free space around the product.
- Do not use the product in areas where flammable gases or combustible materials are used or stored.
- Do not exert excessive force or subject the product to bumps and bangs.
- Install the product so that no obstacles around the product block the circulation of air.

Operation safety

- Never place the product in water.
- Do not disassemble, repair or modify the product.
- Unplug the product before you clean it.
- If the air purifier produces a strange noise, burning smell or smoke, immediately remove the power plug from the electrical outlet and call our Customer support.
- Do not spray any flammable materials into the air inlet.
- Do not stick fingers or foreign objects into the air inlet or outlet.
- Replace the filter with a new one according to filter replacement cycles. Product performance may otherwise deteriorate.
- Do not push or lean against this product since it may tip over and cause physical injury or product malfunction.

Care Instructions


Unplug the product before cleaning.
To clean the product, wipe with a soft moistened cloth. Use another soft, dry cloth to wipe dry.
Vacuum-clean the pre-filter regularly.

Note!

Never use abrasive cleaners or chemical solvents as this can damage the product.


Fan speed control

The fan can be set to 3 different speeds by pressing the power button multiple times.
A long press will turn the air purifier OFF regardless of current speed level.
The LED lamp's brightness indicates the chosen speed level.

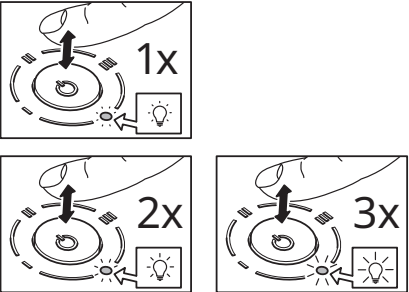

Filter replacement


When replacing the filter, it is essential that the user proceeds as follows:

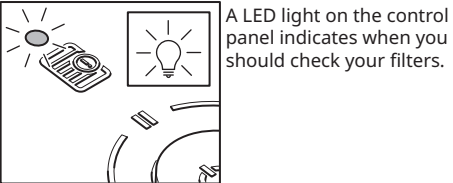

Warning!

The power supply cord must be disconnected during filter replacement!

1. Disconnect the power and wait until the fan has stopped.
2. Remove the pre-filter by the finger indent. Clean the pre-filter with a vacuum cleaner or with water depending on how dirty it is.
3. Remove the particle filter and handle the used filter carefully, dispose of the filter in accordance with local environmental regulations in your country.
4. Clean inside, removing all dust and dirt.
5. Reconnect the power supply cord.
6. Press and hold the RESET button for 3 seconds. The reset initialises the filter replacement cycle counter.

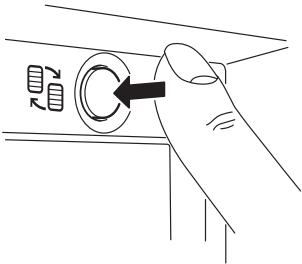

7. Insert the new particle filter.
8. Fix the pre-filter in place.

- Wash your hands thoroughly after replacing the filter.

Filter cleaning and replacement cycles

Filter	cycles	method
Pre-filter	Every 2~4 weeks	Cleaning
Particle filter	Every 6 months	Replacement

* The recommended filter replacement cycles may differ depending on the operating environment.

Run modes with filter for particle removal.

Level	Noise (Spl)	CADR	Power
I	31 dB(A)	31 m³/h	2.4W
II	47 dB(A)	60 m³/h	4.5W
III	55 dB(A)	95 m³/h	8.0W

Save these instructions for future use.

Technical specifications

Model: UPPÄTVIND air purifier
Type: E2111
Input: 24.0V DC, 0.8 A, 19.0W
Dimensions: 280 x 225 x 125 mm (HxWxD)
Weight: 1.6 kg
Filter: Filter for particle removal.

- Operational temperature: 10°C to 40°C.
- Humidity when operational: 10-60% RH (Recommended operational humidity: 40-60% RH)

Technical data PSU

Type: ICPSW24-19-1
ICPSW24-19-1A
Input: 100-240 VAC, 50/60 Hz, 0.4A
Output: 24.0V DC, 0.8 A, Max 19.0W

Warning!

If the pins of the plug are damaged, the power supply unit/transformer must be discarded

Average active efficiency: 88.6 %
Efficiency at low load (10 %): 82.3 %
No load power consumption: 0.073 W

Indoor use only

Manufacturer: IKEA of Sweden AB
(commercial registration number: 556074-7551)

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

מחזורי ניקוי המסננים והחלפתם

מסנן	מחזורים	שיטה
מסנן מקדים	כל 2 ~ 4 שבועות	ניקוי
מסנן חלקיקים	כל 6 חודשים	החלפה

* תדירות החלפת המסננים המומלצת עשויה להשתנות בהתאם לסביבת ההפעלה.

מצבי הפעלה עם מסנן לצורך הסרת חלקיקים.

רמה	רעש (SPL)	CADR (קצב העברת אוויר נקי)	הספק
I	31dB(A)	31 מ"מ"ק/שעה	2.4W
II	47dB(A)	60 מ"מ"ק/שעה	4.5W
III	55dB(A)	95 מ"מ"ק/שעה	8.0W

יש לשמור הוראות אלה לשימוש עתידי.

מפרט טכני

דגם: מטהר אוויר UPPÅTVIND

סוג: E2111

כניסה: 24.0V DC, 0.8 A, 19.0W

מידות: 125 x 225 x 280 מ"מ (גובה x רוחב x עומק)

משקל: 1.6 קילוגרם

מסנן: מסנן להסרת חלקיקים.

- טמפרטורת הפעלה: 10°C עד 40°C.
- לחות בעת ההפעלה: RH 10-60%
- (לחות הפעלה מומלצת: RH 40-60%)

מידע טכני ספק כוח

סוג: ICPSW24-19-1

ICPSW24-19-1A

קלט: 100-240V AC, 50/60 Hz, 0.4A

פלט: 24.0V DC, 0.8 A, Max 19.0W

אזהרה!

במידה והפינים של התקע פגומים, יש להשליך את ספק הכוח/השנאי לאשפה

יעילות פעילות ממוצעת: 88.6 %
יעילות בעומס נמוך (10 %): 82.3 %
צריכת חשמל ללא עומס: 0.073 W

שימוש במקום מקורה בלבד

יצרן: IKEA of Sweden AB
(מספר רישום מסחרי: 556074-7551)

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

יש לפקח על ילדים שגילם מעל 8 שנים ואנשים עם מגבלויות גופניות או נפשיות, או אנשים ללא הניסיון והידע הנחוצים לשימוש במוצר זה. במידה והדבר לא מתאפשר, יש לספק להם הוראות לשימוש בטיחותי במוצר, ולהסביר את הסכנות הכרוכות בשימוש בו. אין לאפשר לילדים לשחק במוצר זה.

אין לאפשר לילדים לנקות או לתחזק מוצר זה ללא השגחה.

בטיחות חשמל

- אין להשתמש בתקע חשמל פגום או בשקע חשמל רופף.
- אין להזיז את המוצר על ידי משיכת כבל החשמל.
- כדי למנוע מכבל החשמל להיפגם או להתעוות, אין לכופף אותו בכוח או להעביר אותו מתחת לחפץ כבד.
- אם שקע החשמל נרטב, נתק את המוצר בזריות ואפשר לשקע החשמל להתייבש לחלוטין לפני השימוש הבא.
- אין לגעת בתקע החשמל בידים רטובות.
- אין לחבר ולנתק את תקע החשמל שוב ושוב.
- נתק את המוצר לפני בדיקתו או החלפת חלקיו.
- הסר אבק ומים מתקע החשמל.
- נתק את המוצר אם לא ייעשה בו שימוש במשך זמן רב.
- אם כבל החשמל ניזוק, יש להחליף אותו על ידי היצרן, נציג שירות או על-ידי אנשים בעלי הסמכה דומה על מנת למנוע סכנה.
- אל תנסה לתקן או לשנות את כבל החשמל.
- יש להשתמש במוצר זה אך ורק עם ספק הכוח המצורף.
- אם חלק כלשהו במוצר פגום, אין להשתמש במוצר.

בטיחות התקנה

- המוצר מיועד לשימוש ביתי בתנאי הפעלה רגילים בלבד.
- אין להתקין את מטהר האוויר ליד מכשיר חימום.
- אין להשתמש במוצר בסביבות רטובות או בסביבות עם לחות גבוהה, כגון חדרי אמבטיה או חדרי שיש בהם שינויי טמפרטורה גדולים.
- יש להשאיר לפחות 30 ס"מ של שטח פנוי סביב המוצר.
- אין להשתמש במוצר במקומות שבהם נעשה שימוש בגזים או בחומרים דליקים או שהם מאוחסנים בהם.
- אין להפעיל על המוצר כוח מופרז, לטלטל או לחבוט בו.
- התקן את המוצר כך שלא יהיו סביבו מכשולים שיחסמו את זרימת האוויר.

בטיחות הפעלה

- לעולם אין לטבול את המוצר במים.
- אין לפרק, לתקן או לשנות את המוצר.
- נתק את המוצר מהחשמל לפני שתנקה אותו.
- אם מטהר האוויר מפיך רעש מוזר, ריח של משהו נשרף או עשן, הוצא מיד את תקע החשמל משקע החשמל והתקשר לתמיכת הלקוחות שלנו.
- אין לרסס חומרים דליקים לתוך פתח כניסת האוויר של המכשיר.
- אין להכניס אצבעות או עצמים זרים לתוך פתחי הכניסה והיציאה של האוויר.
- יש להחליף המסנן במסנן חדש בהתאם למחזורי החלפת המסנן. אחרת, ביצועי המוצר עלולים להיפגע.
- אין לדחוף את המוצר או להישען עליו שכן הוא עלול ליפול, והדבר עלול לגרום לפציעה או לתקלה במוצר.

הוראות תחזוקה




נתק את המוצר מהחשמל לפני שתנקה אותו.
כדי לנקות את המוצר יש לנגב אותו במטלית לחה ורכה. כדי לייבש, יש להשתמש במטלית נוספת, רכה ויבשה.
השתמש בשואב אבק כדי לנקות את המסנן המקדים באופן קבוע.

שים לב!

אין להשתמש בחומרי ניקוי שוחקים או בממסים כימיים, מכיוון שהם עלולים לגרום נזק למוצר.

שליטה על מהירות האיוורור

ניתן להגדיר את המאוורר לפי 3 רמות מהירות שונות על ידי לחיצה על לחצן ההפעלה מספר פעמים.
לחיצה ארוכה תכבה את מטהר האוויר ללא קשר לרמת המהירות הנוכחית.
בהירות נורת ה-LED מציינת את רמת המהירות שנבחרה.

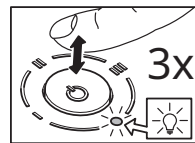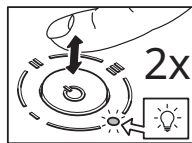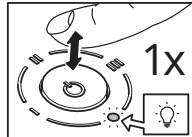

החלפת מסנן

בעת החלפת המסנן, חייני לפעול באופן הבא:




כאשר נורת ה-LED בלוח הבקרה דולקת, פירוש הדבר הוא שעליך לבדוק את המסננים.

אזהרה!

יש לנתק את כבל ספק הכוח במהלך החלפת המסנן!

1. נתק את המכשיר מהחשמל והמתן עד שהמאוורר יעצר.
2. הסר את המסנן המקדים בעזרת האצבע בחרץ המיועד לכך. נקה את המסנן המקדים באמצעות שואב אבק או במים, בהתאם למידת הלכלוך שלו.
3. הסר את מסנן החלקיקים וטפל במסנן המשמש בזריות. השלך את המסנן בהתאם לתקנות הסביבה המקומיות במדינתך.
4. נקה את החלק הפנימי והסר אבק וכלוך.
5. חבר מחדש את כבל ספק הכוח.
6. לחץ והחזק את לחצן RESET למשך 3 שניות. האיפוס מאתחל את מונה מחזורי החלפת המסנן.

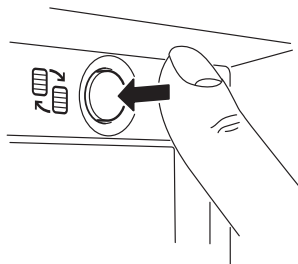

7. הכנס את מסנן החלקיקים החדש.
8. התקן את המסנן המקדים במקומו.

• שטוף את ידך ביסודיות לאחר החלפת המסנן.

