


VÄSTMÄRKE

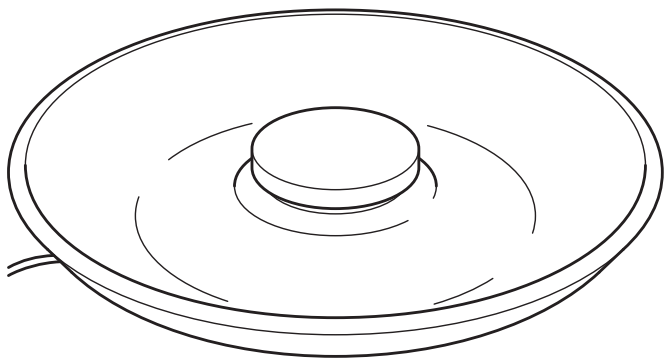

Design and Quality
IKEA of Sweden

English	4
עברית	6

English



Read instructions carefully and keep for future reference.

Product description

VÄSTMÄRKE wireless charger is designed to charge or power Qi-certified devices. The wireless charger transfers energy to the device through an electromagnetic field without a direct electrical connection.

Important! This product must be completed with a USB-C charger.

Recommended USB-C charger:
SJÖSS 20W USB fast charger.

Product features

- The wireless charger is certified according to Qi 2.0 BPP (Baseline Power Profile) and MPP (Magnetic Power Profile) specifications.
- Compatible with Power Delivery (PD 3.0) and Quick Charge (QC 2.0).
- Uses magnetic alignment. For optimal magnetic connection and charging performance, remove the device's case or use a magnetic case cover.
- Built-in safety features protect the wireless charger from short-circuiting, overheating and overloading.

Instructions for use

- Connect wireless charger to a USB-C fast charger and plug it into the wall socket.
- To wirelessly charge your device, place it directly on the charger. Built-in magnetic alignment enables precise placement of the device. If the charging doesn't start, adjust the position of the device. Note! For some devices, it is necessary to activate wireless charging mode.
- If the battery of the device you want to charge is completely discharged, it may take a few minutes before it starts charging.

- When your device is fully charged, remove it from the wireless charger.

Care instructions

To clean the product, unplug from power source and wipe with a dry cloth. Unplug the product from the power source when not in use.

Good to know

- Do not place foreign materials like metal objects between the mobile device and the wireless charger. The mobile device might not charge properly or may get damaged due to overheating.
- Devices may get warm during charging and will gradually cool down again after they are fully charged.
- Charging time may vary based on the device's battery capacity, lifetime and charge level, as well as ambient temperature.
- Operating temperature: 0° C to 40° C (32° F to 104° F).

WARNING

- Only charge Qi-certified devices.
- Use only indoors in dry areas.
- Discard the product if damaged.
- Never submerge in water or other liquids.
- Never use a damaged or faulty power adapter, since this can damage or harm the charger or your device.
- Children should be supervised to ensure they do not play with the product.
- The wall socket must be located near the product and must be easily accessible.

Technical data

Model: VÄSTMÄRKE

Type: E2400-T

Input: 5.0VDC 3.0A, 9.0VDC 2.2A, USB-C

Operating frequency:

110 ~ 205 kHz and 360 kHz

Output power: -8.13 dBμA/m at 10 m

Connector type: USB type C

For important markings, check the bottom side of the product.

Power allocation	
Input	Output
Pin < 8.5W	5.0W Max.
9.0W < Pin < 11.0W	7.5W Max.
PD: 9.0V/2.0A 18.0W	10.0W Max.
PD: 9.0V/2.2A 20.0W or above	15.0W Max.

Manufacturer: IKEA of Sweden AB

Address: Box 702. SE-343 81 Älmhult, SWEDEN



The 'Qi' symbol is trademark of the Wireless Power Consortium

RF EXPOSURE INFORMATION

According to RF exposure regulations, under normal operations the end user shall refrain from being closer than 10 cm from the device.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, IKEA of Sweden AB declares that the radio equipment type E2400-T is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: <https://www.ikea.com>. Access local IKEA website and search for the desired product. On the product page, navigate to Product details/Assembly and Documents.



קראו את ההוראות בעיון ושמרו לשימוש עתידי.

תיאור המוצר

מטען אלחוטי VÄSTMÄRKE נועד להטעין או להפעיל מכשירים עם העומדים בתקן Qi. המטען האלחוטי מעביר אנרגיה למכשיר באמצעות שדה אלקטרומגנטי, ללא חיבור חשמלי ישיר.

חשוב! יש להשלים עם מטען USB.

מטען USB-C מומלץ:

SJÖSS 20W לטעינה מהירה.

מאפייני המוצר

- המטען האלחוטי מוסמך על פי מפרט Qi MPP-i (2.0 BPP (Basic Power Profile (Magnetic Power Profile)).
- תואם לתקנים (Power Delivery (PD) Quick Charge (QC) 2.0 ו-3.0.
- פועל על ידי חיבור מגנטי. לחיבור וביצועי טעינה מיטביים, עליכם להסיר את כיסוי המכשיר או להשתמש בכיסוי מגנטי.
- פונקציית בטיחות מובנית המגינה על המטען האלחוטי מפני קצר חשמלי, חימום יתר ועומס יתר.

הוראות שימוש

- חברו את המטען האלחוטי לכלל טעינה מהירה מסוג USB-C ולאחר מכן לשקע החשמלי.
- לטעינה אלחוטית, יש למקם את המכשיר ישירות על המטען. החיבור המגנטי המובנה מאפשר למקם במדויק את המכשיר. במידה ואינה החלה טעינה, שנו את מיקום המכשיר. בדקו שלחץ נוסף אינו משתחרר והסירו את שסתום המשקל באמצעות מטלית או כפפות,

שכן הוא חם מאוד. במכשירים מסויימים, יש להפעיל בהגדרות את אופציית הטעינה האלחוטית.

- במידה והסוללה ריקה, ייתכן שיעברו מספר דקות עד תחילת טעינת המכשיר.
- כשהמכשיר שלכם טעון במלואו, הסירו אותו מהמטען האלחוטי.

הוראות ניקוי ותחזוקה

לניקוי המוצר, יש לנתקו מהחשמל ולאחר מכן לנגב אותו באמצעות מטלית יבשה. יש לנתק את המוצר מהחשמל כאשר אינו בשימוש.

טוב לדעת

- אין להניח חומרים זרים, כגון חפצי מתכת בין מכשיר הנייד למטען האלחוטי. ייתכן שהמכשיר לא ייטען כראוי או עלול להינזק עקב התחממות יתר.
- המכשירים עשויים להתחמם במהלך הטעינה ויתקררו בהדרגה לאחר סיומה.
- זמן הטעינה עשוי להשתנות בהתאם ליכולת הסוללה של המכשיר, רמת הטעינה, גיל הסוללה וטמפרטורת החדר.
- טמפרטורות הפעלה: C 40° עד C 0° F 104° עד F 32°

אזהרה

- טוען מכשירים העומדים בתקן Qi בלבד.
- מתאים לשימוש בתוך הבית ובאזורים יבשים בלבד.
- יש להשליך את המוצר במידה ופגום.
- אין להרטיב במים או בכל נוזל אחר.
- אין להשתמש במתאם פגום מאחר והוא עלול להזיק למוצר ולפגוע במכשיר שברשותכם.
- יש להשגיח על ילדים על מנת להבטיח שהם אינם משחקים עם המוצר.
- ודאו כי שקע הקיר נגיש וממוקם בקרבת הציוד.

חשיפה RE מידע

על פי רגולציות החשיפה של RF, בזמן פעילות רגילה, על משתמש הקצה לשמור על מרחק של 10 ס"מ לפחות מהמכשיר.



סימן המחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למחזור בהתאם לחוקים המקומיים. באמצעות הפרדת מוצר זה מן הפסולת הביתית, תעזרו להפחית את כמות הפסולת המועברת למשפחות או מטמנות ולמזער את ההשפעה השלילית על בריאות האנשים והסביבה. לקבלת מידע נוסף, אנא צרו קשר עם חנות איקאה הקרובה לביתכם.

הצהרת תאימות EU

IKEA of Sweden AB מצהירה בזאת על כך שציוד הרדיו מסוג E2400-T עומד בתקן EU/2014/53. הטקסט המלא של הצהרת התאימות EU זמין ב- <http://www.ikea.com>. היכנסו אל אתר האינטרנט המקומי של איקאה וחפשו את המוצר הרצוי. בדף המוצר, לחצו על תיאור מוצר/הרכבה ומסמכים.

מפרט טכני

דגם: VÄSTMÄRKE

סוג: E2400-T

מתח כניסה: 5.0VDC 3.0A, 9.0VDC

2.2A, USB-C

תדר פעילות:

110 ~ 205 kHz ו 360 kHz

הספק יציאה: -13 dBμA/m at 10 m

סוג חיבור: USB-C

לסימונים חשובים, בדקו את הצד התחתון של המוצר.

הקצאת כוח	
מתח כניסה	מתח יציאה
פין > 8.5W	5.0W מקסימום
9.0 W > פין > 11.0 W	7.5W מקסימום
PD: 9.0 V / 2.0 A 18.0 W	10.0W מקסימום
PD: 9.0 V / 2.2 A 20.0 W ומעלה	15.0W מקסימום

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, SWEDEN

סמל 'Qi' הוא הסימן המסחרי של
Wireless Power Consortium.



