

VALLHORN



Design and Quality
IKEA of Sweden

English **3**

עברית **7**

English

VALLHORN motion sensor works with smart lights and plugs from IKEA. It can be used with DIRIGERA hub to control smart products via the IKEA Home smart app.



IKEA Home smart app

For Apple devices, download the app using the App Store. For Android devices, download the app using Google Play store.

Note: If you have a TRÅDFRI gateway please use IKEA Home smart 1 app. For the best experience, please upgrade to DIRIGERA hub.

Getting started with DIRIGERA hub

Download the IKEA Home smart app and follow the instructions on screen. With DIRIGERA, you can connect as many products as you want to one motion sensor.


Getting started without DIRIGERA hub

1. Make sure the smart product you want to connect is installed and powered on.
2. Hold the motion sensor close to the smart product (less than 5 cm away).
3. Press and hold the Pairing button  for at least 10 seconds. A red LED will steadily shine under the lens of the motion sensor. The smart product will pulse with a white LED once connected.

Good to know

Without DIRIGERA, you can connect a maximum of 10 smart products to one motion sensor. Remember to add one product at a time. If your products are close together, disconnect the ones you have already connected while adding the next product.

Get to know your product

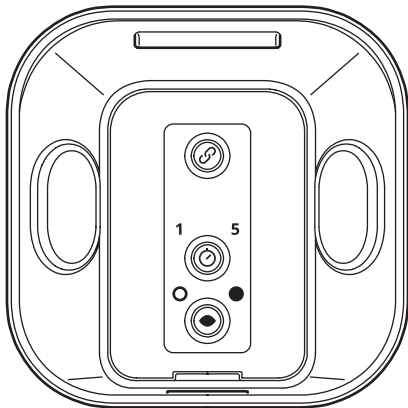

 Pairing button

 Choose how many minutes the connected lights and plugs will be on.

 Choose between light and dark mode. In light mode, the detected motion will turn on lights in any surrounding. In the dark mode, the detected motion will turn on the lights only in the dark surrounding.

Changing the batteries

A red LED light will light up under the lens of the motion sensor to show that new batteries are needed. Open the battery lid and replace with two new AAA/HR03 batteries. We recommend using LADDA rechargeable batteries. Please note they are sold separately.

Factory reset

To reset and remove all connected products, quick-press the Pairing button 4 times (within 5 seconds). Follow steps 1-3 to reconnect your smart products.

Care instructions

To clean the product, wipe it with a soft dry cloth. Do not use abrasive cleaning agents, chemical solvents or other equipment that may damage the products.

IMPORTANT!

- Operating temperature: -5°C to 40 °C.
- Do not leave the sensor in direct sunlight or close to any heat source to prevent overheating.
- Different building materials and placement of the units can affect the wireless connectivity range.

WARNING!

Risk of explosion if either battery is replaced by an incorrect type. Do not mix batteries of different capacities, types or date stamps. Dispose of used batteries according to instructions.

Technical data

Model: VALLHORN motion sensor

Type: E2134

Input: 2.4V, 2 x LADDA batteries HR03/AAA 1.2V

Range: 10 m in open air.

Sensor view angle: 60° - 120°

Sensor range: About 10 m

Operating frequency: 2405-2480 MHz

Output power: 3 dBm


IP-class: IP44

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

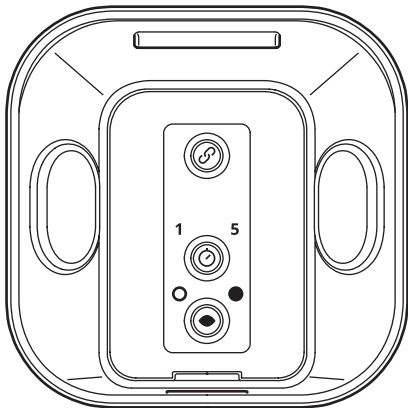

לחצן התאמה 

בחירת מספר הדקות שהאורות והתקעים המחוברים יפעלו. 

בחירה בין מצב מואר וחשוך. במצב מואר, התנועה שמזוהה תפעיל אורות בכל הסביבות. במצב חשוך, התנועה המזוהה תפעיל אורות רק בסביבות החשוכות. 

החלפת הסוללות

נורית אדומה תאיר מתחת לעדשה של חיישן התנועה כדי לציין שיש להחליף את הסוללות. פתח את מכסה הסוללות והחלף בשתי סוללות חדשות מסוג AAA/HR03. אנו ממליצים להשתמש בסוללות נטענות מסוג LADDA. יש לשים לב שהן נמכרות בנפרד.

איפוס להגדרות היצרן

כדי לאפס ולהסיר את כל המוצרים שמחוברים, יש ללחוץ לחיצה מהירה על לחצן ההתאמה 4 פעמים (תוך 5 שניות). יש לפעול לפי שלבים 1-3 כדי לחבר מחדש את המוצרים החכמים.

הוראות תחזוקה

כדי לנקות את המוצר, יש לנגב אותו במטלית רכה ויבשה. אין להשתמש בחומרי ניקוי שוחקים, תמיסות כימיות או באביזרים אחרים שעלולים לגרום נזק למוצרים.

חיישן תנועה VALLHORN עובד עם מנורות ותקעים חכמים מבית IKEA. ניתן להשתמש בו עם רכזת DIRIGERA כדי לשלוט במוצרים חכמים דרך אפליקציית IKEA Home smart.

אפליקציית IKEA Home smart



עבור מכשירי Apple, יש להוריד את האפליקציה דרך ה-App Store. עבור מכשירי Android, יש להוריד את האפליקציה דרך ה-Google Play Store.

הערה: אם ברשותך שער TRÅDFRI, יש להשתמש באפליקציית 1 IKEA Home smart. לקבלת החוויה הטובה ביותר, יש לשדרג לרכזת DIRIGERA.

תחילת עבודה עם רכזת DIRIGERA

יש להוריד את אפליקציית IKEA Home smart ולפעול לפי ההוראות על המסך. בעזרת DIRIGERA, תוכל לחבר כמה מוצרים שתרכזה לחיישן תנועה אחד.

תחילת עבודה ללא רכזת DIRIGERA

1. ודא שהמוצר החכם שברצונך לחבר מותקן ומופעל.
2. החזק את חיישן התנועה קרוב למוצר החכם (מרחק קטן מ-5 ס"מ).
3. יש ללחוץ לחיצה ארוכה על לחצן ההתאמה  למשך 10 שניות לפחות. נורית אדומה תאיר באופן קבוע מתחת לעדשה של חיישן התנועה. ברגע שהמוצר החכם מחובר, הוא יהבהב בנורית LED לבנה.

טוב לדעת

ללא DIRIGERA, אפשר לחבר עד 10 מוצרים חכמים לחיישן תנועה אחד. יש לזכור להוסיף מוצר אחד בכל פעם. אם המוצרים קרובים זה לזה, נתק את אלו שכבר חיברת בזמן הוספת המוצר הבא.

חשוב לדעת!

- טמפרטורת הפעלה: -5°C עד 40°C .
- כדי למנוע התחממות יתר, אין להשאיר את החיישן באור שמש ישיר או קרוב למקור חום כלשהו.
- חומרי בניין שונים ומיקום שונה של היחידות עשויים להשפיע על טווח הקישוריות האלחוטית.

אזהרה!

החלפת אחת הסוללות בסוג שגוי עלולה לגרום לסכנת התפוצצות. אין לערבב סוללות בקיבולות שונות, מסוגים שונים או עם חותמות תאריך שונות. יש להשליך סוללות משומשות בהתאם להוראות.

נתונים טכניים

דגם: חיישן תנועה VALLHORN

סוג: E2134

מתח כניסה: 2.4V x 2 סוללות 1.2V AAA/HR03 LADDA

טווח: 10 מ' באוויר הפתוח.

זווית ראייה של החיישן: 60° - 120°

טווח החיישן: כ-10 מ'

תדר הפעלה: 2,405-2,480 MHz

הספק יציאה: 3 dBm

סיווג IP: IP44

יצרן: IKEA of Sweden AB

כתובת: Box 702, SE-343 81 Älmhult, שוודיה



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.