


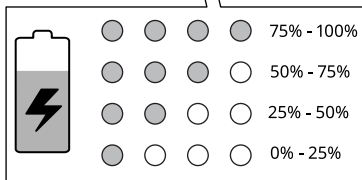
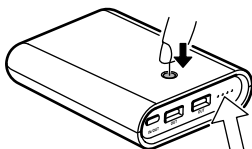




VARMFRONT

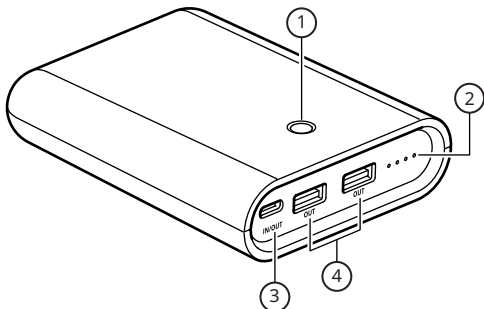

Design and Quality
IKEA of Sweden

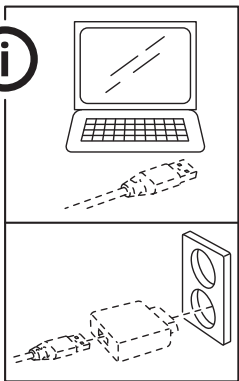

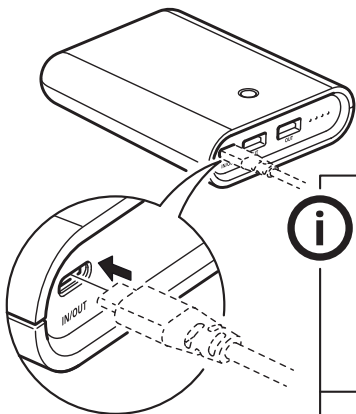

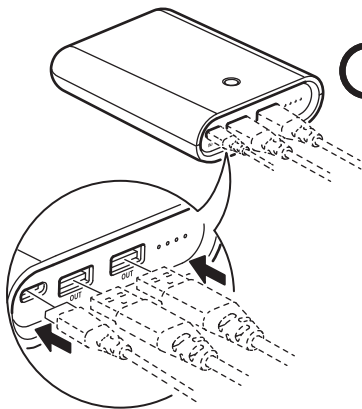

English

Functions

1. POWER button
2. LED indicators
3. USB-C (charging and supply power)
4. USB-A (only supply power)

Charging power bank

- Connect the USB-C cable to the USB-C port of the power bank first and then connect the USB cable to a USB-charger or USB-outlet that can provide sufficient power to charge the power bank. The LED indicators will display the charging status.

Supply power to devices

- Connect the USB cable to USB-C or USB-A port of the power bank first and then connect the USB-cable to your device that you want to charge.
- The power bank will detect a connected device and start charging automatically.
- The LED indicators will display the remaining charge in the power bank during discharging.

Check power status

- Click once on the POWER button and the LED indicators will light up and indicate the remaining power status.
- If the USB cable is not disconnected while the charging process finishes, push the POWER button first to restart the charging.

Small current supply mode

- Press the POWER button for 8 seconds when your device is being charged.
- The function is mainly used to charge certain wearable electronic devices. When charging a device that needs a charging current less than 100mA via a USB-A port, this mode should be activated. You can press the button for 3 seconds to exit this mode, it also automatically closes after 2 hours.

Good to know

- You can charge up to 3 devices at the same time since the charger has 2 USB-A ports and 1 USB-C port. (Power Delivery and Quick Charge)
- The USB-C port is compatible with the Power Delivery (PD) 3.0 standard and Quick Charge (QC) 3.0 standard.
- The USB-A ports are compatible with the Quick Charge (QC) 3.0 standard.
- USB cable length and quality influences charging speed and performance.
- Devices may get warm during charging; this is completely normal and they will gradually cool down again after they are fully charged.
- Charging time may vary based on the device's battery capacity, charge level, the age of the battery and the temperature in the surrounding area.
- Storage temperature: -10°C to 25°C.
- Power bank operating temperature: 0°C to 40°C.
- Unplug the power bank from the power source before cleaning and when it is not in use.

- Power bank should not be left discharged for a longer period.
- Power bank should not be charged while in contact with flammable materials like textiles.

WARNING

- Do not modify, disassemble, open, drop, crush, puncture or shred product.
- Only use in dry locations.
- Risk of fires and burns. Do not open, crush, heat above 60°C (140°F) or incinerate.
- Do not subject the product to wet, moist or excessively dusty environments since this can cause damage to the unit.
- Keep the product away from open flames or sunlight to prevent heat buildup.
- Keep the product away from high voltage devices.
- Children should be supervised to ensure they do not play with the product.
- Do not short-circuit the product or its cells.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.

CARE INSTRUCTION

To clean the unit, wipe with a soft cloth moistened with a little mild detergent. Use another soft dry cloth to wipe dry.

Power button function (E2038)

Current mode	Sleeping mode	Charging mode	Supply power mode
Single press	Shows via LED the remaining charge and that USB-A is ready to use.	USB-A is ready to use.	No action
Double press	No action	No action	Stop supplying power
Long press	Turn off after restart	No action	Switch to the small current supply power mode or back to normal supply power mode

Product servicing

Do not attempt to repair this product yourself. If you open or remove parts, you may expose yourself to dangerous voltage points or other risks.

TECHNICAL DATA

Type: E2038

Capacity: 10400mAh/37.44Wh

Input: 5.0Vdc, 3.0A/ 9.0Vdc, 2.0A/ 12.0Vdc, 1.5A
(USB-C QC&PD)

Output: 5.0Vdc, 3.0A, 15.0W/ 9.0Vdc, 2.0A, 18.0W/
12.0Vdc, 1.5A, 18.0W
(USB-C QC&PD, USB-A QC)

When two or three ports output at the same time, they share 5.0V/3.0A.

For indoor use only

Rechargeable Li-Ion battery cell inside.

Manufacturer: IKEA of Sweden AB

Address: Box 702 SE-343 81 Älmhult SWEDEN



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.

עברית

פונקציות

1. לחצן הפעלה
2. חיווי לד
3. USB-C (טעינה ואספקת חשמל)
4. USB-A אספקת חשמל בלבד

טעינת סוללת החירום

- תחילה חברו את כבל ה-USB-C לציאת ה-USB-C של סוללת החירום ולאחר מכן חברו את כבל ה-USB למטען USB או שקע חשמל UAB שיכול לספק מתח חשמלי מתאים לסוללת החירום. נורות הLED יציגו את סטטוס הטעינה.

הטענת מכשירים

- תחילה חברו את כבל ה-USB לסוללת החירום ולאחר מכן למכשיר שברצונכם לטעון.
- סוללת החירום מזהה מכשירים חדשים שמחוברים לחשמל ומתחילה בטעינה אוטומטית.
- נורות הLED יציגו את כמות הכוח שנותרה בסוללה בהפסקת הטעינה.

בדיקת מצב עוצמת הסוללה

- לחצו על פתור ההפעלה פעם אחת להדלקת נוריות החיווי והצגת מצב הטעינה.
- במידה וכבל ה-USB אינו מתנתק בתום תהליך הטעינה, לחצו על כפתור ההפעלה לאיפוס.

מצב אספקת חשמל נמוכה

- לחצו על כפתור ההפעלה למשך 8 שניות בעת טעינת המכשיר.
- הפונקציה משמשת בעיקר לטעינת מכשירים אלקטרוניים מסוימים המולבשים על הגוף. מצב זה חייב להיות מופעל בעת טעינת מכשיר הדורש זרם טעינה של פחות מ-100 mA באמצעות יציאת USB-A. ניתן ללחוץ על הכפתור למשך 3 שניות כדי לצאת ממצב זה, בנוסף הוא נסגר אוטומטית לאחר שעתיים.

טוב לדעת

- ניתן לטעון 3 מכשירים במקביל, מאחר ולמטען יש 2 יציאות USB-A ויציאת USB-C. (Power Delivery and Quick Charge)
- יציאת USB-C תואם לתקנים Quick Charge (QC) 3.0 ו-Power Delivery (PD) 3.0.
- יציאות USB-A תואמות לתקן Quick Charge (QC) 3.0.
- אורך כבל USB ואיכותו משפיעים על מהירות הטעינה והביצועים.
- המכשירים עשויים להתחמם בזמן הטעינה; זוהי תופעה תקינה לחלוטין והמכשירים יתקררו בהדרגה לאחר הטעינה.
- משך הטעינה משתנה בהתאם לקיבולת סוללת המכשיר, רמת הטעינה, גיל הסוללה וטמפרטורת הסביבה.
- טמפרטורת אחסון המטען: 10°C עד 25°C .
- טמפרטורת הפעלה של סוללות החירום: 0°C עד 40°C .
- יש לנתק את סוללת החירום מהחשמל לפני הניקוי וכאשר אינה בשימוש.
- אין להשאיר את סוללות החירום בהטענה למשך זמן רב.
- אין להטעין את בנק החשמל כשהוא במגע עם חומרים דליקים כגון טקסטיל.

אזהרה

- אין לעשות שינויים, לפרק, לפתוח, לזרוק, לרסק, לנקב או לגרוס את המוצר.
- לשימוש במקומות יבשים בלבד.
- סכנת שריפות וכוויות. אין לפתוח, למעוך, לחמם מעל 60 מעלות, או לשרוף.
- אין לחשוף מוצר זה לתנאי רטיבות, לחות או אבק מחשש לנזק ליחידה.
- שמרו על המוצר הרחק מלהבות או אור שמש על מנת למנוע התחממות יתר.
- שמרו על המוצר הרחק ממכשירים בעלי מתח חשמלי גבוה.
- מוצר זה אינו משחק. יש לוודא כי ילדים לא משחקים עם מוצר זה.
- אין לקצר את סוללה או את התאים בה.
- במצב של דליפה מהתאים, אין לאפשר לנוזל מגע עם העור או העיניים.

הוראות טיפול

כדי לנקות את היחידה, נגבו אותה במטלית רכה עם מעט חומר ניקוי. השתמשו במטלית אחרת, רכה ויבשה, כדי לייבש את היחידות.

שירות מוצרים

אל תנסו לתקן את המוצר בעצמכם. פתיחה או הסרת הכיסויים עלולה לחשוף אתכם לנזק ודודות מתח מסוכנות או סיכונים אחרים.

פונקציית כפתור ההפעלה (E2038)

מציב מתח	מצב שינה מצב	טעינה מצב	אספקת חשמל
לחיצה אחת	תציג את מצב הטעינה וגם כאשר ה- USB-A מוכן לשימוש.	USB-A מוכן לשימוש.	No action
לחיצה כפולה על	No action	No action	תעצור את אספקת החשמל.
לחיצה ארוכה על	לאחר הפעלה מחדש של פונקציית	No action	מאפשרת מעבר למצב צריכת חשמל נמוכה או חזרה למצב צריכת חשמל רגילה.

מפרט טכני

סוג: E2038

קיבולת: 10400mAh/37.44Wh

מתח כניסה: 5.0Vdc, 3.0A/ 9.0Vdc, 2.0A/ 12.0Vdc, 1.5A
(USB-C QC&PD)

מתח יציאה: 5.0Vdc, 3.0A, 15.0W/ 9.0Vdc, 2.0A, 18.0W/ 12.0Vdc,
1.5A, 18.0W
(USB-C QC&PD, USB-A QC)

ההספק הכולל בעת שימוש ב-2 או 3 יציאות בו-זמנית הוא 5.0V/3.0A

לשימוש בתוך הבית בלבד

כולל סוללה נטענת Li-Ion פנימית.

יצרן: IKEA of Sweden AB

כתובת: Box 702 SE-343 81 Älmhult SWEDEN



סימן המיחזור מראה שיש להשליך את המוצר בנפרד מהפסולת הביתית. יש להעביר אותו למיחזור בהתאם לחוקים המקומיים. כשאתם ממיינים פסולת, אתם עוזרים להפחית את כמות האשפה המצטברת ולהקטין את ההשפעות המזיקות על האדם והסביבה. לקבלת מידע נוסף, פנו לחנות איקאה.

