

GENOMSnitt



Design and Quality
IKEA of Sweden

日本語	4
English	6

日本語

取扱説明書

GENOMSNITT/ゲノムスニット 調理用はかり 2kg JP

商品番号 004-964-25

最大計量 2kg



本製品は、家庭で使用するために製造されたものです。物品の売買目的や公共利用目的で使用しないでください。

使用上のご注意

ここに示した注意事項は、危険や損害を未然に防止するための重要な内容ですので、必ず守ってください。

⚠ 警告：

人が死亡または重傷を負う可能性が想定される内容を示します。

⚠ 注意

人が重傷を負う可能性及び物的損害の発生が想定される内容を示します。

⚠ 警告：

- 分解や改造は絶対にしないでください。（けがや感電、破損の原因となります）
- すきまに指を入れないでください。また、本器を幼児に絶対触らせないでください。（けがをするおそれがあります）

⚠ 注意

- 電池の「+」端子と「-」端子は正しく入れてください。
- 新しい電池と古い電池、種類の異なる電池を同時に使用しないでください。（液漏れや発熱、破裂のおそれあり、けが、機器の故障など、の原因になることがあります）
- 食器洗い乾燥機は使用しないでください。（破損や故障のおそれがあります）

⚠ 警告：


この内容を守らないと本体の破損や故障の原因になります。また、正しい計量ができなくなる可能性があります。

- 長時間使用しない場合は電池をはずして保管してください。
- 過度の衝撃や振動を与えないでください。
- 高温や低温になる場所、湿気やホコリの多いところ、窓辺や車内などの直接日光のあたる場所での使用や保管は避けてください。
- 平らですべらず、がたつかない所でご使用ください。
- 高熱発生器具（電子レンジ、オーブン、コンロなど）の近くでの使用は避けてください。
- 電磁波を発生する機器（IH調理器、電子レンジ、携帯電話など）の近くでの使用は避けてください。

- 10度以上の温度差がある場所に移動させた場合は、2時間以上放置してから使用してください。
- 高温・低温の計量物を計量皿に直接載せないでください。

注意！

- 本製品の誤用により生じた損害、逸失利益、または第三者からのいかなる請求についても、当社は一切の責任を負いません。あらかじめご了承ください。
- 本製品および梱包材を廃棄する場合は、お住まいの自治体の廃棄物処理に関する規則に従ってください。

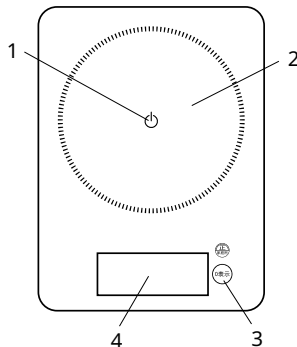


パーツの名称

- 電源ボタン
- はかりの表面
- TARE（風袋）ボタン
- ディスプレイ


ご使用方法

重さをはかるとき

- 電源ボタンを1秒間押して、電源を入れます。

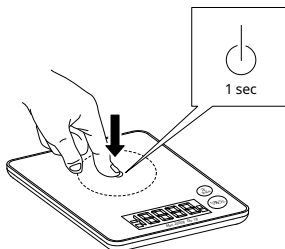


- 計量物を計量皿の中央に載せます。

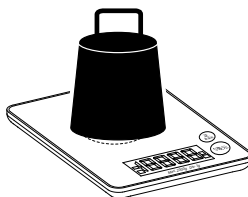

- ・ 計量物の重さが表示されます。
- ・ 「0g」が表示されていることを確認してから、計量物を計量皿の中央に載せてください。
- ・ 最大2kgまで計量できます。
- ・ 最大計量を超えると、「Err」が表示されます。
- ・ 使用後20秒で自動的に電源が切れます。

風袋引き/容器の重さを差し引いてはかるとき

1. （計量物の重さと容器の重さを分ける）
2. 電源ボタンを1秒間押し、電源を入れます。
3. 容器を計量皿の中央に載せます。容器の重さが表示されます。

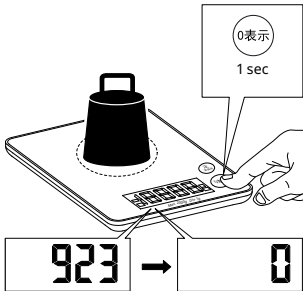

4. TARE（風袋）ボタンを1秒間押し、表示を「0g」にします。
- ・ 計量物を容器に入れます。
 - ・ 計量物の重さが表示されます。
 - ・ 最大2kgまで計量できます。
 - ・ 最大計量を超えると、「Err」が表示されます。
 - ・ 容器と計量物をおろすと、「-」（マイナス）が表示されます。
 - ・ 使用後20秒で自動的に電源が切れます。

仕様

- ・ 最大計量：2kg。
- ・ 最小表示：1g。
- ・ オートパワーオフ：20秒。
- ・ 本体材料：強化ガラス、ポリスチレンプラスチック（足：合成ゴム）
- ・ 電池：単4形乾電池×4本

精度保証範囲

計量範囲	精度	計量範囲	精度
0～500gの範囲内ではかる場合	±2g	501～2,000gの範囲内ではかる場合	±3g

お手入れとメンテナンス

必要に応じて、中性洗剤を含ませた柔らかい布で汚れを拭き取ってください。熱湯、ベンジン、シンナー、その他の腐食性薬品は使用しないでください。

お問い合わせ先

イケア・ジャパン株式会社
 カスタマーサポートセンター
 〒273-0012 千葉県船橋市浜町2-3-30 5階
 050-4560-0494

English

Instruction Manual

GENOMSNITT scales 2 kg JP

Article number 004-964-25

Maximum weighing value 2 kg



This product is manufactured for home use. Do not use it for the sale or purchase of goods or for public use.

Precautions for use

Be sure to follow the precautions provided here. They are important to prevent danger and damage.

Warning

Indicates contents that may cause death or serious injury.

Caution

Indicates the risk of serious injury to a person and the possibility of property damage.

Warning

- Do not disassemble or modify the product. May cause injury, electric shock, or other damage.
- Do not stick your finger in the gap. Do not let children touch the device, there is a risk of injury.

Caution

- Insert the "+" and "-" ends of the batteries in correct positions.
- Do not mix new batteries, old batteries or different types of batteries in the product. There is a risk of e.g. leakage, heat generation, malfunction, or in the worst case fire, an explosion or injury.
- Do not wash the product in a dishwasher, it can cause damage or the product to malfunction.

Warning


If you do not observe this content, it may cause damage or product malfunction, making correct weighing impossible.

- If you do not use the product for a long time, remove the batteries.
- Do not subject the product to excessive impacts or vibrations.
- Do not use or store the product in places with high or low temperatures, places with high humidity or levels of dust, or places exposed to direct sunlight such as on a windowsill or inside a car.
- Use the product on a flat and non-slip surface without vibrations.
- Avoid using the product near products that emit high levels of heat (microwave ovens, ovens, hobs).

- Avoid using the product near products that emit electromagnetic waves (IH cookers, microwave ovens, mobile phones).
- If you move the product to a place with a temperature increase or decrease of more than 10 °C, leave it for more than 2 hours before use.
- Do not place hot or cold objects directly on the product.

Note!

- We are not liable for any damages, lost profits or any claims from third parties caused by incorrect use of this product.
- When disposing of the product and packaging materials, please follow your local authority's regulations for waste disposal.

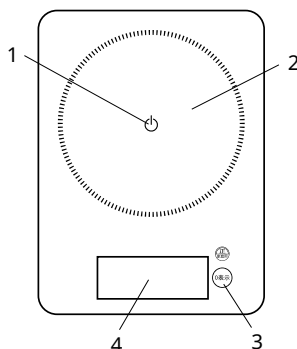


Name of parts

1. Power button
2. Scale's surface
3. TARE button
4. Display


How to use

Weighing

1. Press the power button for 1 second to turn on the power.

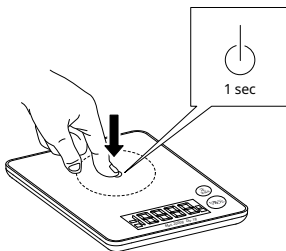


2. Place the object to be weighed in the centre of the scale's surface.

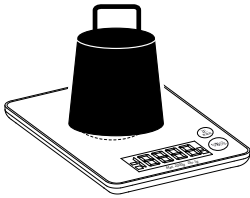

- The weight is displayed.
- Check the indication of "0 g" before placing the object to be weighed in the centre of the scale's surface.
- Displays weights up to 2 kg.
- When the maximum weight is exceeded, "Err" is displayed.
- The power turns off automatically 20 seconds after use.

How to measure with tare (separating the weight of the contents from the container's weight)

1. Press the power button for 1 second to turn on the power.
2. Place the container in the centre of the scale's surface. The weight of the container is displayed.
3. Press the TARE button for 1 second to change the display to "0 g".

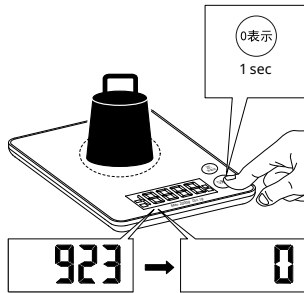

4. Put the contents to be weighed in the container.
- The weight of the contents is displayed.
 - Displays weights up to 2 kg.
 - When the maximum weight is exceeded, "Err" is displayed.
 - When the container and the contents are removed, "-" (minus) is displayed.
 - The power will turn off automatically 20 seconds after use.

Specifications

Maximum weight: 2 kg.

Minimum weight displayed: 1 g.

Automatic power off: 20 seconds.

Materials: tempered glass, polystyrene plastic (feet in synthetic rubber)

Batteries: 4pcs AAA batteries

Guaranteed accuracy

Amount to measure	Accuracy	Amount to measure	Accuracy
Within the range of 0 to 500 g	± 2 g	Within the range of 501 to 2,000 g	± 3 g

Care and maintenance

Wipe the product clean with a soft cloth dampened with a neutral cleaning agent when needed. Do not use boiling water, benzine, thinner or other corrosives.

Contact information for questions or queries

IKEA Japan KK
Customer Support Centre
2-3-30-5F Hama-cho, Funabashi-shi, Chiba, 273-0012
050-4560-0494