

SKOTAT

1.8m

5' 11"

2xUSB-C

PD (1x45W / 2x22W)

100V ~ 50/60Hz 15A




AA-2538242-5

Made in China

© Inter IKEA Systems B.V. 2024




IKEA of Sweden AB
SE-343 81 Älmhult


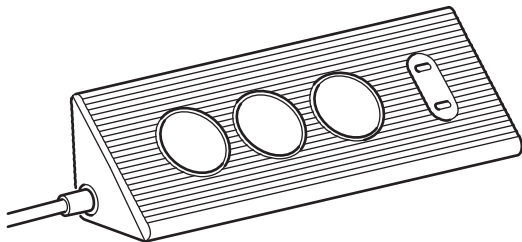





1R15-IDG DM





Design and Quality
IKEA of Sweden

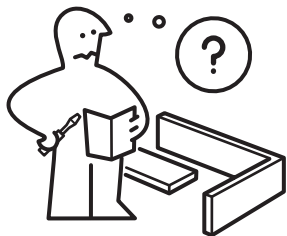

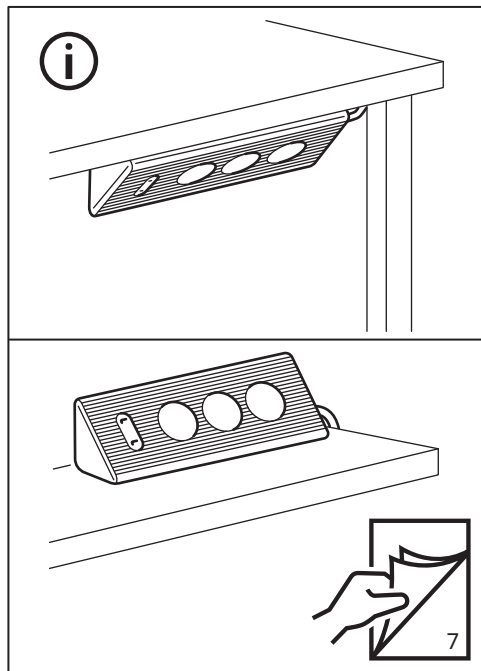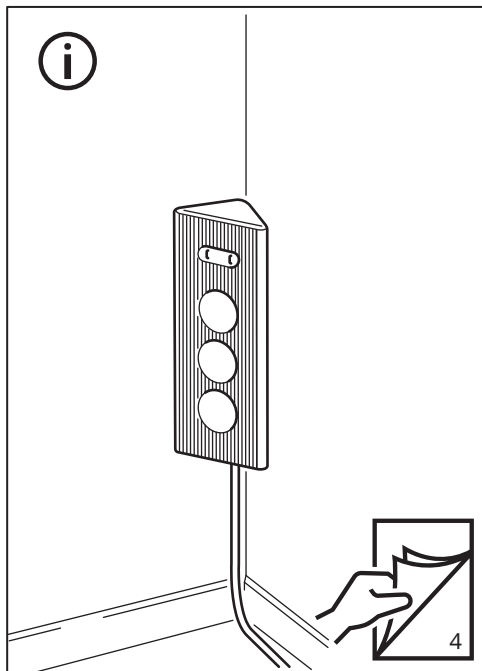



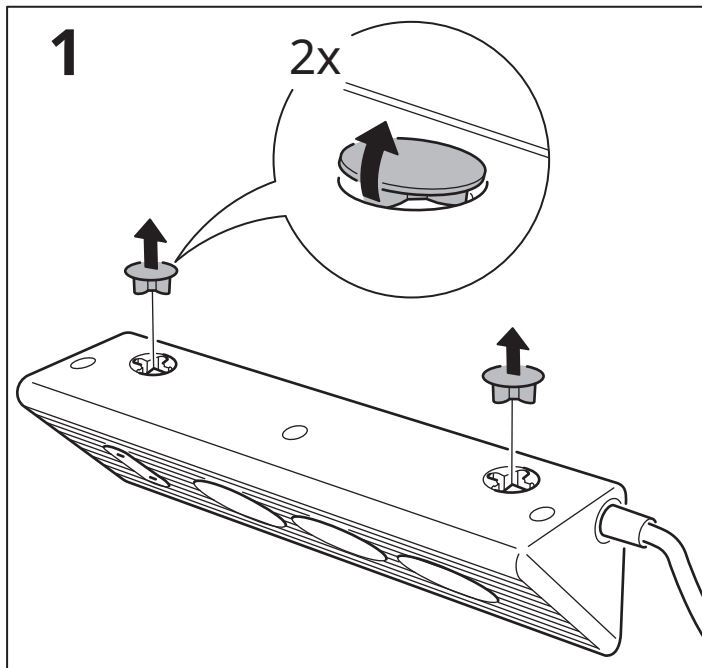
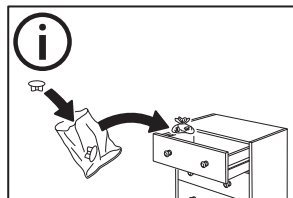
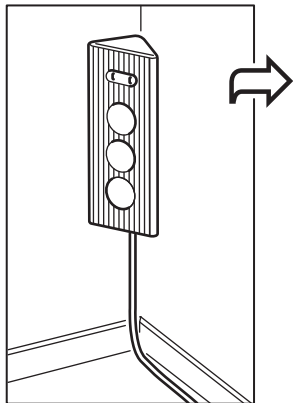


2


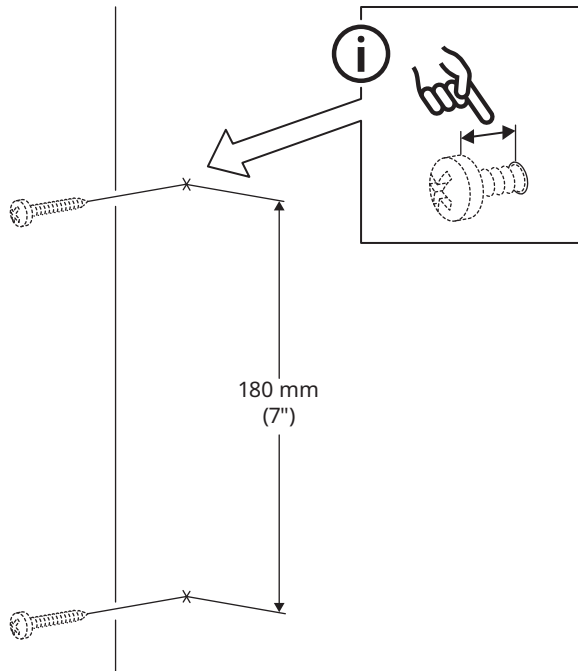
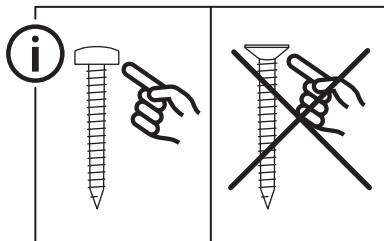


3


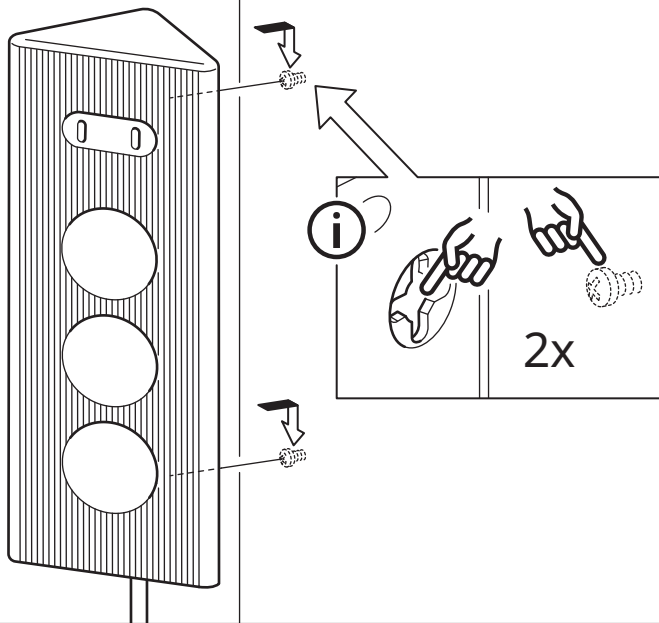


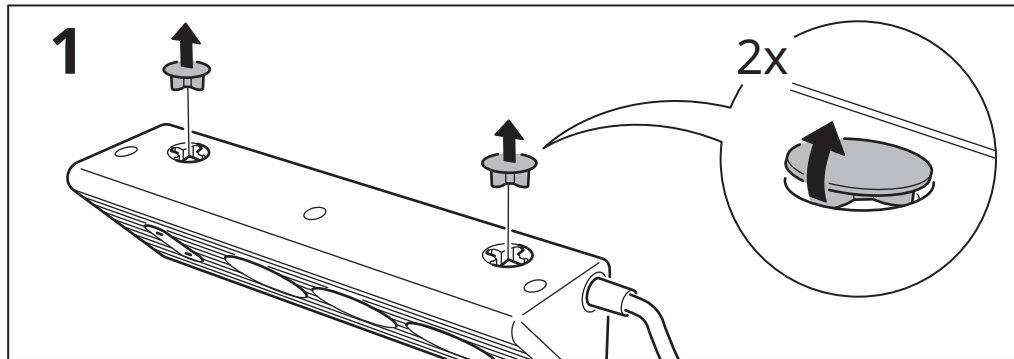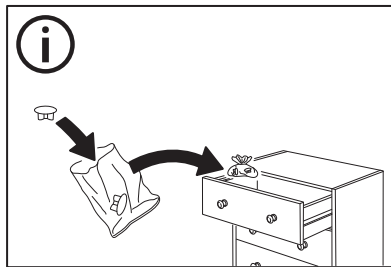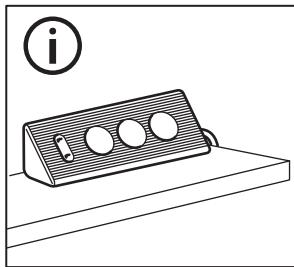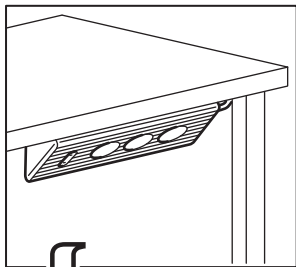


2

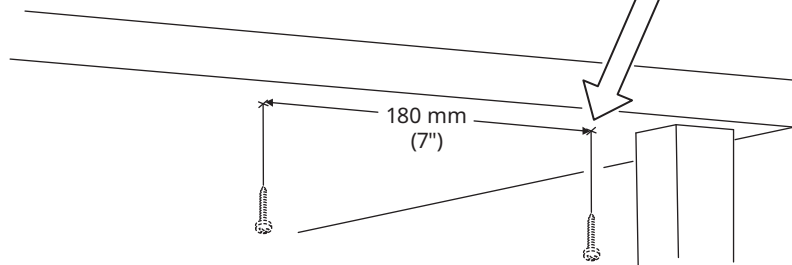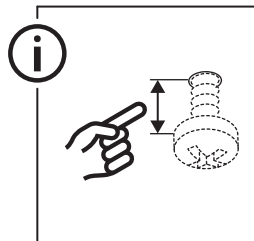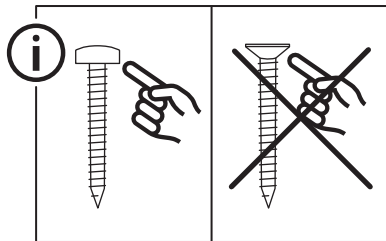


3

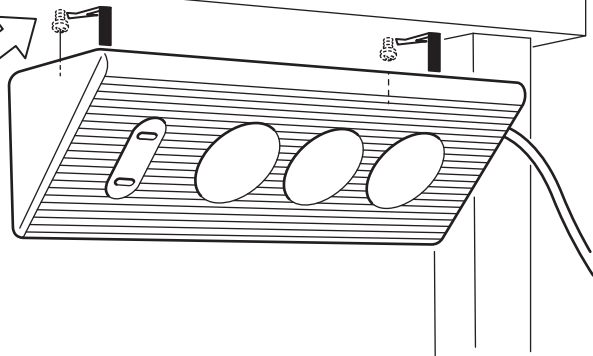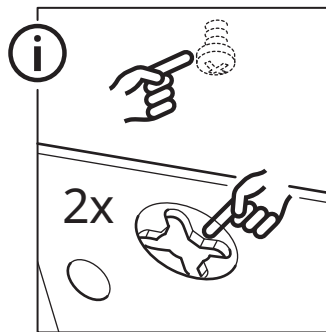

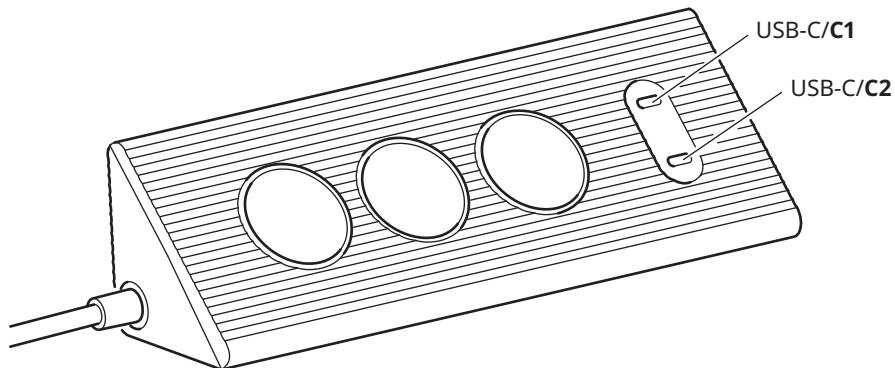


PD
3.0

QC
4+

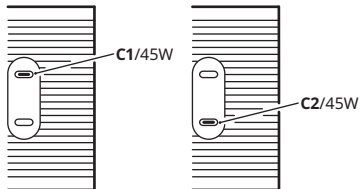

C1/C2:

5.0V ⚡ 3.0A 15.0W
 9.0V ⚡ 3.0A 27.0W
 12.0V ⚡ 3.0A 36.0W
 15.0V ⚡ 3.0A 45.0W
 20.0V ⚡ 2.25A 45.0W

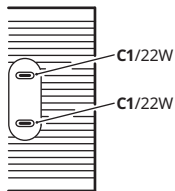

C1:

5.0V ⚡ 3.0A 15.0W
 9.0V ⚡ 2.44A 22.0W
 12.0V ⚡ 1.83A 22.0W
 15.0V ⚡ 1.46A 22.0W
 20.0V ⚡ 1.10A 22.0W

C2:

5.0V ⚡ 3.0A 15.0W
 9.0V ⚡ 2.44A 22.0W
 12.0V ⚡ 1.83A 22.0W
 15.0V ⚡ 1.46A 22.0W
 20.0V ⚡ 1.10A 22.0W

日本語

13

English

15

日本語



この説明書をよくお読みになり、必要なときにご覧いただけるよう大切に保管してください。

重要！

- 連結して使用しないでください。
- 使用中にカバー等で覆わないでください。
- USBポートはIT機器のみに使用してください。
- 電源を切るには、電源プラグを抜いてください。
- 室内の乾燥した場所でのみ使用してください。

警告

- 破損した場合には、すぐに使用を中止し、製品を廃棄してください。
- 温度負荷が大きくなり、ほどけている場合にのみ動作します。
- 破損・故障したUSBケーブルは絶対に使用しないでください。充電器やほかの機器の破損や不具合の原因になるおそれがあります。
- 充電器に水などの液体がかからないよう注意してください。
- 本製品に負荷がかかり過ぎないようにしてください。
- 適切に使用しないと、故障の原因になるおそれや人や物に害が及ぶおそれがあります。
- お子さまが本製品で遊ばないようにご注意ください。

- コンセントは、必ず本製品の設置場所の近くにある、利用しやすいものをお使いください。

USB-Cポートの機能

- 2台同時に充電可能。
- 各USB-Cポートの出力：
 - USB-Cポート1口使用時：45.0 W
 - USB-Cポート2口使用時：22.0 W
- USB-C充電器は、Power Delivery (PD 3.0)、Quick Charge (QC4+)。
- このUSB-C充電器は、携帯電話やタブレットのクイックチャージに対応しています。この充電器は、ほとんどのノートパソコンの充電にも対応します。充電の速度は、接続された機器によって異なります。
- 内蔵の安全機能で、USB-C充電器のショート、オーバーヒート、過充電を防止します。

USB-Cポートの使い方

本製品をコンセントに差し込みます。USB-Cケーブルの一方の端子を空いているUSB-Cポートに差し、他方の端子を充電または給電したい機器に差します。

注意！ USB-Cケーブルは付属していません。

お手入れ方法

お手入れの際は、コンセントから電源プラグを抜いて、乾いた布で拭いてください。

お役立情報

- USBケーブルの長さや品質は、充電の速度と性能に影響します。
- 充電中に機器が発熱する場合があります。これは異常ではありません。満充電後は徐々に温度が下がります。
- 動作温度：0°C～40°C（32°F～104°F）
- 使用しないときは、必ず延長コードの電源プラグをコンセントから抜いてください。

製造業者：IKEA of Sweden AB

住所：Box 702, SE-343 81 Älmhult, SWEDEN

テクニカルデータ

型式：SKOTAT/スコータート

タイプ：E2308-JP

入力：100 V～50/60 Hz 15 A 最大 1500 W

出力：100 V～50/60 Hz 14 A 最大 1400 W

USB-C出力：

USB-Cポート1口使用時： 最大45W C1またはC2	USB-Cポート2口使用時： 1口あたり最大22.0 W C1またはC2
5.0V $\equiv$ 3.0A 15.0W, 9.0V $\equiv$ 3.0A 27.0W, 12.0V $\equiv$ 3.0A 36.0W, 15.0V $\equiv$ 3.0A 45.0W, 20.0V $\equiv$ 2.25A 45.0W,	5.0V $\equiv$ 3.0A 15.0W, 9.0V $\equiv$ 2.44A 22.0W, 12.0V $\equiv$ 1.83A 22.0W, 15.0V $\equiv$ 1.46A 22.0W, 20.0V $\equiv$ 1.10A 22.0W,



「Crossed-out wheeled bin」マークは、廃棄する際に一般の家庭ゴミと区別する必要があることを意味しています。このマークの付いた製品は、お住まいの地域の分別ルールに従ってリサイクルに出してください。一般の家庭ゴミと分けてリサイクルすることで、焼却炉やゴミ埋め立て施設に持ち込まれるゴミの量を削減できるうえ、健康や環境への潜在的な負荷を軽減できます。詳しくは、お近くのイケアストアにお問い合わせください。

English



Read instructions carefully and keep for future reference.

IMPORTANT!

- Do not connect after each other in a sequence.
- Do not cover the product when in use.
- Only use the USB outlet for IT devices.
- To disconnect the power, pull the plug.
- Use only indoors in dry areas.

WARNING

- Discard the product if damaged.
- Only operate when uncoiled due to increased temperature load.
- Never use a damaged or faulty USB cable, since this can damage or harm the charger or your device.
- Never submerge the charger in water or other liquids.
- Do not overload the product.
- Improper use may cause damage to the product or endanger people or property.
- Children should be supervised to ensure they do not play with the product.
- The wall socket must be located near the equipment and must be easily accessible.

USB-C outlet features

- Charges up to 2 devices simultaneously.

- Output power per USB-C outlet:
 - one USB-C outlet in use: 45.0W
 - two USB-C outlets in use: 22.0W
- The USB-C charger is compatible with Power Delivery (PD 3.0), Quick Charge (QC4+).
- The USB-C charger supports quick charging of phones and tablets. The charger can also support charging of most laptops. The charging speed is determined by the connected device.
- Built-in safety features protect the USB-C charger from short-circuiting, overheating and overloading.

Instructions for use for USB-C outlets

Connect the product to the wall socket. Insert USB-C cable end into free USB-C outlet and the other end to the device you want to charge or power.

NOTE! USB-C cable is not included.

Care instructions

To clean the product, unplug from power source and wipe with a dry cloth.

Good to know

- USB cable length and quality influences charging speed and performance.
- Devices may get warm during charging. This is completely normal, and they will gradually cool down again after they are fully charged.
- Operating temperatures: 0°C to 40°C (32°F to 104°F).
- Unplug the extension cord from the power source when not in use.

Manufacturer: IKEA of Sweden AB

Address: Box 702, SE-343 81 Älmhult, SWEDEN

Technical data

Model: SKOTAT

Type: E2308-JP

Input: 100 V ~ 50/60 Hz 15 A Max. 1500 W

Output: 100 V ~ 50/60 Hz 14 A Max. 1400 W

USB-C output:

One USB-C outlet in use: Max 45.0W C1 or C2	Two USB-C outlets in use: Max 22.0W per port C1 and C2
5.0V $\Rightarrow$ 3.0A 15.0W, 9.0V $\Rightarrow$ 3.0A 27.0W, 12.0V $\Rightarrow$ 3.0A 36.0W, 15.0V $\Rightarrow$ 3.0A 45.0W, 20.0V $\Rightarrow$ 2.25A 45.0W,	5.0V $\Rightarrow$ 3.0A 15.0W, 9.0V $\Rightarrow$ 2.44A 22.0W, 12.0V $\Rightarrow$ 1.83A 22.0W, 15.0V $\Rightarrow$ 1.46A 22.0W, 20.0V $\Rightarrow$ 1.10A 22.0W,



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help reduce the volume of waste sent to incinerators or land-fill and minimize any potential negative impact on human health and the environment. For more information, please contact your IKEA store.