

en

th

LAGAN



Design and Quality
IKEA of Sweden

ENGLISH

3

ไทย

17

Content

Safety information	3	Care and cleaning	12
Safety instruction	5	Troubleshooting	13
Installation	7	Technical data	14
Product description	8	Energy efficiency	14
Indicators	9	Environmental concerns	15
Daily use	9	IKEA Warranty	15
Cookware guidance	11		

Subject to change without notice.

 Safety information

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damage. Always keep the instructions with the appliance for future reference.

Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep children and pets away from the appliance when it operates or when it cools down. Accessible parts may become hot during use.

- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

General Safety

- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Do not operate the appliance by means of an external timer or separate remote-control system.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.
- Disconnect the appliance from the electrical supply before maintenance.
- Do not use a steam cleaner to clean the appliance.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- If the glass ceramic surface / glass surface is cracked, switch off the appliance and unplug it from the mains.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

Safety instruction

Installation



Warning! Plug-in installation. Please ensure a minimum 16A power supply.



Follow the Assembly instructions supplied with the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Seal the cut surfaces with a sealant to prevent moisture to cause swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance adjacent to a door or under a window. This prevents hot cookware falling from the appliance when the door or the window is opened.
- Make sure that the space underneath the hob is sufficient for air circulation.
- The bottom of the appliance can get hot. If the appliance is installed above the drawers, make sure to install a non-combustible separation panel under the appliances to prevent access to the bottom.

Electrical Connection



Warning! Risk of fire and electric shock.

- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure that a shock protection is installed.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to the near sockets.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service Centre or an electrician to change a damaged mains cable.

- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

Use



Warning! Risk of injury, burns and electric shock.

- Remove all the packaging, labelling and protective film (if applicable) before first use.
- This appliance is for household use only
- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Set the cooking zone to "off" after each use.
- Do not rely on the pan detector.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- If the surface of the appliance is cracked, disconnect immediately the appliance from the power supply. This to prevent an electrical shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.
- When you place food into hot oil, it may splash.



Warning! Risk of fire and explosion.



Warning! Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not put a hot pan cover on the glass surface of the hob.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Do not put aluminium foil on the appliance.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause scratches on the glass /glass ceramic. Always lift these objects up when you have to move them on the cooking surface.
- This appliance is for cooking purposes only. It must not be used for other purposes, for example room heating.

Care and cleaning

- Clean the appliance regularly to prevent the deterioration of the surface material.
- Switch off the appliance and let it cool down before cleaning.
- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.

Disposal



Warning! Risk of injury or suffocation.

- Contact your municipal authority for information on how to discard the appliance correctly.



- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

Installation



Warning! Refer to Safety chapters.

General information

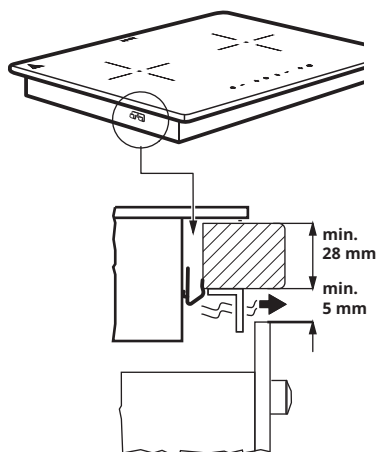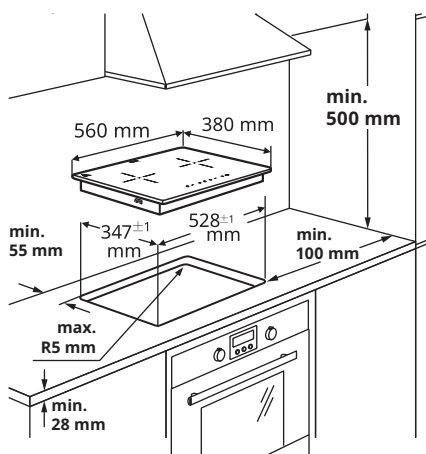


Installation process must follow the laws, ordinances, directives and standards (electrical safety rules and regulations, proper recycling in accordance with the regulations, etc.) in force in the country of use!

- For further information on the installation refer to the Assembly Instruction.

- If there is no oven beneath the hob, install a separation panel under the appliance according to the Assembly Instruction.
- Do not use silicon sealant between the appliance and the worktop.


Product description

Cooking surface layout

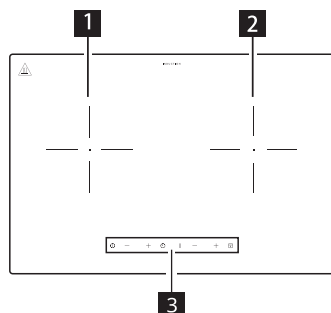

- 1** Left cooking zone (145mm) 1200W
- 2** Right cooking zone (150mm) 2000W
- 3** Control panel

Control panel layout

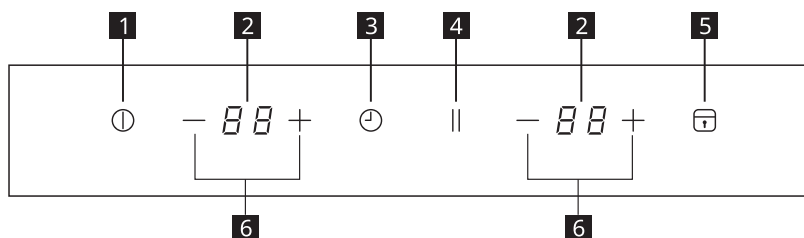

- 1** On/Off
- 2** Power level/Timer display
- 3** Timer control
- 4** Pause
- 5** Lock/Child lock
- 6** Power level setting - / +

Touch Control sensor fields and displays

You operate the hob by touching sensor fields. Displays and acoustic signals (short beep) confirm the selection of a function.

Indicators

Pot incorrectly positioned or missing

This symbol appears if the pot is not suitable for induction cooking, is not positioned correctly or is not of an appropriate size for the cooking zone selected. If no pot is detected within 30 seconds of making the selection, the cooking zone switches off.

Residual heat

If display shows "H", the cooking zone is still hot. When the cooking zone cools down, the display goes off.

 **Warning!** Risk of burns from residual heat! After you switch the appliance off, the cooking zones need some time to cool down. Look at the residual heat indicator .

Use residual heat for melting and keeping food warm.

Don't disconnect the product without waiting for the  to be removed from display.

Daily use



Connecting to socket

1. After insert the plug into main supply, the child lock will be activated. Press and hold the Child Lock key for 2 seconds to deactivate.

ON/OFF

1. Press the ON/OFF key, the screen will display "0" as in standby mode and the power indicator light will light up. If there is no heat setting selected within 1 minute, the hob will switch off automatically without pressing the ON/ OFF key.
2. Press ON/OFF key during operation, the hob will switch off.



Power level/Timer setting

1. Press — or + to control the heat level or timer setting during operation.

2. Press —, the power level will go straight to "9". Press — to decrease the power level from "9" to "0".
3. Press +, the power level will increase from "0". Press + to increase the power level from "0" to "9".



Lock function

When the cooking zones operate, you can lock the control panel. It prevents an accidental change of the heat setting. The hob can still be shut off by the ON/OFF key.

Activate Lock function:

1. Set the wanted heat setting.
2. Activate lock function by pressing the Lock key for 2 seconds. The Lock key is activated when it is lit up and a sound is given. If active the Timer key, it will stay on.

Deactivate lock function:

1. Deactivate lock function by pressing the Lock key for 2 seconds. The Lock key is deactivated when the light stops and a sound is given.
2. The heat setting will return to the previous setting.

Child lock function

You can also keep control panel locked when the hob is not operating. This function prevents an accidental operation of the appliance.

Activate the child lock

1. Activate the appliance with the ON/OFF key. Do not set any power level.
2. Press the Lock key for 3 seconds. The function is activated when Lock key indicator is lit up and a sound is given.
3. Deactivate the appliance with the ON/OFF key.

Deactivate the child lock

1. Press the Lock key for 3 seconds. The function is deactivated when the Lock key indicator goes off and a sound is given.

**Pause**

1. Press the Pause key under operation, the screen will display "-.", and the hob will be paused temporarily. The hob will stop heating and no power output.
2. Press this key again, it will resume to the previous cooking setting.
3. If you do not press the Pause key to return to operation within 10 minutes during pause status, the hob will enter to standby mode.
4. The pause function will activate for both cooking zones at the same time.

**Timer**

1. The timer function is used to set cooking time with a maximum time of 99 minutes. Press the Timer key to activate Timer, the screen for both cooking zones will display "00".
2. Press + or — to set timer. If there is no operation of time within 5 seconds, the timer will be cancel.
3. To set wished timer setting, press + to increase time setting starting from 00 minutes. When pressing + for longer time, setting will increase by 10 minutes. Press — to decrease time setting starting from 99 minutes. When pressing — for longer time, setting will decrease by 10 minutes.
4. During the Timer status, the power level and time will be alternately displayed in the screen. When the power level is decreased to "0", the timer will be deactivated.
5. When the timer is deactivated, the hob will beep 3 times and switch off automatically.
6. If both zones are in the timer status, one zone reach the time to "0", it will beep 3 times and switch off. Another zone will keep the timer status if it does not reach its time setting.

Automatic Switch off**The function switches the hob off automatically if:**

- You do not set the heat setting after switching on the hob within 1 minute.
- You do not switch a cooking zone off or you do not modify the heat setting after 2 hours, or if the overheating occurs (e.g. when a pan boils dry).

Cookware guidance

 **Warning!** Refer to Safety chapters.

What pots to use

Only use pots and pans with bottom made from ferromagnetic material which are suitable for use with induction hobs:

- cast iron
- enamelled steel
- carbon steel
- stainless steel (although not all)
- aluminium with ferromagnetic coating or ferromagnetic plate

To determine if a pot or pan is suitable, check for the  symbol (usually stamped on the bottom). You can also hold a magnet to the bottom. If it clings to the underside, the cookware will work on an induction hob.

To ensure optimum efficiency, always use pots and pans with a flat bottom that distributes the heat evenly. If the bottom is uneven, this will affect power and heat conduction.

How to use

Minimum diameter of pot/pan base for the different cooking areas

To ensure that the hob functions properly, the pot must cover one or more of the reference points indicated on the surface of the hob, and must be of a suitable minimum diameter.

Always use the cooking zone that best corresponds to the diameter of the bottom of the pan.

Cooking zone	Recommended cookware diameter [mm]
Left cooking zone	120-200
Right cooking zone	120-200

Empty or thin-based pots/pans

Do not use empty or thin-based pots/pans on the hob as it will not be able to monitor the temperature or turn off automatically if the temperature is too high, damaging the pan or the hob surface. If this occurs, do not touch anything and wait for all components to cool down.

If an error message appears, refer to "Troubleshooting".

Hint/tips

Noise during cooking

When a cooking zone is active, it may hum briefly. This is a characteristic of all ceramic glass cooking zones and does not impair the function or life of the appliance. The noise depends on the cookware used. If it causes considerable disturbance, it may help to change the cookware.

Care and cleaning

 **Warning!** Switch the appliance off and let it cool down before disconnecting it.

 **Warning!** Switch the appliance off and let it cool down before you clean it.

 **Warning!** For safety reasons, do not clean the appliance with steam blasters or high-pressure cleaners.

 **Warning!** Sharp objects and abrasive cleaning agents will damage the appliance. Clean the appliance and remove the residues with water and washing up liquid after each use. Remove also the remnants of the cleaning agents!

 Scratches or dark stains on the glass ceramic that cannot be removed do not affect the functioning of the appliance.

Removing the residues and stubborn residues:

- Food containing sugar, plastics, tin foil residues should be removed at once, best tool for cleaning glass surface is a scraper (not included with the appliance). Place a scraper on the glass ceramic surface at an angle and remove residues by sliding the blade over the surface. Wipe the appliance with a damp cloth and a little washing up liquid. Finally, rub the appliance dry using a clean cloth.
- Limescale rings, water rings, fat splashes, shiny metallic discolorations should be removed after the appliance has cooled down using cleaner for glass ceramic or stainless steel.

Troubleshooting

Problem	Possible Cause	Solution
The appliance does not operate.	Power shortage or power short circuit in the power source of your home.	
	Power connection to socket not performed properly.	Overlook the power supply to hob for correct connection.
	More than 10 seconds have passed since the appliance was switched on.	Switch the appliance on again.
	Child lock is switched on.	Deactivate Child lock. (See the section "Child lock function").
	Several sensor fields were touched at the same time.	Only touch one sensor field.
Appliance stops operating. Error indication:  → 	The cookware is not suitable for induction.	Change to a cookware suitable for induction.
	No cookware on cooking zone or cookware diameter is less than 120mm.	Place cookware on the cooking zone.
Appliance stops operating. Error indication: 	The temperature sensor of IGBT is short circuit or open circuit.	Turn off the appliance and restart after 5 minutes. If E2 persists, please contact nearest IKEA store.
Appliance stops operating. Error indication: 	The main power supply is over AC 270V.	Change to product suitable power supply.
Appliance stops operating. Error indication: 	The main power supply is lower than AC 95V.	Change to product suitable power supply.
Appliance stops operating. Error indication: 	The temperature sensor of the appliance is short circuit or open circuit.	Turn off the appliance and restart after 5 minutes. If E2 persists, please contact nearest IKEA store.
Appliance stops operating. Error indication: 	Internal exception	Turn off the appliance and restart after 5 minutes. If E0 persists, please contact nearest IKEA store.

Error code shows when the hob is powered on and error is detected, E and numbers are displayed intermittently (1 second) and circulation.

If there is a fault, try to resolve it by following the troubleshooting guidelines. If the problem cannot be resolved, contact your nearest IKEA store.

 If you operated the appliance wrongly, dealer may not take place free of charge, even during the warranty period.

Technical data

Rated Power	3200W
Rated Voltage	220V-240V~
Rated Frequency	50-60Hz
Depth	560mm
Width	380mm
Height	57mm
Net Weight	6.5kg

Energy efficiency

Model identification		LAGAN 706-018-14
Type of hob		Built-In Hob
Number of cooking zones		2
Heating technology		Induction
Diameter of circular cooking zones (Ø)	Left Right	14.0 cm 15.0 cm
Energy consumption per cooking zone (EC electric cooking)	Left Right	186.9 Wh/Kg 190.3 Wh/Kg
Energy consumption of the hob (EC electric hob)		188.6 Wh/Kg

Information on the product pursuant to EU regulation n° 66/2014 Reference standards:
EN/IEC-60350-2

 This appliance has been designed, manufactured and sold in compliance with EEC Directives.

The technical data is provided on the rating plate affixed to the bottom of the product.

Environmental concerns

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

Energy saving

You can save energy during everyday cooking if you follow below hints.

- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.
- Before you activate the cooking zone put the cookware on it.
- Put the smaller cookware on the smaller cooking zones.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

IKEA Warranty

How long is the IKEA Warranty valid?

This warranty is valid for 2 years from the original date of purchase of Your appliance at IKEA, unless otherwise specified in national legislation. Please go to IKEA.com to find out what applies in your country. The original sales receipt is required as proof of purchase. If service work is carried out under warranty, this will not extend the warranty period for the appliance.

Who will execute the service?

Contact nearest IKEA store.

What does this warranty cover?

The warranty covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This warranty applies to domestic use only. The exceptions are specified under the headline "What is not covered under this warranty?" Within the warranty period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this warranty. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this warranty?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or Water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.

- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non- domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this warranty, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA warranty gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the warranty conditions normal in the new country. An obligation to carry out services in the framework of the warranty exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the warranty claim is made;
- the Assembly Instructions and User Manual Safety Information.

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this warranty;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit www.ikea.com to find your local store phone number and opening time.

In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THE SALES RECEIPT!

It is your proof of purchase and required for the warranty to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

เนื้อหา

ข้อมูลเพื่อความปลอดภัย	17	การดูแลและทำความสะอาด	26
คำแนะนำเพื่อความปลอดภัย	19	การแก้ไขปัญหา	27
การติดตั้ง	21	ข้อมูลทางเทคนิค	28
คำอธิบายของผลิตภัณฑ์	22	ประสิทธิภาพการใช้พลังงาน	28
ไฟแสดงสถานะ	23	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	29
การใช้งานประจำวัน	23	การรับประกันของ IKEA	29
คำแนะนำเกี่ยวกับเครื่องครัว	25		

อาจมีการเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

ข้อมูลเพื่อความปลอดภัย

ก่อนติดตั้งและใช้งานเครื่องใช้ไฟฟ้า โปรดอ่านคำแนะนำที่ให้อย่างละเอียด ผู้ผลิตจะไม่รับผิดชอบหากติดตั้งและใช้งานอย่างไม่ถูกต้อง จนทำให้เกิดการบาดเจ็บและความเสียหาย โปรดเก็บคำแนะนำนี้ไว้กับตู้เย็นตลอดเวลาเพื่ออ้างอิงในอนาคต

ความปลอดภัยสำหรับเด็กและผู้ที่มีความเสี่ยง

- เด็กอายุ 8 ขวบขึ้นไปและผู้บกพร่องทางกายภาพ ความรู้สึก หรือทางจิตใจ หรือขาดประสบการณ์และความรู้สามารถใช้งานเครื่องใช้ไฟฟ้านี้ได้ หากได้รับการดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้านี้ด้วยวิธีการที่ปลอดภัย และเข้าใจถึงอันตรายที่อาจเกิดขึ้น ไม่ควรปล่อยให้เด็กเล่นเตา ไม่ควรให้เด็กทำความสะอาดและบำรุงรักษาโดยไม่มีผู้ใหญ่ดูแล
- ควรกันเด็กอายุต่ำกว่า 8 ขวบไม่ให้เข้าใกล้ นอกจากมีคนดูแลอย่างต่อเนื่อง
- อย่าปล่อยให้เด็กเล่นเครื่องใช้ไฟฟ้า
- โปรดเก็บบรรจุภัณฑ์ทั้งหมดให้ห่างจากเด็กและกำจัดทิ้งอย่างเหมาะสม
- ฝารองเด็กและสัตว์เลี้ยงให้อยู่ห่างจากเครื่องใช้ไฟฟ้าในขณะที่กำลังทำงาน หรืออยู่ระหว่างการเย็นตัวลง ชิ้นส่วนที่เข้าถึงได้อาจมีความร้อนระหว่างการใช้งาน
- หากเครื่องใช้ไฟฟ้ามีอุปกรณ์ความปลอดภัยสำหรับเด็ก ควรเปิดใช้งานอุปกรณ์ดังกล่าว
- ห้ามเด็กทำความสะอาดและบำรุงรักษาเครื่องโดยปราศจากการควบคุมดูแล

ความปลอดภัยทั่วไป

- คำเตือน: เตาและส่วนประกอบที่เข้าถึงได้จะร้อนในขณะที่ใช้งาน ควรใช้ความระมัดระวังเพื่อหลีกเลี่ยงการสัมผัสกับส่วนที่มีความร้อน
- อย่าใช้งานเครื่องใช้ไฟฟ้าโดยใช้ตัวจับเวลาภายนอกหรือระบบควบคุมระยะไกลที่ต่างหาก
- คำเตือน: การปรุงอาหารบนเตาด้วยไขมันหรือน้ำมันโดยไม่มีคนคอยดูอาจเกิดอันตรายและอาจเกิดเพลิงไหม้ได้
- อย่าลองดับไฟโดยใช้น้ำ แต่ควรปิดสวิทช์เตาจากนั้นปิดคลุมเปลวไฟ เช่น ใช้ผ้าหรือผ้าคลุมกันไฟ
- ข้อควรระวัง: กระบวนการปรุงอาหารจะต้องอยู่ภายใต้การดูแล กระบวนการปรุงอาหารระยะสั้นต้องอยู่ภายใต้การดูแลอย่างต่อเนื่อง
- คำเตือน: อันตรายจากไฟไหม้: อย่าเก็บสิ่งของไว้บนพื้นผิวที่จะใช้ปรุงอาหาร
- ไม่ควรวางวัตถุที่ทำจากโลหะ เช่น มีด ส้อม ช้อน และฝาไว้บนพื้นผิวของเตาเนื่องจากจะเกิดความร้อนสะสม
- อย่าใช้งานเครื่องใช้ไฟฟ้าก่อนติดตั้งเข้าไปในโครงสร้างแบบบิวท์อิน
- ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟก่อนทำการซ่อมบำรุง
- อย่าใช้สเปรย์ไอน้ำในการทำทำความสะอาดเครื่องใช้ไฟฟ้านี้
- หลังใช้งาน ควรปิดส่วนประกอบของเตาโดยใช้ปุ่มควบคุม และอย่าวางใจกับอุปกรณ์ตรวจจับกระแส
- หากพื้นผิวแก้วเซรามิก/พื้นผิวกระจกเกิดรอยแตก ให้ปิดเครื่องและถอดปลั๊กออกจากแหล่งจ่ายไฟหลัก
- หากสายไฟชำรุด จะต้องเปลี่ยนใหม่โดยผู้ผลิต ตัวแทนที่ให้บริการ หรือบุคคลที่มีคุณสมบัติเหมาะสมเพื่อหลีกเลี่ยงอันตราย
- คำเตือน: ควรใช้ผ้าคลุมเตาที่ผู้ผลิตเครื่องครัวออกแบบเท่านั้น หรือผู้ผลิตเครื่องครัวระบุไว้ในคำแนะนำให้ใช้ได้อย่างเหมาะสม หรือเป็นผ้าคลุมเตาที่มีมาพร้อมกับเตา การใช้ผ้าคลุมเตาที่ไม่เหมาะสมอาจก่อให้เกิดอุบัติเหตุ

คำแนะนำเพื่อความปลอดภัย

การติดตั้ง



คำเตือน! การติดตั้งปลั๊กอิน โปรดตรวจสอบว่ามีแหล่งจ่ายไฟขึ้นตําขนาด 16A



ปฏิบัติตามคำแนะนำในการประกอบที่ห้มาพร้อมกับตัวเครื่อง

- นำบรรจุภัณฑ์ออกให้หมด
- อย่าติดตั้งหรือใช้งานเครื่องใช้ไฟฟ้าที่มีความเสียหาย
- รักษาระยะห่างขั้นต่ำจากเครื่องใช้ไฟฟ้าและชุดอุปกรณ์อื่นๆ
- ควรระมัดระวังเมื่อเคลื่อนย้ายเครื่องใช้ไฟฟ้าเนื่องจากมีน้ำหนักมาก ใช้ถุงมือนิรภัยและรองเท้าที่ปิดสนิทเสมอ
- ปิดผนึกพื้นผิวที่ถูกตัดด้วยนํ้ายาซิลเพื่อป้องกันความชื้นที่ส่งผลให้เกิดอาการรวม
- ปกป้องด้านล่างของเครื่องใช้ไฟฟ้าจากนํ้าและความชื้น
- อย่าติดตั้งเครื่องใช้ไฟฟ้าไว้ใกล้กับประตูหรืออยู่ใต้หน้าต่าง เพื่อป้องกันไม่ให้เครื่องครัวที่ร้อนหล่นจากตัวเครื่องในขณะที่เปิดประตูหรือหน้าต่าง
- ตรวจสอบว่าพื้นที่ด้านล่างเตาเพียงพอสำหรับการหมุนเวียนของอากาศ
- เนื่องจากด้านล่างของตัวเครื่องสามารถเกิดความร้อนขึ้นได้ หากติดตั้งเครื่องใช้ไฟฟ้าไว้เหนือลิ้นชัก ตรวจสอบว่าได้ติดตั้งแผงกันแบบไม่ติดไฟไว้ใต้ตัวเครื่องเพื่อป้องกันการเข้าถึงจากด้านล่าง

การเชื่อมต่อไฟฟ้า



คำเตือน! เสี่ยงต่อการเกิดไฟไหม้และไฟฟ้าช็อต

- เครื่องใช้ไฟฟ้านี้ต้องเดินสายดิน
- ก่อนการดำเนินการใด ๆ โปรดตรวจสอบว่าได้ถอดปลั๊กไฟออกจากตัวเครื่องแล้ว
- ตรวจสอบให้แน่ใจว่าพิกัดกำลังไฟฟ้าของแหล่งจ่ายไฟหลักนั้นสามารถรองรับพารามิเตอร์ต่างๆ ที่อยู่บนป้ายพิกัดของเครื่องใช้ไฟฟ้า
- ตรวจสอบว่าได้ติดตั้งเครื่องใช้ไฟฟ้าอย่างถูกต้องแล้ว สายไฟหลักหรือปลั๊กไฟฟ้าที่หลวมและใช้งานไม่ถูกต้อง (ถ้ามี) อาจทำให้เครื่องร้อนเกินไป
- โปรดใช้สายไฟหลักที่ถูกต้อง
- อย่าปล่อยให้สายไฟหลักพันกัน
- ตรวจสอบว่าได้ติดตั้งระบบป้องกันไฟฟ้าช็อตแล้ว
- เมื่อคุณเชื่อมต่อเครื่องใช้ไฟฟ้าเข้ากับเต้ารับที่อยู่ใกล้เคียง ตรวจสอบว่าสายไฟหลักหรือปลั๊กไฟฟ้า (ถ้ามี) ไม่ได้สัมผัสกับเครื่องใช้ไฟฟ้าที่ร้อนหรือเครื่องครัวที่ร้อน
- อย่าใช้อะแดปเตอร์สำหรับต่อหลายปลั๊ก รวมถึงปลั๊กพ่วง
- ตรวจสอบให้แน่ใจว่าไม่ได้ทำให้เกิดความเสียหายกับปลั๊กไฟหลัก (ถ้ามี) หรือสายไฟหลัก โปรดติดต่อศูนย์บริการหรือช่างไฟฟ้าที่ได้รับอนุญาตเพื่อเปลี่ยนสายไฟหลักที่ได้รับความเสียหาย

- อุปกรณ์ป้องกันไฟฟ้าช็อตของชิ้นส่วนที่มีกระแสไฟฟ้าและชิ้นส่วนที่หุ้มฉนวนจะต้องได้รับการยึดในลักษณะที่ไม่สามารถถอดออกได้หากปราศจากเครื่องมือ
- เสียบปลั๊กไฟหลักเข้ากับเต้ารับไฟฟ้าหลักเมื่อติดตั้งเสร็จสิ้นแล้วเท่านั้น ตรวจสอบให้แน่ใจว่าสามารถหยิบถึงปลั๊กไฟหลักได้หลังจากติดตั้ง
- หากได้รับหลักหลวม ห้ามเสียบปลั๊กไฟหลัก
- อย่าถอดปลั๊กโดยดึงที่สายไฟหลัก ควรดึงที่ตัวปลั๊กไฟหลักเสมอ

ใช้



คำเตือน! เสี่ยงต่อการบาดเจ็บ แผลไหม้และไฟฟ้าช็อต

- นำบรรจุภัณฑ์ ฉลาก และฟิล์มป้องกันทั้งหมดออก (ถ้ามี) ก่อนการใช้งานครั้งแรก
- เครื่องใช้ไฟฟ้านี้มีไว้สำหรับใช้งานในครัวเรือนเท่านั้น
- อย่าเปลี่ยนข้อมูลจำเพาะของเครื่องใช้ไฟฟ้านี้
- ตรวจสอบว่าช่องระบายอากาศไม่ถูกปิดกั้น
- อย่าปล่อยเครื่องใช้ไฟฟ้าทิ้งไว้โดยไม่มีใครดูแลในขณะที่ใช้งาน
- ตั้งค่าโซนปรุงอาหารเป็น "ปิด" หลังการใช้งานแต่ละครั้ง
- อย่าพึ่งพาเฉพาะตัวตรวจับกระแส
- อย่าวางซ้อนส้อมหรือฟorksบนโซนปรุงอาหาร เนื่องจากอาจเกิดความร้อนได้
- อย่าใช้งานเครื่องใช้ไฟฟ้าในขณะที่เปียก หรือในขณะที่เครื่องสัมผัสกับน้ำ
- อย่าใช้งานเครื่องใช้ไฟฟ้าเพื่อเป็นพื้นที่ทำงานหรือพื้นที่จัดเก็บสิ่งของ
- หากพื้นผิวของเครื่องแตก ให้ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟโดยทันที ทั้งนี้เพื่อป้องกันไฟฟ้าช็อต
- เมื่อใช้งานเครื่อง ผู้ใช้ที่มีเครื่องกระตุ้นหัวใจจะต้องรักษาระยะห่างอย่างน้อย 30 ซม. จากโซนปรุงอาหารแบบเหนียวน้ำไฟฟ้า
- เมื่อคุณใส่อาหารลงในน้ำมันที่ร้อน น้ำมันอาจกระเด็นใส่ได้



คำเตือน! ความเสี่ยงจากไฟไหม้และการระเบิด

- โซ่บันและน้ำมันเมื่อได้รับความร้อนสามารถปล่อยไอระเหยไวไฟได้ ระมัดระวังอย่าให้เปลวไฟหรือวัตถุที่ร้อนอยู่ใกล้โซ่บันและน้ำมันเมื่อปรุงอาหาร
- ไอระเหยที่ปล่อยออกมาจากน้ำมันที่ร้อนจัดอาจทำให้เกิดการติดไฟได้เอง
- น้ำมันที่ใช้แล้ว ที่มีเศษอาหารจะสามารถติดไฟได้ที่อุณหภูมิต่ำกว่าน้ำมันที่ใช้เป็นครั้งแรก
- อย่าวางผลิตภัณฑ์ที่ติดไฟได้หรือสิ่งของซึ่งเปราะบางด้วยผลิตภัณฑ์ที่ติดไฟได้ไว้ใน ใกล้ หรือบนเครื่องใช้ไฟฟ้านี้



คำเตือน! ความเสี่ยงเกิดความเสียหายต่อเครื่องใช้ไฟฟ้า

- อย่าวางเครื่องครัวที่ร้อนไว้บนแผงควบคุม
- อย่าวางฝาครอบกระทะที่ร้อนไว้บนพื้นผิวกระจกของเตา
- อย่าปล่อยให้เครื่องครัวเดือดจนแห้ง
- ระวังอย่าให้วัตถุหรือเครื่องครัวตกใส่ตัวเครื่องเนื่องจากพื้นผิวอาจเสียหายได้
- อย่าเปิดใช้งานโซนปรุงอาหารในขณะที่เครื่องครัวไม่มีอาหารหรือไม่มีเครื่องครัววางอยู่
- อย่าวางอะลูมิเนียมฟอยล์บนตัวเครื่อง
- เครื่องครัวที่ทำจากเหล็กหล่อ อะลูมิเนียม หรือกั้นภาชนะที่ได้รับความเสียหายอาจทำให้เกิดรอยขีดข่วนบนกระจก/แก้วเซรามิกได้ หากต้องการเคลื่อนย้ายสิ่งของเหล่านั้นบนพื้นผิวการปรุงอาหาร จะต้องยกลอยขึ้นเสมอ
- เครื่องใช้ไฟฟ้านี้มีไว้เพื่อการประกอบอาหารเท่านั้น และต้องไม่ใช่เพื่อวัตถุประสงค์อื่น ๆ เช่น การทำความร้อนภายในห้อง

การดูแลและทำความสะอาด

- ทำความสะอาดเครื่องเป็นประจำเพื่อป้องกันการสะสมของวัสดุพื้นผิว
- โปรดปิดเครื่องใช้ไฟฟ้าและปล่อยให้เย็นลงก่อนที่จะทำความสะอาด
- อย่าใช้สเปรย์น้ำหรือไอน้ำในการทำทำความสะอาดตู้เย็นนี้
- ทำความสะอาดเครื่องใช้ไฟฟ้านี้ด้วยผ้านุ่มบิดพอหมาด โปรดใช้น้ำยาทำความสะอาดที่มีฤทธิ์เป็นกลาง อย่าใช้ผลิตภัณฑ์สำหรับขัด แผ่นขัดทำความสะอาดสารทำลาย หรือวัตถุโลหะ

การกำจัด



คำเตือน! เสี่ยงต่อการบาดเจ็บหรือขาดอากาศหายใจ



- หากต้องการข้อมูลเกี่ยวกับการกำจัดตู้เย็นอย่างถูกวิธี ควรติดต่อเจ้าหน้าที่เทศบาล
- ถอดปลั๊กเครื่องออกจากแหล่งจ่ายไฟ
- ตัดสายไฟหลักที่อยู่ติดกับตัวเครื่องออกแล้วกำจัดทิ้ง

การติดตั้ง



คำเตือน! โปรดดูที่บทความความปลอดภัย

ข้อมูลทั่วไป

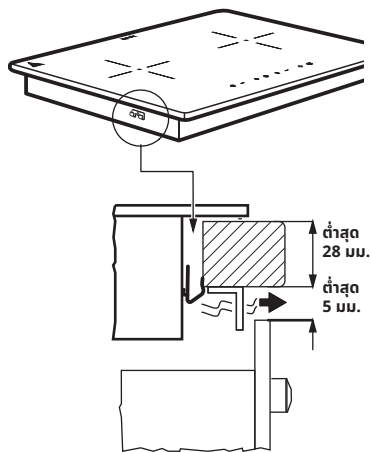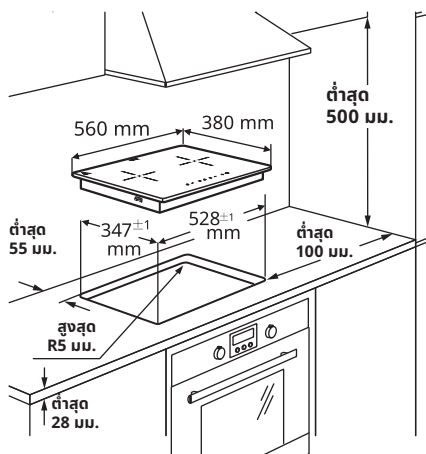


กระบวนการติดตั้งต้องเป็นไปตามกฎหมาย บกบัญญัติ คำชี้แจง และมาตรฐาน (กฎและข้อบังคับเพื่อความปลอดภัยเกี่ยวกับไฟฟ้า การรีไซเคิลอย่างเหมาะสมโดยเป็นไปตามข้อบังคับต่าง ๆ ฯลฯ) ที่บังคับใช้ในประเทศที่ใช้งาน!

- สำหรับข้อมูลเพิ่มเติมเกี่ยวกับการติดตั้ง โปรดดูคำแนะนำในการประกอบ

- หากไม่มีเตาอบอยู่ใต้เตา ให้ติดตั้งแผงกันไว้ใต้เตาตามคำแนะนำในการประกอบ
- อย่าใช้น้ำยาซิลิโคนซิลิโคนระหว่างเครื่องใช้ไฟฟ้ากับพื้นผิวตัวครัว


คำอธิบายของผลิตภัณฑ์

เค้าโครงพื้นผิวการปรุงอาหาร

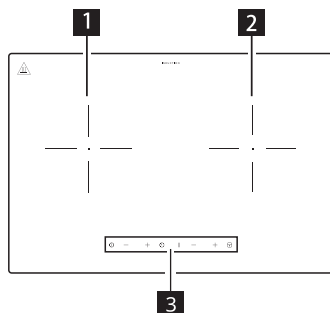

- 1** โซนปรุงอาหารด้านซ้าย (145 มม.) 1,200 วัตต์
- 2** โซนปรุงอาหารด้านขวา (150 มม.) 2,000 วัตต์
- 3** แผงควบคุม

เค้าโครงแผงควบคุม

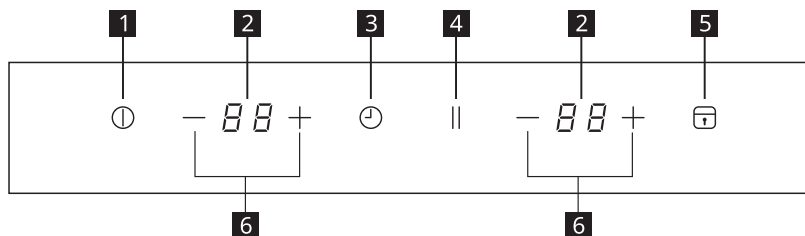

- 1** เปิด/ปิด
- 2** จอแสดงผลระดับพลังงาน/ตัวจับเวลา
- 3** การควบคุมด้วยตัวจับเวลา
- 4** หยุดชั่วคราว
- 5** ล็อค/ล๊อคป้องกันเด็ก
- 6** การตั้งค่าระดับพลังงาน -/+

ช่องและแสดงผลเซ็นเซอร์ควบคุมสัมผัส

คุณใช้งานเตาได้โดยสัมผัสช่องเซ็นเซอร์ สัญญาณเสียงและแสดงผล (บัพัส) เป็นการยืนยันการเลือกฟังก์ชัน

ไฟแสดงสถานะ

⚠️ วางหม้อผิดตำแหน่งหรือไม่มีหม้อ

สัญลักษณ์นี้จะปรากฏขึ้นหากหม้อไม่เหมาะสมสำหรับการปรุงอาหารแบบเหนียวน้ำ หรือไม่ได้จัดวางอย่างถูกต้อง หรือมีขนาดที่ไม่เหมาะสมสำหรับโซนปรุงอาหารที่เลือก หลังจากเลือกโซนปรุงอาหารแล้ว หากตรวจไม่พบหม้อภายใน 30 วินาที โซนปรุงอาหารจะปิดลง

H ความร้อนตกค้าง

หากหน้าจอแสดงค่าเป็น "H" แสดงว่าโซนปรุงอาหารยังคงร้อนอยู่ เมื่อโซนปรุงอาหารเย็นลง จอแสดงผลก็จะดับ

⚠️ คำเตือน! ความเสี่ยงต่อการถูกลวกจากความร้อนคงค้าง! หลังจากปิดเครื่องใช้ไฟฟ้า โซนปรุงอาหารจำเป็นต้องทิ้งระยะไว้สักครู่เพื่อรอให้เย็นลง พิจารณาที่ไฟแสดงผลความร้อนคงค้าง **H**

ใช้ความร้อนคงค้างเพื่อละลายและอุ่นอาหาร อย่าถอดปลั๊กผลิตภัณฑ์โดยไม่รอ **H** ให้ดับไปจากจอแสดงผล

การใช้งานประจำวัน



เสียบปลั๊กเข้าเต้ารับไฟฟ้า

- หลังจากเสียบปลั๊กเข้าแหล่งจ่ายไฟหลักแล้ว ระบบล็อกป้องกันเด็กจะเปิดใช้งาน กดปุ่มระบบล็อกป้องกันเด็กค้างไว้ 2 วินาทีเพื่อปิดใช้งาน

เปิด/ปิด

- กดปุ่มเปิด/ปิด หน้าจอจะแสดง "0" เมื่ออยู่ในโหมดสแตนด์บาย และไฟแสดงสถานะพลังงานจะสว่างขึ้น หากไม่มีการเลือกตั้งค่าความร้อนภายใน 1 นาที เตาจะปิดโดยอัตโนมัติโดยไม่ต้องกดปุ่มเปิด/ปิด
- กดปุ่ม เปิด/ปิด ในขณะที่ใช้งาน เตาจะปิดเครื่อง



การตั้งค่าระดับพลังงาน/ตัวจับเวลา

- กด $-$ หรือ $+$ เพื่อควบคุมการตั้งค่าระดับความร้อนหรือตัวจับเวลาในขณะที่ใช้งาน

- กด $-$ ระดับพลังงานจะไปที่ "9" โดยตรง กด $-$ เพื่อลดระดับพลังงานจาก "9" ถึง "0"
- กด $+$ ระดับพลังงานจะเพิ่มขึ้นจาก "0" กด $+$ เพื่อเพิ่มระดับพลังงานจาก "0" ถึง "9"



ฟังก์ชันการล็อก

ขณะใช้งานโซนปรุงอาหาร คุณสามารถล็อกแผงควบคุมได้ เพื่อป้องกันอุบัติเหตุจากการเปลี่ยนการตั้งค่าความร้อน เตาสามารถปิดได้ด้วยปุ่ม เปิด/ปิด

เปิดใช้ฟังก์ชันล็อก:

- ตั้งค่าความร้อนที่ต้องการ
- เปิดใช้งานฟังก์ชันล็อกโดยกดปุ่มล็อกค้างไว้ 2 วินาที ปุ่มล็อกจะเปิดใช้งานเมื่อไฟสว่างขึ้นและเกิดเสียง หากเปิดใช้ปุ่มตัวจับเวลา เครื่องจะยังคงเปิดอยู่

ปิดใช้ฟังก์ชันล๊อค:

1. ปิดใช้งานฟังก์ชันล๊อคโดยกดปุ่มล๊อคค้างไว้ 2 วินาที ปุ่มล๊อคจะปิดใช้งานเมื่อไฟดับลงและเกิดเสียง
2. การตั้งค่าความร้อนจะกลับสู่การตั้งค่าก่อนหน้านี้

ฟังก์ชันล๊อคป้องกันเด็ก

ในขณะที่ไม่ใช้งาน คุณสามารถล๊อคแผงควบคุมได้เช่นกัน ฟังก์ชันนี้ป้องกันการใช้งานเครื่องโดยไม่ตั้งใจ

เปิดใช้งานการล๊อคป้องกันเด็ก

1. เปิดใช้เครื่องใช้ไฟฟ้าด้วยปุ่ม เปิด/ปิด อย่าตั้งค่าระดับพลังงานใด ๆ
2. กดปุ่มล๊อคเป็นเวลา 3 วินาที ฟังก์ชันจะถูกเปิดใช้งาน เมื่อไฟแสดงสถานะปุ่มล๊อคสว่างขึ้นและมีเสียงเตือน
3. ปิดใช้งานเครื่องใช้ไฟฟ้าด้วยปุ่ม เปิด/ปิด

ปิดใช้งานระบบล๊อคป้องกันเด็ก

1. กดปุ่มล๊อคเป็นเวลา 3 วินาที ฟังก์ชันจะถูกปิดใช้งาน เมื่อไฟแสดงสถานะปุ่มล๊อคดับลงและมีเสียงเตือน

หยุดชั่วคราว

1. กดปุ่มหยุดชั่วคราวขณะทำงาน หน้าจอจะแสดง "- ." และเตาจะหยุดชั่วคราว เตาจะหยุดถ้าความร้อนและไม่มีพลังงานออก
2. กดปุ่มนี้อีกครั้ง จะไปทำการตั้งค่าการปรุงอาหารก่อนหน้านี้
3. หากคุณไม่กดปุ่มหยุดชั่วคราวเพื่อกลับสู่การทำงานภายใน 10 นาทีในระหว่างที่อยู่ในสถานะหยุดชั่วคราว เตาจะเข้าสู่โหมดสแตนด์บาย
4. ฟังก์ชันหยุดชั่วคราวจะเปิดใช้งานสำหรับโซนทำอาหารทั้งสองโซนพร้อมกัน



ตัวจับเวลา

1. ฟังก์ชันตัวจับเวลามีไว้เพื่อตั้งเวลาการปรุงอาหาร โดยตั้งเวลาได้สูงสุด 99 นาที กดปุ่มตัวจับเวลาเพื่อเปิดใช้งานตัวจับเวลา หน้าจอสำหรับโซนปรุงอาหารทั้งสองโซนจะแสดงเป็น "00"
2. กด + หรือ — เพื่อตั้งเวลา หากไม่มีการตั้งค่าเวลาใช้งานภายใน 5 วินาที ตัวจับเวลาจะยกเลิก
3. เพื่อตั้งค่าตัวจับเวลาที่ต้องการ กด + เพื่อเพิ่มการตั้งเวลา เริ่มต้นจาก 00 นาที หากกด + ค้างไว้นานขึ้น การตั้งค่าจะเพิ่มขึ้นครั้งละ 10 นาที กด — เพื่อลดการตั้งค่าเวลาโดยเริ่มต้นจาก 99 นาที หากกด — ค้างไว้นานขึ้น การตั้งค่าจะลดลงครั้งละ 10 นาที
4. ในช่วงสถานะตัวจับเวลา ระดับกำลังไฟและเวลาจะสลับกันแสดงค่าในหน้าจอ เมื่อระดับพลังงานลดลงจนถึง "0" ตัวจับเวลาจะปิดใช้งาน
5. เมื่อปิดใช้งานตัวจับเวลา เตาจะส่งเสียงบี๊ป 3 ครั้ง แล้วปิดเครื่องโดยอัตโนมัติ
6. หากทั้งสองโซนอยู่ในสถานะตัวจับเวลา เมื่อโซนหนึ่งถึงเวลา "0" จะมีการส่งเสียงบี๊ป 3 ครั้งแล้วปิดเครื่อง ส่วนอีกโซนจะยังอยู่ในสถานะตัวจับเวลาหากยังไม่ถึงเวลาที่ตั้งค่าไว้

ปิดเครื่องโดยอัตโนมัติ

ฟังก์ชันนี้จะปิดเครื่องเตาโดยอัตโนมัติ ถ้า:

- คุณไม่ได้ตั้งค่าความร้อนหลังจากเปิดเตาภายใน 1 นาที
- คุณไม่ได้ปิดโซนปรุงอาหารหรือไม่ได้เปลี่ยนการตั้งค่าความร้อนหลังจาก 2 ชั่วโมง หรือหากเกิดความร้อนสูงเกิน (เช่น เมื่อกระทะทอดจนแห้ง)

คำแนะนำเกี่ยวกับเครื่องครัว

⚠ คำเตือน! โปรดดูที่บทความปลอดภัย

หม้อชนิดใดที่สามารถใช้ได้

ใช้หม้อและกระทะที่มีก้นทำจากวัสดุเฟอร์โรแมกเนติก ซึ่งเหมาะสำหรับใช้งานกับเตาแม่เหล็กไฟฟ้า:

- เหล็กหล่อ
- เหล็กเคลือบ
- เหล็กคาร์บอน
- สแตนเลส (แม้ว่าจะไม่ใช่ทุกส่วน)
- อลูมิเนียมที่มีการเคลือบเฟอร์โรแมกเนติกหรือแผ่นเฟอร์โรแมกเนติก

หากต้องการตรวจสอบว่าหม้อหรือกระทะเหมาะสมหรือไม่ ให้ตรวจสอบสัญลักษณ์  (มักจะประทับตราที่ด้านล่าง) นอกจากนี้คุณอาจยึดแม่เหล็กไว้ที่ด้านล่าง หากยึดแม่เหล็กไว้ที่ด้านล่าง เครื่องครัวจะสามารถทำงานบนเตาแม่เหล็กไฟฟ้าได้

เพื่อให้แน่ใจว่ามีประสิทธิภาพสูงสุด โปรดใช้หม้อและกระทะที่มีก้นแบนที่ให้การกระจายความร้อนอย่างสม่ำเสมอ หากก้นไม่เรียบสม่ำเสมอ จะส่งผลต่อการถ่ายเทพลังงานและการนำความร้อน

วิธีใช้

เส้นผ่าศูนย์กลางขั้นต่ำของฐานหม้อ/กระทะสำหรับพื้นที่ปรุงอาหารที่แตกต่างกัน

เพื่อให้มั่นใจว่าเตาทำงานได้อย่างถูกต้อง หม้อจะต้องครอบคลุมจุดอ้างอิงหนึ่งจุดขึ้นไปที่ถูกระบุไว้บนพื้นผิวของเตา และจะต้องมีเส้นผ่าศูนย์กลางขั้นต่ำที่เหมาะสม

ใช้โซนปรุงอาหารที่สอดคล้องกับเส้นผ่านศูนย์กลางของก้นกระทะมากที่สุด

โซนปรุงอาหาร	เส้นผ่าศูนย์กลางของเครื่องครัวที่แนะนำ [มม.]
โซนปรุงอาหารด้านซ้าย	120-200
โซนปรุงอาหารด้านขวา	120-200

หม้อเปล่า/กระทะเปล่าหรือหม้อที่บาง

ห้ามใช้หม้อเปล่า/กระทะเปล่าหรือหม้อที่บางบนเตาเพราะในกรณีที่อุณหภูมิสูงเกินไปจะทำให้ไม่สามารถตรวจสอบอุณหภูมิหรือปิดเครื่องได้โดยอัตโนมัติ และส่งผลให้กระทะหรือพื้นผิวของเตาเสียหายได้ หากเกิดเหตุการณ์ดังกล่าวขึ้น อย่าแตะต้องส่วนใดและรอให้ส่วนประกอบทั้งหมดเย็นตัวลง

หากข้อความแสดงข้อผิดพลาดปรากฏขึ้น ให้ดูที่ "การแก้ไขปัญหา"

คำแนะนำ/เคล็ดลับ

เสียงรบกวนในระหว่างการปรุงอาหาร

เมื่อมีการเปิดใช้งานโซนปรุงอาหาร อาจมีเสียงอันเกิดขึ้นได้เป็นระยะเวลานาน ๆ นี่เป็นลักษณะของโซนปรุงอาหารที่ทำจากแก้วเซรามิกทั้งหมดและไม่ทำให้ฟังก์ชันการทำงานผิดพลาดหรืออายุการใช้งานของเครื่องใช้ไฟฟ้าลดลง เสียงรบกวนจะขึ้นอยู่กับเครื่องครัวที่ใช้ หากเสียงรบกวนทำให้เกิดการก่อความไม่พอใจ การเปลี่ยนเครื่องครัวอาจช่วยแก้ปัญหาได้

การดูแลและทำความสะอาด

⚠ คำเตือน! ปิดเครื่องใช้ไฟฟ้าแล้วปล่อยให้เย็น ก่อนถอดปลั๊ก

⚠ คำเตือน! ปิดเครื่องใช้ไฟฟ้าแล้วปล่อยให้เย็น ก่อนทำความสะอาด

⚠ คำเตือน! เพื่อเหตุผลด้านความปลอดภัย อย่าทำความสะอาดเครื่องใช้ไฟฟ้าด้วยเครื่องฟั่นไอน้ำหรือเครื่องทำความสะอาดแรงดันสูง

⚠ คำเตือน! วัตถุแหลมคมและน้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนจะทำให้เครื่องใช้ไฟฟ้าเสียหาย ทำความสะอาดเครื่องใช้ไฟฟ้าแล้วนำเศษตกค้างออกด้วยน้ำและของเหลวเพื่อการล้างหลังจากใช้งานแต่ละครั้ง ควรนำเศษตกค้างของน้ำยาทำความสะอาดออกด้วย!

i รอยขีดข่วนหรือคราบด้านบนกลาสเซรามิกที่ขจัดออกไม่ได้ ไม่ส่งผลกระทบต่อการใช้งานของเครื่องใช้ไฟฟ้า

ลบเศษตกค้างและคราบฝังแน่น:

- อาหารที่มีน้ำตาล พลาสติก เศษพอยสติกที่ควรล้างออกทันที เครื่องมือที่ดีที่สุดสำหรับทำความสะอาดพื้นผิวกระจกคือยางปาดกระจก (ไม่ได้ให้มาพร้อมเครื่องใช้ไฟฟ้า) วางยางปาดกระจกบนพื้นผิวกลาสเซรามิกที่มุมหนึ่ง แล้วนำเศษตกค้างออกโดยเลื่อนใบยางผ่านบนพื้นผิว ปาดเครื่องใช้ไฟฟ้าด้วยผ้าชื้นและของเหลวเพื่อทำความสะอาดเล็กน้อย สุดท้าย เช็ดเครื่องใช้ไฟฟ้าให้แห้งโดยใช้ผ้าสะอาด
- ควรล้างคราบหินปูน คราบน้ำ คราบไขมัน การเปลี่ยนสีโลหะเงา หลังจากเครื่องใช้ไฟฟ้าเย็นลง โดยใช้ น้ำยาทำความสะอาดกลาสเซรามิกหรือสแตนเลส

การแก้ไขปัญหา

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องใช้ไฟฟ้าไม่ทำงาน	ไฟดับหรือไฟฟ้าลัดวงจรในแหล่งจ่ายไฟของบ้านคุณ	
	การเสียบปลั๊กเข้ากับเต้ารับไม่เหมาะสม	ตรวจสอบแหล่งจ่ายไฟให้เต้าว่าเชื่อมต่อได้ถูกต้อง
	มีการเปิดเครื่องใช้ไฟฟ้ามานานกว่า 10 วินาทีขึ้นไป	เปิดเครื่องใช้ไฟฟ้าอีกครั้ง
	ระบบล๊อคป้องกันเด็กถูกเปิด	ปิดใช้งานระบบล๊อคป้องกันเด็ก (ดูที่หัวข้อ “ฟังก์ชันล๊อคป้องกันเด็ก”)
	ช่องเซ็นเซอร์หลายช่องถูกสับผัสพร้อมกัน	ควรสับผัสช่องเซ็นเซอร์เพียงช่องเดียว
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	เครื่องครัวไม่เหมาะสำหรับการเหนี่ยวนำด้วยแม่เหล็กไฟฟ้า	เปลี่ยนเป็นเครื่องครัวที่เหมาะสมกับเตาแม่เหล็กไฟฟ้า
	ไม่มีเครื่องครัวในโซนปรุงอาหารหรือเส้นผ่าศูนย์กลางของเครื่องครัวน้อยกว่า 120 มม.	วางเครื่องครัวบนโซนปรุงอาหาร
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	เซ็นเซอร์อุณหภูมิของ IGBT ลัดวงจรหรือวงจรเปิด	ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตรากล้างจาก 5 นาที หาก E2 ยังคงปรากฏอยู่ โปรดติดต่อสาขา IKEA ที่อยู่ใกล้ที่สุด
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	แหล่งจ่ายไฟหลักสูงกว่า AC 270V	เปลี่ยนเป็นแหล่งจ่ายไฟที่เหมาะสมกับผลิตภัณฑ์
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	แหล่งจ่ายไฟหลักต่ำกว่า AC 95V	เปลี่ยนเป็นแหล่งจ่ายไฟที่เหมาะสมกับผลิตภัณฑ์
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	เซ็นเซอร์อุณหภูมิของเครื่องใช้ไฟฟ้าลัดวงจรหรือวงจรเปิด	ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตรากล้างจาก 5 นาที หาก E2 ยังคงปรากฏอยู่ โปรดติดต่อสาขา IKEA ที่อยู่ใกล้ที่สุด
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: 	ขอยกเว้นภายใน	ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตรากล้างจาก 5 นาที หาก E0 ยังคงปรากฏอยู่ โปรดติดต่อสาขา IKEA ที่อยู่ใกล้ที่สุด

รหัสข้อผิดพลาดจะปรากฏขึ้นเมื่อเปิดเตาและเมื่อตรวจพบข้อผิดพลาด ซึ่งตัวอักษร E และตัวเลขจะปรากฏขึ้นเป็นระยะ ๆ (1 วินาที) แล้ววนรอบ

หากมีข้อผิดพลาด ให้ลองแก้ไขโดยปฏิบัติตามแนวทางการแก้ไขปัญหา หากไม่สามารถแก้ไขปัญหาได้ โปรดติดต่อร้านค้า IKEA ที่อยู่ใกล้ที่สุด

 หากคุณใช้งานเครื่องใช้ไฟฟ้าผิดวิธี ตัวแทนจำหน่ายอาจต้องคิดค่าใช้จ่าย แม้ว่าจะอยู่ในระยะเวลาประกัน

ข้อมูลทางเทคนิค

กำลังไฟตามอัตรา	3200 วัตต์
แรงดันไฟฟ้าตามอัตรา	220V-240V~
ความถี่ตามอัตรา	50-60 Hz
ความหนา	560 มม.
ความกว้าง	380 มม.
ความสูง	57 มม.
น้ำหนักสุทธิ	6.5 กก.

ประสิทธิภาพการใช้พลังงาน

การระบุรุ่น		LAGAN 706-018-14
ประเภทของเตา		เตาแบบบิวท์อิน
จำนวนโซนปรุงอาหาร		2
เทคโนโลยีการทำความร้อน		การเหนี่ยวนำ
เส้นผ่านศูนย์กลางของโซนปรุงอาหารแบบวงกลม (Ø)	ซ้าย ขวา	14.0 ซม. 15.0 ซม.
การใช้พลังงานต่อโซนปรุงอาหาร (การปรุงอาหารด้วยไฟฟ้า EC)	ซ้าย ขวา	186.9 วัตต์-ชั่วโมง/กก. 190.3 วัตต์-ชั่วโมง/กก.
การใช้พลังงานของเตา (เตาไฟฟ้า EC)		188.6 วัตต์-ชั่วโมง/กก.

ข้อมูลเกี่ยวกับผลิตภัณฑ์ตามระเบียบข้อบังคับของสหภาพยุโรปหมายเลข ก° 66/2014 มาตรฐานอ้างอิง:

EN/IEC-60350-2



เครื่องใช้ไฟฟ้านี้ได้รับการออกแบบ ผลิต และจำหน่ายตามข้อกำหนด EEC

ข้อมูลทางเทคนิคแสดงอยู่บนแผ่นป้ายพิกัดที่ติดอยู่ที่ด้านล่างของผลิตภัณฑ์

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม

รีไซเคิลวัสดุที่มีสัญลักษณ์ ♻️ เก็บบรรจุภัณฑ์ไว้ในพื้นที่จัดเก็บที่เกี่ยวข้องเพื่อการรีไซเคิล ช่วยปกป้องสิ่งแวดล้อมและสุขภาพของมนุษย์ด้วยการรีไซเคิลขยะเครื่องใช้ไฟฟ้าและอิเล็กทรอนิกส์ อย่างที่เครื่องใช้ไฟฟ้าที่มีเครื่องหมายสัญลักษณ์ X รวมกับขยะในครัวเรือนส่งผลิตภัณฑ์ไปที่โรงงานรีไซเคิลในท้องถิ่น หรือติดต่อที่ทำการเทศบาลของคุณ

การประหยัดพลังงาน

คุณสามารถประหยัดพลังงานในระหว่างการปรุงอาหารแต่ละวันได้หากคุณปฏิบัติตามคำแนะนำด้านล่างนี้

- เมื่อคุณต้องการต้มน้ำร้อน ให้ใช้เฉพาะปริมาณที่คุณต้องการเท่านั้น
- หากเป็นไปได้ ควรวางฝาไวบนเครื่องครัวเสมอ
- ก่อนที่คุณจะเปิดใช้งานโซนปรุงอาหาร ให้วางเครื่องครัวไว้ในโซนปรุงอาหารก่อน
- วางเครื่องครัวขนาดเล็กไวบนโซนปรุงอาหารขนาดเล็ก
- วางเครื่องครัวไว้ตรงกลางโซนปรุงอาหารโดยตรง
- ใช้ความร้อนที่เหลือเพื่ออุ่นอาหารหรือละลายอาหาร

การรับประกันของ IKEA

การรับประกันของ IKEA มีระยะเวลาเพียงใด

การรับประกันนี้มีอายุ 2 ปีนับจากวันแรกที่ซื้อเครื่องใช้ไฟฟ้าของคุณที่ IKEA เว้นแต่จะระบุไว้อย่างอื่นในกฎหมายของประเทศ โปรดไปที่ IKEA.com เพื่อดูว่ามีการรับประกันใดบ้างในประเทศของคุณ ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากเครื่องใช้ไฟฟ้าได้รับการซ่อมแซมภายใต้การรับประกัน การซ่อมแซมนี้จะไม่ขยายระยะเวลาการรับประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด

การรับประกันนี้ครอบคลุมอะไรบ้าง

การรับประกันครอบคลุมถึงความผิดปกติของเครื่องใช้ไฟฟ้าซึ่งเกิดจากโครงสร้างที่ผิดปกติหรือความผิดปกติของวัสดุโดยนับจากวันที่ซื้อจาก IKEA การรับประกันนี้ไม่ผลบังคับใช้เฉพาะกับการใช้งานภายในประเทศเท่านั้น ข้อยกเว้นจะระบุไว้ภายใต้หัวข้อ “การรับประกันนี้ไม่ครอบคลุมอะไรบ้าง” ภายในระยะเวลาการรับประกัน ค่าใช้จ่ายในการแก้ไขความผิดปกติ เช่น การซ่อมแซมชิ้นส่วน ค่าแรงงาน และค่าเดินทางจะได้รับความคุ้มครองก็ต่อเมื่อพนักงานสามารถเข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่มีค่าใช้จ่ายพิเศษอื่น ๆ จะให้ค่าที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญหา

IKEA จะตรวจสอบผลิตภัณฑ์และตัดสินใจตามดุลยพินิจของคุณแต่เพียงผู้เดียว หากสินค้าชิ้น ๆ อยู่ภายใต้การรับประกันนี้ หากพิจารณาว่าครอบคลุม IKEA จะตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) ว่าซ่อมแซมผลิตภัณฑ์ที่บกพร่องหรือเปลี่ยนผลิตภัณฑ์เดียวกันหรือเทียบเท่าให้

การรับประกันนี้ไม่ครอบคลุมอะไรบ้าง

- การสึกหรอและร่องรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากความตั้งใจหรือประมาท ความเสียหายที่เกิดจากการไม่ดูแลและนำการใช้งาน การติดตั้งไม่ถูกต้องหรือโดยเชื่อมต่อกับแรงดันไฟฟ้าผิด ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า สนิมเสียหายจากการกัดกร่อนหรือน้ำ รวมถึงแต่ไม่จำกัดเพียง ความเสียหายที่เกิดจากใช้ปนขาวในน้ำมากเกินไปและความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ
- ชิ้นส่วนที่ไม่เกี่ยวกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดข่วนและสีที่อาจแตกต่างจากเดิม
- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอม และการทำความสะอาดหรือชำระล้างใส่กล่อง ระบบระบายน้ำหรือลื่นชกใส่ น้ำสเปรย์
- ความเสียหายที่เกิดกับชิ้นส่วนต่อไปนี้: เซรามิกแก้ว อุปกรณ์เสริม ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร ท่อน้ำดื่มและระบายน้ำ ชิล หลอดไฟและที่ห่อหุ้มหลอดไฟ หน้าจอ ปุ่ม ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดจากความผิดพลาดของการผลิต
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม
- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ
- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดกับผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง

- ค่าใช้จ่ายสำหรับดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA อย่างใดก็ตาม หาก IKEA มีการแต่งตั้งผู้ให้บริการหรือพันธมิตรผู้ให้บริการที่ได้รับอนุญาตเพื่อเข้าซ่อมแซมหรือเปลี่ยนเครื่องตามเงื่อนไขของการรับประกันนี้ ผู้ให้บริการที่ได้รับการแต่งตั้งหรือพันธมิตรที่ได้รับอนุญาตจะมีหน้าที่ติดตั้งอุปกรณ์ที่ซ่อมแซมใหม่หรือติดตั้งอุปกรณ์ทดแทนหากจำเป็น

กฎหมายของประเทศมีผลอย่างไร

การรับประกันของ IKEA ให้สิทธิทางกฎหมายที่เฉพาะแก่คุณซึ่งครอบคลุมหรือเกินกว่าข้อกำหนดทางกฎหมายในท้องถิ่นทั้งหมด อย่างไรก็ตามเงื่อนไขเหล่านี้ไม่ได้จำกัดสิทธิใด ๆ ของผู้บริโภคดังที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

เครื่องใช้ไฟฟ้าซึ่งซื้อในประเทศใดประเทศหนึ่งใน EU แล้วนำไปใช้ในประเทศอื่นใน EU จะได้รับการบริการภายใต้กรอบของเงื่อนไขการรับประกันตามปกติในประเทศใหม่ การระงับการให้บริการภายใต้กรอบของการรับประกันจะขึ้นอยู่กับเมื่ออุปกรณ์นั้น ๆ ได้รับการติดตั้งโดยสอดคล้องกับ:

- ข้อกำหนดทางเทคนิคของประเทศที่มีการเรียกร้องสิทธิการรับประกัน
- ค่าแนะนำการประกอบและข้อมูลความปลอดภัยของผู้ผู้ใช้

บริการหลังการขายสำหรับเครื่องใช้ไฟฟ้า IKEA

โปรดอย่าลังเลที่จะติดต่อ IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
- ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA

เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูติดต่อลูกค้า IKEA หรือเยี่ยมชม www.ikea.com เพื่อค้นหาหมายเลขโทรศัพท์ร้านใกล้บ้านและเวลาทำการ

เพื่อให้บริการแก่คุณได้รวดเร็วขึ้น โปรดเตรียมหมายเลขประจำสินค้า IKEA (รหัส 8 หลัก) ซึ่งติดอยู่ที่ป้ายแสดงข้อมูลทางเทคนิคบนเครื่องใช้ไฟฟ้าของคุณไว้เสมอ

เก็บใบเสร็จรับเงินเอาไว้!

นี่เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้การรับประกัน ใบเสร็จรับเงินการขายยังแจ้งชื่อ IKEA และหมายเลขประจำสินค้า (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละเครื่องที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ของร้าน IKEA ใกล้บ้าน เราขอแนะนำให้คุณอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

