

SPJUTBO

en

th



Design and Quality
IKEA of Sweden



ENGLISH

Please refer to the last page of this manual for the full list of IKEA appointed After Sales Service Provider and relative national phone numbers.
The electronic user manual is available at www.ikea.com.



ไทย

โปรดดูหน้าสุดท้ายของคู่มือนี้สำหรับรายชื่อผู้ให้บริการหลังการขายที่ได้รับการแต่งตั้งจาก IKEA
ทั้งหมดและหมายเลขโทรศัพท์ในประเทศที่เกี่ยวข้อง
สามารถดูคู่มือผู้ใช้ฉบับอิเล็กทรอนิกส์ได้ที่ www.ikea.com

ENGLISH

5

ไทย

23

Contents

Safety information	5	Cleaning and maintenance.....	18
What's in the box.....	9	Troubleshooting.....	18
Product description	10	Before contacting the service center	19
Control panel.....	11	Technical specifications.....	20
Installation	11	Environmental concerns	20
Operation.....	13	IKEA guarantee.....	21

Safety information

⚠ WARNING! PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

For your safety

- Do not attempt to operate this microwave oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

⚠ WARNING! If the door or door seals are damaged, the oven must not be operated until it has been repaired by a qualified technician.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"**.

- This device can be used by children aged 8 and older, and by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they are given proper instructions on the safe use of the device and understand the associated risks.
- Keep the appliance and its cord out of reach of children less than 8 years.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ⚠ WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Only use utensils that are suitable for use in microwave ovens.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
 - Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
 - The oven should be cleaned regularly and any food deposits removed.
 - Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
 - The appliance must not be installed behind a decorative door in order to avoid overheating.
 - Only use the temperature probe recommended for this oven.
(For ovens provided with a facility to use a temperature-sensing probe.)
 - The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
 - The microwave oven must be operated with the decorative door open. (For ovens with a decorative door.)
 - This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
 - The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. Metallic containers for food and beverages must not be used as they may ignite. The appliance is intended to be used freestanding. To avoid overheating do not install in a cabinet or behind a decorative door.
 - The appliance shall not be cleaned with a steam cleaner.
 - The appliance is intended to be used freestanding.
 - The rear surface of appliances shall be placed against a wall.
 - The appliances are not intended to be operated by means of an external timer or separate remote-control system.
 - The temperature of accessible surfaces may be high when the appliance is operating.
- ⚠ **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- ⚠ **WARNING:** To prevent burns, please do not touch the microwave while it is running.

SAVE THESE INSTRUCTIONS

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

⚠ DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

⚠ WARNING!

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- If a long cord set or extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - The extension cord must be a grounding-type 3-wire cord.
 - The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

- Clean the cavity of the oven after using with a slightly damp cloth.
- Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Cleaning Tip ★ For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

⚠ CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on **“MATERIALS YOU CAN USE IN MICROWAVE OVEN OR TO BE AVOIDED IN MICROWAVE OVEN.”**

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

- Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
- Cook on maximum power for 1 minute.
- Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
- Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 5 mm (3/16 inch), above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven





Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

What's in the box


- 1** Microwave oven
- 2** Glass tray (turntable)
- 3** Turntable support
- 4** Turntable hub
- 5** Grill tray
- 6** Suction cup

Note: This suction cup is used when you want to open the door without power on the microwave oven, and you can find the usage on page 13.

- 7** User manual

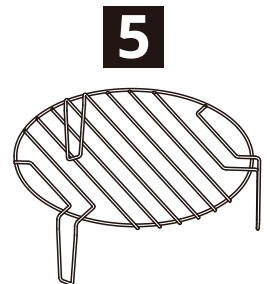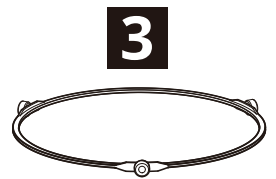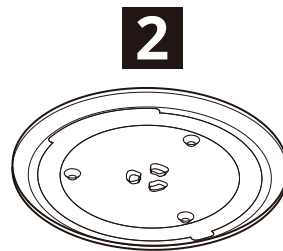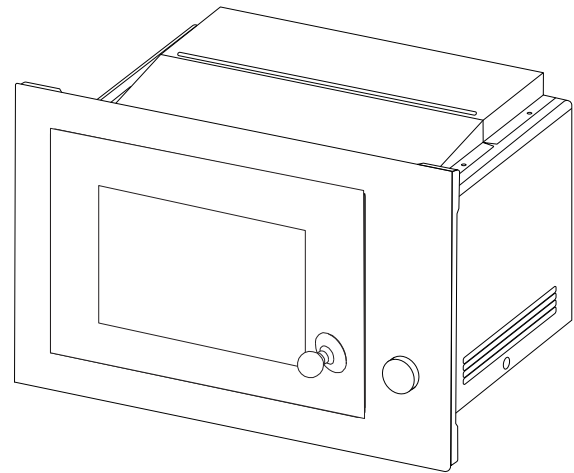

Product description

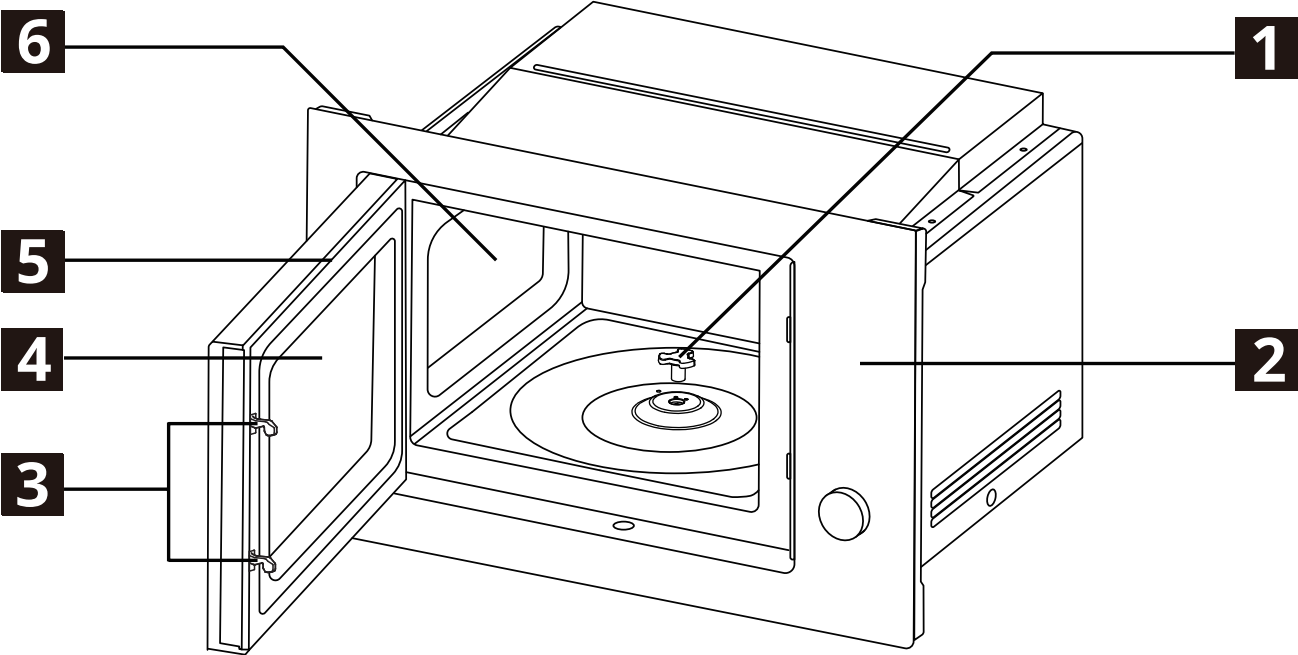

- 1

Turntable hub
- 2

Control panel
- 3

Safety interlock system
- 4

Observation window
- 5

Door assembly
- 6

Oven cavity


Notes:

- Do not place the grill tray inside the oven when the heating mode is microwave only. Refer to the following table for more details.
- When using the grill tray for cooking, always place it on the glass tray.

Heating mode		Grill tray
		
Microwave only		No
G-1 (Grill only)		Yes
Combination	C-1 (Microwave+Grill)	Yes
	C-2 (Microwave+Grill)	Yes

Control panel

- 1** LED screen
- 2** Auto menu button
- 3** Popcorn button
- 4** Start/Confirm/Quick heating button
- 5** Defrost button
- 6** Open door button
- 7** Select knob
- 8** Stop/Cancel/Child lock button
- 9** Clock/Timer button
- 10** Microwave mode button
- 11** Grill/Combination mode button

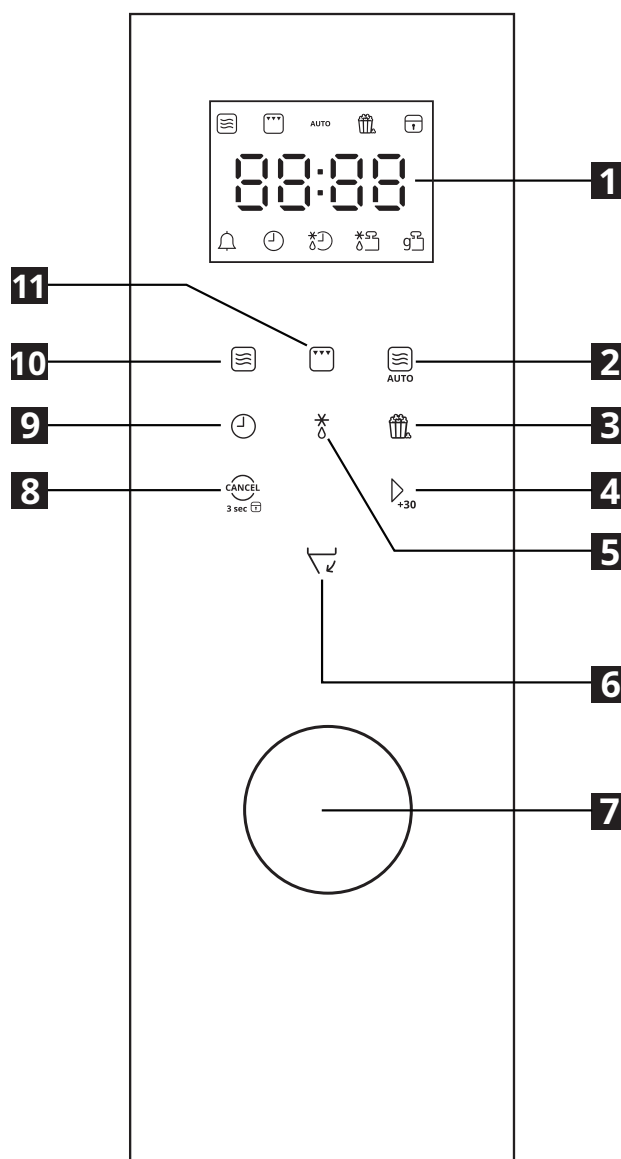

Installation

Before you start

- Remove all packing material and accessories.
- Remove all protective film from the oven surface.
- Do not remove the light brown mica cover that is attached to the oven cavity to protect the magnetron.
- Examine the oven for any damage such as dents or broken door. Do not install the oven if it is damaged.

Oven installation

- Follow the separate installation instructions to install this oven.
- This oven is only intended for domestic use.
- This oven is intended for built-in use only. It is not intended for countertop use or for use inside a cabinet.
- The oven can be installed in a 60cm wide wall-mounted cupboard.
- The oven is fitted with a plug and must only be connected to a properly installed earthed socket.

- Before plugging in the oven, make sure the voltage and frequency of your mains electricity match those shown on the oven's rating label.
- You must plug the oven directly into a wall outlet, not an extension cord or relocatable power strip. Also, make sure the wall outlet you will use is not used by other appliances.
- The socket must be installed and connecting cable must only be replaced by a qualified electrician.
- If the plug is no longer accessible following installation, an all-pole disconnecting device with a contact gap of at least 3mm must be installed near the oven.




The accessible surface may be hot during operation.

Glass tray installation

Before using the appliance to prepare food for the first time, you must correctly install the glass tray (turntable).

1. Place the turntable hub (2) onto the motor shaft (4) in the center of cavity bottom.
2. Place the turntable support (3) in the circular groove of the cavity bottom.
3. Place the glass tray (1) onto the turntable support (3). Make sure the turntable hub (2) engages with the glass tray and turns it.

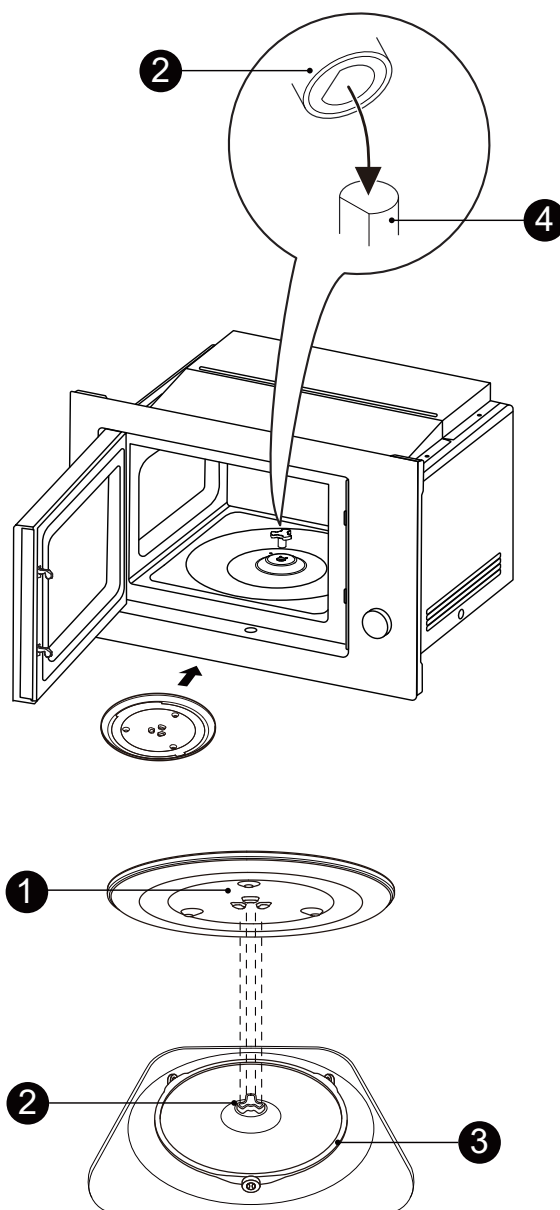

Notes:

- a) Never place the glass tray upside down.
- b) Ensure the glass tray can turn freely.
- c) Always use both the glass tray and turntable ring assembly during cooking.
- d) Always place food and food containers on the glass tray before cooking.
- e) If the glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Operation

General guidelines

- Before using any of the heating (including defrosting) functions, make sure the glass tray is correctly installed, then place your food on the center of the glass tray and close the door. The oven will start heating only when the door is completely closed.
- If you are an inexperienced user and don't know how much heating time is needed, start with a short heating time and then add more time if needed. Overheating food not only wastes electricity, but also poses safety hazards.
- The colder the food and the more water it contains, the longer the required heating time.
- Before using the control panel, make sure it's unlocked.
- By default, you will hear a beep when you tap any control panel button.
- In standby mode, the screen displays the current time if you have set the clock, or "00:00" if you haven't set the clock.
- You can start heating only when the oven is in standby mode. To put the oven back into standby mode at any time, tap  3 sec.
- After the heating ends, if you open the door, the oven will stop beeping and return to standby mode showing "00:00".
- To end the heating earlier, tap  3 sec.
- You cannot change the power level during heating.
- During heating, the oven may beep to remind you to turn the food over. When you hear the beeping, open the door, turn the food over, close the door, and then tap  to continue heating. If you take no action, the oven will continue heating.
- During all heating modes except defrosting by weight, you can tap  to increase the heating time in 30-second increments. **Note:** If you start heating using the auto menu function, you cannot change the heating time during heating.

- If you set the oven to heat for more than 20 minutes at 100% microwave power level, then after the first 20 minutes, the oven will automatically reduce the power level to 80% to protect the magnetron.

Powering on the oven

After you plug in the oven, it beeps once, turns on the screen and enters standby mode.

Powering off the oven


To power off the oven, pull its power plug out of the wall outlet.

Opening the door

The oven allows you to open the door electronically. To open the door this way, tap  when the oven is on.

In case the electronic door system doesn't work, or you want to open the door when the oven is off, follow these steps to open the door:

1. Attach the supplied suction cup to the door surface.
2. Pull suction cup outwards to open the door.

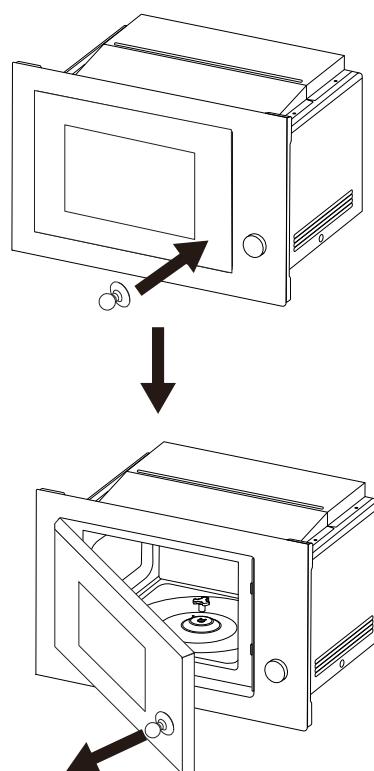

Setting the clock

You can use the oven without setting the clock. To set the clock, follow these steps:

1. When the oven is in standby mode, double-tap  to enter clock setting mode. The hour digits start blinking on the screen.
2. Turn the Select knob to set the hours.
3. Tap  to confirm. The minute digits start blinking on the screen.
4. Turn the Select knob to set the minutes.
5. Tap  to save the time and exit clock setting mode. The screen constantly displays the time.

Notes:

- To change the time later, repeat the preceding steps.
- To exit clock setting mode at any time, tap .
- The oven always displays the 24-hour clock.
- If you don't set the clock, the oven will always display "00:00" as the time.
- If you unplug the oven or in case of a power failure, you will need to set the clock again.

Using the timer

You can use the timer to track time when cooking or doing other things. When the timer is running, the oven does nothing but display the remaining time.

To set the timer, follow these steps:

1. When the oven is in standby mode, tap  to enter timer setting mode. "00:00" starts blinking on the screen.
2. Turn the Select knob to select an amount of time. The maximum amount of time is 95 minutes.
3. Tap  to start the timer. The screen starts displaying the remaining time.

Notes:

- When the timer ends, the oven beeps 5 times and returns to standby mode.
- To end the timer earlier, tap .
- You cannot use other functions of the oven when timer is running.

Heating using microwave only

When heating using microwave only, you can select any of the following 5 power levels. The higher the power level, the shorter the required heating time.

Power level	Displayed code	Output power
100%	P100	900 W
80%	P80	720 W
50%	P50	450 W
30%	P30	270 W
10%	P10	90 W

To start heating using microwave only, follow these steps:

1. Tap . The screen displays "P100", meaning the power level is 100%.
2. If you want to lower the power level, tap  one or more times or turn the Select knob to select a lower power level.
3. Tap  to confirm the selected power level.
4. Turn the Select knob to select an amount of time. The maximum amount of time is 95 minutes.
5. Tap  to start heating.

Defrosting

You can use the oven to defrost frozen food just removed from the freezer using microwave. The oven always uses 30% microwave power to defrost food.

Defrosting by weight

To start defrosting food by weight, follow these steps:

1. Tap . The screen displays "d-1".
2. Turn the Select knob to select a food weight between 100 g and 2000 g.
Tip: The oven will determine the required defrosting time based on the given weight.
3. Tap  to start defrosting.

Note: The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

Defrosting by time

To start defrosting food by time, follow these steps:

1. Double-tap . The screen displays "d-2".
2. Turn the Select knob to select an amount of time. The maximum amount of time is 95 minutes.
3. Tap  to start defrosting.

Note: The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

Using grill only or combination cooking (microwave+grill)

To start heating using the grill only, or combination heating (microwave+grill), follow these steps:

1. Tap . The screen displays "G-1", meaning the heating mode is grill only.
2. If you want to use combination heating (microwave+grill), tap  one or more times or turn the Select knob to select "C-1" or "C-2".
3. Tap  to confirm.
4. Turn the Select knob to select an amount of time. The maximum amount of time is 95 minutes.
5. Tap  to start heating.

Power source table:

Heating mode	Microwave power	Grill power
G-1	0%	100%
C-1	55%	45%
C-2	34%	66%

Using two-stage heating

Notes:

- You can use this feature to let the oven cook your food in two stages. The heating methods for the two stages must be different.
- If either stage's heating method is defrosting, the oven will always defrost your food in the first stage.

As an example, to defrost your food for 5 minutes and then microwave it for 7 minutes using 80% microwave power, follow these steps:

1. Double-tap . The screen displays "d-2".
2. Turn the Select knob to set the defrosting time to 5 minutes.
3. Tap . The screen displays "P100".
4. Tap  or turn the Select knob to set the power level to "P80".
5. Tap  to confirm.
6. Turn the Select knob to set the heating time to 7 minutes.
7. Tap  to start heating.

Using quick heating

You can use quick heating to start heating using 100% microwave power by tapping a single button.

Method 1:

1. Tap  to start heating for 30 seconds.
2. If you want to increase the heating time during heating, tap  again to increase the heating time in 30-second increments. The longest time you can set is 95 minutes.

Method 2:

1. Turn the Select knob to select an amount of time. The maximum amount of time is 95 minutes.
2. Tap  to start heating.
3. If you want to increase the heating time during heating, tap  again to increase the heating time in 30-second increments. The longest time you can set is 95 minutes.

Making popcorn

To start making popcorn using 100% microwave power, follow these steps:

1. Tap . The screen displays "50g", meaning 50g of popcorn.
2. If you need to make 100g of popcorn, tap  again to change the displayed weight to "100g".
3. Tap  to start heating.

Using the child lock function

The child lock function is designed to prevent small children from operating the oven using the control panel. When the child lock is activated, the screen displays the child lock symbol and all control panel buttons are disabled.

To activate or deactivate the child lock, tap and hold  for 3 seconds when the oven is in standby mode. The oven will emit a beep before changing the child lock status.

Checking information during heating

The oven allows you to check some types of information during heating.

- If you have set the clock, tap  to check the current time. The screen will display the time for 3 seconds.
- When the oven is heating using microwave only, tap  to check the power level. The screen will display the power level for 3 seconds.
- When the oven is heating using the grill only or combination heating, tap  to check the heating mode. The screen will display the heating mode for 3 seconds.

Using the auto menu

You can use the auto menu to quickly cook or heat 21 types of food listed in the following table.

Follow these steps to use the auto menu:

1. Tap . The screen displays "A01", meaning frozen pizza.
2. If you want to select another food type, tap  or turn the Select knob to cycle through the menu items until the code for your desired food type appears on the screen.
3. Tap  to confirm. The screen displays the preset quantity for this food type.
4. If the menu has more than one preset quantity for this food type and you want to change the quantity, turn the Select knob to select your desired quantity.
5. Tap  to start heating.

Auto menu table:

Code (Food type)	Food quantity	Displayed quantity	MW power level/ Heating mode	Heating time
A01 (Frozen pizza)	200g	200g	P100/G-1 ¹⁾	2'40"/5'00"
	300g	300g		4'00"/5'00"
	400g	400g		5'00"/5'00"
A02 (Meat)	150g	150g	P100	2'00"
	300g	300g		3'40"
	450g	450g		5'40"
	600g	600g		6'30"

Code (Food type)	Food quantity	Displayed quantity	MW power level/ Heating mode	Heating time
A03 (Fish)	150g	150g	P80	3'30"
	250g	250g		4'20"
	350g	350g		5'00"
	450g	450g		6'40"
	650g	650g		8'00"
A04 (Vegetable)	150g	150g	P100	2'00"
	350g	350g		4'30"
	500g	500g		6'30"
A05 (Potatoes without skin)	400g	400g	P100	5'30"
A06 (Potatoes with skin)	1 (230g)	1	P100	5'30"
	2 (460g)	2		8'00"
	3 (690g)	3		10'00"
A07 (Fresh spinach)	200g	200g	P100	2'30"
A08 (Frozen green beans)	200g	200g	P100	4'20"
A09 (Frozen peas)	200g	200g	P100	3'30"
A10 (Frozen mix vegetable)	200g	200g	P100	3'30"
A11 (Frozen broccoli)	200g	200g	P100	4'00"
A12 (Pasta)	50g (with 450g cold water)	50g	P80	18'00"
	100g (with 800g cold water)	100g		21'00"
	150g (with 1200g cold water)	150g		24'00"
A13 (Frozen lasagna)	300g	300g	C-1	15'00"
A14 (Quinoa)	100g	100g	P100/P50 ²⁾	3'30"/10'00"
A15 (Couscous)	200g	200g	P100/P50 ²⁾	3'30"/8'00"
A16 (Macaroni)	100g	100g	P80	6'00"
A17 (Brown rice)	200g	200g	P100/P50 ²⁾	7'00"/20'00"
A18 (Oatmeal)	2 serving (57g)	57g	P100/P50 ²⁾	3'00"/3'00"

Code (Food type)	Food quantity	Displayed quantity	MW power level/ Heating mode	Heating time
A19 (Popcorn)	50g	50g	P100	1'20"
	100g	100g		2'25"
A20 (Beverage)	1 cup (120ml)	1	P100	1'00"
	2 cups (240ml)	2		1'40"
	3 cups (360ml)	3		2'30"
A21 (Frozen butter) ³⁾	230g	230g	P100	1'45"

- 1) The oven will heat the food using 100% microwave power and then the grill only.
- 2) The oven will heat the food using 100% microwave power and then 50% microwave power.
- 3) Select this to melt the frozen butter just removed from a freezer.

Cleaning and maintenance

Note: Always disconnect the oven from the power supply before any cleaning or maintenance operation.

Cleaning

- Clean the cavity of the oven using a slightly damp cloth.
- Clean the accessories in the usual way in soapy water.
- The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

Cleaning tip

For easier cleaning of the cavity walls with stubborn dirt:

1. Place half a lemon in a bowl and add 300 ml (1/2 pint) water.
2. Heat the mixture on 100% microwave power for 3 minutes.
3. Wipe the oven clean using a soft, dry cloth.

⚠ CAUTION

Personal Injury Hazard!

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

Troubleshooting

If you encounter a problem, try to resolve the problem using the following table. If the problem persists, contact the nearest authorized service center.

Problem	Possible cause	Possible solution
The oven won't start.	a. You haven't plugged in the oven. b. The door is open. c. You didn't tap the correct buttons.	a. Plug in the oven. b. Close the door. c. Check and follow the preceding instructions.

Problem	Possible cause	Possible solution
Arcing or sparking occurs.	a. You placed non-microwave-safe items into the oven. b. You start heating without placing food into the oven.	a. Use microwave-safe cookware only. b. Do not start heating before placing food inside.
The food is unevenly cooked.	a. You placed non-microwave-safe items into the oven. b. You didn't defrost the food completely first. c. You chose the wrong cooking time or power level. d. You didn't turn over or stir the food.	a. Use microwave-safe cookware only. b. Completely defrost the food first. c. Choose the correct cooking time or power level. d. Turn over or stir the food halfway through.
The food is overcooked.	You chose the wrong cooking time or power level.	Choose the correct cooking time or power level.
The food is undercooked.	a. You placed non-microwave-safe items into the oven. b. You didn't defrost the food completely first. c. The air vents are partly blocked. d. You chose the wrong cooking time or power level.	a. Use microwave-safe cookware only. b. Completely defrost the food first. c. Remove anything blocking the air vents. d. Choose the correct cooking time or power level.
The food isn't defrosted completely or evenly.	a. You placed non-microwave-safe items into the oven. b. You chose the wrong weight or time for defrosting. c. You didn't turn over the food.	a. Use microwave-safe cookware only. b. Choose the correct weight or time for defrosting. c. Turn over the food when you hear the beeping.

Before contacting the service center

Please do the following before contacting the service center.

1. Place a glass containing 300 ml (1/2 pint) cold water in the oven. Then close the door securely.
2. Heat the water for one minute at 100% microwave power level.
3. Answer the following questions:

Question	Answer (Yes/No)
Did the oven light turn on?	


Question	Answer (Yes/No)
Did the cooling fan work? (Put your hand on the louver above the Control Panel.)	
Did the turntable rotate? (It is normal for the turntable to turn in either direction.)	
Is the water in the glass warm?	

If “No” is the answer to any of the preceding questions, please check electrical outlet, fuse and/or circuit breaker.

WARNING: A microwave oven should never be serviced by a “do-it-yourself” repairperson.

Technical specifications

Model	TG934A3KG-SDECF0
Article name:	SPJUTBO 606.140.58
Rated voltage	220 V~
Rated frequency	50 Hz
Rated input power (microwave)	1450 W
Rated output power (microwave)	900 W
Rated input power (grill)	1100 W
Oven capacity	34 L
Turntable diameter	315 mm
External dimensions	595×408×397 mm
Net weight	18.6 kg

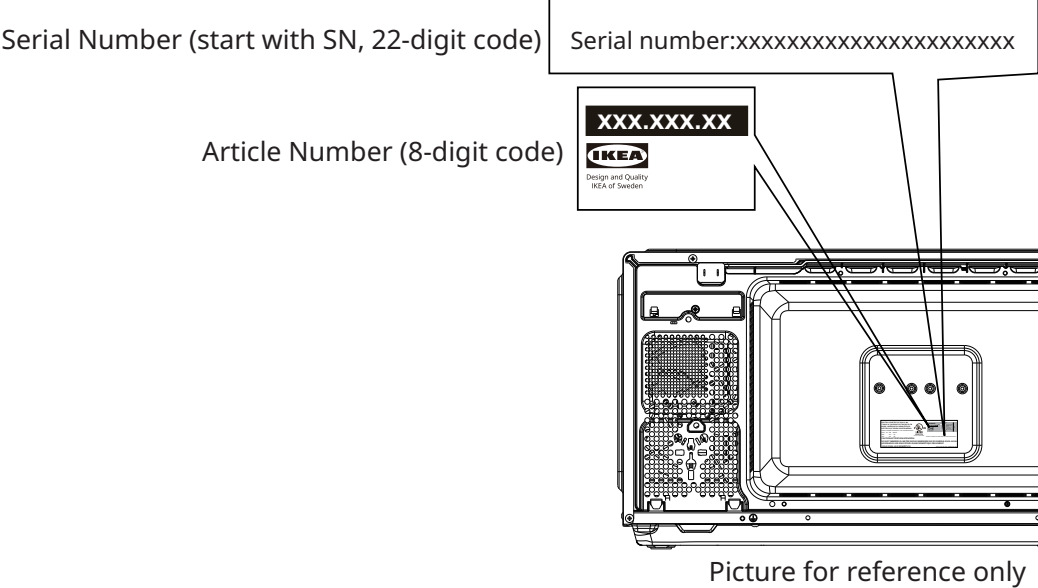

Environmental concerns



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do not dispose of this product with household waste. Please send this product to WEEE collecting points where available.

IKEA guarantee

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Who will execute the service?

Contact nearest IKEA store.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been

caused by production faults.

- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information.

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this guarantee.
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service

The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit www.ikea.com to find your local store phone number and opening time.

In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THE SALES RECEIPT!

It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

สารบัญ

ข้อมูลเพื่อความปลอดภัย	23	การทำความสะอาดและการบำรุงรักษา	36
สิ่งที่อยู่ในกล่อง	27	การแก้ไขปัญหา	36
คำอธิบายของผลิตภัณฑ์	28	ก่อนที่จะติดต่อศูนย์บริการ.....	37
แผนกควบคุม	29	ข้อมูลจำเพาะทางเทคนิค	38
การติดตั้ง	29	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	38
การใช้งาน	31	การรับประกันของ IKEA	39

ข้อมูลเพื่อความปลอดภัย

⚠ คำเตือน! ข้อควรระวังเพื่อหลีกเลี่ยงจากการสัมผัสกับพลังงานส่วนเกินจากไมโครเวฟ

เพื่อความปลอดภัยของคุณ

- อย่าพยายามใช้เตาอบไมโครเวฟหากประตูเปิดอยู่ เพราะอาจได้รับพลังงานจากไมโครเวฟที่เป็นอันตรายได้ สิ่งสำคัญคือห้ามทำลายหรือก่อกวนกลไกการอินเตอร์ล็อกเพื่อรักษาความปลอดภัย
- ห้ามวางวัตถุระหว่างฝาหน้าเตาอบและประตูหรือให้ดินหรือสารตกค้างจากน้ำยาทำความสะอาดหลงเหลือบนพื้นผิวของยาแนว

⚠ คำเตือน! หากประตูหรือซิลประตูชำรุด ห้ามใช้เตาอบจนกว่าจะซ่อมเรียบร้อยแล้วโดยผู้เชี่ยวชาญ

คำแนะนำด้านความปลอดภัยที่สำคัญ

คำเตือน

เพื่อลดความเสี่ยงจากการเกิดไฟไหม้ ไฟฟ้าลัดวงจร การบาดเจ็บหรือการสัมผัสกับพลังงานส่วนเกินจากไมโครเวฟ เมื่อใช้เครื่องใช้ไฟฟ้า ให้ปฏิบัติตามคำเตือนรวมถึงสิ่งต่อไปนี้:

- อ่านและปฏิบัติตาม: **“ข้อควรระวังเพื่อหลีกเลี่ยงจากการสัมผัสกับพลังงานส่วนเกินจากไมโครเวฟ”**
- อุปกรณ์นี้สามารถใช้งานโดยเด็กอายุตั้งแต่ 8 ปีขึ้นไป รวมไปถึงบุคคลที่มีความบกพร่องทางร่างกาย ประสาทสัมผัส หรือจิตใจ หรือบุคคลที่ขาดประสบการณ์หรือความรู้ อย่างไรก็ตาม จะต้องได้รับคำแนะนำที่ถูกต้องเกี่ยวกับการใช้งานอุปกรณ์อย่างปลอดภัย และเข้าใจถึงความเสี่ยงที่เกี่ยวข้อง
- เก็บเครื่องใช้ไฟฟ้าและสายไฟให้ห่างจากมือเด็กอายุต่ำกว่า 8 ขวบ
- หากสายไฟชำรุด จะต้องเปลี่ยนใหม่โดยผู้ผลิต ตัวแทนที่ให้บริการ หรือบุคคลที่มีคุณสมบัติเหมาะสมเพื่อหลีกเลี่ยงอันตราย

⚠ คำเตือน: การให้บริการหรือการซ่อมแซมที่เกี่ยวข้องกับการถอดฝาครอบที่ใช้ป้องกันการสัมผัสกับพลังงานจากไมโครเวฟ ถือเป็นเรื่องอันตรายสำหรับทุกคนที่ไม่ใช่ผู้เชี่ยวชาญ

- เมื่ออุ่นอาหารในภาชนะบรรจุที่ทำจากพลาสติกหรือกระดาษ ให้ระวังการติดไฟ
- ใช้อุปกรณ์ในครัวที่เหมาะสมสำหรับการใช้งานในเตาไมโครเวฟเท่านั้น
- หากเกิดควัน ให้ปิดสวิตช์หรือถอดปลั๊กเครื่องใช้ไฟฟ้าออก และปิดประตูเพื่อยับยั้งเปลวไฟ
- การอุ่นเครื่องดื่มในไมโครเวฟสามารถทำให้น้ำเดือดพุ่งออกมาจากภาชนะในภายหลังได้ ดังนั้นให้ระมัดระวังเมื่อถือภาชนะ
- ต้องคนหรือเขย่าอาหารในขวดนมและกระปุกอาหารของทารกและตรวจสอบอุณหภูมิก่อนบริโภค เพื่อหลีกเลี่ยงการลวกปาก
- ไข่ที่ยังอยู่ในเปลือกและไข่ต้มทั้งฟองไม่ควรนำมาอุ่นในเตาอบไมโครเวฟเพราะอาจระเบิดได้ แม้หลังจากอุ่นเสร็จ
- คำเตือน: อย่าทำความร้อนของเหลวและอาหารในภาชนะปิดสนิทที่อาจจะระเบิด
- ควรทำความสะอาดเตาอบเป็นประจำและเช็ดคราบอาหารออก
- หากไม่รักษาความสะอาดในเตาอบ อาจทำให้พื้นผิวเสื่อมได้ ซึ่งสามารถส่งผลเสียอย่างมากต่ออายุการใช้งานของเตาอบและอาจทำให้เกิดสถานการณ์ที่เป็นอันตรายได้
- ไม่ติดตั้งเครื่องใช้ไฟฟ้าไว้หลังประตูเสริมเพื่อหลีกเลี่ยงความร้อนที่มากเกินไป
- ใช้หัววัดอุณหภูมิที่แนะนำเท่านั้นสำหรับเตาอบนี้ (สำหรับเตาอบที่มีโครงสร้างที่ใช้หัววัดอุณหภูมิ)
- ไม่วางเตาไมโครเวฟในตู้เก็บของ หากยังไม่ได้ทดลองวางในตู้นี้ก่อน
- ใช้งานเตาไมโครเวฟได้เมื่อประตูเปิด (สำหรับเตาอบที่มีประตู)

- เครื่องใช้ไฟฟ้านี้ออกแบบมาเพื่อใช้ในครัวเรือนและการทำงานที่คล้ายกัน เช่น:
 - พื้นที่ครัวสำหรับพนักงานในร้าน ออฟฟิศ และสภาพแวดล้อมการทำงานอื่น ๆ
 - โดยลูกค้าในโรงแรม และสภาพแวดล้อมประเภทที่พักอาศัยประเภทอื่น ๆ
 - บ้านในแปลงเกษตร
 - สภาพแวดล้อมประเภทที่พักพร้อมอาหารเช้า
- เต้าปอมไมโครเวฟเหมาะสำหรับการอุ่นอาหารและเครื่องดื่ม การอบอาหารหรือเสื้อผ้า และการอุ่นแผ่นฟองน้ำ ร้องเท้าแตะ ฟองน้ำ ผ้าเปียก และสิ่งคล้ายกันอาจนำไปสู่ความเสี่ยงต่อการบาดเจ็บ การติดไฟ หรือการไฟไหม้ได้ จะต้องไม่นำภาชนะโลหะสำหรับใส่อาหารและเครื่องดื่มมาใช้กับผลิตภัณฑ์นี้เพราะอาจทำให้เกิดการติดไฟได้ เครื่องใช้ไฟฟ้าเหมาะสำหรับการวางโดยไม่มีโครงสร้างอื่นรองรับ เพื่อหลีกเลี่ยงมิให้เกิดความร้อนสูงเกินไป โปรดอย่าติดตั้งภายในตู้หรือติดตั้งไว้หลังประตูที่สร้างเพื่อการตกแต่ง
- ไม่ทำความสะอาดเครื่องใช้ไฟฟ้าด้วยเครื่องทำความสะอาดที่ใช้ไอน้ำ
- เครื่องใช้ไฟฟ้าเหมาะสำหรับการวางโดยไม่มีโครงสร้างอื่นรองรับ
- พังพื้นผิวด้านหลังของเครื่องใช้ไฟฟ้ากับกำแพง
- เครื่องใช้ไฟฟ้านี้ไม่ได้มีจุดมุ่งหมายให้ใช้งานโดยมีการติดตั้งเครื่องตั้งเวลาภายนอกหรือระบบรีโมทคอนโทรลแบบแยกส่วน
- อุณหภูมิที่พื้นผิวที่เข้าถึงได้อาจสูงในขณะที่ใช้งานเต้าปอม

⚠ คำเตือน: เมื่อใช้งานเครื่องใช้ไฟฟ้าในโหมดผสมผสาน เด็ก ๆ ควรใช้งานเต้าปอมโดยอยู่ภายใต้การกำกับดูแลของผู้ใหญ่เท่านั้น เพราะอาจมีอุณหภูมิที่สูง

⚠ คำเตือน: เพื่อป้องกันการลวกไหม้ โปรดอย่าสัมผัสไมโครเวฟในระหว่างที่กำลังทำงานอยู่

- ข้อปฏิบัติความปลอดภัยสำคัญ
อ่านให้ถี่ถ้วนแล้วเก็บรักษาไว้อ้างอิงภายหน้า

เพื่อลดความเสี่ยงในการได้รับบาดเจ็บของผู้ติดตั้งระบบสายดิน

⚠ อันตราย

อันตรายจากไฟฟ้าลัดวงจร

การสัมผัสอุปกรณ์ภายในบางส่วนสามารถทำให้เกิดการบาดเจ็บหรือเสียชีวิตได้ ห้ามถอดส่วนประกอบของเครื่องใช้ไฟฟ้านี้

⚠ คำเตือน!

อันตรายจากไฟฟ้าลัดวงจร

การติดตั้งระบบสายดินที่ไม่ถูกต้องสามารถทำให้ไฟฟ้าลัดวงจรได้ ห้ามเสียบปลั๊กจนกว่าเครื่องใช้ไฟฟ้าจะได้รับ การติดตั้งและต่อสายดินเรียบร้อยแล้ว เครื่องใช้ไฟฟ้านี้ต้องได้รับการติดตั้งระบบสายดิน ในกรณีที่ไฟฟ้าลัดวงจร ระบบสายดินจะช่วยลดความเสี่ยงจากการเกิดไฟฟ้าลัดวงจรเนื่องจากการใช้สายดินเพื่อถ่ายเทกระแสไฟฟ้าลงสู่ดิน เครื่องใช้ไฟฟ้านี้ใช้สายไฟและปลั๊กที่มีสายดิน ต้องเสียบปลั๊กในเต้ารับที่ได้รับการติดตั้งและต่อสายดินเรียบร้อยแล้ว
ปรึกษาช่างไฟฟ้าผู้เชี่ยวชาญหรือผู้ให้บริการ หากไม่เข้าใจวิธีการติดตั้งระบบสายดิน หรือหากสงสัยว่าเครื่องใช้ไฟฟ้าได้รับการติดตั้งระบบสายดินแล้วหรือไม่ ถ้าจำเป็นต้องใช้สายไฟต่อพ่วง ให้ใช้เฉพาะสายไฟต่อพ่วงที่มี 3 สายเท่านั้น

- ผลิตภัณฑ์จะมาพร้อมกับสายไฟที่สั้นเพื่อป้องกันมิให้สายไฟพันกันและลดความเสี่ยงจากการสะดุดล้มเมื่อใช้สายไฟที่ยาว
- หากใช้ชุดสายไฟที่ยาวหรือสายไฟต่อพ่วง
 - พิกัดกำลังไฟฟ้าของชุดสายไฟหรือสายไฟต่อพ่วงควรมากกว่าหรือเท่ากับกำลังไฟฟ้าของเครื่องใช้ไฟฟ้า
 - สายไฟต่อพ่วงต้องเป็นสายไฟที่มีปลั๊ก 3 ขาที่มีระบบสายดิน
 - สายไฟที่ยาวควรได้รับการจัดเก็บให้เรียบร้อยเพื่อจะได้ไม่กองกึ่งอยู่บนตู้หรือบนโต๊ะ ซึ่งอาจเป็นไปได้ที่เด็กจะมาถึงหรือสะดุดล้มได้

การทำความสะอาด

ตรวจสอบให้มั่นใจว่าถอดปลั๊กเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟแล้ว

- ทำความสะอาดภายในเตาอบด้วยผ้าที่หมาด
- ทำความสะอาดอุปกรณ์เสริมด้วยน้ำสบู่
- กรอบประตู ซิลประตู และส่วนประกอบข้างเคียงต้องได้รับการทำความสะอาดอย่างระมัดระวังด้วยผ้าเปียกเมื่อสกปรก
- ห้ามใช้อุปกรณ์ทำความสะอาดที่ขูดพื้นผิวซึ่งทำจากโลหะที่มีความคมเพื่อทำความสะอาดกระจกประตูของเตาอบเพราะสามารถทำให้เกิดรอยที่พื้นผิว ซึ่งอาจทำให้กระจกแตกได้
- คำแนะนำในการทำความสะอาด ★ สำหรับการทำความสะอาดผนังช่องว่างที่อาหารอาจสัมผัสสามารถทำได้ง่าย ๆ ดังนี้: วางมะนาวครึ่งเสี้ยวในชามใส่น้ำปริมาณ 300 มิลลิลิตร (1/2 โพน) และอุ่นด้วยไฟไมโครเวฟแรงระดับ 100% เป็นเวลา 10 นาที เช็ดเตาไมโครเวฟด้วยผ้านุ่มที่แห้ง

⚠ ข้อควรระวัง

อันตรายจากการได้รับบาดเจ็บ

การให้บริการหรือการซ่อมแซมที่เกี่ยวข้องกับการถอดฝาครอบที่ใช้ป้องกันการสัมผัสกับพลังงานจากไมโครเวฟ ถือเป็นเรื่องอันตรายสำหรับทุกคนที่ไม่ใช่ผู้เชี่ยวชาญ

ดูวิธีการใช้งานในหน้า “วัสดุที่คุณสามารถใช้หรือห้ามใช้ในเตาไมโครเวฟ”

มีอุปกรณ์ในครัวที่ไม่ได้ทำจากโลหะบางประเภทที่ไม่ปลอดภัยในการใช้ในไมโครเวฟ หากสงสัย คุณสามารถตรวจสอบอุปกรณ์ภายในครัวที่สงสัยด้วยขั้นตอนด้านล่างนี้

การทดสอบอุปกรณ์ในครัว:

- เติมน้ำเย็น 1 ถ้วยปริมาณ (250 มิลลิลิตร) ลงในภาชนะบรรจุที่ใช้งานกับไมโครเวฟได้ แล้วใส่เข้าไปในเตาอบพร้อมกับอุปกรณ์ในครัวที่ต้องการทดสอบ
- ประจุอาหารโดยใช้ระดับพลังงานสูงสุดของไมโครเวฟเป็นเวลา 1 นาที
- สัมผัสอุปกรณ์ในครัวอย่างระมัดระวัง หากอุปกรณ์ในครัวที่ไม่มีอะไรร้อนอยู่ภายในให้ความรู้สึกอุ่น ห้ามใช้อุปกรณ์ดังกล่าวในการทำอาหารด้วยไมโครเวฟ
- ห้ามใช้นานเกิน 1 นาที

วัสดุที่คุณสามารถใช้ในเตาไมโครเวฟได้

อุปกรณ์ในครัว	หมายเหตุ
จานอบอาหาร	ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ก้นของจานบราวน์ต้องมีขนาดอย่างน้อย 5 มิลลิเมตร (3/16 นิ้ว) เหนือถาดหมูน การใช้งานที่ไม่ถูกต้องอาจทำให้ถาดหมูนแตกได้
ภาชนะใส่อาหาร	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ห้ามใช้จานที่มีรอยร้าวหรือบิ่น
กระปุกแก้ว	ให้ถอดฝาออกเสมอ ใช้อุ่นอาหารให้อุ่นเท่านั้น กระปุกแก้วส่วนมากไม่ทนความร้อนและอาจแตกได้
ภาชนะที่ทำจากแก้ว	ภาชนะที่ทำจากแก้วที่ทนความร้อนเท่านั้น ตรวจสอบว่าไม่มีส่วนประกอบที่เป็นโลหะ ห้ามใช้จานที่มีรอยร้าวหรือบิ่น
ถุงใส่อาหารที่ใช้ในเตาอบได้	ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ห้ามปิดด้วยที่ผูกที่ทำจากโลหะ ฉีกถุงเพื่อให้ไอน้ำและความร้อนระบายออก
จานและแก้วกระดาษ	ใช้งานสำหรับการอุ่นหรือการทำอาหารระยะสั้นเท่านั้น อย่าปล่อยให้เตาอบทิ้งไว้ในขณะที่เตาอบกำลังทำงาน
กระดาษชำระ	ใช้คลุมอาหารเพื่ออบให้ร้อนหรือซับน้ำมัน ใช้ด้วยความระมัดระวังสำหรับการทำอาหารระยะสั้นเท่านั้น
แผ่นรองอบ	ใช้เป็นที่คลุมเพื่อป้องกันการกระเด็นหรือหุ้มเพื่ออบไอน้ำ
พลาสติก	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ควรติดฉลากว่า “ใช้งานในไมโครเวฟได้” ภาชนะพลาสติกบางประเภทจะเสียรูปเมื่ออาหารที่บรรจุภายในร้อน ควรทิ้ง ฉีก หรือระบายอากาศ “ถุงร้อน” และถุงพลาสติกที่ผูกปิดแน่น ตามที่บรรจุภัณฑ์ได้แนะนำไว้
พลาสติกห่ออาหาร	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ใช้คลุมอาหารระหว่างการทำอาหารเพื่อเก็บความชื้น อย่าให้พลาสติกห่ออาหารสัมผัสกับอาหาร
เครื่องวัดอุณหภูมิ	ใช้งานในไมโครเวฟได้เท่านั้น (เครื่องวัดอุณหภูมิเนื้อสัตว์และลูกอม)
กระดาษขี้ผึ้ง	ใช้เป็นที่คลุมเพื่อกันน้ำกระเด็นและเก็บความชื้น

วัสดุที่ต้องหลีกเลี่ยงการใช้งานในเตาไมโครเวฟ





อุปกรณ์ในครัว	หมายเหตุ
ถาดอะลูมิเนียม	อาจทำให้เกิดการอาร์คได้ เทออาหารใส่จานที่สามารถใช้กับไมโครเวฟได้
กล่องใส่อาหารที่มีด้ามถือทำจากโลหะ	อาจทำให้เกิดการอาร์คได้ เทออาหารใส่จานที่สามารถใช้กับไมโครเวฟได้
โลหะหรืออุปกรณ์ในครัวที่มีขอบเป็นโลหะ	โลหะจะกีดกันมิให้อาหารได้รับพลังงานจากไมโครเวฟ ส่วนประกอบโลหะอาจทำให้เกิดการอาร์คได้
เกลียวโลหะ	อาจทำให้เกิดการอาร์คและสามารถติดไฟในเตาอบได้
ถุงกระดาษ	อาจทำให้เกิดไฟไหม้ในเตาอบได้
โฟมที่ทำจากพลาสติก	โฟมที่ทำจากพลาสติกอาจละลายหรือเจือปนลงของเหลวภายในเมื่อได้รับอุณหภูมิสูง
ไม้	ไม้จะแห้งเมื่อนำไปใช้ในเตาไมโครเวฟและอาจเกิดรอยแยกหรือแตกได้

สิ่งที่อยู่ในกล่อง


- 1 เตาไมโครเวฟ
- 2 ถาดแก้ว (จานหมุน)
- 3 ส่วนรองรับจานหมุน
- 4 ดุมจานหมุน
- 5 ถาดย่าง
- 6 ถ้วยดูด

หมายเหตุ: ถ้วยดูดนี้ใช้เมื่อคุณต้องการเปิดประตูโดยปราศจากการใช้กำลังไฟฟ้าจากเตาไมโครเวฟ และคุณสามารถดูวิธีการใช้งานได้ในหน้า 31

- 7 คู่มือการใช้งาน

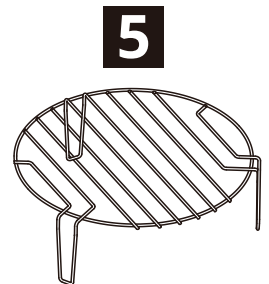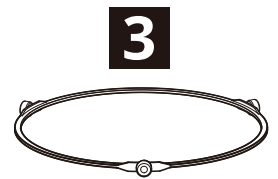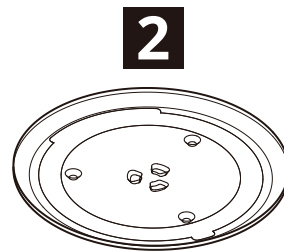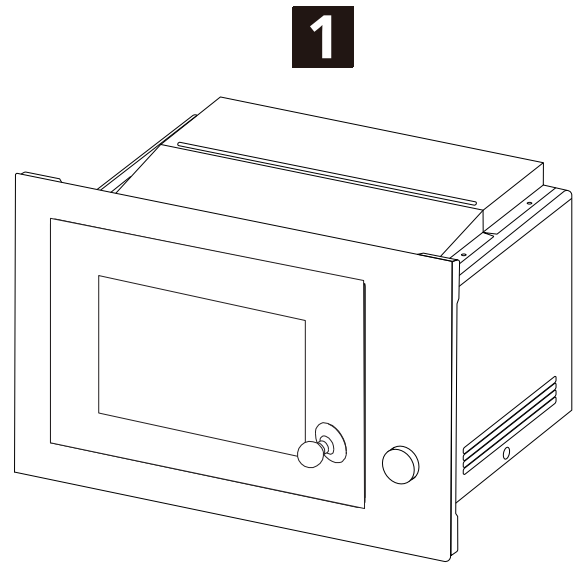

คำอธิบายของผลิตภัณฑ์

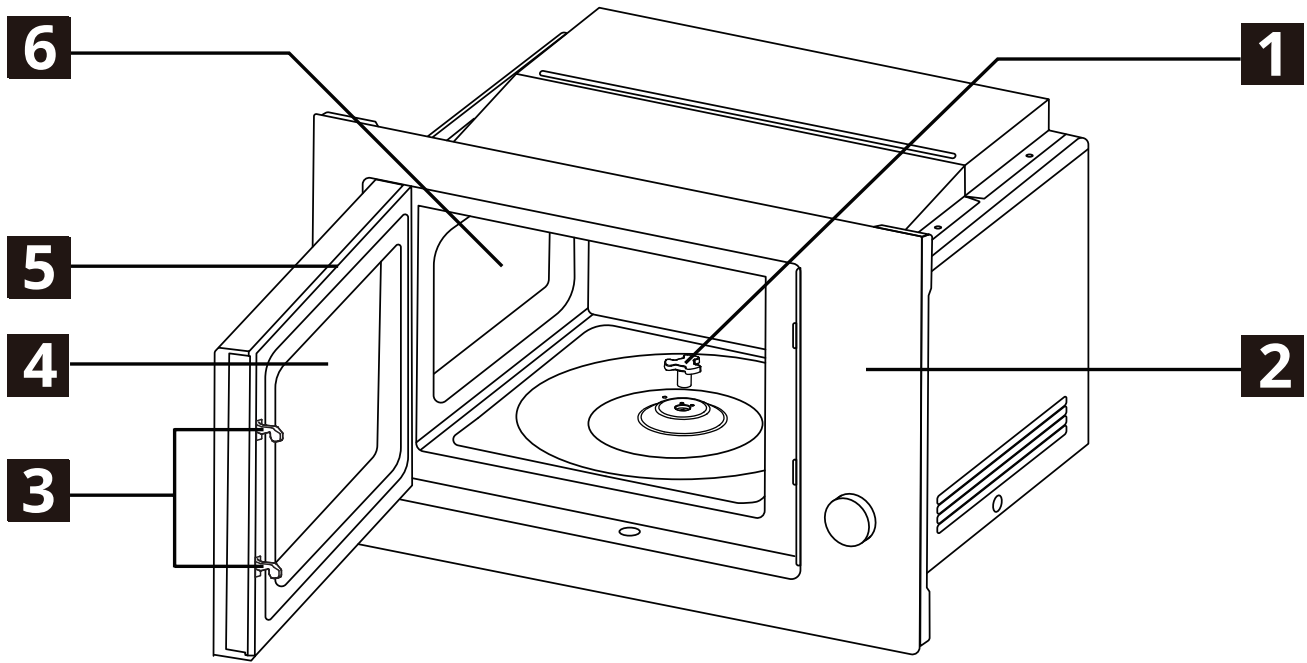

1 ดุมจับหมุน

4 หน้าต่างสังเกต

2 แผงควบคุม

5 ชั้นส่วนประตู

3 ระบบอินเตอร์ล็อกเพื่อรักษาความปลอดภัย

6 ช่องเตาอบ


หมายเหตุ:

- อย่าวางถาดย่างไว้ในเตาอบหากโหมดการทำความร้อนถูกตั้งค่าเป็นไมโครเวฟเท่านั้น โปรดดูตารางต่อไปนี้สำหรับรายละเอียดเพิ่มเติม
- เมื่อใช้ถาดย่างเพื่อปรุงอาหาร ควรวางถาดย่างไว้บนถาดแก้วอยู่เสมอ

โหมดการทำความร้อน		ถาดย่าง 
ไมโครเวฟเท่านั้น		ไม่
G-1 (ย่างอย่างเดียว)		ใช่
ผสมผสาน	C-1 (ไมโครเวฟ+ย่าง)	ใช่
	C-2 (ไมโครเวฟ+ย่าง)	ใช่

แผงควบคุม

- 1 หน้าจอ LED
- 2 ปุ่มเมมูอัติโนมัติ
- 3 ปุ่มป๊อปคอร์น
- 4 ปุ่มเริ่ม/ยืนยัน/การอุ่นอาหารแบบด่วน
- 5 ปุ่มละลายน้ำแข็ง
- 6 ปุ่มเปิดประตู
- 7 ปุ่มเลือก
- 8 ปุ่มหยุด/ยกเลิก/ล็อกป้องกันเด็ก
- 9 ปุ่มนาฬิกา/ตัวจับเวลา
- 10 ปุ่มโหมดไมโครเวฟ
- 11 ปุ่มโหมดย่าง/ผสมผสาน

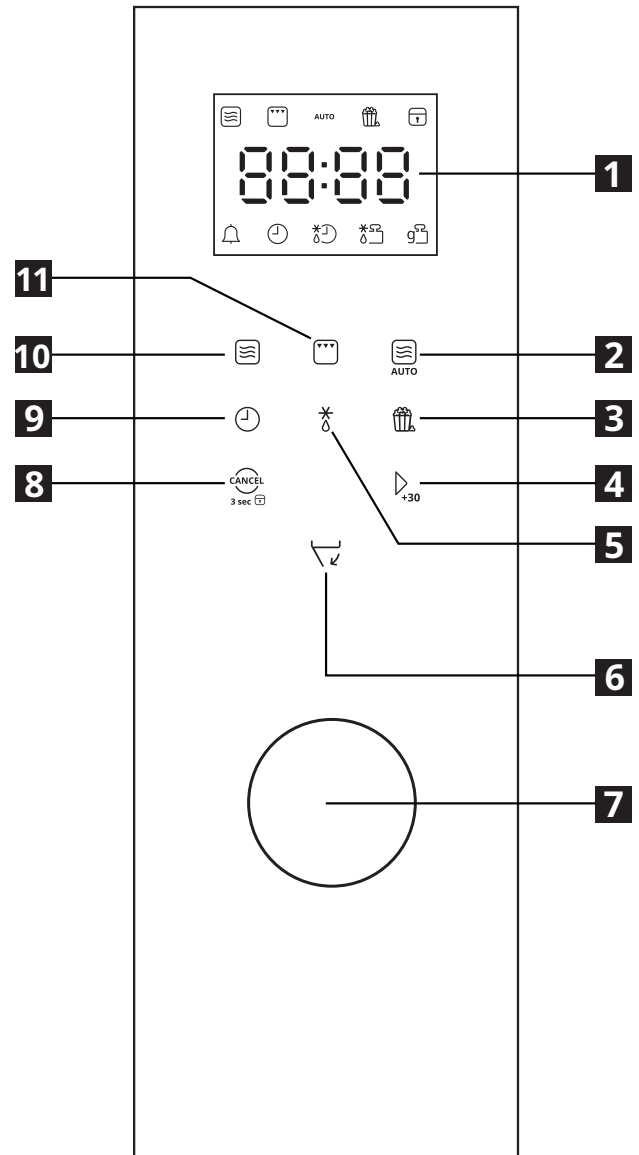

การติดตั้ง

ก่อนที่คุณจะเริ่มต้น

- ถอดปลั๊กจุ่มและอุปกรณ์เสริมออก
- ลอกฟิล์มป้องกันทั้งหมดยกจากพื้นผิวของเตาอบ
- อย่าเอาฝาครอบไมกาซีนน้ำตาลอ่อนที่ติดกับช่องเตาอบออก เพื่อเป็นการป้องกันแมกนีตรอน
- ตรวจสอบความเสียหายบนเตาอบ อย่างเช่น รอยแตกหรือฝาแตก อย่าติดตั้งเตาอบหากได้รับความเสียหาย

การติดตั้งเตาอบ

- ปฏิบัติตามคำแนะนำในการติดตั้งแยกต่างหากเพื่อติดตั้งเตาอบนี้
- เครื่องใช้ไฟฟ้านี้มีไว้สำหรับใช้งานในบ้านเท่านั้น
- เตาอบนี้มีไว้สำหรับการใช้งานแบบบิวท์อินเท่านั้น ไม่ได้มีไว้สำหรับการใช้งานบนเคาน์เตอร์หรือใช้งานภายในตู้
- เตาอบนี้สามารถติดตั้งในตู้แขวนผนังที่มีความกว้าง 60 ซม.
- เตาอบนี้มีปลั๊กและต้องเชื่อมต่อกับเต้ารับที่ติดตั้งสายดินอย่างถูกต้องเท่านั้น

- ก่อนเสียบปลั๊กไฟของเตาอบ ตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้าและความถี่ของแหล่งจ่ายไฟหลักตรงตามที่ระบุอยู่บนฉลากพิกัดกำลังไฟฟ้าของเตาอบ
- คุณต้องเสียบปลั๊กไฟของเตาอบเข้ากับเต้ารับที่ผนังโดยตรง ไม่ใช่ต่อเข้ากับสายไฟต่อพ่วงหรือปลั๊กไฟแบบพกพา นอกจากนี้ โปรดตรวจสอบให้แน่ใจว่าเต้ารับที่คุณจะใช้งานอยู่จะต้องไม่มีเครื่องใช้ไฟฟ้าอื่น ๆ ใช้งานอยู่
- เต้ารับและสายเชื่อมต่อต้องได้รับการติดตั้งและเปลี่ยนโดยช่างไฟฟ้าที่มีคุณสมบัติเหมาะสมเท่านั้น
- หากไม่สามารถเข้าถึงปลั๊กไฟได้หลังจากที่ติดตั้งแล้ว คุณจะต้องติดตั้งอุปกรณ์ตัดการเชื่อมต่อแบบทุกขั้วใกล้กับเตาอบ โดยมีช่องว่างของหน้าสัมผัสอย่างน้อย 3 มม.





พื้นผิวที่เข้าถึงได้อาจร้อนระหว่างการทำงาน

การติดตั้งถาดแก้ว

ก่อนใช้งานเครื่องใช้ไฟฟ้าเพื่อเตรียมอาหารเป็นครั้งแรก คุณจะต้องติดตั้งถาดแก้ว (จานหมุน) อย่างถูกต้อง

1. วางดุมจานหมุน (2) ลงบนเพลามอเตอร์ (4) บริเวณจุดกึ่งกลางที่ด้านล่างของช่องเตาอบ
2. วางส่วนรองรับจานหมุน (3) ลงบนร่องวงกลมที่ด้านล่างของช่องเตาอบ
3. วางถาดแก้ว (1) ลงบนส่วนรองรับจานหมุน (3) ตรวจสอบให้แน่ใจว่าดุมจานหมุน (2) ถูกประกอบเข้ากับถาดแก้ว และสามารถหมุนได้

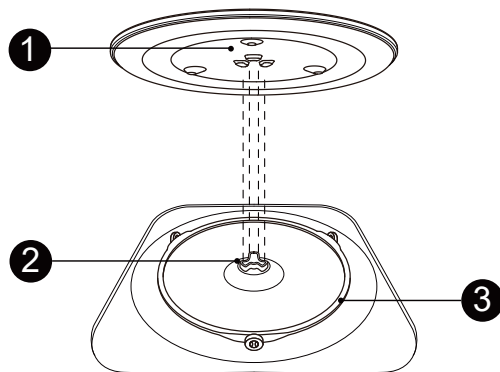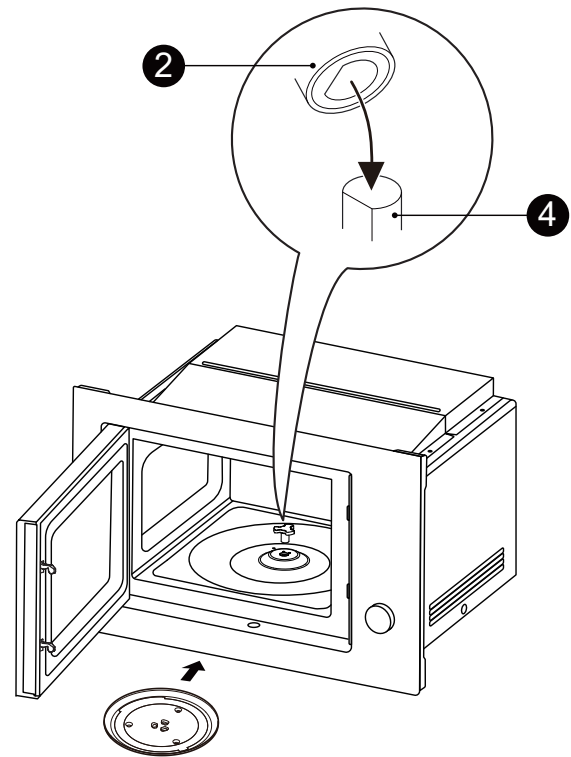

หมายเหตุ:

- ห้ามวางถาดแก้วคว่ำลง
- ตรวจสอบให้แน่ใจว่าถาดแก้วสามารถหมุนได้อย่างอิสระ
- ควรใช้ทั้งถาดแก้วและชุดวงแหวนหมุนอยู่เสมอในขณะที่กำลังปรุงอาหาร
- วางอาหารและภาชนะใส่อาหารไว้บนถาดแก้วอยู่เสมอ ก่อนที่จะทำการปรุงอาหาร
- หากถาดแก้วหรือชิ้นส่วนวงแหวนหมุนเกิดการร้าวหรือแตก ให้ติดต่อศูนย์บริการที่ได้รับอนุญาตที่ใกล้ที่สุด

การใช้งาน

แนวทางปฏิบัติทั่วไป

- ก่อนใช้งานฟังก์ชันการอุ่นอาหารใด ๆ (รวมทั้งฟังก์ชันการละลายน้ำแข็ง) จะต้องตรวจสอบให้แน่ใจว่าได้ติดตั้งถาดแก้วอย่างถูกต้องแล้ว จากนั้นจึงค่อยวางอาหารของคุณไว้ตรงกลางถาดแก้วแล้วปิดประตู เตาอบจะเริ่มการอุ่นอาหารเมื่อปิดประตูสนิทแล้วเท่านั้น
 - หากคุณเป็นผู้ใช้ที่ยังไม่มีประสบการณ์การใช้งานและไม่ทราบว่าจะต้องตั้งเวลาการอุ่นอาหารเท่าใด ให้เริ่มจากเวลาการอุ่นอาหารที่สั้น จากนั้นจึงค่อยเพิ่มเวลาหากต้องการ การอุ่นอาหารมากเกินไปไม่เพียงแต่ทำให้สิ้นเปลืองพลังงานไฟฟ้า แต่ยังส่งผลให้เกิดอันตรายต่อความปลอดภัยอีกด้วย
 - ยิ่งอาหารมีความเย็นและมีปริมาณน้ำมากขึ้น ยิ่งจะส่งผลให้ใช้เวลาในการอุ่นอาหารนานขึ้น
 - ก่อนใช้งานแผงควบคุม โปรดดูให้แน่ใจว่าได้ทำการปลดล็อกแล้ว
 - โดยค่าเริ่มต้นแล้ว คุณจะได้ยินเสียงบีบเมื่อแตะปุ่มใด ๆ ของแผงควบคุม
 - ในโหมดสแตนด์บาย หน้าจอจะแสดงเวลาปัจจุบัน หากคุณสามารถตั้งนาฬิกาไว้ หรือแสดงเวลา "00:00" หากคุณไม่ได้ตั้งนาฬิกาไว้
 - คุณสามารถเริ่มการอุ่นอาหารได้เมื่อเตาอบอยู่ในโหมดสแตนด์บายเท่านั้น หากต้องการให้เตาอบกลับสู่โหมดสแตนด์บาย ให้แตะ 
 - หากเสร็จสิ้นการอุ่นอาหารแล้ว หากคุณเปิดประตู เตาอบจะหยุดเสียงบีบ แล้วกลับสู่โหมดสแตนด์บาย พร้อมกับแสดงเวลา "00:00"
 - หากต้องการหยุดการอุ่นอาหารก่อนกำหนด ให้แตะ 
 - คุณไม่สามารถเปลี่ยนระดับกำลังไฟในระหว่างการอุ่นอาหารได้
 - ในระหว่างการอุ่นอาหาร เตาอบอาจส่งเสียงบีบเพื่อเตือนให้คุณพลิกอาหาร เมื่อคุณได้ยินเสียงบีบ ให้เปิดประตู พลิกอาหาร ปิดประตู แล้วแตะ  เพื่อทำการอุ่นอาหารต่อ หาก你不ดำเนินการใด ๆ เตาอบจะยังคงอุ่นอาหารต่อไป
 - ในโหมดการอุ่นอาหารทั้งหมด ยกเว้นโหมดการละลายน้ำแข็งตามน้ำหนัก คุณสามารถแตะ  เพื่อเพิ่มระยะเวลาในการอุ่นอาหารได้ครั้งละ 30 วินาที
- หมายเหตุ:** หากคุณเริ่มการอุ่นอาหารโดยใช้ฟังก์ชันเมนูอัตโนมัติ คุณจะไม่สามารถเปลี่ยนเวลาในระหว่างการอุ่นอาหารได้

- หากคุณตั้งค่าเตาอบให้อุ่นอาหารที่ระดับกำลังไฟของไมโครเวฟ 100% เป็นเวลานานกว่า 20 นาที หลังจากเวลาผ่านไป 20 นาทีแรก เตาอบจะลดระดับกำลังลงเหลือ 80% โดยอัตโนมัติเพื่อเป็นการปกป้องแมกนีตรอน

การเปิดเตาอบ

หลังจากเสียบปลั๊กไฟของเตาอบแล้ว จะมีเสียงบีบหนึ่งครั้ง จากนั้นหน้าจอจะเปิดขึ้น แล้วเข้าสู่โหมดสแตนด์บาย

การปิดเตาอบ


หากต้องการปิดเตาอบ ให้ถอดปลั๊กไฟออกจากเต้ารับที่ผนัง

การเปิดประตู

เตาอบนี้สามารถที่จะเปิดประตูได้โดยใช้ระบบอิเล็กทรอนิกส์ หากต้องการเปิดประตูด้วยวิธีนี้ ให้แตะ  เมื่อเตาอบเปิดเครื่องอยู่

ในกรณีที่ระบบประตูอิเล็กทรอนิกส์ไม่ทำงาน หรือคุณต้องการเปิดประตูในขณะที่เตาอบปิดเครื่องอยู่ ให้ปฏิบัติตามขั้นตอนต่อไปนี้เพื่อเปิดประตู:

1. ตัดถัวยูดที่ให้มาเข้ากับพื้นผิวประตู
2. ดึงถัวยูดออกทางด้านนอกเพื่อเปิดประตู

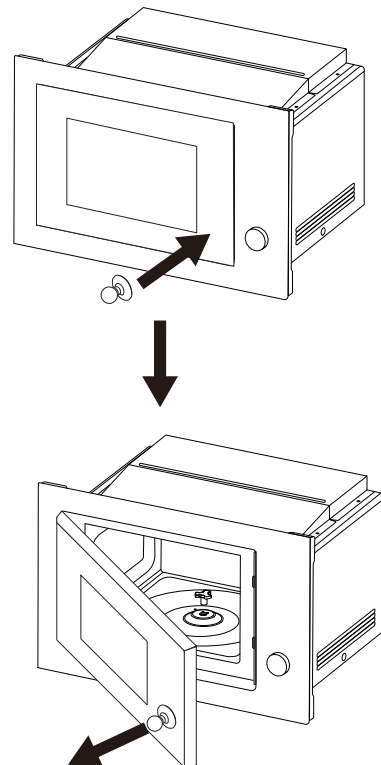

การตั้งนาฬิกา

คุณสามารถใช้งานเตาอบได้โดยไม่ต้องตั้งนาฬิกา หากต้องการตั้งนาฬิกา ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. เมื่อเตาอบอยู่ในโหมดสแตนด์บาย ให้แตะ  สองครั้งเพื่อเข้าสู่โหมดการตั้งค่านาฬิกา ตัวเลขหลักชั่วโมงจะเริ่มกะพริบบนหน้าจอ
2. หมุนปุ่มเลือกเพื่อตั้งค่าชั่วโมง
3. แตะ  เพื่อยืนยัน ตัวเลขหลักนาฬิกาจะเริ่มกะพริบบนหน้าจอ
4. หมุนปุ่มเลือกเพื่อตั้งค่านาที
5. แตะ  เพื่อบันทึกเวลา แล้วออกจากโหมดการตั้งค่านาฬิกา หน้าจอจะแสดงเวลาอย่างต่อเนื่อง

หมายเหตุ:

- หากต้องการเปลี่ยนเวลาในภายหลัง ให้ดำเนินการขั้นตอนก่อนหน้าซ้ำอีกครั้ง
- หากต้องการออกจากโหมดการตั้งค่านาฬิกาที่เวลาใดๆ ให้แตะ  3 sec
- เตาอบจะแสดงเวลาในรูปแบบ 24 ชั่วโมงเสมอ
- หากคุณไม่ได้ตั้งนาฬิกา เตาอบจะแสดงเวลาเป็น "00:00" อยู่เสมอ
- หากคุณถอดปลั๊กเตาอบหรือไฟฟ้าดับ คุณจะต้องตั้งนาฬิกาใหม่อีกครั้ง

การใช้งานตัวจับเวลา

คุณสามารถใช้ตัวจับเวลาเพื่อติดตามเวลาในการปรุงอาหารหรือทำสิ่งอื่น ๆ เมื่อตัวจับเวลาเริ่มทำงาน เตาอบจะไม่ทำงานนอกจากแสดงเวลาที่เหลืออยู่

หากต้องการตั้งค่าตัวจับเวลา ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. เมื่อเตาอบอยู่ในโหมดสแตนด์บาย ให้แตะ  เพื่อเข้าสู่โหมดตัวจับเวลา "00:00" จะเริ่มกะพริบบนหน้าจอ
2. หมุนปุ่มเลือกเพื่อเลือกระยะเวลาที่ต้องการ ระยะเวลาสูงสุดคือ 95 นาที
3. แตะ  เพื่อเริ่มต้นตัวจับเวลา หน้าจอจะแสดงเวลาที่เหลืออยู่

หมายเหตุ:

- เมื่อตัวจับเวลาสิ้นสุดการจับเวลา เตาอบจะส่งเสียงบีบ 5 ครั้ง แล้วกลับสู่โหมดสแตนด์บาย
- หากต้องการหยุดตัวจับเวลาก่อนกำหนด ให้แตะ  3 sec
- คุณจะไม่สามารถใช้งานฟังก์ชันอื่น ๆ ของเตาอบได้ในขณะที่ตัวจับเวลากำลังทำงาน

การอุ่นอาหารโดยใช้ไมโครเวฟเท่านั้น

เมื่อทำการอุ่นอาหารโดยใช้ไมโครเวฟเท่านั้น คุณสามารถเลือกระดับกำลังไฟได้ 5 ระดับดังต่อไปนี้ ระดับกำลังไฟที่สูงขึ้น จะทำให้เวลาการอุ่นอาหารสั้นลง

ระดับกำลังไฟ	รหัสที่แสดง	กำลังไฟขาออก
100%	P100	900 วัตต์
80%	P80	720 วัตต์
50%	P50	450 วัตต์
30%	P30	270 วัตต์
10%	P10	90 วัตต์

หากต้องการเริ่มการอุ่นอาหารโดยใช้ไมโครเวฟเท่านั้น ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. แตะ  หน้าจอแสดง "P100" หมายความว่าระดับกำลังไฟอยู่ที่ 100%
2. หากคุณต้องการลดระดับกำลังไฟลง ให้แตะ  หนึ่งครั้งหรือหลายครั้ง หรือหมุนปุ่มเลือก เพื่อเลือกระดับกำลังไฟที่ต่ำลง
3. แตะ  เพื่อยืนยันระดับกำลังไฟที่เลือก
4. หมุนปุ่มเลือกเพื่อเลือกระยะเวลาที่ต้องการ ระยะเวลาสูงสุดคือ 95 นาที
5. แตะ  เพื่อเริ่มการอุ่นอาหาร

การละลายน้ำแข็ง

คุณสามารถใช้เตาอบไมโครเวฟเพื่อละลายอาหารแช่แข็งที่เพิ่งนำออกมาจากช่องแช่แข็งได้ เตาอบจะใช้กำลังไมโครเวฟที่ 30% อยู่เสมอสำหรับการละลายน้ำแข็งให้แก่อาหาร

การละลายน้ำแข็งตามน้ำหนัก

หากต้องการเริ่มการละลายน้ำแข็งให้แก่อาหารตามน้ำหนัก ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. แตะ  หน้าจอแสดง "d-1"
2. หมุนปุ่มเลือกเพื่อเลือกน้ำหนักอาหารระหว่าง 100 กรัมถึง 2000 กรัม **เคล็ดลับ:** เตาอบจะกำหนดเวลาการละลายน้ำแข็งที่จำเป็นตามน้ำหนักที่ป้อน
3. กด  เพื่อเริ่มการละลายน้ำแข็ง

หมายเหตุ: เสียงเตือนจะดังขึ้นเพื่อแจ้งเตือนให้ทำการพลิกอาหารในระหว่างการละลายน้ำแข็ง หากไม่มีการดำเนินการใด ๆ เตาอบจะยังคงทำงานต่อไป

การละลายน้ำแข็งตามเวลา

หากต้องการเริ่มการละลายน้ำแข็งให้แก่อาหารตามเวลา ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. แตะสองครั้ง  หน้าจอแสดง “d-2”
2. หมุนปุ่มเลือกเพื่อเลือกระยะเวลาที่ต้องการ ระยะเวลาสูงสุดคือ 95 นาที
3. กด  เพื่อเริ่มการละลายน้ำแข็ง

หมายเหตุ: เสียงเตือนจะดังขึ้นเพื่อแจ้งเตือนให้ทำการพลิกอาหารในระหว่างการละลายน้ำแข็ง

หากไม่มีการดำเนินการใด ๆ เตาอบจะยังคงทำงานต่อไป

การใช้การปรุงอาหารแบบอย่างอย่างเดียว หรือแบบผสมผสาน (ไมโครเวฟ+ย่าง)

หากต้องการเริ่มต้นการอุ่นอาหารแบบอย่างอย่างเดียว หรือแบบผสมผสาน (ไมโครเวฟ+ย่าง) ให้ปฏิบัติตามขั้นตอนเหล่านี้:

1. แตะ  หน้าจอแสดง “G-1” หมายความว่าโหมดการอุ่นอาหารเป็นแบบอย่างอย่างเดียว
2. หากคุณต้องการใช้การอุ่นอาหารแบบผสมผสาน ให้แตะ  หนึ่งครั้งหรือหลายครั้ง หรือหมุนปุ่มเลือกเพื่อเลือก “C-1” หรือ “C-2”
3. แตะ  เพื่อยืนยัน
4. หมุนปุ่มเลือกเพื่อเลือกระยะเวลาที่ต้องการ ระยะเวลาสูงสุดคือ 95 นาที
5. แตะ  เพื่อเริ่มการอุ่นอาหาร

ตารางแหล่งจ่ายไฟ:

โหมดการทำความร้อน	กำลังไฟของไมโครเวฟ	กำลังไฟของการย่าง
G-1	0%	100%
C-1	55%	45%
C-2	34%	66%

การใช้ฟังก์ชันการอุ่นอาหารแบบสองขั้นตอน

หมายเหตุ:

- คุณสามารถใช้คุณสมบัตินี้เพื่อให้เตาอบสามารถปรุงอาหารได้แบบสองขั้นตอน วิธีการอุ่นอาหารทั้งสองขั้นตอนจะต้องแตกต่างกัน
- หากวิธีการอุ่นอาหารขั้นตอนใดขั้นตอนหนึ่งคือการละลายน้ำแข็ง เตาอบจะละลายน้ำแข็งให้กับอาหารของคุณในขั้นตอนแรกอยู่เสมอ

ตัวอย่างเช่น หากต้องการละลายน้ำแข็งให้แก่อาหารแช่แข็งเป็นเวลา 5 นาที จากนั้นอุ่นอาหารด้วยไมโครเวฟเป็นเวลา 7 นาทีที่กำลังไฟ 80% ให้ปฏิบัติตามขั้นตอนเหล่านี้:

1. แตะสองครั้ง  หน้าจอแสดง “d-2”
2. หมุนปุ่มเลือกเพื่อตั้งเวลาการละลายน้ำแข็งที่ 5 นาที
3. แตะ  หน้าจอแสดง “P100”
4. แตะ  หรือหมุนปุ่มเลือกเพื่อตั้งระดับกำลังไฟเป็น “P80”
5. แตะ  เพื่อยืนยัน
6. หมุนปุ่มเลือกเพื่อตั้งเวลาการอุ่นอาหารที่ 7 นาที
7. แตะ  เพื่อเริ่มการอุ่นอาหาร

การใช้ฟังก์ชันการอุ่นอาหารแบบด่วน

คุณสามารถใช้การอุ่นอาหารแบบด่วนเพื่อเริ่มการอุ่นอาหารโดยใช้กำลังไฟของไมโครเวฟ 100% ด้วยการแตะปุ่มเพียงปุ่มเดียว

วิธีการที่ 1:

1. แตะ  เพื่อเริ่มการอุ่นอาหารเป็นเวลา 30 วินาที
2. หากคุณต้องการเพิ่มระยะเวลาการอุ่นอาหารระหว่างที่กำลังทำงาน ให้แตะ  อีกครั้งเพื่อเพิ่มระยะเวลาการอุ่นอาหารครั้งละ 30 วินาที เวลามากที่สุดที่สามารถตั้งค่าได้คือ 95 นาที

วิธีการที่ 2:

1. หมุนปุ่มเลือกเพื่อเลือกระยะเวลาที่ต้องการ ระยะเวลาสูงสุดคือ 95 นาที
2. แตะ  เพื่อเริ่มการอุ่นอาหาร
3. หากคุณต้องการเพิ่มระยะเวลาการอุ่นอาหารระหว่างที่กำลังทำงาน ให้แตะ  อีกครั้งเพื่อเพิ่มระยะเวลาการอุ่นอาหารครั้งละ 30 วินาที เวลามากที่สุดที่สามารถตั้งค่าได้คือ 95 นาที

การทำป๊อปคอร์น

หากต้องการเริ่มการทำป๊อปคอร์นโดยใช้กำลังไฟของไมโครเวฟที่ 100% ให้ปฏิบัติตามขั้นตอนต่อไปนี้:

1. แตะ  หน้าจอแสดง "50g" หมายถึง ป๊อปคอร์น 50 กรัม
2. หากคุณต้องการทำป๊อปคอร์น 100 กรัม ให้แตะ  อีกครั้งเพื่อเปลี่ยนน้ำหนักที่แสดงให้เป็น "100g"
3. แตะ  เพื่อเริ่มการอุ่นอาหาร

การใช้ฟังก์ชันล็อกป้องกันเด็ก

ฟังก์ชันล็อกป้องกันเด็กได้รับการออกแบบมาเพื่อป้องกันไม่ให้เด็กเล็กใช้งานเตาอบด้วยแผงควบคุม เมื่อเปิดใช้งานฟังก์ชันล็อกป้องกันเด็ก หน้าจอจะแสดงสัญลักษณ์ล็อกป้องกันเด็ก และปุ่มทั้งหมดของแผงควบคุมจะถูกปิดใช้งาน

การใช้เมนูอัตโนมัติ

คุณสามารถใช้เมนูอัตโนมัติเพื่อปรุงอาหารหรืออุ่นอาหารได้อย่างรวดเร็วตามรายการอาหาร 21 ประเภทในตารางต่อไปนี้

ปฏิบัติตามขั้นตอนต่อไปนี้เพื่อใช้เมนูอัตโนมัติ:

1. แตะ  หน้าจอแสดง "A01" หมายถึง พืชแช่แข็ง
2. หากคุณต้องการเลือกอาหารประเภทอื่น ให้แตะ  หรือหมุนปุ่มเลือกเพื่อเลื่อนผ่านรายการเมนูจนกว่ารหัสประเภทอาหารที่ต้องการจะแสดงบนหน้าจอ
3. แตะ  เพื่อยืนยัน หน้าจอจะแสดงปริมาณที่ตั้งค่าไว้ล่วงหน้าสำหรับอาหารประเภทนี้
4. หากเมนูมีปริมาณที่ตั้งค่าไว้ล่วงหน้ามากกว่าหนึ่งรายการสำหรับอาหารประเภทนี้ และคุณต้องการเปลี่ยนปริมาณอาหาร ให้หมุนปุ่มเลือกเพื่อเลือกปริมาณอาหารที่ต้องการ
5. แตะ  เพื่อเริ่มการอุ่นอาหาร

ตารางเมนูอัตโนมัติ:

รหัส (ประเภทอาหาร)	ปริมาณอาหาร	ปริมาณที่แสดง	ระดับกำลังไฟ MW/ โหมดการอุ่นอาหาร	เวลาการอุ่นอาหาร
A01 (พืชแช่แข็ง)	200 กรัม	200 กรัม	P100/G-1 ¹⁾	2'40"/5'00"
	300 กรัม	300 กรัม		4'00"/5'00"
	400 กรัม	400 กรัม		5'00"/5'00"
A02 (เนื้อ)	150 กรัม	150 กรัม	P100	2'00"
	300 กรัม	300 กรัม		3'40"
	450 กรัม	450 กรัม		5'40"
	600 กรัม	600 กรัม		6'30"
A03 (ปลา)	150 กรัม	150 กรัม	P80	3'30"
	250 กรัม	250 กรัม		4'20"
	350 กรัม	350 กรัม		5'00"
	450 กรัม	450 กรัม		6'40"
	650 กรัม	650 กรัม		8'00"

หากต้องการเปิดใช้งานหรือปิดใช้งานฟังก์ชันล็อก

ป้องกันเด็ก ให้แตะ  ค้างไว้ 3 วินาทีเมื่อเตาอบอยู่ในโหมดสแตนด์บาย เตาอบจะส่งเสียงบีบก่อนที่จะเปลี่ยนสถานะล็อกป้องกันเด็ก

การตรวจสอบข้อมูลระหว่างการอุ่นอาหาร

เตาอบจะสามารถตรวจสอบข้อมูลบางอย่างได้ในระหว่างการอุ่นอาหาร

- หากคุณตั้งนาฬิกาไว้ ให้แตะ  เพื่อตรวจสอบเวลาในปัจจุบัน หน้าจอจะแสดงเวลาเป็นระยะเวลา 3 วินาที
- เมื่อเตาอบกำลังอุ่นอาหารโดยใช้ไมโครเวฟเท่านั้น ให้แตะ  เพื่อตรวจสอบระดับกำลังไฟ หน้าจอจะแสดงระดับกำลังไฟเป็นเวลาประมาณ 3 วินาที
- เมื่อเตาอบกำลังอุ่นอาหารโดยใช้การย่างอย่างเดียว ให้แตะ  เพื่อตรวจสอบโหมดการอุ่นอาหาร หน้าจอจะแสดงโหมดการอุ่นอาหารเป็นระยะเวลา 3 วินาที

รหัส (ประเภทอาหาร)	ปริมาณอาหาร	ปริมาณที่แสดง	ระดับกำลังไฟ MW/ โหมดการอุ่นอาหาร	เวลาการอุ่น อาหาร
A04 (ผัก)	150 กรัม	150 กรัม	P100	2'00"
	350 กรัม	350 กรัม		4'30"
	500 กรัม	500 กรัม		6'30"
A05 (มันฝรั่งปอกเปลือก)	400 กรัม	400 กรัม	P100	5'30"
A06 (มันฝรั่งไม่ปอกเปลือก)	1 (230 กรัม)	1	P100	5'30"
	2 (460 กรัม)	2		8'00"
	3 (690 กรัม)	3		10'00"
A07 (ผักโขมสด)	200 กรัม	200 กรัม	P100	2'30"
A08 (ถั่วเขียวแช่แข็ง)	200 กรัม	200 กรัม	P100	4'20"
A09 (ถั่วแช่แข็ง)	200 กรัม	200 กรัม	P100	3'30"
A10 (ผักรวมแช่แข็ง)	200 กรัม	200 กรัม	P100	3'30"
A11 (บรอกโคลีแช่แข็ง)	200 กรัม	200 กรัม	P100	4'00"
A12 (พาสต้า)	50 กรัม (พร้อมน้ำเย็น 450 กรัม)	50 กรัม	P80	18'00"
	100 กรัม (พร้อมน้ำเย็น 800 กรัม)	100 กรัม		21'00"
	150 กรัม (พร้อมน้ำเย็น 1200 กรัม)	150 กรัม		24'00"
A13 (ลาซานญ่าแช่แข็ง)	300 กรัม	300 กรัม	C-1	15'00"
A14 (ควินัว)	100 กรัม	100 กรัม	P100/P50 ²⁾	3'30"/10'00"
A15 (คัสคูส)	200 กรัม	200 กรัม	P100/P50 ²⁾	3'30"/8'00"
A16 (มะกะโรนี)	100 กรัม	100 กรัม	P80	6'00"
A17 (ข้าวกล้อง)	200 กรัม	200 กรัม	P100/P50 ²⁾	7'00"/20'00"
A18 (ข้าวโอ๊ตบด)	2 เสิร์ฟ (57กรัม)	57 กรัม	P100/P50 ²⁾	3'00"/3'00"
A19 (ป๊อปคอร์น)	50 กรัม	50 กรัม	P100	1'20"
	100 กรัม	100 กรัม		2'25"

รหัส (ประเภทอาหาร)	ปริมาณอาหาร	ปริมาณที่แสดง	ระดับกำลังไฟ MW/ โหมดการอุ่นอาหาร	เวลาการอุ่น อาหาร
A20 (เครื่องต้ม)	1 ถ้วย (120 มล.)	1	P100	1'00"
	2 ถ้วย (240 มล.)	2		1'40"
	3 ถ้วย (360 มล.)	3		2'30"
A21 (เนยแช่แข็ง) ³⁾	230 กรัม	230 กรัม	P100	1'45"

- 1) เตาอบจะอุ่นอาหารโดยใช้กำลังไฟของไมโครเวฟที่ 100% จากนั้นจึงย่างเพียงอย่างเดียว
- 2) เตาอบจะอุ่นอาหารโดยใช้กำลังไฟของไมโครเวฟที่ 100% จากนั้นจึงใช้กำลังไฟของไมโครเวฟที่ 50%
- 3) เลือกตัวเลือกนี้เพื่อละลายเนยแช่แข็งที่เพิ่งนำออกมาจากช่องแช่แข็ง

การทำความสะอาดและการบำรุงรักษา

หมายเหตุ: ต้องตัดการเชื่อมต่อเตาอบจากแหล่งจ่ายไฟก่อนที่จะทำความสะอาดหรือบำรุงรักษาทุกครั้ง

การทำความสะอาด

- ทำความสะอาดช่องภายในเตาอบด้วยผ้าชุบน้ำบิดหมาด ๆ
- ทำความสะอาดอุปกรณ์เสริมด้วยน้ำสบู่
- กรอบประตู ซิลประตู และส่วนประกอบข้างเคียงต้องได้รับการทำความสะอาดอย่างระมัดระวังด้วยผ้าเปียกเมื่อสกปรก
- ห้ามใช้อุปกรณ์ทำความสะอาดที่ขูดพื้นผิวซึ่งทำจากโลหะที่มีความคมเพื่อทำความสะอาดกระจกประตูของเตาอบเพราะสามารถทำให้เกิดรอยที่พื้นผิว ซึ่งอาจทำให้กระจกแตกได้

คำแนะนำในการทำความสะอาด

เพื่อให้การทำความสะอาดผนังของช่องเตาอบที่มีสิ่งสกปรกฝังแน่นทำได้ง่ายขึ้น:

1. ใส่มะนาวครึ่งลูกลงในชาม เติมน้ำ 300 มล. (1/2 โพน)
2. อุ่นด้วยไมโครเวฟที่กำลังไฟ 100% เป็นเวลา 3 นาที
3. เช็ดเตาไมโครเวฟด้วยผ้านุ่มที่แห้ง

⚠ ข้อควรระวัง

อันตรายจากการได้รับบาดเจ็บส่วนบุคคล!

การให้บริการหรือการซ่อมแซมที่เกี่ยวข้องกับการถอดฝาครอบที่ใช้ป้องกันการสัมผัสกับพลังงานจากไมโครเวฟ ถือเป็นเรื่องอันตรายสำหรับทุกคนที่ไม่ใช่ผู้เชี่ยวชาญ

การแก้ไขปัญหา

หากคุณพบเจอปัญหา ให้แก้ไขปัญหาโดยใช้ตารางต่อไปนี้ หากยังคงมีปัญหายอยู่ โปรดติดต่อศูนย์บริการที่ได้รับอนุญาตในพื้นที่ใกล้เคียง

ปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ปัญหที่เป็นไปได้
เตาอบไม่เริ่มทำงาน	a. คุณยังไม่ได้เสียบปลั๊กเตาอบ b. ประตูเปิดอยู่ c. คุณไม่ได้แตะปุ่มที่ถูกต้อง	a. เสียบปลั๊กไฟให้เตาอบ b. ปิดประตู c. ตรวจสอบและปฏิบัติตามคำแนะนำข้างต้น
เกิดการอาร์คหรือประกายไฟ	a. คุณใส่สิ่งที่ไม่ปลอดภัยสำหรับไมโครเวฟเข้าในเตาอบ b. คุณเริ่มอุ่นอาหารโดยไม่ได้อ่างอาหารเข้าไปในเตาอบ	a. ใช้เฉพาะภาชนะที่สามารถใช้กับไมโครเวฟได้เท่านั้น b. อย่าเริ่มการอุ่นอาหารก่อนที่จะวางอาหารเข้าไป

ปัญหา	สาเหตุที่เป็นไปได้	วิธีแก้ไขปัญหาที่เป็นไปได้
อาหารปรุงสุกไม่ทั่วถึง	a. คุณใส่สิ่งที่ไม่ปลอดภัยสำหรับไมโครเวฟเข้าในเตาอบ b. คุณไม่ได้ละลายน้ำแข็งให้แก่อาหารอย่างทั่วถึง c. คุณเลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ไม่ถูกต้อง d. คุณไม่ได้พลิกอาหารหรือคนอาหาร	a. ใช้เฉพาะภาชนะที่สามารถใช้กับไมโครเวฟได้เท่านั้น b. ละลายน้ำแข็งให้แก่อาหารอย่างทั่วถึงก่อน c. เลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ถูกต้อง d. พลิกอาหารหรือคนอาหารเมื่อปรุงได้ครึ่งทาง
อาหารปรุงสุกเกินไป	คุณเลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ไม่ถูกต้อง	เลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ถูกต้อง
อาหารปรุงไม่สุก	a. คุณใส่สิ่งที่ไม่ปลอดภัยสำหรับไมโครเวฟเข้าในเตาอบ b. คุณไม่ได้ละลายน้ำแข็งให้แก่อาหารอย่างทั่วถึง c. ช่องอากาศบางส่วนถูกปิดกั้น d. คุณเลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ไม่ถูกต้อง	a. ใช้เฉพาะภาชนะที่สามารถใช้กับไมโครเวฟได้เท่านั้น b. ละลายน้ำแข็งให้แก่อาหารอย่างทั่วถึงก่อน c. เอาสิ่งกีดขวางช่องอากาศออก d. เลือกเวลาในการปรุงอาหารหรือระดับกำลังไฟที่ถูกต้อง
อาหารละลายน้ำแข็งไม่หมดหรือไม่สม่ำเสมอ	a. คุณใส่สิ่งที่ไม่ปลอดภัยสำหรับไมโครเวฟเข้าในเตาอบ b. คุณเลือกน้ำหนักหรือเวลาสำหรับการละลายน้ำแข็งที่ไม่ถูกต้อง c. คุณไม่ได้พลิกอาหาร	a. ใช้เฉพาะภาชนะที่สามารถใช้กับไมโครเวฟได้เท่านั้น b. เลือกน้ำหนักหรือเวลาสำหรับการละลายน้ำแข็งที่ถูกต้อง c. พลิกอาหารเมื่อได้ยินเสียงบิ๊บ

ก่อนที่จะติดต่อศูนย์บริการ

โปรดทำสิ่งต่อไปนี้ก่อนที่จะติดต่อศูนย์บริการ

1. วางแก้วที่มีน้ำเย็น 300 มล. (1/2 ไพน์) ไว้ในเตาอบ จากนั้นปิดประตูให้แน่น
2. อุณหภูมิเป็นเวลานานที่ใช้กำลังไฟของไมโครเวฟที่ 100%
3. ตอบคำถามต่อไปนี้:

คำถาม	คำตอบ (ใช่/ไม่ใช่)
ไฟเตาอบติดหรือไม่	
พัดลมระบายความร้อนทำงานหรือไม่ (วางมือของคุณบนบานเกล็ดเหนือแผงควบคุม)	
จานหมุนมีการหมุนหรือไม่ (ถือเป็นเรื่องปกติที่จานหมุนอาจหมุนได้ทั้งสองทิศทาง)	
น้ำในแก้วอุ่นหรือไม่	

หากคำตอบสำหรับคำถามใด ๆ ข้างต้นคือ “ไม่” โปรดตรวจสอบเตารับไฟฟ้า ฟิวส์ และ/หรือเซอร์กิตเบรกเกอร์

คำเตือน: เตาอบไมโครเวฟไม่ควรได้รับการซ่อมแซมโดยช่างซ่อมแบบ “ทำด้วยตนเอง”


ข้อมูลจำเพาะทางเทคนิค

รุ่น	TG934A3KG-SDECF0
ชื่ออาร์ติเคิล	SPJUTBO 606.140.58
แรงดันไฟฟ้าพิกัด	220 V~
ความถี่พิกัด	50 Hz
พิกัดกำลังไฟฟ้าขาเข้า (ไมโครเวฟ):	1450 วัตต์
พิกัดกำลังไฟฟ้าขาออก (ไมโครเวฟ):	900 วัตต์
พิกัดกำลังไฟฟ้าขาเข้า (ย่าง):	1100 วัตต์
ความจุเตาอบ:	34 ลิตร
เส้นผ่านศูนย์กลางจานหมุน	315 มม.
เส้นผ่านศูนย์กลางภายนอก	595×408×397 มม.
น้ำหนักสุทธิ	18.6 กก.

หมายเลขประจำเครื่อง (เริ่มต้นด้วย SN, รหัส 22 หลัก)

หมายเลขซีเรียล:XXXXXXXXXXXXXXXXXXXX

หมายเลขเครื่องใช้ (รหัส 8 หลัก)

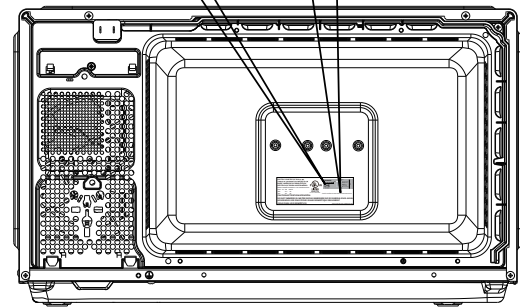

รูปภาพสำหรับการอ้างอิงเท่านั้น

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม



ตามกฎหมายเกี่ยวกับขยะไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์ (WEEE) ขยะไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์ควรถูกเก็บและจัดการแบบแยกต่างหาก ถ้าเมื่อใดก็ตามในอนาคต คุณต้องการทิ้งผลิตภัณฑ์นี้ กรุณาอย่าทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือน กรุณาส่งผลิตภัณฑ์นี้ไปยังจุดรับ WEEE ที่สามารถหาได้

การรับประกันของ IKEA

ระยะเวลาประกันของ IKEA เป็นเวลาเท่าใด

การรับประกันนี้มีระยะเวลา 5 ปีนับจากวันที่แรกซื้อเครื่องใช้ไฟฟ้าของคุณที่อียะ ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากมีการเข้ารับบริการภายใต้การรับประกัน จะไม่ขยายระยะเวลาประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด

การรับประกันนี้ครอบคลุมสิ่งใดบ้าง

การรับประกันครอบคลุมความบกพร่องของเครื่องใช้ไฟฟ้า ซึ่งเกิดขึ้นจากการผลิตหรือวัสดุที่มีข้อผิดพลาดนับจากวันที่ซื้อจาก IKEA การรับประกันนี้มีผลต่อการใช้ในประเทศเท่านั้น ข้อยกเว้นระบุไว้ภายใต้หัวข้อ “การรับประกันนี้ครอบคลุมสิ่งใดบ้าง” ภายในระยะเวลาประกัน จะครอบคลุมค่าใช้จ่ายเพื่อแก้ไขข้อบกพร่อง เช่น การซ่อมแซม อะไหล่ ค่าแรง และค่าเดินทาง ในกรณีที่เข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่ต้องมีค่าใช้จ่ายพิเศษ อะไหล่เก่าที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญห

IKEA จะตรวจสอบผลิตภัณฑ์แล้วตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) หากครอบคลุมอยู่ภายใต้การรับประกันนี้ หากพิจารณาว่าครอบคลุม IKEA จะตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) ว่าจะซ่อมแซมผลิตภัณฑ์ที่บกพร่องหรือเปลี่ยนผลิตภัณฑ์เดียวกันหรือเทียบเท่าให้

มีสิ่งใดที่ไม่ครอบคลุมภายใต้การรับประกันนี้

- การสึกหรอและรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากความตั้งใจหรือประมาท, ความเสียหายที่เกิดจากการไม่ดูแลรักษาการใช้งาน, การติดตั้งไม่ถูกต้องหรือโดยเชื่อมต่อกับแรงดันไฟฟ้าผิด, ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า, สนิม, เสียหายจากการกัดกร่อนหรือน้ำ รวมถึงแต่ไม่จำกัดเพียง ความเสียหายที่เกิดจากใช้ปูนขาวในน้ำมากเกินไป และความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ
- ชิ้นส่วนที่ไม่เกี่ยวกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดข่วนและสีที่อาจแตกต่างกันไปจากเดิม
- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอมและการทำความสะอาดหรือเปิดไส้กรอง ระบบระบายน้ำหรือลิ้นชักน้ำสบู่
- ความเสียหายที่เกิดกับชิ้นส่วนต่อไปนี้: เซรามิกแก้ว, อุปกรณ์เสริม, ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร, ถอน้ำดื่มและระบายน้ำ, ซิล, หลอดไฟและที่ห่อหุ้มหลอดไฟ, หน้าจอ, ปุ่ม, ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดจากความผิดพลาดของการผลิต
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับการแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม
- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ

- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดกับผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง
- ค่าใช้จ่ายสำหรับการดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA อย่างไรก็ตาม หากผู้ให้บริการที่ได้รับแต่งตั้งของ IKEA หรือคู่สัญญาบริการที่ได้รับอนุญาตซ่อมแซมหรือเปลี่ยนเครื่องใช้ไฟฟ้าภายใต้ข้อกำหนดของการรับประกัน ผู้ให้บริการที่ได้รับแต่งตั้งหรือคู่สัญญาบริการที่ได้รับอนุญาตจะติดตั้งเครื่องใช้ไฟฟ้าที่ซ่อมแซมแล้วหรือติดตั้งเครื่องทดแทนให้ใหม่ หากจำเป็น

กฎหมายของประเทศมีผลอย่างไร

IKEA รับประกันว่าจะให้สิทธิทางกฎหมายเฉพาะแก่คุณ ซึ่งครอบคลุมหรือเกินกว่าที่กฎหมายท้องถิ่นกำหนดไว้ อย่างไรก็ตามเงื่อนไขเหล่านี้ไม่จำกัดสิทธิผู้บริโภคในทุกทาง ที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

สำหรับเครื่องใช้ไฟฟ้าซึ่งซื้อในประเทศใดประเทศหนึ่งใน EU แล้วนำไปใช้ในประเทศอื่นใน EU จะมีการให้บริการในกรอบงานของเงื่อนไขการรับประกันตามปกติในประเทศใหม่ ข้อผูกพันต่อการให้บริการในกรอบงานของการรับประกันยังคงอยู่ ต่อเมื่อเครื่องใช้ไฟฟ้าสอดคล้องและติดตั้งโดยเป็นไปตาม:

- ข้อมูลจำเพาะทางเทคนิคของประเทศซึ่งมีการเรียกร้องการรับประกัน
- คำแนะนำการประกอบและข้อมูลความปลอดภัยของคู่มือผู้ใช้

บริการหลังการขายสำหรับเครื่องใช้ไฟฟ้า IKEA

โปรดอย่าลังเลที่จะติดต่อ IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
 - ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA
- เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์ โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูแค็ตตาล็อก IKEA หรือเยี่ยมชม www.ikea.com เพื่อค้นหาหมายเลขโทรศัพท์ร้านใกล้บ้านและเวลาทำการ

เพื่อให้บริการแก่คุณได้รวดเร็วขึ้น โปรดเตรียมหมายเลขประจำสินค้า IKEA (รหัส 8 หลัก) ซึ่งติดอยู่ที่ป้ายแสดงข้อมูลทางเทคนิคบนเครื่องใช้ไฟฟ้าของคุณไว้เสมอ

เก็บใบเสร็จรับเงินการขาย!

เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้ประกัน ใบเสร็จรับเงินการขายยังแจ้งชื่อ IKEA และหมายเลขประจำสินค้า (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละเครื่องที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ร้าน IKEA ใกล้บ้าน เราขอแนะนำให้คุณอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

