

SUPERKALL

GB

TH



Design and Quality
IKEA of Sweden



Please refer to
www.IKEA.com
and select your local store for local store phone numbers
and opening time.



โปรดดูที่
www.IKEA.com
และเลือกร้านค้าในพื้นที่ของคุณเพื่อดูหมายเลขโทรศัพท์ของร้านค้าใน
พื้นที่และเวลาเปิดทำการ

ENGLISH
ไทย

5
23

Content

Safety information	5	Hints and tips	15
Safety instructions	7	Care and cleaning	16
Installation	9	Troubleshooting	18
First use	11	Technical information	20
Product description	12	Environmental concerns	20
Operation	13	IKEA GUARANTEE	21
Daily use	14		

Subject to change without notice.

** Safety information**

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

Children and vulnerable people safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Children aged from 3 to 8 years are allowed to load and unload the appliance provided that they have been properly instructed.
- This appliance may be used by persons with very extensive and complex disabilities provided that they have been properly instructed.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.

- Do not let children play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.

General Safety

- This appliance is intended to be used in household and similar applications such as:
 - Farmhouses; staff kitchen areas in shops, offices and other working environments;
 - By clients in hotels, motels, bed and breakfast and other residential type environments.
- To avoid contamination of food respect the following instructions:
 - do not open the door for long periods;
 - clean regularly surfaces that can come in contact with food and accessible drainage systems;
 - store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- Do not use water spray and steam to clean the appliance.

- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- When the appliance is empty for long period, switch it off, defrost, clean, dry and leave the door open to prevent mould from developing within the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.

Safety instructions

Installation



Warning! Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Do not use the appliance before installing it in the built-in structure due to safety manner.
- Follow the installation instructions supplied with the appliance.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Make sure the air can circulate around the appliance.
- At first installation or after reversing the door wait at least 4 hours before connecting the appliance to the power supply. This is to allow the oil to flow back in the compressor.
- Before carrying out any operations on the appliance (e.g. reversing the door), remove the plug from the power socket.
- Do not install the appliance close to radiators or cookers, ovens or hobs.
- Do not expose the appliance to the rain.
- Do not install the appliance where there is direct sunlight.
- Do not install this appliance in areas that are too humid or too cold.
- When you move the appliance, lift it by the front edge to avoid scratching the floor.

Electrical Connection

Warning! Risk of fire and electric shock.

Warning! When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning! Do not use multi-plug adapters and extension cables.

- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Make sure not to cause damage to the electrical components (e.g. mains plug, mains cable, compressor). Please refer to **www.IKEA.com** and contact our local store for local store phone numbers and opening times or have an electrician to change the electrical components.
- The mains cable must stay below the level of the mains plug.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

Use

Warning! Risk of injury, burns, electric shock or fire.



The appliance contains flammable gas, isobutane (R600a), a natural gas with a high level of environmental compatibility. Be careful not to cause damage to the refrigerant circuit containing isobutane.

- Do not change the specification of this appliance.
- Do not put electrical appliances (e.g. ice cream makers) in the appliance unless they are stated applicable by the manufacturer.
- If damage occurs to the refrigerant circuit, make sure that there are no flames and sources of ignition in the room. Ventilate the room.
- Do not let hot items to touch the plastic parts of the appliance.
- Do not put soft drinks in the freezer compartment. This will create pressure on the drink container.
- Do not store flammable gas and liquid in the appliance.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not touch the compressor or the condenser. They are hot.
- Do not remove or touch items from the freezer compartment if your hands are wet or damp.
- Do not freeze again food that has been thawed.
- Follow the storage instructions on the packaging of frozen food.
- Wrap the food in any food contact material before putting it in the freezer compartment.

Internal lighting

Warning! Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

Care and cleaning

Warning! Risk of injury or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- This appliance contains hydrocarbons in the cooling unit. Only a qualified person must do the maintenance and the recharging of the unit.
- Regularly examine the drain of the appliance and if necessary, clean it. If the drain is blocked, defrosted water collects in the bottom of the appliance.

How to reach us if you need our service

- The IKEA after sales customer service center will assist you on the phone with basic trouble-shooting for your appliances at the time of service call request. Please refer to **www.IKEA.com** and select your local store for local store phone numbers and opening times.

Disposal

Warning! Risk of injury or suffocation.

- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door to prevent children and pets to be closed inside of the appliance.
- The refrigerant circuit and the insulation materials of this appliance are ozone-friendly.
- The insulation foam contains flammable gas. Contact your municipal authority for information on how to discard the appliance correctly.
- Do not cause damage to the part of the cooling unit that is near the heat exchanger.

Installation

- Warning!** Refer to Safety chapters.

Warning! Refer to installation instruction document to install your appliance.
- Warning!** Fix the appliance in accordance with installation instruction document to avoid a risk of instability of the appliance.

Warning!
Installation in cabinet
The appliance is intended to be built in a cabinet. Refer to the separate Assembly Instructions for detailed installation.

Inspection checklist

i Please follow the inspection checklist before using your appliance. If any answer is "NO", follow the relevant action. Remember to write down the product serial number and article number as required and attach your receipt to this page.

Product serial number (Ser. No.):
.....

Product article number (Art. No.):
.....

Purchasing date:
.....


Picture for reference only

To check	If the answer is YES	If the answer is NO
Check if the tube is inside the evaporative tray (refer to section "Evaporative tray").	No action ☒	Put the tube inside the evaporative tray.
Make sure gasket seals all around the door when the door is closed.	No action ☒	Refer to the assembly instruction -door alignment.
Check if there is no collision between parts/furniture while opening and closing the door.	No action ☒	Refer to the assembly instruction -door alignment.

To check	If the answer is YES	If the answer is NO
Install the appliance in the built-in structure.	No action ☒	Follow the assembly instruction for the proper installation.
Make sure that at first installation or after reversing the door the appliance stands in vertical position for at least 4 hours before it is connected to the power supply.	No action ☒	Wait 4 hours before connecting the appliance to the power supply.

Evaporative tray

Before using the appliance make sure that melting water outlet is connected to the evaporative tray above the compressor.

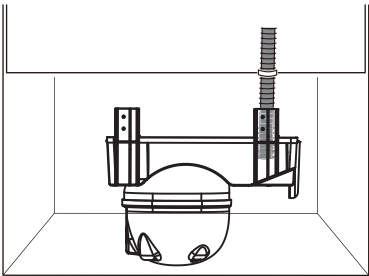

Location


To ensure appliance's best functionality, you should not install the appliance in the nearby of the heat source (oven, stoves, radiators, cookers or hobs) or in a place with direct sunlight. Make sure that air can circulate freely around the back of the cabinet.

This appliance should be installed in a dry, well ventilated indoor position.

This appliance should be installed in a dry, well ventilated indoor where the ambient temperature corresponds to the climate class indicated on the rating plate of the appliance:

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- i** The correct operation of the appliance can only be guaranteed within the specified temperature range.
- i** If you have any doubts regarding where to install the appliance, please turn to the vendor, to our customer service.
- i** It must be possible to disconnect the appliance from the mains power supply. The plug must therefore be easily accessible after installation.

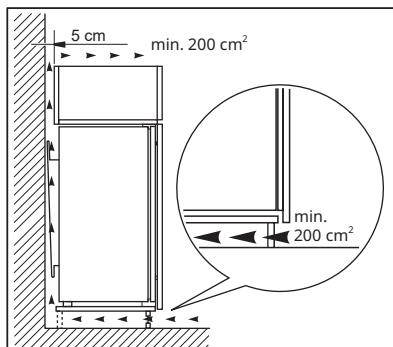

⚠ Caution! Refer to the installation instructions for the installation.

Electrical connection

Before plugging in, ensure that the voltage and frequency shown on the rating plate correspond to your domestic power supply.

The appliance must be earthed. The power supply cable plug is provided with a contact for this purpose. If the domestic power supply socket is not earthed, connect the appliance to a separate earth in compliance with current regulations, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety precautions are not observed.

Ventilation requirements

The air flow behind the appliance must be sufficient.

Door reversibility

- Please refer to the separate document with instructions on installation and door reversal.

⚠ Caution! At every stage of reversing the door protect the floor from scratching with a durable material.

First use

Cleaning the interior


Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.

Caution! The accessories and parts of the appliance are not suitable for washing in a dishwasher.

Caution! Do not use detergents, abrasive powders, chlorine or oil-based cleaners as they will damage the finish.

Product description

Product overview

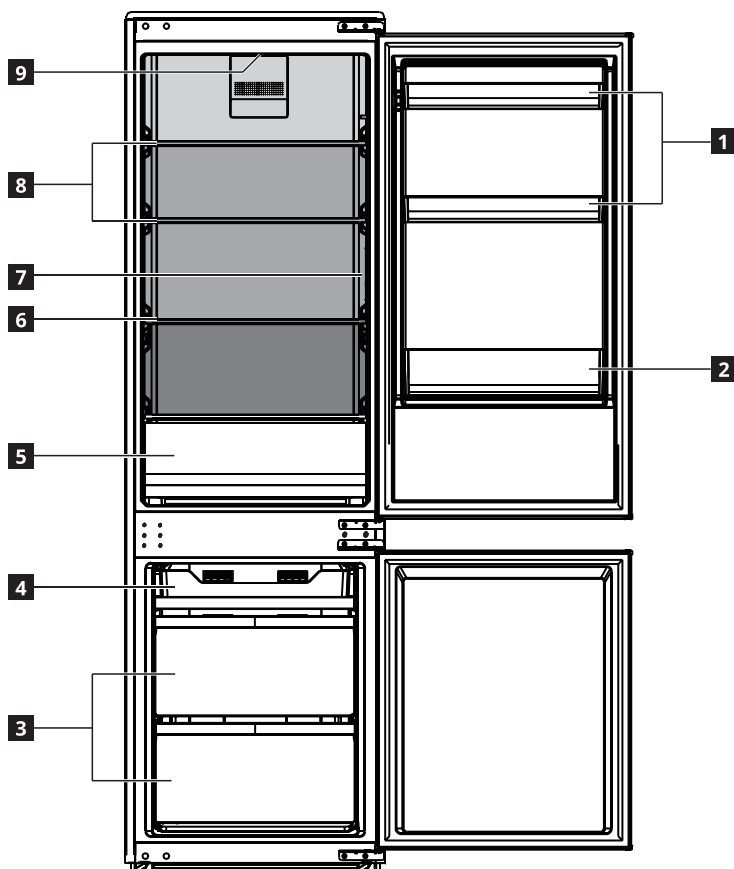


- 1** Door balconies
- 2** Bottle balcony
- 3** Freezer drawers
- 4** Freezer tray
- 5** Vegetable drawer
- 6** Glass shelf

- 7** Control panel
- 8** Glass shelves
- 9** LED lighting
-  Least cold zone
-  Intermediate temperature zone
-  Coldest zone

Operation

Control panel

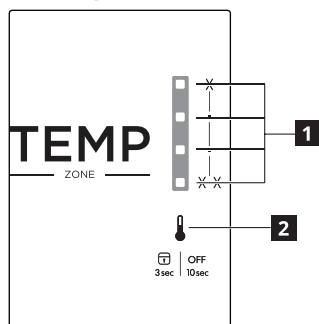

1 Temperature indicator

2 Function button

Switching on



Warning! Refer to "Electrical connection" section of the Safety chapter.

Connect the mains plug to the power socket. The display on the control panel turns on. To change temperature, refer to the section for temperature regulation.

When operating the appliance for the first time, set the appliance at a colder temperature and run it without loading any food until it auto stops at the set temperature. Usually it takes 2 or 3 hours, then set a desired temperature and put food in the appliance.

Do not use sharp object to control the touch panel.

Switching off

- To switch the appliance off, press and hold the **2** Function button on the control panel for 10 seconds. After 30 seconds, the appliance will switch off all loads are turned off, and the display and control of the refrigerator will be all off in the power off mode.

- To switch the appliance on again, press the **2** Function button.

To disconnect the appliance from the power supply, disconnect the mains plug from the power socket.

Locking/unlocking

- If the door is closed and no button operation occurs for 30 seconds, the control panel will be locked. Button operation is invalid.
- To unlock the control panel, press and hold the **2** Function button on the control panel for 3 seconds. Button operation is available.

Temperature regulation for refrigerator compartment

- Press the **2** Function button on the control panel to toggle a preset temperature. The four LEDs indicated from ✕ ✕ to ✕ corresponds to the following temperatures: 2°C, 4°C, 6°C and 8°C. The appliance will run at the newly set temperature 30 seconds later.

Adjust the temperature setting by keeping in mind that the temperature inside the appliance depends on:

- room temperature
- how often the door is opened
- the quantity of food stored
- the location of the appliance

Super Freezing mode: Press the button

2 for 3S, then the super freezing mode is on, and the lights in the middle turn on simultaneously. When you press the button again, this mode will quit. If no other operations happen, it will quit automatically in 20h.

Important! If the ambient temperature is high or the appliance is fully loaded, and the appliance is set to the lowest temperatures, it may run continuously causing frost to form on the rear wall. In this case a higher temperature must be set to allow automatic defrosting and therefore reduced energy consumption.

Daily use

Freezing calendar

				
1-2	3-4	3-6	3-6	3-6
				
3-6	10-12	10-12	10-12	10-12

- The symbols show different types of frozen goods.
- The numbers indicate storage times in months for the appropriate types of frozen goods. Whether the upper or lower value of the indicated storage time is valid depends on the quality of the foods and treating before freezing.

Freezing fresh food

- The freezer compartment is suitable for freezing fresh food and storing frozen and deep-frozen food for a long time.
- The freezing process lasts 24 hours: during this period do not add other food to be frozen.

Storage of frozen food

- When first starting-up or after a period out of use, before putting the products in the compartment let the appliance run at least 2 hours on the colder setting.
- Successful freezing depends on the correct packaging. When you close and seal the package you must not allow air or moisture in or out. If you do, you could have food odour and taste transfer throughout the refrigerator, and also dry out frozen food.
- **Note:** Never put bottled food or drinks in the freezer compartment.
- For best performance, leave enough space in the freezer and refrigerator compartment for air to circulate around the packages. Also let enough room at the front so the door can close tightly.

Warning! In the event of accidental defrosting, for example due to a power failure, the defrosted food must be consumed quickly or cooked immediately, cooled and then re-frozen.

Thawing


Deep-frozen or frozen food, prior to being used, can be thawed in the refrigerator compartment or at room temperature, depending on the time available for this operation.

Small pieces may even be cooked still frozen, directly from the freezer: in this case, cooking will take longer.

Storage of food in the refrigerator compartment

- Cover or wrap the food, particularly if it has a strong flavour.
- Position the food so that air can circulate freely around it.


Positioning the door balconies

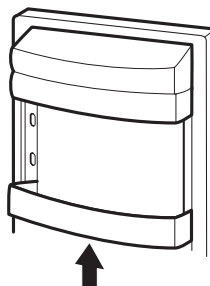

Picture for reference only

- To permit storage of food packages of various sizes, the door balconies can be placed at different heights.
- Carefully remove a door balcony from the support, then reposition it as desired.

Movable shelves

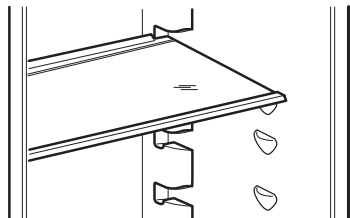


Picture for reference only

- The walls of the refrigerator are equipped with a series of runners so that the safety glass shelves can be positioned as desired.

⚠ Caution! Do not move the glass shelf above the vegetable drawer to ensure correct air circulation.

Vegetable drawer

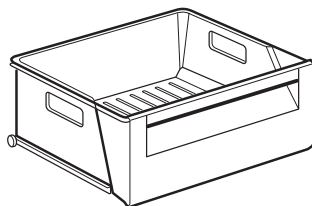

Picture for reference only

- The drawers can be pulled out for cleaning.
- The drawer is suitable for storing fruit and vegetables.
- The drawer can be pulled out for cleaning.

Hints and tips

Normal operating sounds

The following sounds are normal during operation:

- A faint gurgling and bubbling sound from coils sound when refrigerant is pumped.
- A whirring and pulsating sound from the compressor when refrigerant is pumped.
- A sudden cracking noise from inside appliance caused by thermic dilatation (a natural and not dangerous physical phenomenon).

Hints for energy saving

- Do not open the door frequently or leave it open longer than absolutely necessary.
- If the ambient temperature is high and very low internal temperature is set and the appliance is fully loaded, the compressor may run continuously, causing frost or ice on the evaporator. If this happens, set the internal temperature toward warmer one to allow automatic defrosting and so a saving in electricity consumption.

Hints for fresh food refrigeration

- Do not store warm food or evaporating liquids in the refrigerator.
- Cover or wrap the food, particularly if it has a strong flavour.

- Position food so that air can circulate freely around it.

Hints for refrigeration

Useful hints:

- Meat (all types): wrap in a suitable packaging and place it on the glass shelf above the vegetable drawer. Store meat for at most 1-2 days.
- Cooked foods, cold dishes: cover and place on any shelf.
- Fruit and vegetables: clean thoroughly and place in a special drawer. Bananas, potatoes, onions and garlic must not be kept in the refrigerator if not packed.
- Butter and cheese: place in a special airtight container or wrap in an aluminium foil or a polythene bag to exclude as much air as possible.
- Bottles: close with a cap and place on the door bottle shelf, or (if available) on the bottle rack.

Cautions for Use

- The more food stuff put in or the more and the longer for once the door is opened, the more it needs electric consumption, which even leads malfunction.
- Re-plug in the power plug at the interval of over ten minutes.

- Do not store bottled drink in the freezer, so as to prevent from being broken and damaging the refrigerator.
- Open the door as less as possible during power-cut.
- When defrosting, never use any sharp or metallic objects to remove the frost on the surface of the evaporator as it will damage the evaporator.
- Do not touch foods and containers in the freezing compartment with your wet hands so as to prevent from being frostbitten.
- Do not allow fresh, unfrozen food to touch food which is already frozen, thus avoiding a rise in temperature of the latter.
- Lean foods store better and longer than fatty ones; salt reduces the storage life of food.
- Water ices, if consumed immediately after removal from the freezer compartment, can possibly cause the skin to be freeze burnt.
- It is advisable to show the freezing in date on each individual pack to enable you to keep tab of the storage time.

Hints for freezing

To help you make the most of the freezing process, here are some important hints:

- The freezing process takes 24 hours. No further food to be frozen should be added during this period.
- Freeze only top quality, fresh and thoroughly cleaned, foodstuffs.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible subsequently to thaw only the quantity required.
- Wrap up the food in aluminium foil or polythene and make sure that the packages are airtight.

Hints for storage of frozen food

To obtain the best performance from this appliance, you should:

- Make sure that the commercially frozen foodstuffs were adequately stored by the retailer.
- Make sure that frozen foodstuffs are transferred from the food store to the freezer in the shortest possible time.
- Do not open the door frequently or leave it open longer than absolutely necessary.
- Once defrosted, food deteriorates rapidly and cannot be refrozen.
- Do not exceed the storage period indicated by the food manufacturer.

Care and cleaning

 **Warning!** Refer to Safety chapters.

General warnings

 **Caution!** Unplug the appliance before carrying out any maintenance operation.

 This appliance contains hydrocarbons in its cooling unit; maintenance and recharging must therefore only be carried out by authorized technicians.

 The accessories and parts of the appliance are not suitable for washing in a dishwasher.

Cleaning the interior

Before using the appliance for the first time, the interior and all internal accessories should be washed with lukewarm water and some neutral soap to remove the typical smell of a brand-new product, then dried thoroughly.

 **Caution!** Do not use detergents or abrasive powders, as these will damage the finish.

Initial power on

-  **Caution!** Before inserting the power plug in to the outlet and switching on the cabinet for the first time, leave the appliance standing upright for at least 4 hours. This will assure a sufficient amount of time for the oil to return to the compressor. Otherwise the compressor or electronic components may sustain damage.

Periodic cleaning

-  **Caution!** Do not pull, move or damage any pipes and/or cables inside the cabinet.
-  **Caution!** Do not damage the cooling system.
-  **Caution!** When moving the cabinet, lift it by the front edge to avoid scratching the floor.

The equipment has to be cleaned regularly:

1. Clean the inside and accessories with lukewarm water and some neutral soap.
2. Regularly check the door seals and wipe clean to ensure they are clean and free from debris.
3. Rinse and dry thoroughly.
4. If accessible, clean the condenser and the compressor at the back of the appliance with a brush. This operation will improve the performance of the appliance and save electricity consumption.

Periods of non-operation

When the appliance is not in use for long periods, take the following precautions:

1. Disconnect the appliance from electricity supply.
2. Remove all food.
3. Defrost (if necessary) and clean the appliance and all accessories.
4. Clean the appliance and all accessories.
5. Leave the door/doors open to prevent unpleasant smells.

-  **Caution!** If you want to keep the appliance switched on, ask somebody to check it once in a while to prevent the food inside from spoiling in case of a power failure.

Defrosting refrigerator compartment

Frost is automatically eliminated from the evaporator of the refrigerator compartment every time the motor compressor stops, during normal use. The defrost water drains out through a trough into a special container at the back of the appliance, over the motor compressor, where it evaporates.

It is important to periodically clean the defrost water drain hole at the back of the refrigerator compartment to prevent the water overflowing and dripping onto the food inside.

For this purpose use the tube cleaner provided in the accessory bag.

Defrosting freezer compartment

The freezer compartment has automatic defrosting function.

Due to seasonal changes, a thick layer of frost may form. To defrost manually, observe the followings.

- Disconnect the appliance from the power supply, and leave open the freezer door.
- Remove all foods, ice cube tray and shelf or transfer to refrigerator compartment.
- Clean and wipe out the melted frost with a cloth.
- After defrosting, connect the appliance to the power supply.

-  **Caution!** To avoid damaging the freezer compartment wall, do not use any sharp objects to remove the frost or separate the frozen food.

Troubleshooting

 **Warning!** Refer to Safety chapters.


What to do if...

Problem	Possible Cause	Solution
The appliance does not operate.	The appliance is switched off.	Switch on the appliance.
	The mains plug is not connected to the mains socket correctly	Connect the mains plug to the mains socket correctly. Refer to "Electrical connection" section of the safety chapter.
	There is no voltage in the mains socket.	Connect a different electrical appliance to the mains socket. Contact a qualified electrician.
The appliance is noisy.	The appliance is not placed stably.	Check if the appliance stands stable.
The lamp does not work.	The lamp is defective.	Refer to "Replacing the lamp".
The compressor operates continually.	Temperature is set incorrectly.	Refer to "Operation" chapter.
	Many food products were inserted at the same time.	Insert less food products at the same time.
	The room temperature is too high.	Refer to climate class chart on the rating plate.
	Food products placed in the appliance were too warm.	Allow food products to cool to room temperature before storing.
	The door is not closed correctly.	Refer to "Closing the door".
The temperature in the appliance is too low/too high.	The temperature is not set correctly.	Set a higher/lower temperature.
	The door is not closed correctly.	Refer to "Closing the door".
	The food products temperature is too high.	Let the food products temperature decrease to room temperature before storage.
	Many food products are inserted at the same time.	Wait some hours and then check the temperature again.
	The thickness of the frost is greater than 0.16"-0.20".	Defrost the appliance.
	The door has been opened often.	Open the door only if necessary.
	There is no cold air circulation in the appliance.	Make sure that there is cold air circulation in the appliance.
There is too much condensed water on the rear wall of the refrigerator.	Door was opened too frequently.	Open the door only when necessary.
	Door was not closed completely.	Make sure the door is closed completely.
	Stored food was not wrapped.	Wrap food in suitable packaging before storing it in the appliance.
Water flows inside the refrigerator.	The drain hole at the back of the appliance is clogged.	Clean the drain hole with a piece of wire.
	Food products prevent water from flowing into the water collector,	Make sure that food products do not touch the rear plate.

Problem	Possible Cause	Solution
Water flows on the floor,	The door is not closed well.	Refer to "Closing the door", or refer to the troubleshooting item below ("The door does not close completely").
	The drip pan cracks.	The IKEA after sales customer service center will assist you on the phone at the time of service call request. Please refer to www.IKEA.com and select your local store for local store phone numbers and opening times.
	The defrost water drain is clogged.	Clean the drain hole with a piece of wire.
The door does not close completely.	The shelves are out of position.	Make sure the shelves are in correct position. Refer to "Movable shelves".
	The gaskets are dirty.	Clean the gaskets. Refer to "Care and cleaning".
	The appliance is not level.	Make sure the appliances is installed in level.

Malfunction alarm

If the appliance malfunctions, a LED indicator on the control panel will flash to indicate a fault.

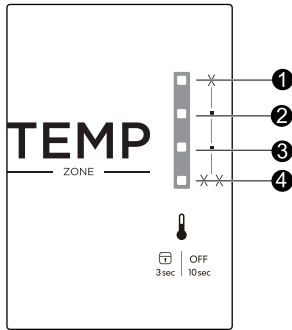

- ❶ flashes: Temperature sensor failure of the refrigerator chamber
- ❷ flashes: Defrosting sensor failure of the refrigerator chamber
- ❸ flashes: Defrosting sensor failure of the freezer chamber
- ❹ flashes: Failure of ambient temperature sensor

❶ If your appliance still is not working properly after making the above checks, the IKEA after sales customer service center will assist you on the phone at the time of service call request. Please refer to **www.IKEA.com** and select your local store for local store phone numbers and opening times.

Closing the door

1. Clean the door gaskets.
2. If necessary, adjust the door. Refer to the separate Assembly Instructions.
3. If necessary, replace the defective door gaskets. Contact the After Sales Service.

Replacing the lamp

The appliance is equipped with a lamp for interior lighting. Only service is allowed to replace the lighting device. Please reach out to IKEA, referring to **www.IKEA.com** and select your store for local store phone numbers and opening time.

Technical information

Product category	
Product type	Refrigerator-Freezer
Installation type	Built-in
Product dimensions	
Height	1785 mm
Width	540 mm
Depth	545 mm
Net volume	
Fridge	180 L
Four-star frozen-food compartment	68 L
Freezer star	4star
Defrost system	
Fridge	Auto
Frozen-food compartment	Auto
Energy consumption	400kWh/year
Voltage	220 - 240 V
Frequency	50 Hz
Power	85W
Number of phases	1
Refrigerant	R600a

Environmental concerns

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and

electronic appliances. Do not dispose of appliances. Do not dispose of this product with the household waste. Return the product to your local recycling facility or contact your municipal office.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA. The original sales receipt is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. On these conditions the respective local regulations are applicable. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA appointed Service Provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA Service Provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemical reaction, rust, corrosion or water damage

including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.

- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance.
- However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.
- All plumbing and electrical installation, are not the responsibility of IKEA, and customer

must complete these work before the execution work.

How country law applies

The IKEA warranty gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

This warranty is valid only in the country where the product has been purchased; the services will be provided in the framework of the guarantee conditions. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information;

The dedicated AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA appointed Authorized Service Centre to:

- make a service request under this guarantee;
- ask for clarifications on installation of the IKEA appliance in the dedicated IKEA kitchen furniture;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



The IKEA after sales customer service center will assist you on the phone with basic troubleshooting for your appliances at the time of service call request.

Please refer to **www.IKEA.com** and select your local store for local store phone numbers and opening times.

Before calling us, assure that You have to hand the IKEA article number (8 digit code) and the Serial Number (8 digit code that can be found on the rating plate) for the appliance of which you need our assistance.

i SAVE THE SALES RECEIPT! It is your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

เนื้อหา

ข้อมูลเพื่อความปลอดภัย	23	คำแนะนำและเคล็ดลับ	32
คำแนะนำเพื่อความปลอดภัย	25	การดูแลและทำความสะอาด	33
การติดตั้ง	26	การแก้ไขปัญหา	34
การใช้งานครั้งแรก	28	ข้อมูลทางเทคนิค	36
คำอธิบายของผลิตภัณฑ์	29	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	36
การใช้งาน	30	การรับประกันของ IKEA	37
การใช้งานประจำวัน	31		

อาจมีการเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

ข้อมูลเพื่อความปลอดภัย

ก่อนติดตั้งและใช้งานเครื่องใช้ไฟฟ้า โปรดอ่านคำแนะนำที่ให้มาอย่างละเอียด ผู้ผลิตจะไม่รับผิดชอบต่อการบาดเจ็บหรือความเสียหายใด ๆ ที่เป็นผลมาจากการติดตั้งหรือการใช้งานที่ไม่ถูกต้อง เก็บคำแนะนำไว้ในสถานที่ที่ปลอดภัยและสามารถเข้าถึงได้เสมอเพื่อใช้อ้างอิงในอนาคต

ความปลอดภัยสำหรับเด็กและผู้ที่มีความเสี่ยง

- เครื่องใช้ไฟฟ้านี้ไม่ได้มีไว้สำหรับการใช้งานโดยบุคคลที่มีความสามารถทางร่างกาย ประสาทสัมผัส หรือจิตใจที่ด้อยกว่าปกติ หรือขาดประสบการณ์และความรู้ (รวมถึงเด็ก) เว้นแต่จะได้รับการดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้าจากบุคคลที่รับผิดชอบด้านความปลอดภัย เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าไม่ได้เล่นกับเครื่องใช้ไฟฟ้า
- เด็กอายุตั้งแต่ 3 ถึง 8 ปีสามารถนำอาหารเข้าและออกจากเครื่องใช้ไฟฟ้าได้ หากได้รับคำแนะนำที่เหมาะสม
- บุคคลที่มีความพิการที่ต้องการความช่วยเหลือและความพิการซ้ำซ้อนสามารถใช้งานเครื่องใช้ไฟฟ้านี้ได้หากได้รับคำแนะนำอย่างถูกต้อง
- เด็กอายุต่ำกว่า 3 ปีไม่ควรใช้งานเครื่องใช้ไฟฟ้านี้เว้นแต่จะได้รับการควบคุมดูแลอย่างต่อเนื่อง
- อย่าปล่อยให้เด็กเล่นเครื่องใช้ไฟฟ้า
- ห้ามเด็กทำความสะอาดและบำรุงรักษาเครื่องโดยปราศจากการควบคุมดูแล
- โปรดเก็บบรรจุภัณฑ์ทั้งหมดให้ห่างจากเด็กและกำจัดทิ้งอย่างเหมาะสม

ความปลอดภัยทั่วไป

- เครื่องใช้ไฟฟ้านี้ออกแบบมาเพื่อใช้ในครัวเรือนและการทำงานที่คล้ายกัน เช่น:
 - บ้านสวน พื้นที่ในครัวของพนักงานในร้านค้า สำนักงาน และสภาพแวดล้อมการทำงานอื่น ๆ
 - โดยลูกค้าของโรงแรม โมเต็ล ที่พักพร้อมอาหารเช้า และสภาพแวดล้อมการพักอาศัยแบบอื่น
- เพื่อหลีกเลี่ยงไม่ให้อาหารปนเปื้อน โปรดปฏิบัติตามคำแนะนำต่อไปนี้:
 - อย่าเปิดประตูเป็นเวลานาน
 - ทำความสะอาดพื้นผิวที่สัมผัสกับอาหารและระบบระบายน้ำที่สามารถเข้าถึงได้เป็นประจำ
 - เก็บเนื้อสัตว์และปลาดิบไว้ในภาชนะที่เหมาะสมในตู้เย็น เพื่อไม่ให้เกิดการหยดหรือสัมผัสกับอาหารอื่น ๆ
- คำเตือน: ควรเปิดช่องระบายอากาศ ในตัวเครื่องของเครื่องใช้ไฟฟ้าหรือในโครงสร้างของเครื่อง กำจัดสิ่งกีดขวางออก
- คำเตือน: อย่าใช้อุปกรณ์เชิงกลหรืออุปกรณ์อื่น เพื่อเร่งกระบวนการละลายน้ำแข็ง ซึ่งนอกเหนือไปจากที่ผู้ผลิตแนะนำไว้
- คำเตือน: อย่าทำให้อ่างจรรยาทำความเย็นเกิดความเสียหาย
- คำเตือน: อย่าใช้ตู้เย็นภายในส่วนเก็บอาหารของตู้เย็นนี้ นอกเสียจากว่าเป็นประเภทที่ผู้ผลิตแนะนำให้ใช้ได้
- คำเตือน: เมื่อจัดวางเครื่องใช้ไฟฟ้า โปรดตรวจสอบให้แน่ใจว่าสายไฟไม่เกี่ยวรัดกับสิ่งใดหรือเสียหาย
- คำเตือน: อย่าวางปลั๊กแยกแบบพกพาหรืออุปกรณ์จ่ายไฟแบบพกพาไว้ที่ด้านหลังของตัวเครื่อง
- อย่าใช้สเปรย์น้ำหรือไอน้ำในการทำทำความสะอาดตู้เย็นนี้
- ทำความสะอาดเครื่องใช้ไฟฟ้านี้ด้วยผ้านุ่มบิดพอหมาด โปรดใช้น้ำยาทำความสะอาดที่มีฤทธิ์เป็นกลาง อย่าใช้ผลิตภัณฑ์สำหรับขัด แผ่นขัดทำความสะอาดสารทำละลาย หรือวัตถุโลหะ
- หากเครื่องใช้ไฟฟ้าถูกปล่อยว่างไว้เป็นเวลานาน ให้ปิดเครื่อง จากนั้นละลายน้ำแข็ง ทำความสะอาด ปล่อยให้แห้ง และเปิดประตูทิ้งไว้เพื่อป้องกันไม่ให้เกิดเชื้อราภายในเครื่อง
- อย่าเก็บสารที่ระเบิดได้ เช่นกระป๋องสเปรย์ที่มีสารผลักดันที่ติดไฟได้ไว้ในตู้เย็นนี้
- หากสายไฟที่จัดให้เกิดความเสียหาย ต้องติดต่อให้ผู้ผลิต ศูนย์บริการที่ได้รับอนุญาต หรือผู้ที่มีคุณสมบัติคล้ายกันมาเปลี่ยนให้ เพื่อหลีกเลี่ยงอันตราย

คำแนะนำเพื่อความปลอดภัย

การติดตั้ง



คำเตือน! เฉพาะผู้ที่มีคุณสมบัติเหมาะสมเท่านั้นที่ติดตั้งเครื่องใช้ไฟฟ้านี้ได้

- นำบรรจุภัณฑ์ออกให้หมด
- อย่าติดตั้งหรือใช้งานเครื่องใช้ไฟฟ้าที่มีความเสียหาย
- ห้ามใช้งานเครื่องใช้ไฟฟ้าก่อนติดตั้งเข้าในโครงสร้างแบบบิวท์อินเพื่อเหตุผลด้านความปลอดภัย
- ปฏิบัติตามคำแนะนำในการติดตั้งให้มาพร้อมกันตัวเครื่อง
- ควรระมัดระวังเมื่อเคลื่อนย้ายเครื่องใช้ไฟฟ้าเนื่องจากมีน้ำหนักมาก ใช้ถุงมือนิรภัยและรองเท้าที่ปิดสนิทเสมอ
- ควรตรวจสอบว่ารอบตู้เย็นนี้มีอากาศถ่ายเทได้ดี
- ในการติดตั้งครั้งแรกหรือหลังจากที่กลับทางประตู ให้รออย่างน้อย 4 ชั่วโมงก่อนเชื่อมต่อเครื่องใช้ไฟฟ้าเข้ากับแหล่งจ่ายไฟ เพื่อปล่อยให้น้ำมันไหลกลับเข้าสู่คอมเพรสเซอร์
- ก่อนดำเนินการใด ๆ กับเครื่องใช้ไฟฟ้า (เช่น การกลับทางประตู) ให้ถอดปลั๊กออกจากเต้ารับ
- อย่าติดตั้งตู้เย็นนี้ไว้ใกล้กับเครื่องทำความร้อนหรือหม้อหุงข้าว เตา หรือตะแกรงบนเตา
- อย่าให้เครื่องใช้ไฟฟ้าโดนฝน
- อย่าติดตั้งตู้เย็นนี้ในที่มีแสงแดดส่องถึง
- อย่าติดตั้งเครื่องใช้ไฟฟ้านี้ในบริเวณที่มีความชื้นหรือเย็นเกินไป
- เมื่อคุณต้องย้ายตู้เย็นนี้ ควรยกที่ขอบด้านหน้าเพื่อหลีกเลี่ยงการครูดกับพื้น

การเชื่อมต่อไฟฟ้า

คำเตือน! เสี่ยงต่อการเกิดไฟไหม้และไฟฟ้าช็อต

คำเตือน! เมื่อจัดวางเครื่องใช้ไฟฟ้า โปรดตรวจสอบให้แน่ใจว่าสายไฟไม่เกี่ยวข้องกับสิ่งใดหรือเสียหาย

คำเตือน! อย่าใช้อะแดปเตอร์สำหรับต่อหลายปลั๊ก รวมถึงปลั๊กพ่วง

- เครื่องใช้ไฟฟ้านี้ต้องเดินสายดิน
- ตรวจสอบให้แน่ใจว่าพิกัดกำลังไฟฟ้าของแหล่งจ่ายไฟหลักนั้นสามารถรองรับพารามิเตอร์ต่างๆ ที่อยู่บนป้ายพิกัดของเครื่องใช้ไฟฟ้า
- ควรใช้เต้ารับไฟฟ้าแบบกันกระแทกที่ติดตั้งอย่างถูกต้องเสมอ
- ตรวจสอบให้แน่ใจว่าไม่ทำให้ส่วนประกอบไฟฟ้าเสียหาย (เช่น ปลั๊กไฟหลัก สายไฟหลัก และคอมเพรสเซอร์) โปรดดูที่ www.IKEA.com และติดต่อร้านค้าในพื้นที่ของเราเพื่อขอหมายเลขโทรศัพท์ของร้านค้าในพื้นที่ และเวลาเปิดทำการ หรือแจ้งให้ช่างไฟฟ้าเข้าทำการเปลี่ยนส่วนประกอบทางไฟฟ้า
- สายไฟหลักต้องอยู่ในระดับต่ำกว่าปลั๊กไฟหลัก

- เสียบปลั๊กไฟหลักเข้ากับเต้ารับไฟฟ้าหลักเมื่อติดตั้งเสร็จสิ้นแล้วเท่านั้น ตรวจสอบให้แน่ใจว่าสามารถหยิบถึงปลั๊กไฟหลักได้หลังจากติดตั้ง
- อย่าถอดปลั๊กโดยดึงที่สายไฟหลัก ควรดึงที่ตัวปลั๊กไฟหลักเสมอ

ใช้

คำเตือน! เสี่ยงต่อการบาดเจ็บ ไฟไหม้ ไฟฟ้าช็อต หรือไฟไหม้



- เครื่องใช้ไฟฟ้านี้ประกอบด้วยก๊าซไวไฟ ไอโซบิวเทน (R600a) ซึ่งเป็นก๊าซธรรมชาติที่มีความเข้ากันได้กับสิ่งแวดล้อมในระดับสูง ระวังอย่าให้เกิดความเสียหายกับวงจรสารทำความเย็นที่มีไอโซบิวเทน
- อย่าเปลี่ยนข้อมูลจำเพาะของเครื่องใช้ไฟฟ้านี้
- อย่าวางตู้เย็นต่าง ๆ (เช่น เครื่องทำไอศกรีม) ไว้ในตู้เย็นนี้ นอกเสียจากว่าผู้ผลิตระบุไว้ว่าทำได้
- หากเกิดความเสียหายขึ้นกับวงจรสารทำความเย็น ควรตรวจสอบว่าไม่มีเปลวไฟและแหล่งกระจายไฟในห้องนั้น ถ่ายเทอากาศในห้อง
- อย่านำสิ่งของที่มีความร้อนไปสัมผัสกับชิ้นส่วนพลาสติกของตู้เย็นนี้
- อย่าวางเครื่องดื่มที่ไม่มีแอลกอฮอล์ในช่องแช่แข็ง เนื่องจากจะเกิดแรงดันในขวดเครื่องดื่ม
- อย่าเก็บแก๊สและของเหลวที่ติดไฟได้ไว้ในตู้เย็นนี้
- อย่าวางผลิตภัณฑ์ที่ติดไฟได้หรือสิ่งของซึ่งเปราะบางด้วยผลิตภัณฑ์ที่ติดไฟได้ไว้ใน ใกล้ หรือบนเครื่องใช้ไฟฟ้านี้
- อย่าสัมผัสคอมเพรสเซอร์หรือคอนเดนเซอร์ เนื่องจากมีความร้อน
- อย่าสัมผัสหรือนำสิ่งของออกจากช่องแช่แข็ง หากมือคุณเปียกหรือชื้น
- อย่าแช่แข็งอาหารซ้ำอีก ถ้าหากนำมาละลายแล้ว
- ปฏิบัติตามคำแนะนำการเก็บอาหารที่ระบุอยู่บนบรรจุภัณฑ์อาหารแช่แข็ง
- ห่อหุ้มอาหารด้วยวัสดุที่สามารถสัมผัสอาหารได้ ก่อนที่จะนำเข้าในช่องแช่แข็ง

ไฟส่องสว่างภายใน

คำเตือน! เสี่ยงต่อการเกิดไฟไหม้หรือไฟช็อต

- เกี่ยวกับหลอดไฟภายในผลิตภัณฑ์นี้และอะไหล่หลอดไฟที่จำหน่ายแยกต่างหาก: หลอดไฟเหล่านี้เหมาะสำหรับการใช้งานที่ทนทานต่อสภาวะทางกายภาพที่รุนแรงในเครื่องใช้ไฟฟ้าภายในครัวเรือน เช่น อุณหภูมิ การสั่นสะเทือน ความชื้น หรือมีวัตถุประสงค์เพื่อส่งสัญญาณข้อมูลที่เกี่ยวข้องกับสถานะการทำงานของเครื่องใช้ไฟฟ้า หลอดไฟเหล่านี้ไม่ได้มีวัตถุประสงค์เพื่อใช้งานด้านอื่น ๆ และไม่เหมาะสำหรับการให้แสงสว่างในครัวเรือน

การดูแลและทำความสะอาด

คำเตือน! เนื่องจากมีความเสี่ยงต่อการบาดเจ็บและเครื่องใช้ไฟฟ้าอาจเสียหาย

- ก่อนบำรุงรักษา ควรปิดตู้เย็นนี้และถอดปลั๊กไฟหลักออกจากเต้ารับไฟฟ้า
- ตู้เย็นนี้บิสารไฮโดรคาร์บอนอยู่ในหน่วยทำความเย็น ผู้ได้รับอนุมัติเท่านั้นจึงสามารถบำรุงรักษาและรีชาร์จหน่วยนี้
- ควรตรวจสอบช่องระบายน้ำของตู้เย็นนี้เป็นประจำ และทำความสะอาดหากจำเป็น หากช่องระบายน้ำถูกปิดกั้น น้ำที่เกิดจากการละลายน้ำแข็งจะสะสมอยู่ที่ตู้เย็น

วิธีการติดต่อเราหากคุณต้องการรับบริการ

- ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูที่ www.IKEA.com และเลือกร้านค้าในพื้นที่ของคุณเพื่อดูหมายเลขโทรศัพท์ของร้านค้าในพื้นที่และเวลาเปิดทำการ

การจัด

คำเตือน! เสี่ยงต่อการบาดเจ็บหรือขาดอากาศหายใจ

- ถอดปลั๊กเครื่องออกจากแหล่งจ่ายไฟ
- ตัดสายไฟหลักแล้วจำกัดกิ่งไป
- ถอดประตูออกเพื่อป้องกันเด็กและสัตว์เลี้ยงถูกขังอยู่ในเครื่อง
- วงจรสารทำความเย็นและวัสดุฉนวนของเครื่องใช้ไฟฟ้านี้เป็นมิตรกับโอโซน
- โฟมที่เป็นฉนวนมีแก๊สติดไฟได้บรรจุอยู่ หากต้องการข้อมูลเกี่ยวกับการกำจัดตู้เย็นอย่างถูกวิธี ควรติดต่อเจ้าหน้าที่เทศบาล
- อย่าทำให้ชิ้นส่วนหน่วยทำความเย็นที่อยู่ใกล้กับตัวแลกเปลี่ยนความร้อนเสียหาย

การติดตั้ง



คำเตือน! โปรดดูที่บทความความปลอดภัย



คำเตือน! โปรดดูเอกสารคำแนะนำในการติดตั้งเพื่อติดตั้งอุปกรณ์ของคุณ



คำเตือน! ยึดเครื่องใช้ไฟฟ้าตามเอกสารคำแนะนำในการติดตั้ง เพื่อหลีกเลี่ยงความเสี่ยงที่อาจเกิดจากการติดตั้งที่ไม่มั่นคง



คำเตือน! การติดตั้งในตู้เครื่องใช้ไฟฟ้านี้มีเป้าหมายเพื่อการบิวท์อินในตู้โปรดดูคำแนะนำในการประกอบที่ให้มาต่างหากเพื่อดูรายละเอียดการติดตั้ง


รายการตรวจสอบ

i โปรดปฏิบัติตามรายการตรวจสอบก่อนใช้งานเครื่องใช้ไฟฟ้าของคุณ หากคำตอบคือ "ไม่" ให้ปฏิบัติตามขั้นตอนที่เกี่ยวข้อง อย่าลืมดูหมายเลขประจำเครื่องของผลิตภัณฑ์และหมายเลขเครื่องใช้ตามที่กำหนดไว้และแนบใบเสร็จรับเงินมาที่หน้านี้	Diagram showing the location of the product label and serial number on the refrigerator. The label includes the model number (XXX.XXX.XX), the IKEA logo, and the serial number (Serial No.: xxxxxxxxxxxxxxx). รูปภาพสำหรับอ้างอิงเท่านั้น
หมายเลขประจำเครื่องของผลิตภัณฑ์ (Ser. No.): หมายเลขเครื่องใช้ของผลิตภัณฑ์ (Art. No.): วันที่ซื้อ:	

ในการตรวจสอบ	ถ้าคำตอบคือใช่	ถ้าคำตอบคือไม่
ตรวจสอบว่าที่อยู่ภายในภาชนะหรือ ไม่ (ดูหัวข้อ "ภาชนะ")	ไม่มีดำเนินการ ☒	ใส่ท่อเข้าไปในภาชนะ
ตรวจสอบให้แน่ใจว่าขอบสามารถซีล สนิทรอบประตูในขณะที่ปิดประตูอยู่	ไม่มีดำเนินการ ☒	โปรดดูคำแนะนำในการประกอบ - การ จัดตำแหน่งประตู
ตรวจสอบว่าไม่มีการชนกันระหว่างชิ้น ส่วน/เพอร์นิเจอร์ขณะเปิดและปิดประตู	ไม่มีดำเนินการ ☒	โปรดดูคำแนะนำในการประกอบ - การ จัดตำแหน่งประตู
ติดตั้งเครื่องใช้ไฟฟ้าภายในโครงสร้าง แบบบิวท์อิน	ไม่มีดำเนินการ ☒	ปฏิบัติตามคำแนะนำในการประกอบเพื่อ การติดตั้งที่เหมาะสม
ตรวจสอบให้แน่ใจว่าในการติดตั้งครั้งแรกหรือหลังจากกลับทางประตูแล้ว ควร ปล่อยให้เครื่องใช้ไฟฟ้าอยู่ในแนวตั้ง อย่างน้อย 4 ชั่วโมงก่อนที่จะเชื่อมต่อกับ แหล่งจ่ายไฟ	ไม่มีดำเนินการ ☒	รอสัณอย่างน้อย 4 ชั่วโมงก่อนเชื่อมต่อ เครื่องใช้ไฟฟ้าเข้ากับแหล่งจ่ายไฟ

ภาชนะ

ก่อนใช้งานเครื่องใช้ไฟฟ้า ตรวจสอบให้แน่ใจว่าท่อระบายน้ำออกได้รับการเชื่อมต่อกับภาชนะที่อยู่นเหนือคอมเพรสเซอร์แล้ว

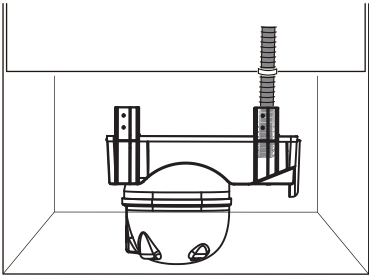

ตำแหน่ง


เพื่อให้แน่ใจว่าเครื่องใช้ไฟฟ้าทำงานได้ดีที่สุด คุณไม่ควรติดตั้งเครื่องใช้ไฟฟ้าใกล้กับแหล่งความร้อน (เตาอบ เตาหม้อน้ำ หม้อหุงข้าว หรือเตาประกอบอาหาร) หรือในที่ที่มีแสงแดดส่องถึงโดยตรง โปรดตรวจสอบว่ามีอากาศไหลเวียนสะดวกบริเวณด้านหลังของตู้เย็น

ควรติดตั้งเครื่องใช้ไฟฟ้านี้ในที่แห้งและมีอากาศถ่ายเทได้ดี

ควรติดตั้งตู้เย็นนี้ในอาคารที่มีการระบายอากาศดีและแห้ง ซึ่งอุณหภูมิรอบข้างใกล้เคียงกับประเภทอุณหภูมิที่แสดงไว้บนป้ายแสดงข้อมูลทางเทคนิคของตู้เย็น:

ประเภทอุณหภูมิ	อุณหภูมิรอบข้าง
SN	+10°C ถึง +32°C
N	+16°C ถึง +32°C
ST	+16°C ถึง +38°C
T	+16°C ถึง +43°C

- ❗ สามารถที่จะรับประกันการทำงานที่ถูกต้องของเครื่องใช้ไฟฟ้าได้เมื่อทำงานอยู่ในช่วงอุณหภูมิที่กำหนดไว้เท่านั้น
- ❗ หากคุณมีข้อสงสัยเกี่ยวกับตำแหน่งที่จะติดตั้งอุปกรณ์ โปรดติดต่อผู้จำหน่าย หรือไปที่ฝ่ายบริการลูกค้าของเรา
- ❗ จะต้องสามารถตัดการเชื่อมต่ออุปกรณ์ออกจากแหล่งจ่ายไฟหลักได้ในตำแหน่งที่ติดตั้ง จะต้องสามารถเข้าถึงปลั๊กได้ง่ายหลังการติดตั้ง

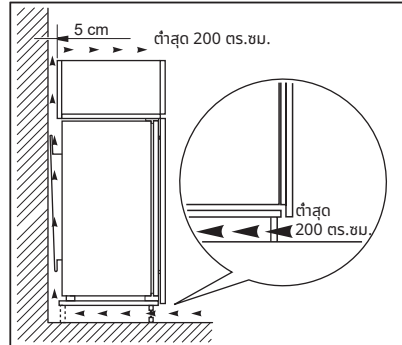

การเชื่อมต่อไฟฟ้า

ก่อนเสียบปลั๊ก โปรดตรวจสอบว่าแรงดันไฟฟ้าและความถี่ที่แสดงอยู่บนป้ายแสดงข้อมูลทางเทคนิคตรงกับแหล่งจ่ายไฟของบ้านคุณ

เครื่องใช้ไฟฟ้านี้ต้องเดินสายดิน สายและปลั๊กไฟให้พร้อมกับสายดินเพื่อความปลอดภัย หากเต้ารับไฟฟ้าของแหล่งจ่ายไฟไม่มีสายดิน ควรเชื่อมต่อตู้เย็นเข้ากับสายดินแยก เพื่อให้เป็นไปตามข้อบังคับเกี่ยวกับกระแสไฟฟ้าสามารถปรึกษาช่างไฟฟ้าได้

ผู้ผลิตปฏิเสธความรับผิดชอบทั้งปวงหากข้อควรระวังเพื่อความปลอดภัยข้างต้นไม่มีการนำไปปฏิบัติ

ข้อกำหนดการระบายอากาศ

อากาศที่อยู่ด้านหลังเครื่องใช้ไฟฟ้าจะต้องเพียงพอ

การใช้งานครั้งแรก

การทำความสะอาดภายในเครื่อง

ก่อนใช้งานตู้เย็นนี้เป็นครั้งแรก ควรล้างภายในตู้เย็นและอุปกรณ์เสริมภายในทั้งหมดด้วยน้ำอุ่น และสบู่ที่มีฤทธิ์เป็นกลางเพื่อขจัดกลิ่นใหม่ของผลิตภัณฑ์ จากนั้นทำให้แห้งอย่างทั่วถึง

⚠ ข้อควรระวัง! โปรดดูคำแนะนำในการติดตั้งเพื่อดูรายละเอียดการติดตั้ง

การกลับทางประตู

- โปรดดูเอกสารแยกต่างหากที่มีคำแนะนำในการติดตั้งและการกลับทางประตู


⚠ ข้อควรระวัง! ในทุกขั้นตอนของการกลับทางประตู จะต้องป้องกันไม่ให้พื้นเป็นรอยด้วยวัสดุที่ทนทาน

ข้อควรระวัง! อุปกรณ์เสริมและชิ้นส่วนของตู้เย็นไม่เหมาะกับการล้างในเครื่องล้างจาน

ข้อควรระวัง! ห้ามใช้ผงซักฟอก ผงขัด คลอรีน หรือน้ำยาทำความสะอาดที่มีส่วนผสมของน้ำมัน เพราะจะทำให้พื้นผิวเสียหาย

คำอธิบายของผลิตภัณฑ์


ภาพรวมผลิตภัณฑ์

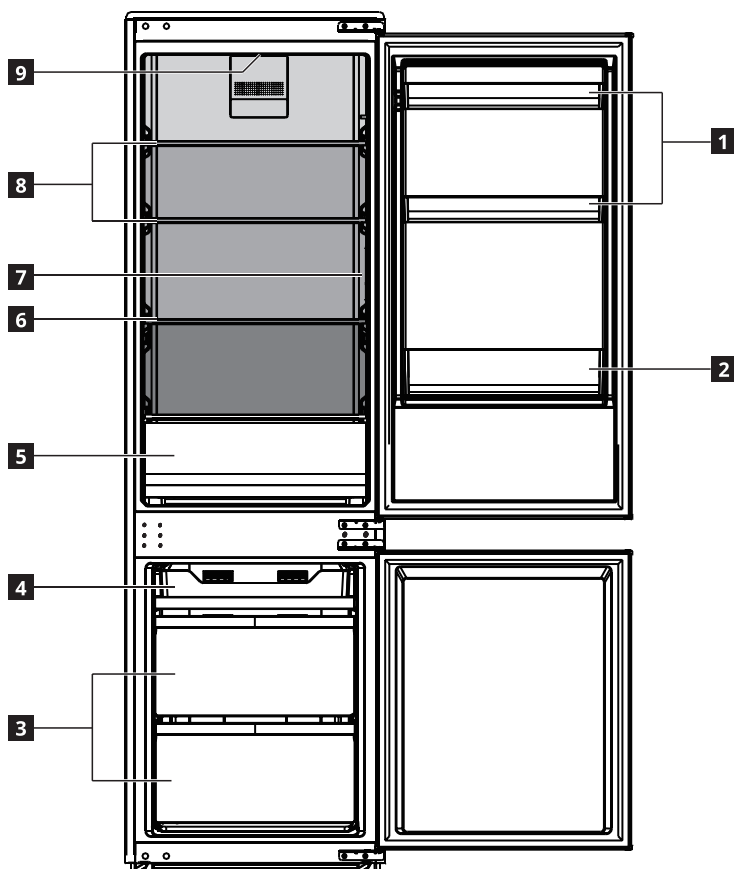

- | | |
|----------------------------|------------------------------|
| 1 ระเบียบประตู | 7 แผงควบคุม |
| 2 ระเบียบวางขวด | 8 ชั้นวางแก้ว |
| 3 ลื่นชักตู้แช่แข็ง | 9 ไฟ LED |
| 4 ถาดตู้แช่แข็ง | โซนที่เย็นน้อยที่สุด |
| 5 ลื่นชักเก็บผัก | บริเวณที่มีอุณหภูมิระดับกลาง |
| 6 ชั้นวางแก้ว | บริเวณที่เย็นที่สุด |

การใช้งาน

แผงควบคุม

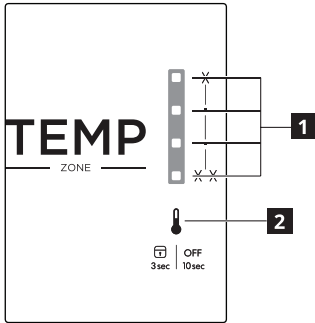

- 1 โฟแสดงอุณหภูมิ
- 2 ปุ่มฟังก์ชัน

การเปิดเครื่อง



คำเตือน! โปรดดูส่วนของ "การเชื่อมต่อไฟฟ้า" ในบทความความปลอดภัย

เชื่อมต่อปลั๊กไฟเข้ากับเต้ารับไฟฟ้า การแสดงผลบนแผงควบคุมจะเปิดขึ้น หากต้องการเปลี่ยนอุณหภูมิ โปรดดูส่วนของการควบคุมอุณหภูมิ

เมื่อใช้งานเครื่องเป็นครั้งแรก ให้ตั้งค่าเครื่องไว้ที่อุณหภูมิที่เย็นกว่าปกติและปล่อยให้ทำงานโดยไม่ต้องใส่อาหารจนกว่าเครื่องจะหยุดทำงานโดยอัตโนมัติตามอุณหภูมิที่ตั้งไว้ โดยปกติจะใช้เวลา 2 หรือ 3 ชั่วโมง จากนั้นให้ตั้งอุณหภูมิตามค่าที่ต้องการ แล้วใส่อาหารเข้าในเครื่องใช้ไฟฟ้า

อย่าใช้วัตถุคมในการควบคุมแผงสัมผัส

การปิดเครื่อง

- หากต้องการปิดเครื่อง ให้กดปุ่มฟังก์ชัน **2** บนแผงควบคุมค้างไว้ 10 วินาที หลังจากผ่านไป 30 วินาที เครื่องใช้ไฟฟ้าจะดับลงและหลอดทั้งหมดจะหยุดการทำงาน รวมทั้งการแสดงผลและการควบคุมของตู้เย็นทั้งหมดจะอยู่ในโหมดปิดเครื่อง

- หากต้องการเปิดเครื่องอีกครั้ง ให้กดปุ่มฟังก์ชัน **2** หากต้องการตัดการเชื่อมต่อเครื่องใช้ไฟฟ้าจากแหล่งจ่ายไฟ ให้ถอดปลั๊กไฟหลักออกจากเต้ารับไฟฟ้า

การล็อก/การปลดล็อก

- หากประตูปิดและไม่มีการทำงานของปุ่มใด ๆ เป็นเวลา 30 วินาที แผงควบคุมจะถูกล็อก ปุ่มจะไม่สามารถใช้งานได้
- หากต้องการปลดล็อกแผงควบคุม ให้กดปุ่มฟังก์ชัน **2** บนแผงควบคุมค้างไว้ 3 วินาที ปุ่มจะสามารถใช้งานได้

การควบคุมอุณหภูมิสำหรับช่องแช่เย็น

- กดปุ่มฟังก์ชัน **2** บนแผงควบคุมเพื่อเปลี่ยนการตั้งค่าอุณหภูมิสว่างหน้า ไฟ LED สีดวงที่ระบุจาก * * ถึง * สอดคล้องกับอุณหภูมิต่อไปนี้: 2°C, 4°C, 6°C และ 8°C เครื่องใช้ไฟฟ้าจะทำงานที่อุณหภูมิที่ตั้งใหม่ในอีก 30 วินาทีต่อมา

ปรับการตั้งค่าอุณหภูมิโดยระลึกไว้ว่าอุณหภูมิภายในตู้เย็นจะขึ้นอยู่กับปัจจัยดังต่อไปนี้:

- อุณหภูมิห้อง
- เปิดประตูบ่อยครั้งเพียงใด
- จำนวนอาหารที่เก็บไว้
- ตำแหน่งของตู้เย็น

โหมดแช่แข็งแบบสุดขั้ว: กดปุ่ม **2** เป็นเวลา 3 วินาที จากนั้นโหมดแช่แข็งแบบสุดขั้วจะเปิดขึ้น และไฟตรงกลางจะติดพร้อมกัน เมื่อคุณกดปุ่มอีกครั้ง จะเป็นการออกจากโหมดนี้ หากไม่มีการดำเนินการอื่นเกิดขึ้น ระบบจะปิดโดยอัตโนมัติใน 20 ชม.

สิ่งสำคัญ! หากอุณหภูมิรอบข้างสูงหรือตู้เย็นมีอาหารอยู่เต็ม และตู้เย็นถูกตั้งอุณหภูมิไว้ที่ต่ำสุด อาจเกิดการทำงานต่อเนื่องที่มีน้ำแข็งเกาะตัวอยู่ที่ผนังด้านหลังในกรณีนี้ ต้องตั้งอุณหภูมิที่สูงขึ้นเพื่อให้สามารถละลายน้ำแข็งได้โดยอัตโนมัติและลดการใช้พลังงานลง

การใช้งานประจำวัน

ปฏิทินการแช่แข็ง



1-2



3-4



3-6



3-6



3-6



3-6



10-12



10-12



10-12



10-12

- สัญลักษณ์แสดงสินค้าแช่แข็งประเภทต่าง ๆ
- ตัวเลขจะบอกถึงจำนวนเดือนที่สามารถจัดเก็บได้ สำหรับประเภทของสินค้าแช่แข็งที่เหมาะสม ความถูกต้องในเรื่องค่าสูงสุดหรือค่าต่ำสุดของเวลาการเก็บรักษาที่ระบุไว้ นั้น จะขึ้นอยู่กับคุณภาพของอาหารและการดูแลรักษาอาหารก่อนการแช่แข็ง

การแช่แข็งอาหารสด

- ช่องแช่แข็งเหมาะสำหรับการแช่แข็งอาหารสด การเก็บอาหารแช่แข็ง รวมทั้งการแช่แข็งอาหารไว้เป็นเวลานาน
- กระบวนการแช่แข็งจะใช้เวลา 24 ชั่วโมง: ในช่วงเวลานี้ อย่าเพิ่มอาหารอื่นที่จะแช่แข็ง

ที่เก็บอาหารแช่แข็ง

- เมื่อเปิดเครื่องครั้งแรกหรือหลังจากที่ไม่ได้ใช้งานเป็นเวลาสักพัก ก่อนที่จะใส่ผลิตภัณฑ์ลงในช่องเก็บอาหารแช่แข็ง ควรปล่อยให้เครื่องใช้ไฟฟ้าทำงานอย่างน้อย 2 ชั่วโมงด้วยการตั้งค่าที่เย็นขึ้น
- การแช่แข็งที่ได้ผลดีขึ้นอยู่กับบรรจุภัณฑ์ที่ถูกต้อง เมื่อคุณปิดและผนึกบรรจุภัณฑ์ ต้องไม่ปล่อยให้อากาศหรือความชื้นเข้าหรือออก หากทำเช่นนั้น กลิ่นและรสชาติอาหารอาจกระจายไปทั่วตู้เย็น และอาหารแช่แข็งจะแห้งผาก
- **หมายเหตุ:** อย่าแช่อาหารหรือเครื่องดื่มบรรจุขวดไว้ในช่องแช่แข็ง
- เพื่อให้ใช้งานได้ดีที่สุด ควรแช่อาหารโดยมีช่องว่างพอสมควรในช่องแช่แข็งและช่องแช่เย็นเพื่อให้อากาศไหลเวียนรอบ ๆ อาหาร และควรมีที่ว่างที่ด้านหน้าเพื่อให้ปิดประตูได้แบบสนิท



คำเตือน! ในกรณีของการละลายน้ำแข็งโดยไม่ตั้งใจ เช่น เนื่องจากไฟฟ้าขัดข้อง อาหารที่ถูกละลายน้ำแข็งจะต้องนำไปบริโภคอย่างรวดเร็ว หรือปรุงให้สุกโดยทันที หรือปล่อยให้เย็นลง แล้วนำไปแช่แข็งใหม่

การละลายน้ำแข็ง


ก่อนนำอาหารแช่แข็งไปใช้ สามารถละลายน้ำแข็งในช่องแช่เย็นของตู้เย็นหรือที่อุณหภูมิห้อง ขึ้นอยู่กับเวลาที่มีสำหรับการนี้

อาหารที่เตรียมไว้ชิ้นเล็กสามารถปรุงขณะที่ยังแช่แข็งอยู่ได้โดยตรง ในกรณีนี้จะใช้เวลาปรุงนานกว่า

การจัดเก็บอาหารในช่องแช่เย็น

- ปิดฝาหรือห่ออาหาร โดยเฉพาะอย่างยิ่งหากอาหารนั้นมีกลิ่นแรง
- จัดวางตำแหน่งอาหารเพื่อให้อากาศหมุนเวียนโดยรอบได้อย่างอิสระ


การจัดตำแหน่งระเบียบประตู

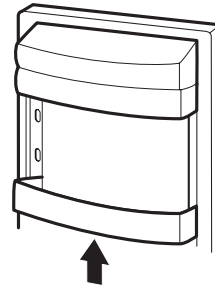

รูปภาพสำหรับการอ้างอิงเท่านั้น

- เพื่อให้สามารถจัดเก็บบรรจุภัณฑ์ที่อาหารขนาดต่าง ๆ ได้ ระเบียบประตูสามารถที่จะจัดตำแหน่งไปที่ระดับความสูงต่าง ๆ ได้
- น๊อตระเบียบประตูออกจากส่วนรองรับอย่างระมัดระวัง จากนั้นจัดตำแหน่งใหม่ตามที่ต้องการ

ชั้นวางแบบเคลื่อนย้ายได้

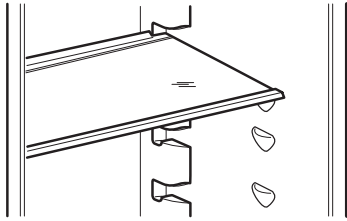


รูปภาพสำหรับการอ้างอิงเท่านั้น

- พนักของตู้เย็นมีรางหลายชุดเพื่อให้สามารถจัดวางชั้นวางกระจกนिरภัยได้ตามที่ต้องการ



ข้อควรระวัง! ห้ามเคลื่อนย้ายชั้นวางกระจกนिरภัยไปอยู่เหนือลิ้นชักเก็บผัก เพื่อให้แน่ใจว่ามีการไหลเวียนของอากาศที่ถูกต้อง

ลิ้นชักเก็บผัก

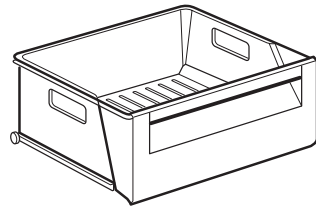

รูปภาพสำหรับการอ้างอิงเท่านั้น

- ลิ้นชักสามารถดึงออกมาทำความสะอาดได้
- ลิ้นชักเหมาะสำหรับเก็บผักและผลไม้
- ลิ้นชักสามารถดึงออกมาทำความสะอาดได้

คำแนะนำและเคล็ดลับ

เสียงในขณะใช้งานที่เป็นปกติ

เสียงต่อไปนี้เป็นปกติขณะใช้งาน:

- เสียงน้ำไหลในท่อและเสียงฟองอากาศเบา ๆ จากชุดท่อเมื่อป้อนสารทำความเย็น
- เสียงหึ่ง ๆ และเสียงเป็นจังหวะจากคอมเพรสเซอร์เมื่อป้อนสารทำความเย็น
- เสียงแตกจากภายในเครื่องเกิดขึ้นจากการขยายตัวจากความร้อน (เป็นสิ่งที่เกิดขึ้นปกติและไม่เป็นอันตราย)

คำแนะนำเพื่อประหยัดพลังงาน

- อย่าเปิดประตูบ่อยเกินไปหรือเปิดทิ้งไว้นานเกินความจำเป็น
- หากอุณหภูมิโดยรอบสูงและมีการตั้งค่าอุณหภูมิภายในเครื่องไว้ต่ำมาก รวมทั้งมีการบรรจุอาหารไว้อย่างเต็มที่ คอมเพรสเซอร์อาจทำงานอย่างต่อเนื่องจนทำให้เกิดน้ำค้างแข็งหรือน้ำแข็งบนแผงคอยล์เย็น หากเกิดเหตุการณ์นี้ขึ้น ให้ตั้งค่าอุณหภูมิภายในเครื่องให้อุ่นขึ้นเพื่อละลายน้ำแข็งโดยอัตโนมัติและช่วยประหยัดการใช้ไฟฟ้า

คำแนะนำสำหรับการเข้าอาหารสด

- อย่าเข้าอาหารอุ่นหรือของเหลวที่กำลังระเหยไว้ในตู้เย็น
- ปิดฝาหรือห่ออาหาร โดยเฉพาะอย่างยิ่งหากอาหารนั้นมีกลิ่นแรง
- วางตำแหน่งอาหารให้ลมไหลผ่านได้สะดวก

คำแนะนำสำหรับการเข้าอาหาร

คำแนะนำที่มีประโยชน์:

- เนื้อสัตว์ (ทุกประเภท): ควรใส่ในบรรจุภัณฑ์ที่เหมาะสมและวางไว้บนชั้นกระจกเหนือลิ้นชักเก็บผัก ควรเก็บเนื้อสัตว์อย่างมากไม่เกิน 1-2 วัน
- อาหารปรุงสุก อาหารเย็น: ควรใส่ภาชนะปิดฝาและวางบนชั้นวางใดก็ได้
- ผักและผลไม้: ทำความสะอาดอย่างทั่วถึงและวางในลิ้นชักพิเศษ ห้ามเก็บกล้วย มันฝรั่ง หัวหอม และกระเทียมไว้ในตู้เย็นหากไม่ได้ใส่ในบรรจุภัณฑ์
- เนยและชีส: ใส่ในภาชนะพิเศษชนิดสุญญากาศหรือห่อด้วยอลูมิเนียมฟอยล์หรือถุงพลาสติกเพื่อไม่ให้อากาศเข้า
- ขวด: ปิดฝาขวดและวางไว้บนชั้นวางข้างประตูหรือ (ถ้ามี) วางไว้บนชั้นวางขวด

ข้อควรระวังสำหรับการใช้งาน

- ยังใส่อาหารหรือยังเปิดประตูตู้เย็นไว้นาน ก็จะต้องใช้พลังงานไฟฟ้ามากขึ้น ซึ่งอาจทำให้เครื่องชำรุดได้
- เสียบปลั๊กไฟอีกครั้งโดยรอบไม่ต่ำกว่าสิบนาที
- อย่าแช่ขวดเครื่องดื่มไว้ในช่องแช่แข็ง เพื่อป้องกันการแตกและทำให้ตู้เย็นเสียหาย
- เปิดประตูให้น้อยครั้งที่สุดเท่าที่จะทำได้ในขณะไฟฟ้าดับ
- ขณะละลายน้ำแข็ง อย่าใช้วัตถุมีคมหรือโลหะขูดน้ำแข็งที่พื้นผิวของแผงคอยล์เย็น เนื่องจากจะทำให้แผงคอยล์เย็นเสียหาย
- อย่าสัมผัสอาหารและภาชนะในช่องแช่แข็งในขณะที่มือเปียก เพื่อป้องกันการถูกน้ำแข็งกัด

เคล็ดลับการแช่แข็ง

เพื่อช่วยให้คุณใช้ประโยชน์สูงสุดจากกระบวนการแช่แข็ง ควรปฏิบัติตามเคล็ดลับสำคัญดังนี้:

- กระบวนการแช่แข็งใช้เวลา 24 ชม. ไม่ควรแช่แข็งอาหารเพิ่มเติมในช่วงระยะเวลานี้
- ควรแช่แข็งอาหารคุณภาพสูง สดใหม่ และทำความสะดวกดีแล้วเท่านั้น
- ควรเตรียมอาหารเป็นส่วนเล็ก ๆ เพื่อให้สามารถแช่แข็งได้เร็วและสมบูรณ์ อีกทั้งยังช่วยให้สามารถละลายน้ำแข็งตามจำนวนที่ต้องการนำไปใช้เท่านั้น
- ควรห่อหุ้มอาหารไว้ในแผ่นอลูมิเนียมฟอยล์หรือโพลีเทน และตรวจสอบว่าปิดฝาบรรจุภัณฑ์เป็นสุญญากาศ
- อย่าให้อาหารสดและไม่แช่แข็งสัมผัสอาหารซึ่งแช่แข็งแล้ว รวมถึงหลีกเลี่ยงอุณหภูมิเพิ่มสูงขึ้นในรายการต่อไปนี้
- อาหารชิ้นบางจะแช่ได้ดีกว่าและยาวนานกว่าชิ้นหนา เลือกระยะเวลาการแช่อาหาร

- หากบริโภคน้ำแข็งทันทีหลังจากนำออกจากช่องแช่แข็ง อาจทำให้ผิวแห้งถูกน้ำแข็งกัด
- ขอแนะนำให้แสดงวันที่นำของเข้าแช่แข็งในแต่ละบรรจุภัณฑ์ เพื่อให้คุณตรวจสอบระยะเวลาที่แช่แข็งได้

เคล็ดลับสำหรับการเก็บอาหารแช่แข็ง

เพื่อให้ใช้ประสิทธิภาพสูงสุดจากตู้เย็นนี้ คุณควร:

- ตรวจสอบว่าอาหารแช่แข็งเพื่อการค้าถูกเก็บรักษาเป็นอย่างดีโดยผู้ค้าปลีก
- ตรวจสอบให้แน่ใจว่าได้นำอาหารแช่แข็งที่ได้จากร้านจำหน่ายอาหารเข้าสู่ช่องแช่แข็งโดยเร็วที่สุด
- อย่าเปิดประตูบ่อยเกินไปหรือเปิดทิ้งไว้นานเกินความจำเป็น
- เมื่อคุณละลายน้ำแข็งแล้ว อาหารจะเสื่อมคุณภาพอย่างรวดเร็วโดยไม่สามารถนำกลับมาแช่แข็งใหม่
- อย่าเก็บอาหารไว้นานกว่าที่ระบุไว้โดยผู้ผลิตอาหาร

การดูแลและทำความสะอาด

⚠ คำเตือน! โปรดดูที่บทความปลอดภัย

คำเตือนทั่วไป

⚠ ข้อควรระวัง! ถอดปลั๊กเครื่องใช้ไฟฟ้าออกก่อนที่จะดำเนินการซ่อมบำรุงใด ๆ

i ตู้เย็นนี้มีสารไฮโดรคาร์บอนในหน่วยทำความเย็น ดังนั้นการบำรุงรักษาและรีชาร์จต้องดำเนินการโดยช่างเทคนิคที่ได้รับอนุญาตเท่านั้น

i อุปกรณ์เสริมและชิ้นส่วนของตู้เย็นไม่เหมาะกับการล้างในเครื่องล้างจาน

การทำความสะอาดภายในเครื่อง

ก่อนใช้งานตู้เย็นนี้เป็นครั้งแรก ควรล้างภายในตู้เย็นและอุปกรณ์เสริมภายในทั้งหมดด้วยน้ำอุ่น และสบู่ที่มีฤทธิ์เป็นกลางเพื่อขจัดกลิ่นใหม่ของผลิตภัณฑ์ จากนั้นทำให้แห้งอย่างทั่วถึง

⚠ ข้อควรระวัง! อย่าใช้น้ำยาทำความสะอาดหรือฟองขัด เนื่องจากมีความเสียหายได้

เปิดเครื่องครั้งแรก

⚠ ข้อควรระวัง! ก่อนเสียบปลั๊กไฟที่เต้ารับไฟฟ้าและเปิดตู้เย็นเป็นครั้งแรก ควรปล่อยให้ตู้เย็นตั้งตรงไว้เป็นเวลาอย่างน้อย 4 ชั่วโมง เพื่อให้มันมีเวลาเพียงพอให้น้ำมันกลับเข้าไปในคอมเพรสเซอร์ มิฉะนั้นคอมเพรสเซอร์หรือส่วนประกอบอิเล็กทรอนิกส์อาจเสียหายอย่างถาวร

การทำความสะอาดตามระยะ

⚠ ข้อควรระวัง! อย่าดึง ย้าย หรือทำให้ท่อและ/หรือสายไฟในตู้เย็นเสียหาย

⚠ ข้อควรระวัง! อย่าทำให้ระบบทำความเย็นเสียหาย

⚠ ข้อควรระวัง! ขณะย้ายตู้เย็น ควรยกที่ขอบด้านหน้าเพื่อหลีกเลี่ยงการครูดกับพื้น

อุปกรณ์นี้ต้องทำความสะอาดเป็นประจำ:

1. ทำความสะอาดด้านในและอุปกรณ์เสริมด้วยน้ำอุ่นและสบู่ที่มีฤทธิ์เป็นกลาง
2. ควรตรวจสอบซิลประตูดและเช็คทำความสะอาดเป็นประจำเพื่อให้แน่ใจว่าสะอาดและปราศจากเศษผง
3. ล้างแล้วทำให้แห้งอย่างทั่วถึง
4. ถ้าเอื้อมถึง ควรทำความสะอาดคอนเดนเซอร์และคอมเพรสเซอร์ที่ด้านหลังตู้เย็นด้วยแปรง การใช้งานเช่นนี้จะเพิ่มประสิทธิภาพของตู้เย็นและประหยัดไฟฟ้า

ช่วงเวลาที่ไม่ใช้งาน

เมื่อไม่ใช้งานตู้เย็นเป็นเวลานาน โปรดปฏิบัติตามข้อควรระวังดังต่อไปนี้:

1. ถอดปลั๊กตู้เย็นออกจากเต้ารับ
2. นำอาหารออกทั้งหมด
3. ละลายน้ำแข็ง (ถ้าจำเป็น) แล้วทำความสะอาดตู้เย็นและอุปกรณ์เสริมทั้งหมด
4. ทำความสะอาดตู้เย็นและอุปกรณ์เสริมทั้งหมด
5. เปิดประตูออกเพื่อป้องกันกลิ่นอันไม่พึงประสงค์

⚠ ข้อควรระวัง! หากคุณต้องการเปิดเครื่องไว้ตลอดเวลา ควรมีการตรวจสอบตู้เย็นเป็นครั้งคราวเพื่อป้องกันไม่ให้อาหารภายในเน่าเสียในกรณีที่ไฟฟ้าดับ

การละลายน้ำแข็งช่องแช่เย็น

น้ำค้างแข็งจะถูกกำจัดออกจากแผงคอยล์เย็นของช่องแช่เย็นโดยอัตโนมัติทุกครั้งเมื่อมอเตอร์คอมเพรสเซอร์หยุดทำงาน ระหว่างการใช้งานปกติ น้ำที่เกิดจากการละลายน้ำแข็งจะไหลออกผ่านรางไปยังภายนอกพิเศษที่ด้านหลังของเครื่องใช้ไฟฟ้า เหนือคอมเพรสเซอร์ของมอเตอร์ ซึ่งเป็นที่ที่น้ำจะระเหยออกไป

สิ่งสำคัญคือต้องทำความสะอาดน้ำที่ด้านหลังของช่องแช่เย็นเป็นระยะ ๆ เพื่อป้องกันไม่ให้น้ำล้นและหยดลงบนอาหารที่อยู่ภายใน

ในการทำความสะอาด ให้ใช้น้ำยาทำความสะอาดที่ให้นมาในกระเป๋าอุปกรณ์เสริม

การละลายน้ำแข็งที่อยู่ในช่องแช่แข็ง

ช่องแช่แข็งมีฟังก์ชันละลายน้ำแข็งอัตโนมัติ เนื่องจากการเปลี่ยนแปลงตามฤดูกาล อาจเกิดขึ้น น้ำค้างแข็งที่หนาเกินไปได้ หากต้องการละลายน้ำแข็งด้วยตนเอง ให้สังเกตสิ่งต่อไปนี้

- ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟ แล้วเปิดประตูช่องแช่แข็งทิ้งไว้
- นำอาหารทั้งหมด ถาดน้ำแข็ง และชั้นวางออก หรือย้ายไปยังช่องแช่เย็น
- ทำความสะอาดและเช็ดน้ำแข็งที่ละลายด้วยผ้าสะอาด
- หลังจากละลายน้ำแข็งแล้ว ให้เชื่อมต่อเครื่องใช้ไฟฟ้าเข้ากับแหล่งจ่ายไฟ



ข้อควรระวัง! เพื่อหลีกเลี่ยงความเสียหายต่อผนังช่องแช่แข็ง ห้ามใช้วัตถุมีคมใด ๆ เพื่อขจัดน้ำค้างแข็งหรือแยกอาหารแช่แข็ง

การแก้ไขปัญหา



คำเตือน! โปรดดูที่บทความปลอดภัย


ต้องทำอย่างไรถ้า...

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องใช้ไฟฟ้าไม่ทำงาน	ตู้เย็นปิด	เปิดตู้เย็น
	ปลั๊กไฟหลักเสียบแต่รับไฟฟ้าไม่ถูกต้อง	เสียบปลั๊กไฟหลักเข้ากับเต้ารับไฟฟ้าให้ถูกต้อง โปรดดูส่วนของ "การเชื่อมต่อไฟฟ้า" ในบทความปลอดภัย
	ไม่มีแรงดันไฟฟ้าในเต้ารับไฟฟ้า	เสียบปลั๊กไฟของเครื่องใช้อื่นเข้ากับเต้ารับไฟฟ้านั้น ติดต่อช่างไฟฟ้าที่ชำนาญ
ตู้เย็นมีเสียงดัง	วางเครื่องใช้ไฟฟ้าไม่มั่นคง	ตรวจสอบว่าตู้เย็นตั้งอย่างมั่นคงหรือไม่
หลอดไฟใช้การไม่ได้	หลอดไฟมีข้อบกพร่อง	โปรดดูที่ "การเปลี่ยนหลอดไฟ"
คอมเพรสเซอร์ทำงานอย่างต่อเนื่อง	ตั้งอุณหภูมิไม่ถูกต้อง	ดูที่บท "การใช้งาน"
	ผลิตภัณฑ์อาหารจำนวนมากได้ถูกใส่เข้าไปในเวลาเดียวกัน	ใส่ผลิตภัณฑ์อาหารน้อยลงในแต่ละครั้ง
	อุณหภูมิห้องสูงเกินไป	อ้างอิงจากตารางประเภทอุณหภูมิบนป้ายแสดงข้อมูลทางเทคนิค
	นำอาหารที่อุ่นเกินไปเข้ามาแช่	รอให้อาหารเย็นลงถึงอุณหภูมิห้องก่อนนำมาแช่
	ปิดประตูไม่ได้ไม่ถูกต้อง	ดูที่ "การปิดประตู"
อุณหภูมิในตู้เย็นต่ำเกินไป/สูงเกินไป	ตั้งค่าอุณหภูมิไม่ถูกต้อง	ตั้งค่าอุณหภูมิสูงขึ้น/ต่ำลง
	ปิดประตูไม่ได้ไม่ถูกต้อง	ดูที่ "การปิดประตู"
	อาหารมีอุณหภูมิสูงเกินไป	รอให้อุณหภูมิของอาหารลดลงถึงอุณหภูมิห้องก่อนนำมาแช่
	ผลิตภัณฑ์อาหารจำนวนมากถูกใส่เข้าไปในเวลาเดียวกัน	รอสองสามชั่วโมงแล้วตรวจสอบอุณหภูมิอีกครั้ง
	ความหนาของน้ำค้างแข็งมากกว่า 0.16"-0.20"	ละลายน้ำแข็งในตู้เย็น
	เปิดประตูตู้เย็นบ่อย	เปิดประตูตู้เย็นเท่าที่จำเป็นเท่านั้น
	ไม่มีการไหลเวียนของอากาศเย็นในเครื่องใช้ไฟฟ้า	ตรวจสอบให้แน่ใจว่ามีการไหลเวียนของอากาศเย็นในเครื่องใช้ไฟฟ้า

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
มีน้ำควบแน่นมากเกินไปที่ผนังด้านหลังของตู้เย็น	ประตูถูกเปิดบ่อยเกินไป	เปิดประตูเฉพาะเมื่อจำเป็นเท่านั้น
	ประตูปิดไม่สนิท	ตรวจสอบให้แน่ใจว่าประตูปิดสนิทแล้ว
	อาหารที่จัดเก็บไม่ได้ถูกห่อหุ้ม	ห่อหุ้มอาหารในบรรจุภัณฑ์ที่เหมาะสมก่อนจัดเก็บในตู้เย็นใช้ไฟฟ้า
มีน้ำไหลอยู่ในตู้เย็น	รูระบายน้ำที่ด้านหลังของเครื่องอุดตัน	ทำความสะอาดรูระบายน้ำด้วยหลอด
	ผลิตภัณฑ์อาหารปิดกั้นมิให้น้ำไหลเข้าสู่สถานะเก็บน้ำ	ตรวจสอบให้แน่ใจว่าผลิตภัณฑ์อาหารไม่สัมผัสกับเพดานด้านหลัง
น้ำไหลอยู่บนพื้น	ประตูปิดไม่สนิท	ดูที่ "การปิดประตู" หรือดูรายการแก้ไขปัญหาด้านล่าง ("ประตูปิดไม่สนิท")
	ถาดรองน้ำหยดแตก	ศูนย์บริการลูกค้าหลังการขายของ IKEA จะช่วยเหลือคุณทางโทรศัพท์ในเวลาที่คุณรับบริการ โปรดดูที่ www.IKEA.com และเลือกร้านค้าในท้องถิ่นของคุณเพื่อดูหมายเลขโทรศัพท์และเวลาเปิดทำการของร้านค้าในท้องถิ่น
	ท่อระบายน้ำอุดตัน	ทำความสะอาดรูระบายน้ำด้วยหลอด
ประตูปิดไม่สนิท	ชั้นอยู่ผิดตำแหน่ง	ตรวจสอบว่าชั้นอยู่ในตำแหน่งที่ถูกต้อง ดูที่ "ชั้นวางแบบเคลื่อนย้ายได้"
	ขอบยางสกปรก	ทำความสะอาดขอบยาง โปรดดู "การดูแลและทำความสะอาด"
	เครื่องใช้ไฟฟ้าถูกจัดวางไม่ไ่ระดับ	ตรวจสอบว่าติดตั้งตู้เย็นไ่ระนาบ

สัญญาณเตือนความผิดปกติ

หากเครื่องใช้ไฟฟ้าทำงานผิดปกติ ไฟ LED บนแผงควบคุมจะกะพริบเพื่อแสดงว่ามีความผิดปกติ

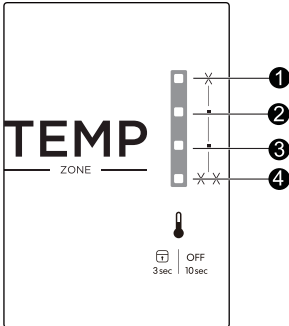

- ❶ กะพริบ: เซ็นเซอร์วัดอุณหภูมิของช่องแช่เย็นทำงานล้มเหลว
- ❷ กะพริบ: เซ็นเซอร์ละลายน้ำแข็งของช่องแช่เย็นทำงานล้มเหลว
- ❸ กะพริบ: เซ็นเซอร์ละลายน้ำแข็งของช่องแช่แข็งทำงานล้มเหลว
- ❹ กะพริบ: เซ็นเซอร์วัดอุณหภูมิแวดล้อมทำงานล้มเหลว

❶ หากเครื่องใช้ไฟฟ้าของคุณยังคงทำงานไม่ถูกต้องหลังจากทำการตรวจสอบข้างต้นแล้ว ศูนย์บริการลูกค้าหลังการขายของ IKEA จะช่วยเหลือคุณทางโทรศัพท์ในเวลาที่คุณรับบริการ โปรดดูที่ **www.IKEA.com** และเลือกร้านค้าในพื้นที่ของคุณเพื่อดูหมายเลขโทรศัพท์ของร้านค้าในพื้นที่และเวลาเปิดทำการ

การปิดประตู

- ทำความสะอาดขอบยางของประตู
- ปรับตำแหน่งประตู หากจำเป็น ดูคำแนะนำในการประกอบ
- เปลี่ยนขอบยางของประตูที่บกพร่อง ถ้าจำเป็น ติดต่อฝ่ายบริการหลังการขาย

การเปลี่ยนหลอดไฟ

เครื่องใช้ไฟฟ้านี้มีโคมไฟสำหรับการส่องสว่างภายใน การซ่อมแซมชนิดเดียวที่อนุญาตคือการเปลี่ยนอุปกรณ์ส่องสว่างเท่านั้น โปรดติดต่อ IKEA โดยไปที่ **www.IKEA.com** และเลือก ร้านค้าของคุณ เพื่อดูหมายเลขโทรศัพท์ของร้านค้าในพื้นที่และเวลาเปิดทำการ

ข้อมูลทางเทคนิค

ประเภทผลิตภัณฑ์	
ประเภทผลิตภัณฑ์	ตู้เย็นแบบมีช่องแช่เยือกแข็ง
ประเภทการติดตั้ง	ในตัว
ขนาดของผลิตภัณฑ์	
ความสูง	1785 มม.
ความกว้าง	540 มม.
ความหนา	545 มม.
ปริมาตรสุทธิ	
ช่องแช่เย็น	180 ลิตร
ช่องแช่เยือกแข็ง	68 ลิตร
ประเภทดาวช่องแช่	4ดาว
วิธีการละลายน้ำแข็ง	
ช่องแช่เย็น	อัตโนมัติ
ช่องแช่เยือกแข็ง'	อัตโนมัติ
ค่าพลังงานไฟฟ้าที่ใช้ต่อปี	400kWh/year
แรงดันไฟฟ้า	220 - 240 V
ความถี่	50 Hz
กำลังไฟฟ้า	85W
จำนวนเฟส	1
เชื้อสารทำความเย็น	R600a

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม

รีไซเคิลวัสดุที่มีสัญลักษณ์ ♻️ เก็บบรรจุภัณฑ์ไว้ในพื้นที่จัดเก็บที่เกี่ยวข้องเพื่อการรีไซเคิล ช่วยปกป้องสิ่งแวดล้อมและสุขภาพของมนุษย์ด้วยการรีไซเคิลขยะ

เครื่องใช้ไฟฟ้าและอิเล็กทรอนิกส์ ห้ามทิ้งเครื่องใช้ไฟฟ้า ห้ามทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือน ส่งผลิตภัณฑ์ไปที่โรงงานรีไซเคิลในท้องถิ่น หรือติดต่อที่ทำการเทศบาลของคุณ

การรับประกันของ IKEA

ระยะเวลาประกันของ IKEA เป็นเวลาเท่าใด

การรับประกันนี้มีอายุห้า (5) ปีนับจากวันที่ซื้อเครื่องใช้ไฟฟ้าของคุณที่ IKEA ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากมีการเข้ารับบริการภายใต้การรับประกัน จะไม่ขยายระยะเวลาประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

ผู้ให้บริการของ IKEA จะให้บริการผ่านหน่วยบริการของตนเองหรือเครือข่ายพันธมิตรด้านการบริการที่ได้รับอนุญาต

การรับประกันนี้ครอบคลุมสิ่งใดบ้าง

การรับประกันครอบคลุมความบกพร่องของเครื่องใช้ไฟฟ้า ซึ่งเกิดขึ้นจากการผลิตหรือวัสดุที่มีข้อผิดพลาดนับจากวันที่ซื้อจาก IKEA การรับประกันนี้ไม่ผลต่อการใช้งานในประเภทเท่านั้น ข้อยกเว้นระบุไว้ภายใต้หัวข้อ "มีสิ่งใดที่ไม่ได้รับความคุ้มครองภายใต้การรับประกันนี้" ภายในระยะเวลาประกัน จะครอบคลุมค่าใช้จ่ายเพื่อแก้ไขข้อบกพร่อง เช่น การซ่อมแซม อะไหล่ ค่าแรง และค่าเดินทางในกรณีที่เข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่ต้องมีค่าใช้จ่ายเพิ่มเติม ในเงื่อนไขเหล่านี้ กฎข้อบังคับของท้องถิ่นที่เกี่ยวข้องจะมีผลบังคับใช้ อะไหล่เก่าที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญหา

ผู้ให้บริการที่ได้รับการแต่งตั้งจาก IKEA จะตรวจสอบผลิตภัณฑ์และตัดสินใจตามดุลยพินิจของผู้ให้บริการแต่เพียงผู้เดียว หากผลิตภัณฑ์นั้นยังอยู่ภายใต้การรับประกัน หากพิจารณาแล้วว่าปัญหาดังกล่าวอยู่ภายใต้ความคุ้มครอง ผู้ให้บริการของ IKEA หรือพันธมิตรผู้ให้บริการที่ได้รับอนุญาตที่มีหน่วยบริการของตนเองจะทำการซ่อมแซมผลิตภัณฑ์ที่มีข้อบกพร่องหรือเปลี่ยนผลิตภัณฑ์ใหม่ที่เกี่ยวข้องเท่า ตามดุลยพินิจของผู้ให้บริการ

มีสิ่งใดที่ไม่ได้รับความคุ้มครองภายใต้การรับประกันนี้

- การสึกหรอและร่องรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากความตั้งใจหรือประมาท ความเสียหายที่เกิดจากการไม่ดูแลรักษา การติดตั้งไม่ถูกต้องหรือโดยเชื่อมต่อกับแรงดันไฟฟ้าผิด ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า สนิมเสียหายจากการกัดกร่อนหรือน้ำ รวมถึงแต่ไม่จำกัดเพียงความเสียหายที่เกิดจากไขปนขาวในน้ำมากเกินไป และความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ
- ชิ้นส่วนที่ไม่เกี่ยวกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดข่วนและสีที่อาจแตกต่างกันไปจากเดิม

- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอม และการทำความสะอาดหรือชำระล้างใส่เครื่อง ระบบระบายน้ำหรือลิ้นชักใส่ไม่สุ่
- ความเสียหายที่เกิดขึ้นส่วนต่อไปนี่: เซรามิกแก้ว อุปกรณ์เสริม ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร ก่อภาชนะและระบายน้ำ ชล หลอดไฟและที่ห่อหุ้มหลอดไฟ หน้าจอ ปุ่ม ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดจากความผิดพลาดของการผลิต
- กรณีที่ไม่พบข้อผิดพลาดในระหว่างการเข้าตรวจสอบของช่างเทคนิค
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับการแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม
- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ
- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดกับผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง
- ค่าใช้จ่ายสำหรับดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA
- อย่างไรก็ตาม หากผู้ให้บริการที่ได้รับแต่งตั้งของ IKEA หรือคู่สัญญาบริการที่ได้รับอนุญาตซ่อมแซมหรือเปลี่ยนเครื่องใช้ไฟฟ้าภายใต้ข้อกำหนดของการรับประกัน ผู้ให้บริการที่ได้รับแต่งตั้งหรือคู่สัญญาบริการที่ได้รับอนุญาตจะติดตั้งเครื่องใช้ไฟฟ้าที่ซ่อมแซมแล้วหรือติดตั้งเครื่องทดแทนให้ใหม่ หากจำเป็น
- การติดตั้งระบบประปาและระบบไฟฟ้าทั้งหมดไม่ใช่ความรับผิดชอบของ IKEA และลูกค้าต้องจัดการเรื่องเหล่านี้ให้เสร็จก่อนที่จะใช้งาน

กฎหมายของประเทศมีผลอย่างไร

การรับประกันของ IKEA ให้สิทธิทางกฎหมายที่เฉพาะแก่คุณซึ่งครอบคลุมหรือเกินกว่าข้อกำหนดทางกฎหมายในท้องถิ่นทั้งหมด อย่างไรก็ตามเงื่อนไขเหล่านี้ไม่ได้จำกัดสิทธิ์ใด ๆ ของผู้บริโภคตามที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

การรับประกันนี้ใช้ได้เฉพาะในประเทศที่ซื้อผลิตภัณฑ์เท่านั้น การซ่อมแซมจะให้บริการภายใต้กรอบของเงื่อนไขการรับประกัน ข้อผูกพันที่มีต่อการให้บริการในกรอบของการรับประกันจะยังคงอยู่ ก็ต่อเมื่อเครื่องใช้ไฟฟ้ามีความสอดคล้องและได้รับการติดตั้งโดยเป็นไปตามสิ่งต่อไปนี้:

- ข้อมูลจำเพาะทางเทคนิคของประเทศซึ่งมีการเรียกชื่อหรือการรับประกัน
- คำแนะนำการประกอบและข้อมูลความปลอดภัยของคู่มือผู้ใช้

บริการหลังการขายที่เฉพาะสำหรับเครื่องใช้ไฟฟ้าของ IKEA

โปรดอย่าลังเลที่จะติดต่อศูนย์บริการที่ได้รับการแต่งตั้งจาก IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
- ขอคำชี้แจงเกี่ยวกับการติดตั้งเครื่องใช้ไฟฟ้าของ IKEA เข้ากับเฟอร์นิเจอร์หรือครัวของ IKEA
- ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ

โปรดดูที่ **www.IKEA.com** และเลือกร้านค้าในพื้นที่ของคุณเพื่อดูหมายเลขโทรศัพท์ของร้านค้าในพื้นที่และเวลาเปิดทำการ

ก่อนที่จะโทรหาเรา โปรดตรวจสอบให้แน่ใจว่าคุณมีหมายเลขเครื่องใช้ของ IKEA (รหัส 8 หลัก) และหมายเลขประจำเครื่อง (รหัส 8 หลักที่สามารถพบได้บนป้ายพิกัด) สำหรับอุปกรณ์ที่คุณต้องการความช่วยเหลือจากเรา

- i เก็บใบเสร็จรับเงินเอาไว้!** เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้การรับประกัน โปรดทราบว่าเอกสารใบเสร็จรับเงินจะมีชื่อของเครื่องใช้ไฟฟ้าและหมายเลขของ IKEA (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละชิ้นที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ของร้าน IKEA ใกล้บ้าน เราขอแนะนำให้คุณอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

