

TILLREDA

GB

TH



Design and Quality
IKEA of Sweden

ENGLISH
ไทย

3
16

1. SAFETY INFORMATION	5
2. PRODUCT DESCRIPTION	10
3. CONTROL PANEL	11
4. TROUBLE SHOOTING	12
5. SPECIFICATIONS	12
6. INSTALLATION AND CONNECTION	13
7. ENVIRONMENTAL CONCERNS	13
8. IKEA GUARANTEE	14

ENGLISH

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

**SAVE THESE
INSTRUCTIONS
CAREFULLY**

1. SAFETY INFORMATION



PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- c) **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- 1. Read and follow the specific: **"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY"**.
- 2. This device can be used by children of at least 8 years old and by people with reduced physical, sensory or mental capacities or lacking experience or knowledge, if they are properly supervised or if they were given instructions relating to the safe use of the device and if the risks involved have been understood. Children must not play with the device. Cleaning and maintenance by the user must not be carried out by unsupervised children.
- 3. Keep the appliance and its cord out of reach of children less than 8 years.


ENGLISH

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
6. Heating beverages by microwaves can cause a sudden, delayed burst of boiling liquid.
7. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
8. Only use utensils that are suitable for use in microwave ovens.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
11. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
12. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
13. The oven should be cleaned regularly and any food deposits removed.
14. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
15. The appliance must not be installed behind a decorative door in order to avoid overheating.
16. The microwave oven must be operated with any cabinet door open.
17. This appliance is intended to be used in household and similar applications such as:

ENGLISH

- staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
18. The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
19. Metallic containers for food and beverages are not allowed during microwave cooking.
20. The appliance shall not be cleaned with a steam cleaner.
21. The appliance is intended to be used freestanding or in a cabinet.
22. The rear surface of appliances shall be placed against a wall.
23. This appliance is for household and indoor use only. Don't use it outdoors!
24. To protect against electric shock, do not immerse main parts of the product, cord or plug in water or other liquids.
25. **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

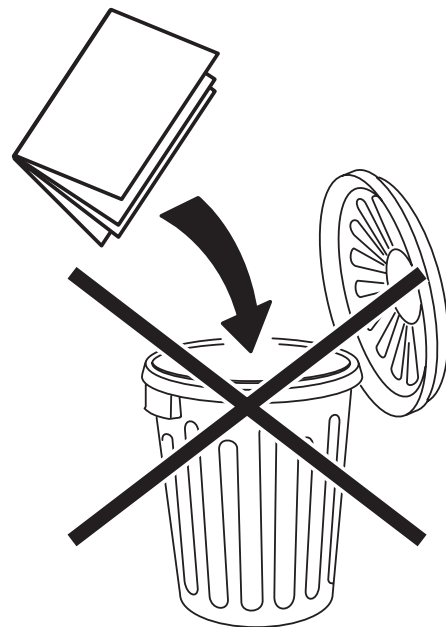

ENGLISH

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord must be a grounding-type 3-wire cord.
 - c) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and

neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.

4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. *Cleaning Tip* ★ For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on **"MATERIALS YOU CAN USE IN MICROWAVE OVEN OR TO BE AVOIDED IN MICROWAVE OVEN."**

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

ENGLISH

MATERIALS YOU CAN USE IN MICROWAVE OVEN

Utensils	Remarks
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

2. PRODUCT DESCRIPTION


SETTING UP YOUR OVEN

Name of Oven Parts and Accessories


Remove the oven and all materials from the carton and oven cavity. Your oven comes with the following accessories:

Glass tray	1x
Turntable ring assembly	1x
Instruction Manual	1x

- A. Control panel
- B. Turntable shaft
- C. Turntable ring assembly
- D. Glass tray
- E. Observation window
- F. Door assembly
- G. Safety interlock system

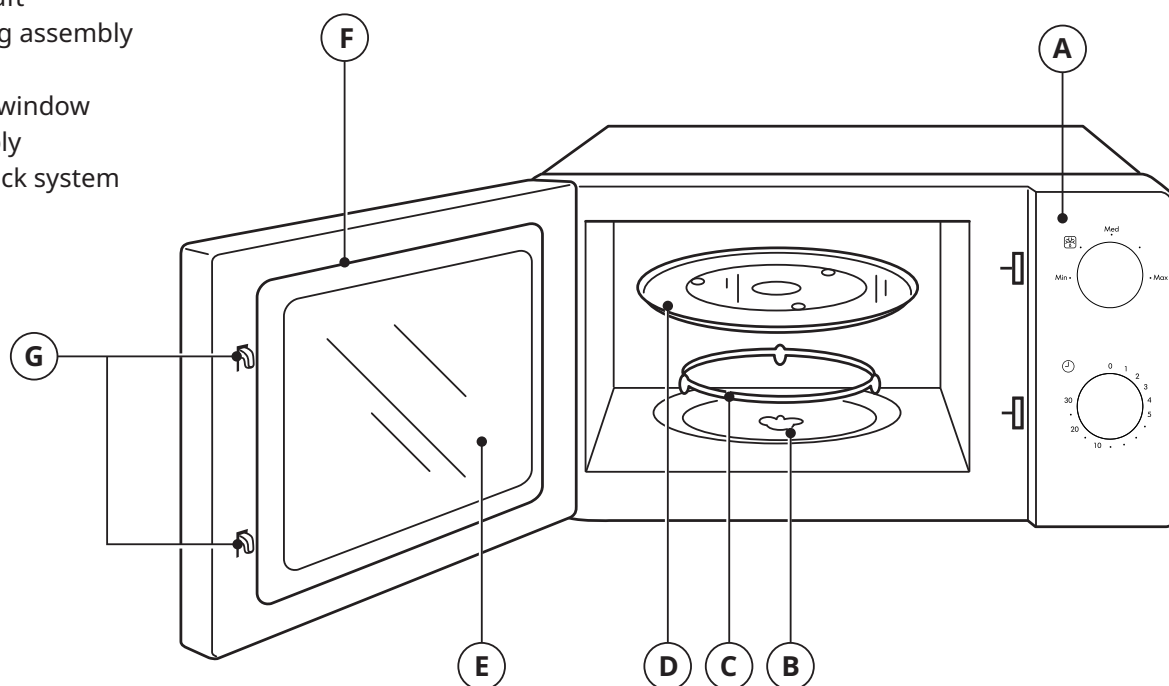


Turntable Installation

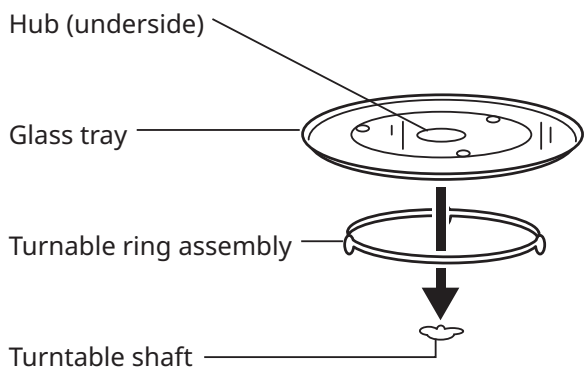

- a) Never place the glass tray upside down. The glass tray should never be restricted.
- b) Both glass tray and turntable ring assembly must always be used during cooking.
- c) All food and containers of food are always placed on the glass tray for cooking.
- d) If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

3. CONTROL PANEL

Control Panel and Features Operation Instructions

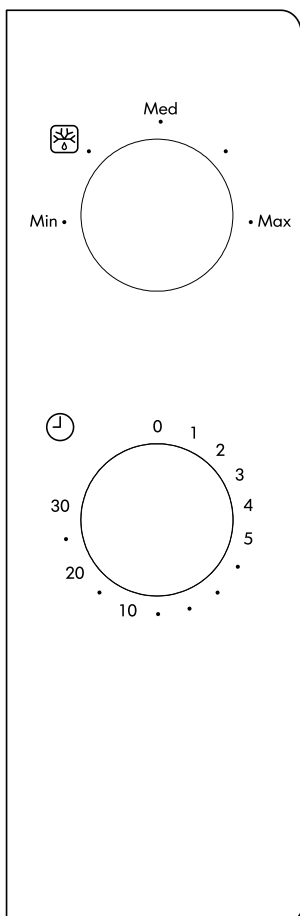

1. To set cooking power by turning the power knob to desired level.
2. To set the time of cooking by turning the timer knob to desired time per your food cooking guide.
3. The microwave oven will automatically start cooking after power level and time are set.
4. After the cooking time is up, the unit will "Dong" to stop.
5. If the unit is not in use, always set time to "0".

Function/Power	Watts	Application
Min	115 W	Soften ice cream
	230 W	Soup stew, soften butter or defrost
Med	390 W	Stew, fish
.	540 W	Rice, fish, chicken, ground meat
Max	700 W	Reheat, milk, boil water, vegetables, beverage

Notice:

When removing food from the oven, please ensure that the oven power is switched off by turning the timer switch to 0 (zero).

Failure to do so, and operating the microwave oven without food in it, can result in overheating and damage to the magnetron.

4. TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents.	In cooking, steam may come out of food. Most will get out from vents, but some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	<i>It is forbidden to run the unit without any food inside. It is very dangerous.</i>

Trouble	Possible cause	Remedy
Oven can not be started.	(1) Power cord not plugged tightly.	Unplug. Then unplug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset curcuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat	(4) Door not closed well.	Close door well.

5. SPECIFICATIONS

Model:	TILLREDA 704.934.09
Rated Voltage:	220V~ 50Hz
Rated Input Power(Microwave):	1050W
Rated Output Power(Microwave):	700 W
Oven Capacity:	20 L
Turntable Diameter:	255 mm
External Dimensions:	439.5x340.0x258.2mm
Net Weight:	Approx. 10.39 kg

6. INSTALLATION AND CONNECTION

Countertop Installation


Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Do not remove the white plastic cover that is attached to the oven cavity to protect the magnetron.

Installation

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

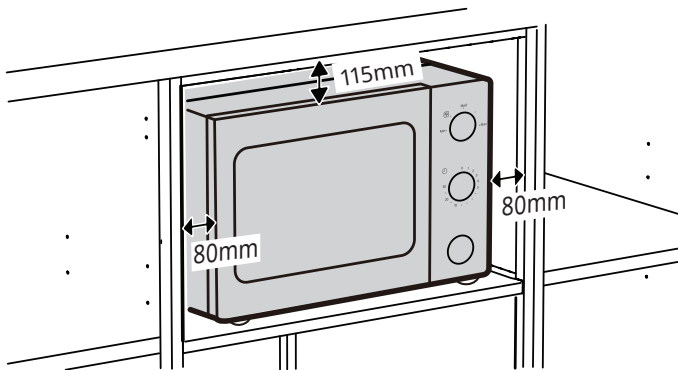

- (1) The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 11.5 cm above the oven, a minimum clearance of 8 cm is required between the oven and any adjacent walls.
- (2) Do not remove the legs from the bottom of the oven.

- (3) Blocking the intake and/or outlet openings can damage the oven.
 - (4) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.
2. Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

WARNING: Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.



The accessible surface may be hot during operation.

7. ENVIRONMENTAL CONCERNS



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

8. IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for two (2) years from the original date of purchase of your appliance at IKEA. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Who will execute the service?

Contact nearest IKEA store.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers,

screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.

- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

For appliances which are purchased in one EU country and taken to another EU country, the services will be provided in the framework of the guarantee conditions normal in the new country. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information.

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this guarantee.
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

ENGLISH

How to reach us if you need our service



The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit www.ikea.com to find your local store phone number and opening time.

In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THE SALES RECEIPT!

It is your proof of purchase and required for the guarantee to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

1. ข้อมูลความปลอดภัย	18
2. รายละเอียดผลิตภัณฑ์	23
3. แผงควบคุม	24
4. การแก้ไขปัญหา	25
5. ข้อมูลจำเพาะ	25
6. การติดตั้งและการเชื่อมต่อ	26
7. ความกังวลด้านสิ่งแวดล้อม	26
8. การรับประกันของ IKEA	27

ไทย

อ่านวิธีการใช้งานต่อไปนี้อย่างละเอียดก่อนใช้เตาไมโครเวฟของคุณ และให้เก็บรักษาอย่างดี

ถ้าคุณปฏิบัติตามวิธีการใช้งาน เตาของคุณจะมีอายุการใช้งานนานหลายปี

**ให้เก็บรักษาวิธีการใช้งาน
เหล่านี้ไว้ให้ดี**

1. ข้อมูลความปลอดภัย



คำเตือนเพื่อหลีกเลี่ยงการสัมผัสพลังงานจากไมโครเวฟที่อาจเกิดขึ้น

- a) ห้ามพยายามใช้เตาไมโครเวฟหากประตูเปิดเพราะได้รับพลังงานจากไมโครเวฟที่อันตรายได้ สิ่งสำคัญคือห้ามทำกลอนล๊อคเพื่อความปลอดภัยแตกหรือชำรุด
- b) ห้ามวางวัตถุระหว่างฝาหน้าเตาอบและประตูหรือให้ดินหรือสารตกค้างจากน้ำยาทำความสะอาดหลงเหลือบนพื้นผิวของยาแนว
- c) **คำเตือน** หากประตูหรือยาแนวประตูชำรุด ห้ามใช้เตาอบจนกว่าจะซ่อมเสร็จโดยผู้เชี่ยวชาญ

ใบแทรก

หากอุปกรณ์ไม่ได้รับการรักษาความสะอาด พื้นผิวจะเสื่อมคุณภาพและมีผลต่ออายุการใช้งานของอุปกรณ์และนำไปสู่เหตุการณ์อันตรายได้

คำเตือนสำคัญเรื่องการใช้งานและความปลอดภัย

เพื่อลดความเสี่ยงต่อการเกิดไฟไหม้ ไฟฟ้าลัดวงจร การบาดเจ็บหรือการสัมผัสพลังงานจากไมโครเวฟที่มากเกินไป เมื่อใช้เครื่องใช้ไฟฟ้า ให้ปฏิบัติตามคำเตือน


รวมถึงเรื่องต่อไปนี้

1. อ่านและปฏิบัติตามเรื่องเฉพาะ: **“คำเตือนเพื่อหลีกเลี่ยงการสัมผัสพลังงานจากไมโครเวฟที่อาจเกิดขึ้น”**
2. อุปกรณ์นี้สามารถใช้งานได้โดยเด็กที่มีอายุอย่างน้อย 8 ปีและโดยผู้ที่มีการรับรู้การสัมผัสทางกายและทางจิตที่จำกัดหรือขาดประสบการณ์หรือความรู้ ต่อเมื่อได้รับคำแนะนำที่ถูกต้องหรือได้รับทราบวิธีการใช้งานอุปกรณ์อย่างปลอดภัยและเมื่อรับรู้ความเสี่ยงที่เกี่ยวข้องแล้ว ห้ามเด็กใช้งานอุปกรณ์นี้ ห้ามเด็กที่ไม่มีผู้ใหญ่ดูแลเป็นผู้ทำความสะอาดและดูแลรักษา
3. เก็บเตาและสายไฟให้ห่างจากมือเด็กอายุต่ำกว่า 8 ขวบ
4. หากสายไฟชำรุด ต้องเปลี่ยนโดยผู้ผลิต เจ้าหน้าที่ให้บริการ หรือผู้มีความชำนาญเพื่อหลีกเลี่ยงอันตราย
5. **คำเตือน** การดำเนินการให้บริการหรือทำการซ่อมที่เกี่ยวข้องกับการถอดฝาที่ป้องกันการสัมผัสพลังงานจากไมโครเวฟถือเป็นเรื่องอันตรายสำหรับทุกคนที่ไม่ใช่ผู้ที่มีความเชี่ยวชาญ

6. การอุ่นเครื่องดื่มในไมโครเวฟสามารถทำให้น้ำเดือดพุ่งกระเด็นหันหรือในภายหลังได้
7. เมื่ออุ่นอาหารในบรรจุภัณฑ์ที่ทำจากพลาสติกหรือกระดาษ ให้เฝ้าระวังการติดไฟ
8. ใช้อุปกรณ์ในครัวที่เหมาะสมสำหรับการใช้ในเตาไมโครเวฟเท่านั้น
9. หากเกิดควัน ปิดสวิตช์หรือถอดปลั๊กเครื่องใช้ไฟฟ้า และปิดประตูเพื่อยับยั้งเปลวไฟ
10. การอุ่นเครื่องดื่มในไมโครเวฟสามารถทำให้น้ำเดือดพุ่งในภายหลังได้ ดังนั้นให้ระมัดระวังเมื่อถือภาชนะ
11. ต้องคนหรือเขย่าอาหารในชวดนมและกระป๋องอาหารของการกและตรวจสอบอุณหภูมิก่อนบริโภค เพื่อหลีกเลี่ยงการลวกปาก
12. ไม่ใส่ในเปลือกและไม่ต้มทั้งฟองไม่ควรนำมาอุ่นในเตาไมโครเวฟเพราะอาจจะระเบิด แม้หลังอุ่นเสร็จ
13. ควรทำความสะอาดเตาอบเป็นประจำและเช็ดคราบอาหารออก
14. หากไม่รักษาความสะอาดเตาอบสามารถทำให้พื้นผิวเสื่อม ซึ่งสามารถส่งผลเสียอย่างมากต่ออายุการใช้งานของเตาอบและอาจจะทำให้เกิดสถานการณ์อันตรายได้
15. ไม่ติดตั้งเครื่องใช้ไฟฟ้าด้านหลังประตูเพื่อหลีกเลี่ยงความร้อนที่มากเกินไป
16. เตาอบไมโครเวฟต้องถูกใช้งานโดยเปิดประตูของตู้เอาไว้
17. ตู้เย็นนี้ออกแบบมาเพื่อใช้ในครัวเรือนและการใช้งานคล้ายกัน เช่น:
 - พื้นที่ครัวสำหรับพนักงานในร้านออฟฟิศ และสภาพแวดล้อมการทำงานอื่น ๆ
 - โดยลูกค้าในโรงแรม และสภาพแวดล้อมประเภทที่พักอาศัยประเภทอื่น ๆ
 - บ้านในแปลงเกษตร
 - สภาพแวดล้อมประเภทที่พักพร้อมอาหารเช้า
18. เตาไมโครเวฟเหมาะสำหรับการอุ่นอาหารและเครื่องดื่ม การตากอาหารหรือเสื้อผ้า และการอุ่นแผ่นฟองน้ำ ร้องเท้าแตะ ฟองน้ำ ผ้าเปียก และสิ่งที่คล้ายกันอาจนำไปสู่ความเสี่ยงต่อการบาดเจ็บ การติดไฟ หรือไฟไหม้ได้
19. ไม่อนุญาตให้ใช้บรรจุภัณฑ์สำหรับอาหารและเครื่องดื่มที่ทำจากโลหะในการประกอบอาหารที่ต้องใช้ไมโครเวฟ
20. ไม่ทำความสะอาดเครื่องใช้ไฟฟ้าด้วยเครื่องทำความสะอาดด้วยไอน้ำ
21. เครื่องใช้ไฟฟ้าเหมาะสำหรับการวางไว้อย่างอิสระหรือวางไว้ในตู้
22. พึงพื้นผิวด้านหลังของเครื่องใช้ไฟฟ้ากับกำแพง
23. เครื่องใช้ไฟฟ้านี้มีไว้สำหรับใช้ในครัวเรือนและภายในอาคารเท่านั้น อย่าใช้ภายนอกอาคาร!
24. เพื่อป้องกันไฟฟ้าช็อต ห้ามจุ่มชิ้นส่วนหลักของผลิตภัณฑ์ สายไฟ หรือปลั๊กลงในน้ำหรือในของเหลวอื่น ๆ

25. **คำเตือน ของเหลวและอาหารอื่น ๆ**
จะต้องไม่ถูกทำให้ร้อนในภาชนะบรรจุ
ที่ปิดสนิทเนื่องจากอาจมีแก๊สที่
จะระเบิดได้

**อ่านอย่างละเอียดและเก็บไว้เพื่อ
การอ้างอิงในอนาคต**

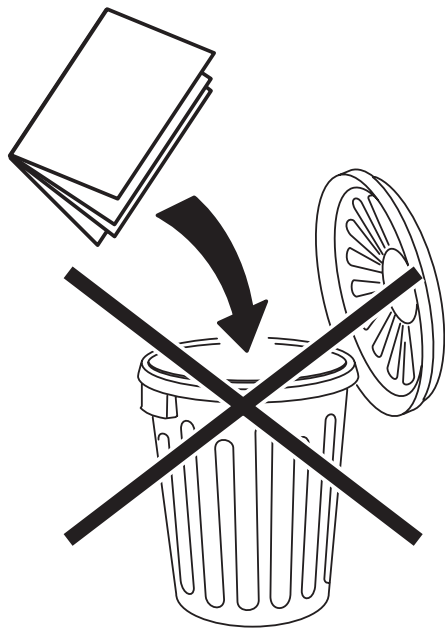

เพื่อลดความเสี่ยงในการได้รับบาดเจ็บของผู้ติดตั้งระบบสายดิน

อันตราย

อันตรายจากไฟฟ้าลัดวงจร

การสัมผัสอุปกรณ์ภายในบางส่วนสามารถทำให้เกิดการบาดเจ็บหรือเสียชีวิตได้ ห้ามถอดส่วนประกอบของเครื่องใช้ไฟฟ้านี้

คำเตือน

อันตรายจากไฟฟ้าลัดวงจร

การติดตั้งระบบสายดินที่ไม่ถูกต้องสามารถทำให้ไฟฟ้าลัดวงจรได้ ห้ามเสียบปลั๊กเข้าหม้อแปลงจนกว่าเครื่องใช้ไฟฟ้าได้รับการติดตั้งและลงระบบสายดินเรียบร้อยแล้ว

เครื่องใช้ไฟฟ้านี้ต้องได้รับการติดตั้งระบบสายดิน ในกรณีไฟตก ระบบสายดินลดความเสี่ยงต่อการเกิดไฟฟ้าลัดวงจรด้วยสายไฟที่ถ่ายเทกระแสไฟฟ้าลงสู่ดิน เครื่องใช้ไฟฟ้านี้มีสายดินพร้อมกับปลั๊กลงดิน ต้องเสียบปลั๊กในหม้อแปลงที่ได้รับการติดตั้งและลงระบบสายดินเรียบร้อยแล้ว

ปรึกษาช่างไฟฟ้าผู้เชี่ยวชาญหรือผู้ให้บริการ หากไม่เข้าใจวิธีการติดตั้งระบบสายดิน หรือหากสงสัยว่าเครื่องใช้ไฟฟ้าได้รับหรือยังไม่ได้รับการติดตั้งระบบสายดินที่เรียบร้อยแล้ว ถ้ามีความจำเป็นที่ต้องใช้สายต่อ ให้ใช้เพียงสายต่อที่มี 3 หัวเท่านั้น

1. สายไฟขนาดสี่จะมาพร้อมผลิตภัณฑ์เพื่อลดความเสี่ยงจากสายพันและการสะดุดล้มสายไฟขนาดยาว
2. หากใช้ชุดสายไฟขนาดยาวหรือสายต่อ
 - a) กำลังไฟของชุดสายไฟหรือสายต่อควรมีกำลังมากเท่ากับกำลังไฟของเครื่องใช้ไฟฟ้า
 - b) สายต่อต้องเป็นสายที่มีปลั๊ก 3 หัวที่มีระบบสายดิน
 - c) สายไฟขนาดยาวควรเก็บให้เรียบร้อยเพื่อที่จะไม่นำไปกองทิ้งบนตู้หรือบนโต๊ะที่เด็กสามารถถึงหรือสะดุดล้มโดยอุบัติเหตุได้

การทำความสะอาด

ตรวจสอบให้มั่นใจว่าถอดปลั๊กเครื่องใช้ไฟฟ้าจากหม้อแปลงแล้ว

1. ทำความสะอาดภายในเตาอบหลังจากใช้ผ้าเปียกชื้นแล้ว
2. ทำความสะอาดอุปกรณ์เสริมด้วยน้ำสบู่
3. กรอบประตูและยาแนวและส่วนประกอบข้างเคียงต้องได้รับการทำความสะอาดอย่างระมัดระวังด้วยผ้าเปียกเมื่อสกปรก

4. ห้ามใช้อุปกรณ์ทำความสะอาดที่ทำลายพื้นผิวหรือที่ขูดที่ทำจากโลหะมีความคมในการทำทำความสะอาดประตูแก้วของเตาอบเพราะสามารถทำให้เกิดรอยที่พื้นผิว ซึ่งอาจทำให้กระจกแตกได้

5. คำแนะนำในการทำทำความสะอาด ★ สำหรับการทำความสะอาดพื้นที่ภายในเตาอบที่อาหารสามารถทิ้งคราบได้ในรูปแบบที่ง่ายกว่า วางมะนาวครึ่งเลี้ยวในชาม ใส่น้ำปริมาณ 300 มิลลิลิตร (1/2 โพน) และอุ่นด้วยไฟไมโครเวฟแรงระดับ 100% เป็นเวลา 10 นาที เช็ดเตาไมโครเวฟด้วยผ้านุ่มที่แห้ง

อุปกรณ์ในครัว

คำเตือน

อันตรายจากการได้รับบาดเจ็บ

การดำเนินการให้บริการหรือทำการซ่อมที่เกี่ยวข้องกับการถอดฝาที่ป้องกันความร้อนจากไมโครเวฟถือเป็นเรื่องอันตรายสำหรับทุกคนที่ไม่ใช่ผู้ที่มีความเชี่ยวชาญ

ดูวิธีการใช้งานในหน้า “วัสดุที่คุณสามารถใช้หรือห้ามใช้ในเตาไมโครเวฟ”

มีอุปกรณ์ในครัวที่ไม่ได้ทำจากโลหะบางประเภทที่ไม่ปลอดภัยในการใช้ในไมโครเวฟ หากสงสัย คุณสามารถตรวจสอบอุปกรณ์ภายในครัวที่สงสัยประกอบกับขั้นตอนด้านล่างนี้

การทดสอบอุปกรณ์ในครัว

1. เติมน้ำเย็น 1 ถ้วยปริมาณ (250 มิลลิลิตร) ในภาชนะบรรจุที่ใช้ทำงานในไมโครเวฟได้พร้อมกับอุปกรณ์ในครัวที่สงสัย
2. ใช้ไฟไมโครเวฟแรงสูงสุดเป็นเวลา 1 นาที
3. สัมผัสอุปกรณ์ในครัวอย่างระมัดระวัง หากอุปกรณ์ในครัวที่ไม่มีอะไรร้อนภายในอุ่น ห้ามใช้ในการทำอาหารด้วยไมโครเวฟ
4. ห้ามใช้นานเกิน 1 นาที

วัสดุที่คุณสามารถใช้ในเตาไมโครเวฟได้

อุปกรณ์ในครัว	หมายเหตุ
จานที่เปลี่ยนสีเป็นสีน้ำตาล	ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ก้นของจานที่เปลี่ยนเป็นสีน้ำตาลต้องมีขนาดอย่างน้อย 3/16 นิ้ว (5 มิลลิเมตร) เหนือโต๊ะหมูน การใช้งานที่ไม่ถูกต้องอาจทำให้โต๊ะหมูนแตกได้
ภาชนะสำหรับรับประทานอาหาร	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ห้ามใช้จานที่มีรอยร้าวหรือบิ่น
กระปุกแก้ว	ให้ถอดฝาออกเสมอ ใช้อุ่นอาหารให้อุ่นเท่านั้น กระปุกแก้วส่วนมากไม่ทนความร้อนและอาจแตกได้
ภาชนะที่ทำจากแก้ว	ส่วนประกอบที่ทำจากแก้วของเตาอบที่ทนความร้อนเท่านั้น ตรวจสอบว่าไม่มีขอบโลหะ ห้ามใช้จานที่มีรอยร้าวหรือบิ่น
ถุงใส่อาหารที่ใช้ในเตาอบได้	ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ห้ามปิดด้วยที่ผูกที่ทำจากโลหะ ดึงช่องเพื่อให้ไอความร้อนระบายออก
จานและแก้วกระดาศ	ใช้งานสำหรับการอุ่นหรือการทำอาหารระยะสั้นเท่านั้น อย่าปล่อยเตาอบทิ้งไว้ในขณะที่เตาอบกำลังทำงาน
กระดาศเช็ดมือ	ใช้คลุมอาหารเพื่ออบให้ร้อนหรือซึมน้ำมัน ใช้ด้วยความระมัดระวังสำหรับการทำอาหารระยะสั้นเท่านั้น
แผ่นรองอบ	ใช้เป็นที่คลุมเพื่อป้องกันการกระเซ็นหรือหุ้มน้ำมัน
พลาสติก	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ปฏิบัติตามวิธีการใช้งานของผู้ผลิต ควรติดฉลากว่า "ใช้งานในไมโครเวฟได้" ภาชนะพลาสติกบางประเภทจะเสียรูปเมื่ออาหารที่บรรจุภายในร้อน ควรกรีด เเจาะ หรือระบายอากาศ "ถุงร้อน" และถุงพลาสติกที่ผูกปิดแน่น ตามที่บรรจุภัณฑ์ได้แนะนำไว้
ที่หุ้มที่ทำจากพลาสติก	เฉพาะที่ใช้งานในไมโครเวฟได้เท่านั้น ใช้คลุมอาหารระหว่างการทำอาหารเพื่อเก็บความชื้น ไม่ให้ที่หุ้มที่ทำจากพลาสติกสัมผัสอาหาร
เครื่องวัดอุณหภูมิ	ใช้งานในไมโครเวฟได้เท่านั้น (เครื่องวัดอุณหภูมิเนื้อสัตว์และลูกอม)
กระดาศซีฟิ่ง	ใช้เป็นที่คลุมเพื่อกักน้ำกระเซ็นและเก็บความชื้น

วัสดุที่ห้ามใช้ในเตาไมโครเวฟ

อุปกรณ์ในครัว	หมายเหตุ
ถาดอะลูมิเนียม	อาจโค้งงอได้ เทอาหารลงจานที่ใช้ในไมโครเวฟได้
กล่องใส่อาหารที่มีด้านถือทำจากโลหะ	อาจโค้งงอได้ เทอาหารลงจานที่ใช้ในไมโครเวฟได้
โลหะหรืออุปกรณ์ในครัวที่มีขอบเป็นโลหะ	โลหะป้องกันอาหารจากพลังงานจากไมโครเวฟ ขอบโลหะอาจโค้งงอได้
เกลียวโลหะ	อาจบิดโค้งได้และสามารถติดไฟในเตาอบได้
ถุงกระดาศ	อาจทำให้เกิดไฟในเตาอบได้
โฟมที่ทำจากพลาสติก	โฟมที่ทำจากพลาสติกอาจละลายหรือเฉือนลงของเหลวภายในเมื่อได้รับอุณหภูมิสูง
ไม้	ไม้จะแห้งเมื่อนำไปใช้ในเตาไมโครเวฟและอาจเกิดรอยแยกหรือแตกได้

2. รายละเอียดผลิตภัณฑ์


การติดตั้งเตาอบของคุณ

ชื่อของชิ้นส่วนและส่วนประกอบของเตาอบ


ถอดเตาอบและวัสดุทั้งหมดออกจากกล่องและช่องเตาอบ เตาอบของคุณมาพร้อมส่วนประกอบดังต่อไปนี้:

ถาดแก้ว	1 รายการ
ชิ้นส่วนประกอบวงแหวนหมุนได้	1 รายการ
คู่มือการใช้งาน	1 รายการ

- A. แผงควบคุม
- B. เพลาหมุน
- C. ชิ้นส่วนประกอบวงแหวนหมุนได้
- D. ถาดแก้ว
- E. หน้าต่างสังเกต
- F. ส่วนประกอบฝาปิด
- G. ระบบเชื่อมต่อความปลอดภัย

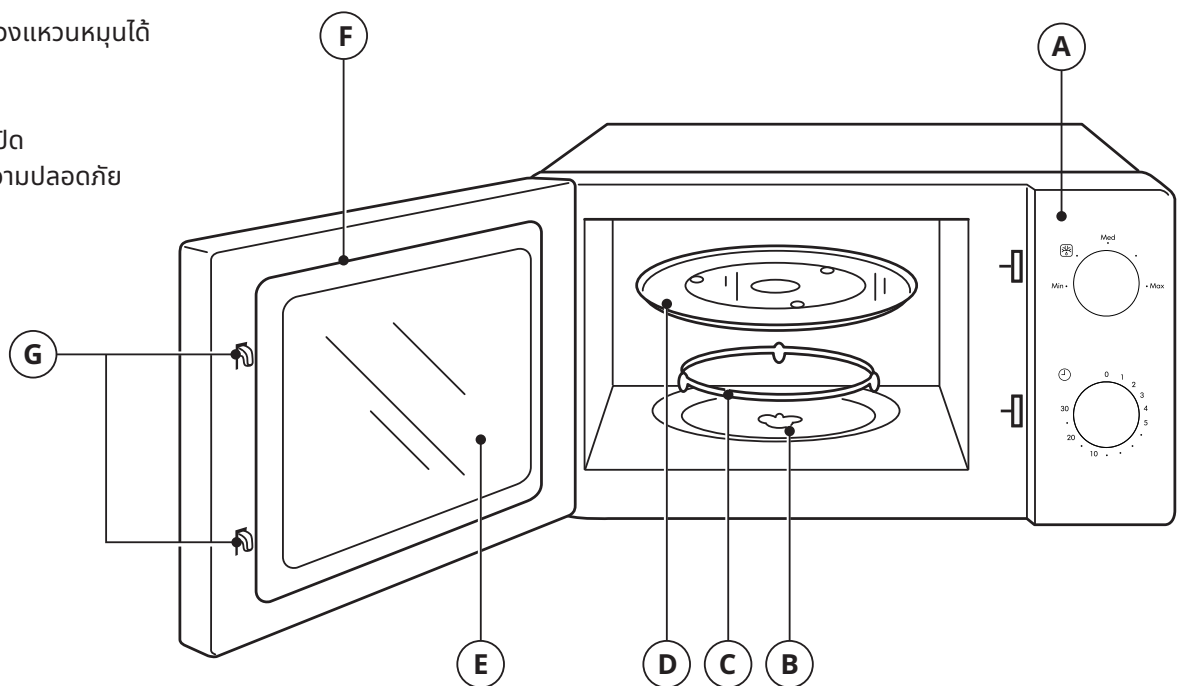


การติดตั้งจานหมุน

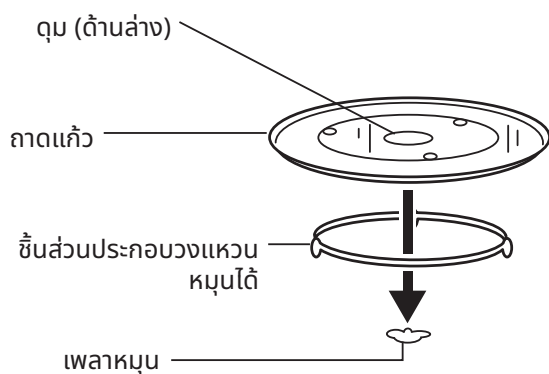

- a) ห้ามวางถาดแก้วคว่ำลง ควรวางถาดแก้วให้เข้าที่
- b) จะต้องใช้ทั้งถาดแก้วและชิ้นส่วนประกอบวงแหวนหมุนได้ระหว่างการทำอาหาร
- c) อาหารและบรรจุภัณฑ์ทุกชนิดต้องวางบนถาดแก้วเพื่อการทำอาหาร
- d) ถ้าถาดแก้วหรือชิ้นส่วนประกอบวงแหวนหมุนได้บิ่นหรือแตก ให้ติดต่อศูนย์บริการที่ได้รับอนุญาตที่ใกล้ที่สุด

3. แผงควบคุม

แผงควบคุมและคำแนะนำการใช้งานฟังก์ชันต่าง ๆ

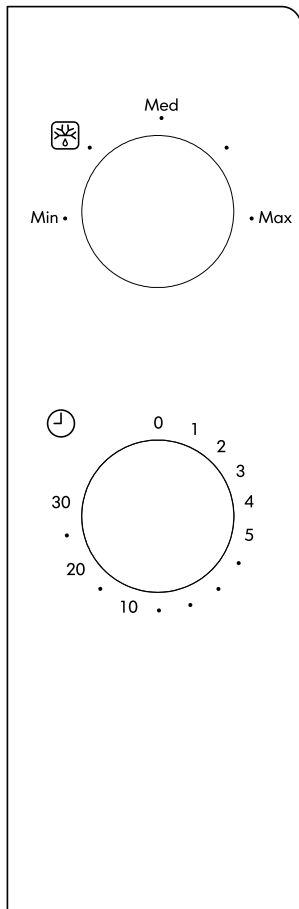

1. การตั้งค่าพลังงานในการทำอาหาร โดยหมุนปุ่มพลังงานไปยังระดับที่ต้องการ
2. การตั้งเวลาการทำอาหาร โดยหมุนปุ่มเวลาไปยังระยะเวลาที่ต้องการตามคู่มือทำอาหารของคุณ
3. เตาอบไมโครเวฟจะเริ่มต้นการทำอาหารโดยอัตโนมัติหลังจากตั้งค่าระดับพลังงานและเวลาแล้ว
4. หลังหมดระยะเวลาการทำอาหารที่ตั้งไว้ เตาอบจะมีเสียง "ติ๊ง" เพื่อหยุด
5. ถ้าเตาอบไม่ได้กำลังอยู่ในระหว่างใช้งาน ให้ตั้งค่าเวลาให้เป็น "0" เสมอ

ฟังก์ชัน/พลังงาน	วัตต์	แอปพลิเคชัน
Min	115 วัตต์	ทำให้ไอศกรีมอ่อนนุ่ม
	230 วัตต์	ซูป สตูว์ ทำให้เนยนุ่มหรือทำให้น้ำแข็งละลาย
Med	390 วัตต์	สตูว์ ปลา
.	540 วัตต์	ข้าว ปลา ไก่ เนื้อบด
Max	700 วัตต์	อุ่นร้อน นม น้ำเดือด ผัก เครื่องดื่ม

คำเตือน:

ในขณะที่นำอาหารออกมาจากเตาอบ โปรดให้แน่ใจว่าพลังงานของเตาอบปิดอยู่โดยการหมุนสวิตช์ตั้งเวลาไปที่ 0 (ศูนย์) หากไม่ปฏิบัติตาม และใช้งานไมโครเวฟโดยไม่มีอาหารใส่ข้างใน อาจทำให้เกิดความร้อนเกินและสร้างความเสียหายแก่แมกนีตรอน

4. การแก้ไขปัญหา

ปกติ	
เตาอบไมโครเวฟจะรบกวนการรับสัญญาณทีวี	การรับสัญญาณวิทยุและทีวีอาจถูกรบกวนเมื่อเตาอบไมโครเวฟทำงาน ซึ่งคล้ายกับการรบกวนของเครื่องใช้ไฟฟ้าขนาดเล็ก อย่างเช่น เครื่องผสม เครื่องดูดฝุ่น พัดลมไฟฟ้า ถือเป็นเรื่องปกติ
หรีแสงไฟเตาอบลง	ในการทำอาหารด้วยไมโครเวฟแบบพลังงานต่ำ ไฟของเตาอบอาจจะหรีแสง ถือเป็นเรื่องปกติ
ไอน้ำสะสมตรงฝาปิด ลมร้อนออกมาจากช่องระบายอากาศ	ในการทำอาหาร ไอน้ำอาจออกมาจากอาหาร ส่วนใหญ่จะออกมาจากช่องระบายอากาศ แต่บางส่วนอาจจะสะสมอยู่ที่เย็น อย่างประตู่เตาอบ ถือเป็นเรื่องปกติ
เตาอบเริ่มต้นทำงานโดยไม่ตั้งใจโดยไม่มือาหารภายใน	การใช้งานเตาอบโดยที่ไม่มีอาหารภายในถือเป็นข้อห้าม ซึ่งอันตรายมาก

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เตาอบไม่สามารถเริ่มทำงานได้	(1) เสียบปลั๊กไฟไม่แน่น	ถอดปลั๊ก จากนั้นถอดปลั๊กอีกครั้งหลังจาก 10 วินาที
	(2) ฟิวส์ขาดหรือเครื่องตัดวงจรทำงาน	สับเปลี่ยนฟิวส์และรีเซ็ตเครื่องตัดวงจร (ซ่อมโดยบุคลากรมืออาชีพจากบริษัทของเรา)
	(3) ปัญหาเกี่ยวกับเต้ารับเสียบปลั๊กไฟ	ทดสอบเต้ารับเสียบปลั๊กไฟกับอุปกรณ์ไฟฟ้าอื่น ๆ
เตาอบไม่ร้อน	(4) ปิดฝาไม่สนิท	ปิดฝาให้สนิท

5. ข้อมูลจำเพาะ

รุ่น:	TILLREDA 704.934.09
แรงดันไฟฟ้าตามอัตรา:	220V~ 50Hz
อัตราพลังงานขาเข้า (ไมโครเวฟ):	1050 วัตต์
อัตราพลังงานขาออก (ไมโครเวฟ):	700 วัตต์
ความจุเตาอบไมโครเวฟ:	20 L
เส้นผ่านศูนย์กลางจานหมุน:	255 มม.
เส้นผ่านศูนย์กลางภายนอก:	439.5 x 340.0 x 258.2 มม.
น้ำหนักสุทธิ:	10.39 กก. โดยประมาณ

6. การติดตั้งและการเชื่อมต่อ


การติดตั้งด้านบนบนเคาน์เตอร์

ถอดวัสดุบรรจุภัณฑ์และอุปกรณ์เสริมออก ตรวจสอบความเสียหายบนเตาอบ อย่างเช่น รอยตอกหรือฝาแตก อย่าติดตั้งถ้าเตาอบเสียหาย

ดู: นำฟิล์มป้องกันที่อยู่บนพื้นภายนอกตู้ของเตาอบไมโครเวฟออก อย่าถอดฝาพลาสติกสีขาว ที่ติดอยู่กับช่องอบ เพื่อปกป้องแม่เหล็กไฟฟ้า.

การติดตั้ง

1. เลือกพื้นผิวระดับที่มีพื้นที่เปิดที่มากพอสำหรับช่องระบายไอดี และ/หรือช่องระบายอากาศ

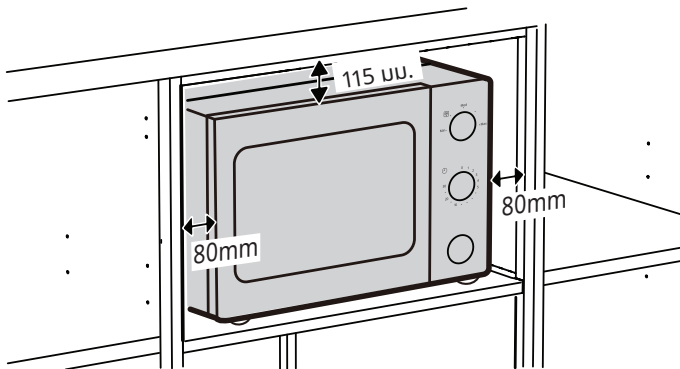

- (1) พื้นผิวด้านหลังของเครื่องใช้ไฟฟ้าควรวางเข้ากับผนัง ต้องมีระยะห่างขั้นต่ำ 11.5 ซม. เหนือเตาอบ ระยะห่างระหว่างเตาอบและผนังต่ำสุดที่ 8 ซม.
- (2) อย่าถอดขาออกจากด้านล่างของเตาอบ
- (3) การปิดกั้นช่องอากาศเข้าและ/หรือออกสามารถทำความเสียหายแก่เตาอบได้
- (4) วางเตาอบให้ห่างจากวิทยุและทีวี

ให้มากที่สุด การทำงานของเตาอบไมโครเวฟอาจก่อให้เกิดการรบกวนการรับสัญญาณวิทยุหรือทีวี

2. เสียบปลั๊กเตาอบของคุณกับเต้าเสียบปลั๊กไฟมาตรฐาน ทำให้แน่ใจว่าโวลต์และความถี่เหมือนกันกับบนฉลาก

คำเตือน อย่าติดตั้งเตาอบเหนือช่องของเตาทำอาหารหรือเครื่องใช้ไฟฟ้าที่ก่อให้เกิดความร้อนอื่น ๆ ถ้าติดตั้งใกล้หรือบนแหล่งกำเนิดความร้อน เตาอบอาจได้รับความเสียหายและการรับประกันจะเป็นโมฆะ



พื้นผิวที่เข้าถึงได้อาจร้อนระหว่างการทำงาน

7. ความกังวลด้านสิ่งแวดล้อม



ตามคำสังขยะไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์ (WEEE) WEEE ควรถูกเก็บและจัดการแยกต่างหาก ถ้าเมื่อใดก็ตามในอนาคต คุณต้องการทิ้งผลิตภัณฑ์นี้ กรุณาอย่าทิ้งผลิตภัณฑ์นี้กับขยะในครัวเรือน กรุณาส่งผลิตภัณฑ์นี้ไปยังจุดรับ WEEE ที่สามารถหาได้

8. การรับประกันของ IKEA

ระยะเวลาประกันของ IKEA เป็นเวลาเท่าใด

การรับประกันนี้มีระยะเวลา 2 ปีนับจากวันที่แรกซื้อเครื่องใช้ไฟฟ้าของคุณที่เกี่ยวข้อง ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากมีการเข้ารับบริการภายใต้การรับประกัน จะไม่ขยายระยะเวลาประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด

การรับประกันนี้ครอบคลุมสิ่งใดบ้าง

การรับประกันครอบคลุมความบกพร่องของเครื่องใช้ไฟฟ้า ซึ่งเกิดขึ้นจากการผลิตหรือวัสดุที่มีข้อผิดพลาดนับจากวันที่ซื้อจาก IKEA การรับประกันนี้มีผลต่อการใช้ในประเทศเท่านั้น ข้อยกเว้นระบุไว้ภายใต้หัวข้อ “การรับประกันนี้ครอบคลุมสิ่งใดบ้าง” ภายในระยะเวลาประกัน จะครอบคลุมค่าใช้จ่ายเพื่อแก้ไขข้อบกพร่อง เช่น การซ่อมแซม อะไหล่ ค่าแรง และค่าเดินทาง ในกรณีที่เข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่ต้องมีค่าใช้จ่ายพิเศษ อะไหล่เก่าที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญห

IKEA จะตรวจสอบผลิตภัณฑ์แล้วตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) หากครอบคลุมอยู่ภายใต้การรับประกันนี้ หากพิจารณาว่าครอบคลุม IKEA จะตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) ที่จะซ่อมแซมผลิตภัณฑ์ที่บกพร่องหรือเปลี่ยนผลิตภัณฑ์เดียวกันหรือเทียบเท่าให้

มีสิ่งใดที่ไม่ครอบคลุมภายใต้การรับประกันนี้

- การสึกหรอและรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากความตั้งใจหรือประมาท, ความเสียหายที่เกิดจากการไม่ดูแลรักษาการใช้งาน, การติดตั้งไม่ถูกต้อง หรือโดยเชื่อมต่อกับแรงดันไฟฟ้าผิด, ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า, สนิม, เสียหายจากการกัดกร่อน หรือน้ำ รวมถึงแต่ไม่จำกัดเพียง ความเสียหายที่เกิดจากใช้ปูนขาวในน้ำมากเกินไป และความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ
- ชิ้นส่วนที่ไม่เกี่ยวกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดข่วนและสีที่อาจแตกต่างกันไปจากเดิม
- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอม และการทำความสะอาดหรือเปิดไส้กรอง ระบบระบายน้ำหรือลิ้นชักน้ำสบู
- ความเสียหายที่เกิดกับชิ้นส่วนต่อไปนี้: เซรามิกแก้ว, อุปกรณ์เสริม, ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร, ถาดน้ำดีและระบายน้ำ, ซิล, หลอดไฟและที่ห่อหุ้มหลอดไฟ, หน้าจอ, ปุ่ม, ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดจากความผิดพลาดของการผลิต
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับการแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม
- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ

- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดกับผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง
- ค่าใช้จ่ายสำหรับการดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA อย่างไรก็ตาม หากผู้ให้บริการที่ได้รับแต่งตั้งของ IKEA หรือคู่สัญญาบริการที่ได้รับอนุญาตซ่อมแซมหรือเปลี่ยนเครื่องใช้ไฟฟ้าภายใต้ข้อกำหนดของการรับประกัน ผู้ให้บริการที่ได้รับแต่งตั้งหรือคู่สัญญาบริการที่ได้รับอนุญาตจะติดตั้งเครื่องใช้ไฟฟ้าที่ซ่อมแซมแล้วหรือติดตั้งเครื่องทดแทนให้ใหม่ หากจำเป็น

กฎหมายของประเทศมีผลอย่างไร

IKEA รับประกันว่าจะให้สิทธิทางกฎหมายเฉพาะแก่คุณ ซึ่งครอบคลุมหรือเกินกว่าที่กฎหมายท้องถิ่นกำหนดไว้ อย่างไรก็ตามเงื่อนไขเหล่านี้ไม่จำกัดสิทธิผู้บริโภคในทุกทาง ที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

สำหรับเครื่องใช้ไฟฟ้าซึ่งซื้อในประเทศใดประเทศหนึ่งใน EU แล้วนำไปใช้ในประเทศอื่นใน EU จะมีการให้บริการในกรอบงานของเงื่อนไขการรับประกันตามปกติในประเทศใหม่ ข้อผูกพันต่อการให้บริการในกรอบงานของการรับประกันยังคงอยู่ ต่อเมื่อเครื่องใช้ไฟฟ้าสอดคล้องและติดตั้งโดยเป็นไปตาม:

- ข้อมูลจำเพาะทางเทคนิคของประเทศซึ่งมีการเรียกร้องการรับประกัน
- คำแนะนำการประกอบและข้อมูลความปลอดภัยของผู้ใช้

บริการหลังการขายสำหรับเครื่องใช้ไฟฟ้า IKEA

โปรดอย่าลังเลที่จะติดต่อ IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
- ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA

เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์ โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูแค็ตตาล็อก IKEA หรือเยี่ยมชม www.ikea.com เพื่อค้นหาหมายเลขโทรศัพท์ร้านใกล้บ้านและเวลาทำการ

เพื่อให้บริการแก่คุณได้รวดเร็วขึ้น โปรดเตรียมหมายเลขประจำสินค้า IKEA (รหัส 8 หลัก) ซึ่งติดอยู่ที่ป้ายแสดงข้อมูลทางเทคนิคบนเครื่องใช้ไฟฟ้าของคุณไว้เสมอ

เก็บใบเสร็จรับเงินการขาย!

เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้ประกัน ใบเสร็จรับเงินการขายยังแจ้งชื่อ IKEA และหมายเลขประจำสินค้า (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละเครื่องที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ร้าน IKEA ใกล้บ้าน เราขอแนะนำให้ท่านอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

