

TILLREDA



Design and Quality
IKEA of Sweden

ENGLISH
ไทย

4
18

Content

Safety information	4	Care and cleaning	13
Safety instruction	5	Troubleshooting	13
Product description	7	Technical data	14
Power Selection (Mechanical Switch)	8	Environmental concerns	15
Indicators	10	IKEA Warranty	16
Daily use	10		
Cookware guidance	11		

Safety information

- ❶ For your safety and correct operation of the appliance, read this manual carefully before installation and use. Always keep these instructions with the appliance even if you move or sell it. Users must fully know the operation and safety features of the appliance.

Correct use

- Do not leave the appliance unattended during operation.
- The appliance is designed exclusively for domestic use.
- The appliance is designed exclusively for indoor use.
- The appliance must not be used as a work surface or as a storage surface.
- Do not place or store flammable liquids, highly inflammable materials or fusible objects (e.g. plastic film, plastic, aluminium) in or near the appliance.
- Watch out when connecting electric appliances to sockets nearby. Do not allow connecting leads to come into contact with or to catch underneath the appliance or hot cookware.
- Do not do repairs yourself to prevent injury and damage to the appliance. Always contact your nearest IKEA store.

Child and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Keep all packaging away from children. There is a risk of suffocation.
- Keep children away from the appliance while in operation as when not in use.
- Children less than 8 years of age shall be kept away unless continuously supervised.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

⚠ WARNING! Activate child lock to avoid small children and pets unintentionally switching the appliance on.

General safety

- Keep ventilations openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not touch the panel when the residual heat indicator is still lit in order to prevent injury.
- Do not insert any object into the induction hob during operation to prevent electric shock.
- Do not wrap the cord around the neck to prevent strangulation hazard.
- A steam cleaner is not to be used for cleaning the appliance.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Care should be taken to avoid touching heating elements.

- If the supply cord is damaged, it must be replaced by the manufacturer, the Authorised Service Centre or similarly qualified persons in order to avoid a hazard. Please contact nearest IKEA store.

⚠ **WARNING!** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. Please contact nearest IKEA store.

⚠ **WARNING!** The appliance and its accessible parts become hot during use.

⚠ **WARNING!** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire. NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

⚠ **CAUTION:** hot surface, The surfaces are liable to get hot during use.

⚠ **CAUTION:** The cooking process has to be supervised.

A short term cooking process has to be supervised continuously.

⚠ **WARNING!** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

Safety instruction

Installation

- Manufacturer is not responsible for any injury to persons and pets or damage to property caused by failure to comply following requirements.

⚠ **CAUTION!** To proceed with the installation refer to the Safety Information.

⚠ **WARNING!** Installation process must follow the laws, ordinances, directives and standards (electrical safety rules and regulations, proper recycling in accordance with the regulations, etc.) in force in the country of use!

- Avoid installing the appliance next to doors and under windows as hot cookware may be knocked off the hob when doors and windows are opened.
- Make sure that the appliance is not damaged because of transport. Do not connect a damaged appliance.
- Do not install the appliance if it is damaged during the transportation.
- Do not connect the hob with extension cords and do not place the hob with cord across working areas.

- Do not change the specifications or modify this product. Risk of injury and damage to the appliance.

⚠ **WARNING!** Carefully obey the instructions for electrical connections.

Electrical connections

- Before connecting, check that the nominal voltage of the appliance stated on the rating plate, corresponds to the available supply voltage. Also, check the power rating of the appliance and ensure that the home's electrical installation is suitably sized to suit the appliance power rating (refer to the Technical data chapter).
- The rating plate is located on the lower casing of the hob.

⚠ **WARNING!** Risk of injury from electrical current.

- Loose and inappropriate plug and socket connections can make the terminal overheat.

Before Use:

Please pay attention to the following instructions before use.

- Please use the standard main power supply socket, and regularly check the socket to prevent any damage.
- Do not open the appliance by yourself or any unqualified person. Only repair the appliance by its service agent or similarly qualified technician.
- Please check with the power cord and plug.
If the power cord or plug is damaged, please do not use the appliance. Do not pull out the plug with wet hand.
- Do not use the extension power cord, and please use the main power supply socket only.
- If the appliance is not in use for a long period of time, please turn on the appliance to stabilize the electronic component for 10 minutes first. Then, you can start to operate the appliance.
- Do not use the appliance near water, fire or damp area. The appliance is intended to use in indoor household ONLY.
- Remove all packaging, stickers and film remove the appliance before the first use.
- Switch the cooking zones off after each use by its controls and do not rely on pan detector.
- Risk of burns! Do not place objects made of metal, such as knives, forks, spoons and saucepan lids on the cooking surface, as they can get hot.

⚠ **WARNING!** Fire hazard! Overheated fats and oils can ignite very quickly.

⚠ **WARNING!** Users with implanted pacemakers should keep their upper body at least 30 cm from induction cooking zones that are switched on.

⚠ **WARNING!** Do not operate the appliance with wet hands and keep control panel surface dry. Lot of water on control panel keys will make them no longer operable.

⚠ **WARNING!** If the surface is cracked, switch off the appliance to avoid possibility of an electric shock.

During & After use:

Please pay attention to the following instruction to prevent ignition and accidents.

- Please place the appliance on flat and solid surface ONLY.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not place any following objects on the panel when the appliance is operating.
 - a) Stainless steel
 - b) Iron
 - c) Cast iron
 - d) Aluminum
 - e) Lid and enamel
 - f) Knife, fork or spoon
 - g) Plate made of iron, stainless steel, cast iron or aluminum
 - h) Empty cookware
- Do not carry or move the appliance with cookware on top during heating.
- Please maintain a good surrounding environment for ventilation during heating.
- Do not insert any wire or metal objects into the air inlet or air outlet of the appliance.
- How to take care of the panel
 - a) Do not drop any heavy objects to the panel.
 - b) Do not pour water, acid or any liquid to the panel.
 - c) Do not burn anything with fire on the panel.
 - d) Do not place any hot cookware on top when the appliance is not in use.
 - e) If the surface (panel) is cracked, turn off the appliance immediately to avoid electric shock, and return to nearest IKEA store.
 - f) Some of the cookware may generate a noise during use. Please slightly move the cookware, and the noise may disappear or reduce. If not, please change the cookware.

- Do not place the appliance on carpet, cloth or paper material when the appliance is operating.
- Do not touch the panel while it is hot. The panel is still hot until the residual heat indicator is removed, even if the power is off.
- Do not unplug the appliance by pulling the cable.
- Please turn off the appliance and let cool down before unplug. Please unplug the power cord when the appliance is not going to use for long period of time.
- Keep the cookware away from the appliance after use.

How to avoid damage to the appliance

- The glass ceramic can be damaged by objects falling onto it, or knocked by the cookware.
- Cookware made of cast iron, cast aluminum or with damaged bottoms can scratch the glass ceramic if slide on the surface.


- Glass ceramic can be damaged if also dropped on the floor.
- To avoid damaging cookware and glass ceramics, do not allow saucepans or frying pans to boil dry.
- Do not use the cooking zones with empty cookware or without cookware.
- Never line any part of the appliance with aluminium foil. Never place plastic or any other material which may melt in or on the appliance.

⚠ WARNING! Keep product connected to power socket after use until the fan and the heat indicator has shut off.


Information on acrylamides

Important! According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore, we recommend cooking at the lowest possible temperatures and not browning foods too much.

Product description

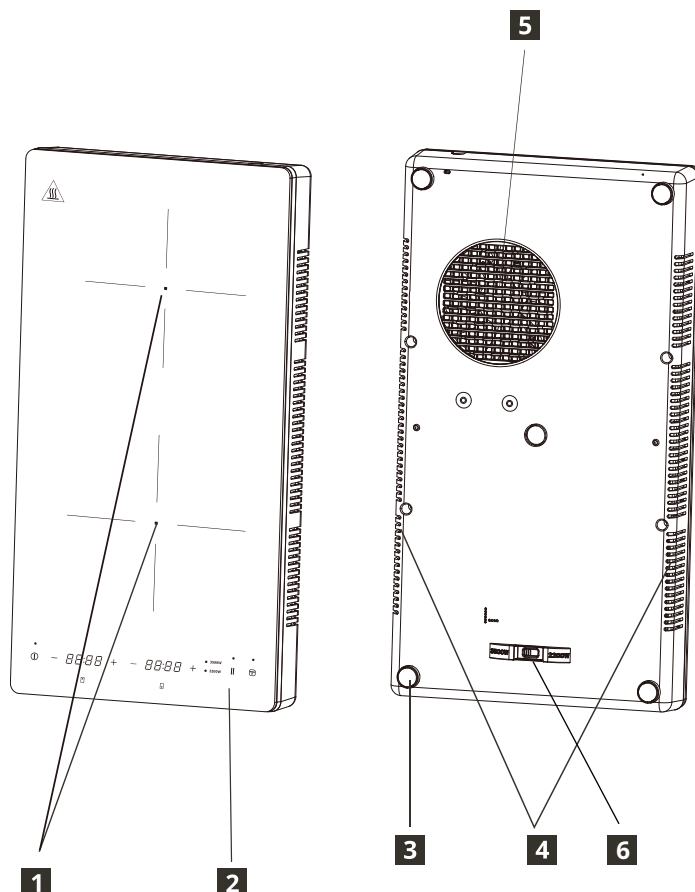

- 1** Heating area
Front cooking zone 180mm 2000W
Rear cooking zone 158mm 1500W
- 2** Control panel
- 3** Silicone feet
- 4** Air outlet
- 5** Air inlet
- 6** Mechanical switch (refer to Power Selection section)

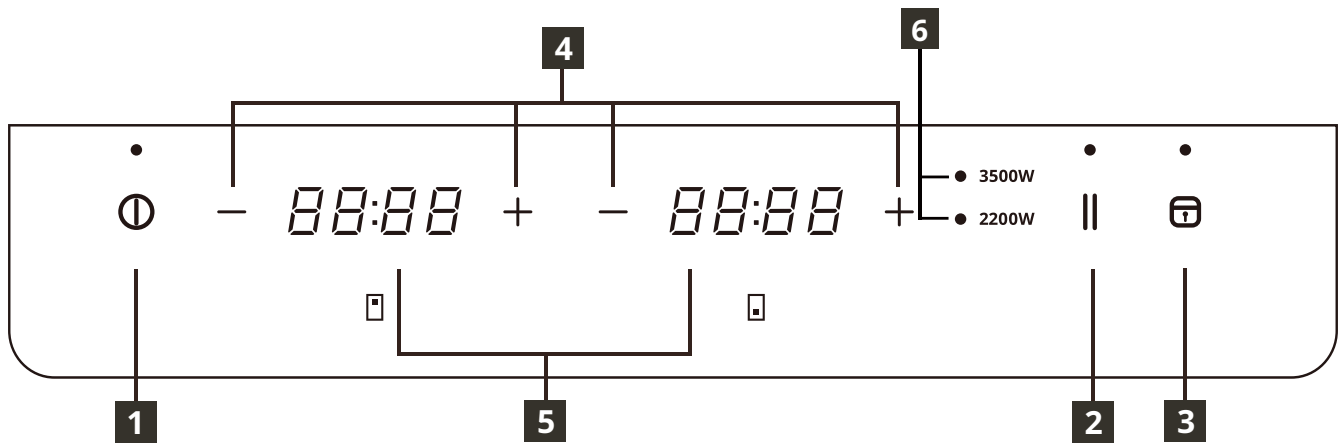

- | | |
|---------------------------|------------------------------|
| 1 On/Off | 4 Power level setting |
| 2 Pause | 5 Power level display |
| 3 Lock/ Child lock | 6 Power selection |

Touch Control sensor fields and displays

You operate the hob by touching sensor fields.


Displays and acoustic signals (short beep) confirm the selection of a function.

Power Selection (Mechanical Switch)

Before connecting the product, please check your home's power supply and verify if it can withstand the rated power of the product.


At the time of purchase, the maximum power of the hob is set to 2200W, but if you are sure that your electrical installation supports higher power, you can increase it to 3500W by following the steps below:

- Make sure the induction hob is power off.
- Remove any pots from the hob.
- Turn the induction hob over and move the mechanical switch to the power 3500W with a tool (e.g. screwdriver).

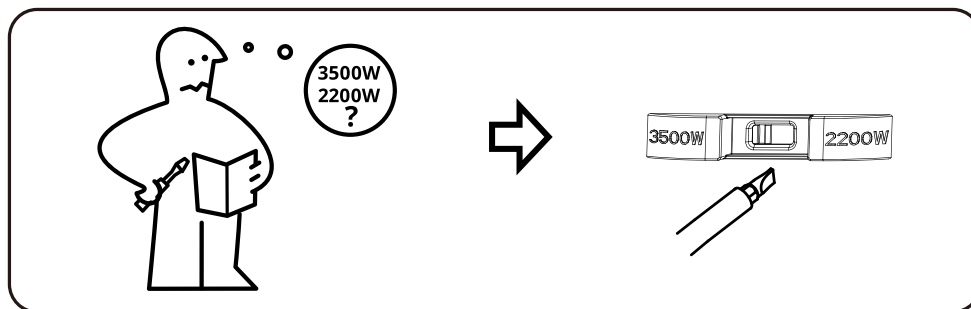

⚠ WARNING! Risk of selection of wrong max power can cause an overload on your home's electrical circuit and the fuse can be tripped (in case of modern electrical circuit) or blown (in case of old electrical circuit).

Contact a qualified electrician to verify your home's electrical circuit capability.

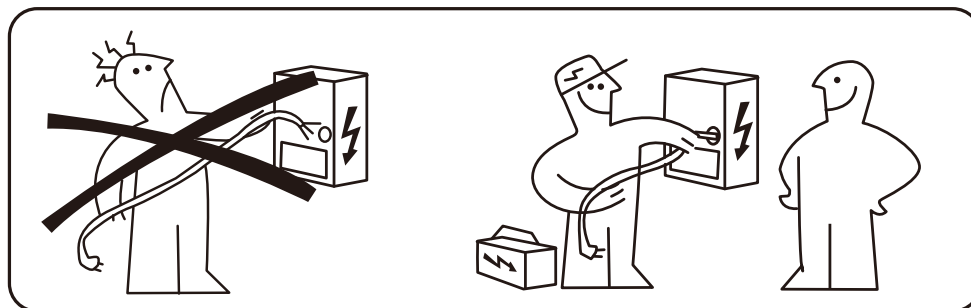

To use the 3500W mode

Your electrical installation must have at least 15A. Move the mechanical switch to the power 3500W.

To use the 2200W mode

Your electrical installation must have at least 10A. Move the mechanical switch to the power 2200W.

Power Management

This product is equipped with electronically controlled Power Management.

For 3500W mode, both zones can be used at full power simultaneously.

For 2200W mode, this function monitors electric loading and limits the maximum power output of the zones, preventing the network from overloading.

The function divides the power between cooking zones and automatically decreases the power of the other cooking zone if necessary (the last command has highest priority).

See the tables below for details.

3500W mode

The power of the zones are listed in the table below:

Power Level	1	2	3	4	5	6	7	8	9
Front zone	200W	300W	600W	900W	1100W	1300W	1500W	1800W	2000W
Rear zone	100W	200W	500W	600W	700W	900W	1100W	1300W	1500W

2200W mode

The power of the zones when only one of the zones is activated at a time:

Power Level	1	2	3	4	5	6	7	8	9
Front zone	200W	300W	600W	900W	1100W	1300W	1500W	1800W	2000W
Rear zone	100W	200W	500W	600W	700W	900W	1100W	1300W	1500W

The power of the zones when both of the zones are activated simultaneously:

Power Level	1	2	3	4	5	6	7	8	9
Front zone	200W	300W	600W	900W	1000W	1100W	1200W	1300W	1500W
Rear zone	100W	200W	500W	600W	700W	800W	900W	1000W	1200W

The power level can be freely chosen, but the total power will be max 2200W. (eg.: level 9 + level 5, or level 5 + level 9).

Power management strategy is still the latest priority logic. That means if the rear zone is set at level 6 (800W), then the front zone can be set up to level 8 (1300W). If front zone setting is changed to level 9 (1500W), then the rear zone will be decreased automatically to level 5 (700W).

Indicators

Pot incorrectly positioned or missing

This symbol appears if the pot is not suitable for induction cooking, is not positioned correctly or is not of an appropriate size for the cooking zone selected. If no pot is detected within 30 seconds of making the selection, the cooking zone switches off.

Residual heat

If display shows "H", the cooking zone is still hot. When the cooking zone cools down, the display goes off.

⚠ WARNING! Risk of burns from residual heat!

After you switch the appliance off, the cooking zones need some time to cool down. Look at the residual heat indicator .

Use residual heat for melting and keeping food warm.

Don't disconnect the product without waiting for the  to be removed from display.

Daily use



Connecting to socket

1. After insert the plug into main supply, the child lock will be activated. Press and hold the Child Lock key for 3 seconds to deactivate.

On/Off

1. Press the On/ Off key, the screen will display "0" as in standby mode and the power indicator light will light up. If there is no heat setting selected within 30 seconds, the hob will switch off automatically without pressing the On/ Off key.
2. Press On/ Off key during operation, the hob will switch off.



Power level setting

1. Press — or + to control the power level during operation.
2. Press —, the power level will go straight to "9".
Press — to decrease the power level from "9" to "1".
3. Press + the power level will increase from "1".
Press + to increase the power level from "1" to "9".



Pause Mode

- You can pause the heating instead of shutting the hob off.
- When entering the Pause mode, all the controls except the On/ Off control are disabled.

To enter pause mode

Touching the pause control.

All the indicator will show "||".

To exit pause mode

Touching the pause control again.

- ⚠ When the hob is in the pause mode, all the controls are disabled except the On/ Off ①, you can always turn the induction hob off with the On/ Off ① control in an emergency.
The hob will shut down after 10min if you don't exit the pause mode.

**Lock / Child lock**

When the cooking zone operate, you can lock the control panel, for example in order to clean the hob. It prevents an accidental change of the power level setting. The hob can still be shut off by the On/ Off key.

Activate lock

1. Set wanted power level.
2. Press  for 3 seconds. The function is activated when  indicator is lit up and a sound is given.

Deactivate lock

1. Press  for 3 seconds. The function is deactivated when  indicator goes off and a sound is given.
2. The power level will return to the previous setting.

Child lock function

You can also keep control panel locked when the hob is not operating. This function prevents an accidental operation of the appliance.

Activate the child lock

1. Activate the appliance with the On/ Off key. Do not set any power level.
2. Press  for 3 seconds. The function is activated when  indicator is lit up and a sound is given.
3. Deactivate the appliance with the On/ Off key.

Deactivate the child lock

Press  for 3 seconds. The function is deactivated when  indicator goes off and a sound is given.

Automatic switch off**The function switches the hob off automatically if:**

- All cooking zones are switched off.
- YOU do not set the power level after switching on the hob within 30 seconds.
- YOU do not switch a cooking zone off or you do not modify the power level after 2 hours, or if the overheating occurs (e.g. when a pan boils dry).

Cookware guidance**What pots to use**

Only use pots and pans with bottom made from ferromagnetic material which are suitable for use with inductions hobs:

- cast iron
- enamelled steel
- carbon steel
- stainless steel (although not all)
- aluminium with ferromagnetic coating or ferromagnetic plate

To determine if a pot or pan is suitable, check for the  symbol (usually stamped on the bottom). You can also hold a magnet to the bottom. If it clings to the underside, the cookware will work on an induction hob.

To ensure optimum efficiency, always use pots and pans with a flat bottom that distributes the heat evenly. If the bottom is uneven, this will affect power and heat conduction.

How to use**Minimum diameter of pot/pan base for the different cooking areas**

To ensure that the hob functions properly, the pot must cover one or more of the reference points indicated on the surface of the hob, and must be of a suitable minimum diameter.

Always use the cooking zone that best corresponds to the diameter of the bottom of the pan.

Cooking zone	Recommended cookware diameter [mm]
Front cooking zone	120-200
Rear cooking zone	120-180

Empty or thin-based pots/pans

Do not use empty or thin-based pots/ pans on the hob. Otherwise, the temperature will be so high that it will damage the pan or the hob surface and it will not be able to monitor the temperature or turn off automatically. If this occurs, do not touch anything and wait for all components to cool down.

If an error message appears, refer to "Troubleshooting".

Hint/tips**Noise during cooking**

When a cooking zone is active, it may hum briefly. This is a characteristic of all glass ceramic cooking zones and does not impair the function or life of the appliance. The noise depends on the cookware used. If it causes considerable disturbance, it may help to change the cookware.

Normal operating noises of the induction hob

Induction technology is based on the creation of electromagnetic fields to generate heat directly on the bottom of cookware. Pots and pans may cause a variety of noises or vibrations depending on how they are manufactured.

These noises are described as follows:

Low humming (like a transformer)

This noise is produced when cooking at a high heat level.

It is based on the amount of energy transferred from the cooktop to the cookware.

The noise ceases or quiets down when the heat level is reduced.

Quiet whistling

This noise is produced when the cooking vessel is empty.

It ceases once liquids or food are placed in the vessel.

Crackling

This noise occurs with cookware made of various materials layered one upon the other.

It is caused by the vibrations of the surfaces where different materials meet.

The noise occurs on the cookware and can vary depending on the amount of food or liquid and the cooking method (e.g., boiling, simmering, frying).

Loud whistling

This noise occurs with cookware made of different materials layered one upon the other and when they are additionally used at maximum output and also on two cooking zones. The noise ceases or quiets down when the heat level is reduced.

These sounds are normal Fan noises

For proper operation of the electronic system, it is necessary to regulate the temperature of the cooktop. For this purpose, the cooktop is equipped with a cooling fan, which is activated to reduce and regulate the temperature of the electronic system. The fan may also continue to run after the appliance is turned off if the detected temperature of the cooktop is still too hot after turning it off.

Rhythmic sounds, similar to the ticking sound of a clock

This noise occurs only when at least three cooking zones are operating and disappears or weakens when some of them are switched off.

The noises described are a normal element of the induction technology and should not be regarded as defects.

Care and cleaning

⚠ WARNING! Switch the appliance off and let it cool down before disconnecting it.

⚠ WARNING! Switch the appliance off and let it cool down before you clean it.

⚠ WARNING! For safety reasons, do not clean the appliance with steam blasters or high pressure cleaners.

⚠ WARNING! Sharp objects and abrasive cleaning agents will damage the appliance. Clean the appliance and remove the residues with water and washing up liquid after each use. Remove also the remnants of the cleaning agents!

ⓘ Scratches or dark stains on the glass ceramic that cannot be removed do not affect the functioning of the appliance.

Removing the residues and stubborn residues:

- Food containing sugar, plastics, tin foil residues should be removed at once, best tool for cleaning glass surface is a scraper (not included with the appliance). Place a scraper on the glass ceramic surface at an angle and remove residues by sliding the blade over the surface. Wipe the appliance with a damp cloth and a little washing up liquid. Finally, rub the appliance dry using a clean cloth.
- Limescale rings, water rings, fat splashes, shiny metallic discolorations should be removed after the appliance has cooled down using cleaner for glass ceramic or stainless steel.

Troubleshooting

Problem	Possible Cause	Solution
The appliance does not operate.	Power shortage or power short circuit in the power source of your home.	
	Power connection to socket not performed properly.	Overlook the power supply to hob for correct connection.
	More than 10 seconds have passed since the appliance was switched on.	Switch the appliance on again.
	Child lock is switched on.	Deactivate Child lock. (See the section "Child lock function")
	Several sensor fields were touched at the same time.	Clean all the objects on the control panel. Make sure that when trying to set the control, nothing is touching another control.
Appliance stops operating. Error indication:  → 	The cookware is not suitable for induction.	Change to a cookware suitable for induction.
	No cookware on cooking zone or cookware diameter is less than 120mm.	Place cookware on the cooking zone.
Appliance stops operating. Error indication:  → 	The cookware is empty (dry-boiling) or cooking temperature is too high.	Turn off the appliance and restart after 5 minutes. If E2 persists, please contact nearest IKEA store.
	The air inlet and outlet is being blocked.	
	Surrounding temperature is too high.	
Appliance stops operating. Error indication:  → 	The main power supply is over AC 275V.	Change to product suitable power supply.
Appliance stops operating. Error indication:  → 	The main power supply is lower than AC 100V.	Change to product suitable power supply.

Appliance stops operating. Error indication: E → 5	The temperature sensor of the appliance is not working.	Please contact nearest IKEA store.
Appliance stops operating. Error indication: E → 6	The cookware is empty (dry-boiling) or cooking temperature is too high.	Turn off the appliance and let the appliance cool down and prevent dry-boiling.
Appliance stops operating. Error indication: E → 0	Communication error occurs between the display PCBA and the driver PCBA.	Turn off the appliance and restart after 5 minutes. If E0 persists, please contact nearest IKEA store.

Error code shows when the hob is powered on and error is detected, E and numbers are displayed intermittently (1 second) and recurrently.


If there is a fault, try to resolve it by following the troubleshooting guidelines. If the problem cannot be resolved, contact your nearest IKEA store.

i If you operated the appliance wrongly, dealer may not take place free of charge, even during the warranty period.

Technical data

Model	14OP22403
Type of hob	Freestanding induction hob
Number of cooking zones and/or areas	2
Rated Power	3500 W
Rated Voltage	220-240 V~
Rated Frequency	50/60 Hz
Depth	520 mm
Width	280 mm
Height	62 mm
Net Weight	4,2 kg

i The article number and serial number are located in the rating plate of the machine's bottom shell.

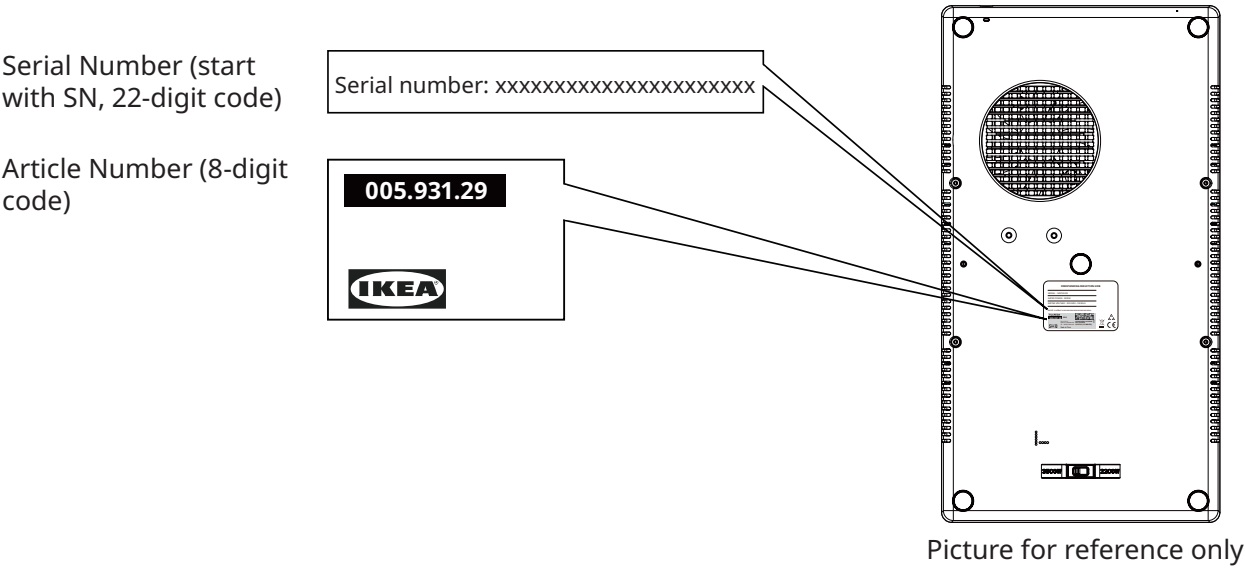

Environmental concerns

Disposal of household appliances

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

⚠ WARNING! Do these steps to dispose the appliance:

- Pull the mains plug out of the mains socket.
- Cut off the mains cable and discard it.

Disposal of packaging materials

The materials with the symbol  are recyclable. Dispose the packaging in a suitable collection container to recycle it.

Energy saving

You can save energy during everyday cooking if you follow the hints below.

- If possible, always place lids on the pans.
- Place cookware on the cooking zone before you switch it on.
- The bottom of the cookware should be as thick and flat as possible.
- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.
- If possible, always place lids on the pans.
- Place cookware on the cooking zone before you switch it on.
- Before you activate the cooking zone put the cookware on it.
- Put the smaller cookware on the smaller cooking zones.

IKEA Warranty

How long is the IKEA Warranty valid

This warranty is valid for 2 years from the original date of purchase of Your appliance at IKEA, unless otherwise specified in national legislation. Please go to IKEA.com to find out what applies in your country. The original sales receipt is required as proof of purchase. If service work is carried out under warranty, this will not extend the warranty period for the appliance.

Who will execute the service?

Contact nearest IKEA store.

What does this warranty cover?

The warranty covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This warranty applies to domestic use only. The exceptions are specified under the headline "What is not covered under this warranty?" Within the warranty period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA will examine the product and decide, at its sole discretion, if it is covered under this warranty. If considered covered, IKEA will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this warranty?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, corrosion or Water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible colour differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings.

Unless such damages can be proved to have been caused by production faults.

- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where nonoriginal parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non- domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this warranty, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.

How country law applies

The IKEA warranty gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

This warranty is valid only in the country where the product has been purchased; the services will be provided in the framework of the warranty conditions. An obligation to carry out services in the framework of the warranty exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the warranty claim is made;
- the Assembly Instructions and User Manual Safety Information.

AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA to:

- make a service request under this warranty;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



The IKEA after sales customer service centre will assist you on the phone with basic trouble shooting for your appliance at the time of service call request. Please see the IKEA catalogue or visit www.ikea.com to find your local store phone number and opening time.

In order to provide you a quicker service, please also always refer to the IKEA article number (8 digit code) placed on the rating plate of your appliance.

SAVE THE SALES RECEIPT!

It is your proof of purchase and required for the warranty to apply. The sales receipt also reports the IKEA name and article number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

เนื้อหา

ข้อมูลเพื่อความปลอดภัย	18	การดูแลและทำความสะอาด	27
คำแนะนำเพื่อความปลอดภัย	19	การแก้ไขปัญหา	27
คำอธิบายของผลิตภัณฑ์	21	ข้อมูลทางเทคนิค	28
การเลือกพลังงาน (สวิตช์กลไก).....	22	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	29
ไฟแสดงสถานะ	24	การรับประกันของ IKEA	30
การใช้งานประจำวัน	24		
คำแนะนำเกี่ยวกับเครื่องครัว	25		

ข้อมูลเพื่อความปลอดภัย

- ① เพื่อความปลอดภัยของคุณและเพื่อการใช้งาน เครื่องใช้ไฟฟ้านี้ได้อย่างถูกต้อง โปรดอ่านคู่มือ เล่มนี้อย่างละเอียดก่อนติดตั้งและใช้งาน ควรเก็บคำแนะนำเหล่านี้ไว้กับเครื่องใช้ไฟฟ้าเสมอ แม้ว่าจะมีการเคลื่อนย้ายหรือขายต่อ ผู้ใช้ต้องรู้และเข้าใจ คุณสมบัติการใช้งานและความปลอดภัยของเครื่องใช้ไฟฟ้านี้อย่างครบถ้วน

การใช้งานที่ถูกต้อง

- อย่าผละจากเครื่องใช้ไฟฟ้าโดยไม่มีใครดูแลในขณะที่ใช้งาน
- เครื่องใช้ไฟฟ้านี้ได้รับการออกแบบมาโดยเฉพาะเพื่อใช้ในประเทศ
- เครื่องใช้ไฟฟ้านี้ได้รับการออกแบบมาโดยเฉพาะเพื่อใช้ในอาคาร
- อย่าใช้พื้นผิวของเครื่องใช้ไฟฟ้าเป็นพื้นที่ทำงานและอย่าใช้เป็นที่วางของ
- อย่าวางหรือจัดเก็บของเหลวไวไฟ วัสดุไวไฟสูง หรือวัตถุที่หลอมละลายได้ (เช่น ฟลัมพลาสติก พลาสติก อลูมิเนียม) ในหรือใกล้กับเครื่องใช้ไฟฟ้า
- ควรใช้ความระมัดระวังในขณะที่เสียบปลั๊กเข้ากับเต้ารับไฟฟ้าที่อยู่ใกล้ อย่าให้สายไฟที่ใช้เชื่อมต่อ สัมผัสหรือติดอยู่ใต้เครื่องใช้ไฟฟ้าหรือเครื่องครัวที่มีความร้อน
- อย่าซ่อมแซมด้วยตนเองเพื่อป้องกันการบาดเจ็บและความเสียหายต่อเครื่องใช้ไฟฟ้า ติดต่อร้านค้าของ IKEA ที่อยู่ใกล้ที่สุดอยู่เสมอ

ความปลอดภัยสำหรับเด็กและผู้ที่มีความเสี่ยง

- เด็กอายุ 8 ขวบขึ้นไปและผู้บกพร่องทางกายภาพ ความรู้สึก หรือทางจิตใจ หรือขาดประสบการณ์และความรู้สามารถใช้เครื่องใช้ไฟฟ้านี้ได้ หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้านี้ด้วยวิธีที่ปลอดภัย และเข้าใจถึงอันตรายที่อาจเกิดขึ้น

- นำบรรจุภัณฑ์ทั้งหมดออกห่างจากเด็ก ๆ เนื่องจากมีความเสี่ยงต่อการขาดอากาศหายใจ
- ควรกั้นเด็ก ๆ ให้ห่างจากเครื่องใช้ไฟฟ้าขณะใช้งาน รวมถึงขณะที่ไม่ใช้งาน
- ควรกั้นเด็กอายุต่ำกว่า 8 ขวบไม่ให้เข้าใกล้ นอกจากนี้คนดูแลอย่างต่อเนื่อง
- ไม่ควรปล่อยให้เด็กเล่นเตา ไม่ควรให้เด็กทำความสะอาดและบำรุงรักษาโดยไม่มีผู้ใหญ่ดูแล

⚠ **คำเตือน!** ใช้ระบบล็อกป้องกันเด็กเพื่อหลีกเลี่ยงมิให้เด็กเล็กและสัตว์เลี้ยงเปิดเครื่องใช้ไฟฟ้าโดยไม่ได้เจตนา

ความปลอดภัยทั่วไป

- ควรเปิดช่องระบายอากาศ ในตัวเครื่องของเครื่องใช้ไฟฟ้าหรือในโครงสร้างของเครื่อง กำจัดสิ่งกีดขวางออก
- อย่าสัมผัสแผงควบคุมขณะที่ไฟแสดงผลความร้อนคงค้างยังสว่างอยู่ เพื่อป้องกันการบาดเจ็บ
- อย่าสอดวัตถุใด ๆ ลงในเตาแม่เหล็กไฟฟ้าในขณะที่ใช้งาน เพื่อป้องกันไฟฟ้าช็อต
- อย่าพันสายไฟบริเวณคอเพื่อป้องกันอันตรายจากการหายใจไม่ออก
- อย่าใช้เครื่องทำความสะอาดแรงดันไอน้ำในการทำความสะอาดเตานี้
- ไม่ควรวางวัตถุที่ทำจากโลหะ เช่น มีด ส้อม ช้อน และ ฝาไวน้ำบนพื้นผิวของเตา เนื่องจากจะเกิดความร้อนสะสม
- หลังใช้งาน ควรปิดส่วนประกอบของเตาโดยใช้ปุ่มควบคุม และอย่าวางใจกับอุปกรณ์ตรวจจับกระทะ
- เตานี้ไม่ได้ออกแบบให้ใช้งานโดยติดตั้งเครื่องตั้งเวลาภายนอกหรือระบบรีโมทคอนโทรลแยกส่วน
- ควรใช้ความระมัดระวังเพื่อหลีกเลี่ยงการสัมผัสกับส่วนที่มีความร้อน
- หากสายไฟที่จัดให้เกิดความเสียหาย ต้องติดต่อให้ผู้ผลิต ศูนย์บริการที่ได้รับอนุญาต หรือผู้ที่มีความสามารถคล้ายกันมาเปลี่ยนให้ เพื่อหลีกเลี่ยงอันตราย โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด

⚠ **คำเตือน!** หากพื้นผิวแตก ควรปิดเตาทันที เพื่อหลีกเลี่ยงความเสี่ยงของการเกิดไฟฟ้าช็อต โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด

⚠ **คำเตือน!** เตาและส่วนประกอบที่เข้าถึงได้จะร้อนในขณะที่ใช้งาน

⚠ **คำเตือน!** การปรุงอาหารบนเตาด้วยไขมันหรือน้ำมันโดยไม่มีคนคอยดูอาจเกิดอันตรายและอาจเกิดเพลิงไหม้ได้ อย่าลองดับไฟโดยใช้น้ำ แต่ควรปิดสวิทช์เตาจากนั้นปิดคลุมเปลวไฟ เช่น ใช้ผ้าหรือผ้าคลุมกันไฟ

⚠ **ข้อควรระวัง:** พื้นผิวร้อน พื้นผิวอาจร้อนขึ้นได้ระหว่างการใช้งาน

⚠ **ข้อควรระวัง:** กระบวนการปรุงอาหารจะต้องอยู่ภายใต้การดูแล กระบวนการปรุงอาหารระยะสั้นต้องอยู่ภายใต้การดูแลอย่างต่อเนื่อง

⚠ **คำเตือน!** ควรใช้ผ้าคลุมเตาที่ผู้ผลิตเครื่องครัวออกแบบเท่านั้น หรือผู้ผลิตเครื่องครัวระบุไว้ในคำแนะนำให้ใช้ได้อย่างเหมาะสม หรือเป็นผ้าคลุมเตาที่มาพร้อมกับเตา การใช้ผ้าคลุมเตาที่ไม่เหมาะสมอาจก่อให้เกิดอุบัติเหตุ

คำแนะนำเพื่อความปลอดภัย

การติดตั้ง

- ผู้ผลิตไม่รับผิดชอบต่อการบาดเจ็บของบุคคลและสัตว์เลี้ยงหรือความเสียหายของทรัพย์สิน ที่เกิดจากการไม่ปฏิบัติตามข้อกำหนดดังต่อไปนี้

⚠ **ข้อควรระวัง!** ดำเนินการติดตั้งโดยอ้างอิงจากข้อมูลเพื่อความปลอดภัย

- ⚠ **คำเตือน!** กระบวนการติดตั้งต้องเป็นไปตามกฎหมาย บทบัญญัติ คำชี้แจง และมาตรฐาน (กฎและข้อบังคับเพื่อความปลอดภัยเกี่ยวกับไฟฟ้า การรีไซเคิลอย่างเหมาะสมโดยเป็นไปตามข้อบังคับต่างๆ ฯลฯ) ที่บังคับใช้ในประเทศที่ใช้งาน!
- หลีกเลี่ยงการติดตั้งเครื่องใช้ไฟฟ้าถัดจากประตูและหน้าต่าง เนื่องจากเครื่องครัวที่มีความร้อนอาจถูกประตูและหน้าต่างเปิดกระแทกจนหล่นจากเตา
 - ควรตรวจสอบว่าเครื่องใช้ไฟฟ้าไม่มีความเสียหายเนื่องจากการขนส่ง อย่าเสียบปลั๊กเครื่องใช้ไฟฟ้าที่มีความเสียหาย
 - อย่าติดตั้งเครื่องใช้ไฟฟ้าหากมีความเสียหายในขณะขนส่ง
 - อย่าเสียบปลั๊กเตาโดยใช้ปลั๊กพ่วงและอย่าวางเตาโดยปล่อยให้สายไฟขวางพื้นที่ทำงาน
 - อย่าเปลี่ยนข้อมูลจำเพาะหรือดัดแปลงผลิตภัณฑ์นี้เนื่องจากมีความเสี่ยงต่อการบาดเจ็บและเครื่องใช้ไฟฟ้าอาจเสียหาย

⚠ **คำเตือน!** ใช้งานเครื่องตามคำแนะนำการเชื่อมต่อไฟฟ้าอย่างระมัดระวัง

การเชื่อมต่อไฟฟ้า

- ก่อนเชื่อมต่อ ควรตรวจสอบว่าแรงดันไฟฟ้าของเครื่องใช้ไฟฟ้าที่ระบุไว้บนป้ายแสดงข้อมูลทางเทคนิคตรงกับแรงดันไฟฟ้าของแหล่งจ่ายไฟที่คุณใช้อยู่ ตรวจสอบพิกัดกำลังไฟฟ้าของเครื่องใช้ไฟฟ้าและให้แน่ใจว่าการติดตั้งระบบไฟฟ้าของบ้านนั้นมีขนาดที่เหมาะสมและรองรับพิกัดกำลังไฟฟ้าของเครื่องใช้ไฟฟ้า (ดูบทที่เกี่ยวกับข้อมูลทางเทคนิค)
- ป้ายแสดงข้อมูลทางเทคนิคติดตั้งไว้บนตัวเครื่องด้านล่างของเตา

⚠ **คำเตือน!** ความเสี่ยงต่อการบาดเจ็บจากกระแสไฟฟ้า

- การเสียบปลั๊กเข้ากับเตาที่หลวมและไม่เหมาะสมอาจทำให้เกิดความร้อนในเทอร์มินัลสูงเกิน

ก่อนใช้งาน:

โปรดอ่านคำแนะนำต่อไปนี้ก่อนใช้งาน

- โปรดใช้เตารับไฟฟ้าหลักที่มีมาตรฐาน และตรวจสอบเตารับเป็นประจำเพื่อป้องกันความเสียหายใด ๆ
- อย่าเปิดโครงเครื่องใช้ไฟฟ้าด้วยตัวคุณเองหรือบุคคลที่ไม่มีคุณสมบัติเหมาะสม ซ่อมแซมเครื่องใช้ไฟฟ้าโดยตัวแทนที่ให้บริการหรือช่างที่มีคุณสมบัติเหมาะสมเท่านั้น
- โปรดตรวจสอบสายไฟและปลั๊กไฟ หากสายไฟหรือปลั๊กเสียหาย โปรดอย่าใช้งานเครื่องใช้ไฟฟ้า อย่าดึงปลั๊กออกในขณะที่มือเปียก
- อย่าใช้สายไฟต่อพ่วงและโปรดใช้เตารับไฟฟ้าหลักเท่านั้น
- หากไม่ได้ใช้งานเครื่องใช้ไฟฟ้าเป็นเวลานาน โปรดเปิดเครื่องทิ้งไว้เป็นเวลา 10 นาทีเพื่อให้ส่วนประกอบอิเล็กทรอนิกส์ทำงานอย่างมีประสิทธิภาพก่อน จากนั้นคุณจึงสามารถเริ่มใช้งานเครื่องได้
- อย่าใช้เตาใกล้บริเวณที่มีน้ำ ไฟ หรือความชื้น เครื่องใช้ไฟฟ้านี้มีวัตถุประสงค์เพื่อใช้ในครัวเรือนและในอาคารเท่านั้น
- นำบรรจุภัณฑ์ สติกเกอร์ และฟิล์มทั้งหมดออกก่อนที่จะใช้งานเครื่องครั้งแรก
- ควรปิดโซนปรุงอาหารหลังจากใช้งานแต่ละครั้ง โดยใช้ปุ่มควบคุมและอย่าวางใจตัวตรวจจับกระทะ
- ความเสี่ยงต่อการถูกลวก! อย่าวางวัตถุที่ทำจากโลหะ เช่น มีด ส้อม ช้อน และฝาปิดกระทะไว้บนพื้นผิวปรุงอาหาร เนื่องจากอาจเกิดความร้อน

⚠ คำเตือน! อันตรายจากไฟ! ไขมันและน้ำมันที่ร้อนจัดอาจเกิดประกายไฟได้อย่างรวดเร็วมาก

⚠ คำเตือน! ผู้ใช้งานที่ผ่าตัดฝักรองกระตุ้นหัวใจ ควรให้ร่างกายส่วนบนอยู่ห่างอย่างน้อย 30 ซม. จากโซนปรุงอาหารด้วยแม่เหล็กไฟฟ้าที่เปิดอยู่

⚠ คำเตือน! อย่าใช้งานเครื่องใช้ไฟฟ้าในขณะที่มือเปียก และควรให้พื้นผิวแผงควบคุมแห้งอยู่เสมอ หากมีน้ำจำนวนมากอยู่บนปุ่มแผงควบคุม จะทำให้เครื่องใช้งานไม่ได้อีกต่อไป

⚠ คำเตือน! หากพื้นผิวแตก ควรปิดเครื่องใช้ไฟฟ้าทันที เพื่อหลีกเลี่ยงความเสี่ยงของการเกิดไฟฟ้าช็อต

ระหว่างและหลังจากการใช้งาน:

โปรดอ่านคำแนะนำต่อไปนี้เพื่อป้องกันประกายไฟและอุบัติเหตุ

- โปรดวางเครื่องใช้ไฟฟ้าไว้บนพื้นผิวที่เรียบและแข็งเท่านั้น
- เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าไม่ได้เล่นกับเครื่องใช้ไฟฟ้า
- ห้ามวางวัตถุใด ๆ ต่อไปนี้ไว้บนแผงควบคุมเมื่อใช้งานเครื่องใช้ไฟฟ้า
 - a) สแตนเลส
 - b) เหล็ก
 - c) เหล็กหล่อ
 - d) อลูมิเนียม
 - e) ฝาและเครื่องเคลือบ
 - f) มีด ส้อม และช้อน
 - g) จานที่ทำจากเหล็ก สแตนเลส เหล็กหล่อ หรืออลูมิเนียม
 - h) เครื่องครัวที่ว่างเปล่า
- ห้ามถือหรือเคลื่อนย้ายเครื่องใช้ไฟฟ้าในระหว่างที่กำลังให้ความร้อนเครื่องครัวที่ว่างอยู่ด้านบน
- โปรดเตรียมสภาพแวดล้อมที่ดีเพื่อการไหลเวียนอากาศในขณะที่ปรุงอาหาร
- ห้ามสอดใส่สายไฟหรือวัตถุโลหะใด ๆ ลงในช่องอากาศเข้าหรือช่องอากาศออกของเครื่องใช้ไฟฟ้า
- วิธีการดูแลแผง
 - a) อย่าทำวัตถุที่หนักตกลงไปที่แผง
 - b) อย่าเทน้ำ กรด หรือของเหลวใด ๆ ลงบนแผง
 - c) อย่าเผาสิ่งของใด ๆ บนแผง
 - d) ห้ามวางเครื่องครัวใด ๆ ที่กำลังร้อนไว้ที่ด้านบน หากไม่ได้ใช้งานเครื่องใช้ไฟฟ้า
 - e) หากพื้นผิว (แผง) แตก ให้ปิดเครื่องใช้ไฟฟ้าทันที เพื่อหลีกเลี่ยงการเกิดไฟฟ้าช็อต แล้วส่งคืนให้กับร้านค้าของ IKEA ที่อยู่ใกล้ที่สุด
 - f) เครื่องครัวบางชนิดอาจเกิดเสียงขึ้นในขณะที่ใช้งาน โปรดขยับเครื่องครัวเล็กน้อย เสียงอาจหายไปหรือเบาลง หากยังไม่ดีขึ้น โปรดลองเปลี่ยนเครื่องครัว

- ห้ามวางเครื่องใช้ไฟฟ้าไว้บนพรม ผ้า หรือวัสดุประเภทกระดาษในขณะที่กำลังใช้งานเครื่องใช้ไฟฟ้า
- อย่าสัมผัสแผงในขณะที่ยังร้อน แผงจะยังคงร้อนต่อไปจนกระทั่งไฟแสดงผลความร้อนคงค้างดับ ถึงแม้จะปิดเครื่องแล้วก็ตาม
- ห้ามถอดปลั๊กเครื่องใช้ไฟฟ้าโดยดึงที่สายไฟ
- โปรดปิดเครื่องใช้ไฟฟ้าและปล่อยให้เย็นลงก่อนที่จะถอดปลั๊ก โปรดถอดปลั๊กไฟออกหากไม่ได้ใช้งานเครื่องใช้ไฟฟ้าเป็นเวลานาน
- เก็บเครื่องครัวไว้ให้ห่างจากเครื่องใช้ไฟฟ้าหลังจากการใช้งาน

วิธีการหลีกเลี่ยงความเสียหายต่อเครื่องใช้ไฟฟ้า

- กลาสเซรามิกอาจเสียหายได้จากวัตถุที่หล่นใส่ หรือถูกเครื่องครัวกระแทก
- เครื่องครัวที่ทำจากเหล็กหล่อ อลูมิเนียมหล่อ หรือที่กั้นเครื่องครัวเสียหาย อาจบุดขีดกลาสเซรามิกได้ หากถูกลื่อนไปบนพื้นผิว
- กลาสเซรามิกอาจเสียหายหากหล่นลงพื้น


- เพื่อหลีกเลี่ยงการทำให้เครื่องครัวและกลาสเซรามิกเสียหาย อย่าปล่อยให้กระทะทอดจนแห้ง
- อย่าใช้โซนปรุงอาหารกับเครื่องครัวว่างเปล่าหรือไม่มีเครื่องครัวเลย
- อย่าวางอูมิเนียมฟอยล์ลงบนส่วนใดส่วนหนึ่งของเครื่องใช้ไฟฟ้า อย่าวางพลาสติกหรือวัสดุอื่นใดซึ่งอาจละลายในหรือบนเครื่องใช้ไฟฟ้า

⚠ คำเตือน! ควรเสียบปลั๊กของผลิตภัณฑ์ต่อไปหลังใช้งาน จนกระทั่งพัดลมและไฟแสดงผลความร้อนดับลง


ข้อมูลเกี่ยวกับเอคริลเอโมด์

สิ่งสำคัญ! จากความรู้ทางวิทยาศาสตร์ล่าสุด อาหารที่เปลี่ยนเป็นสีน้ำตาลเข้ม โดยเฉพาะอย่างยิ่งในผลิตภัณฑ์ที่มีแป้ง อาจก่อให้เกิดความเสี่ยงทางสุขภาพเนื่องจากเอคริลเอโมด์ ดังนั้นเราขอแนะนำให้ปรุงอาหารด้วยอุณหภูมิต่ำที่สุดเท่าที่จะทำได้ และอย่าทำให้อาหารเป็นสีน้ำตาลเข้มจนเกินไป

คำอธิบายของผลิตภัณฑ์

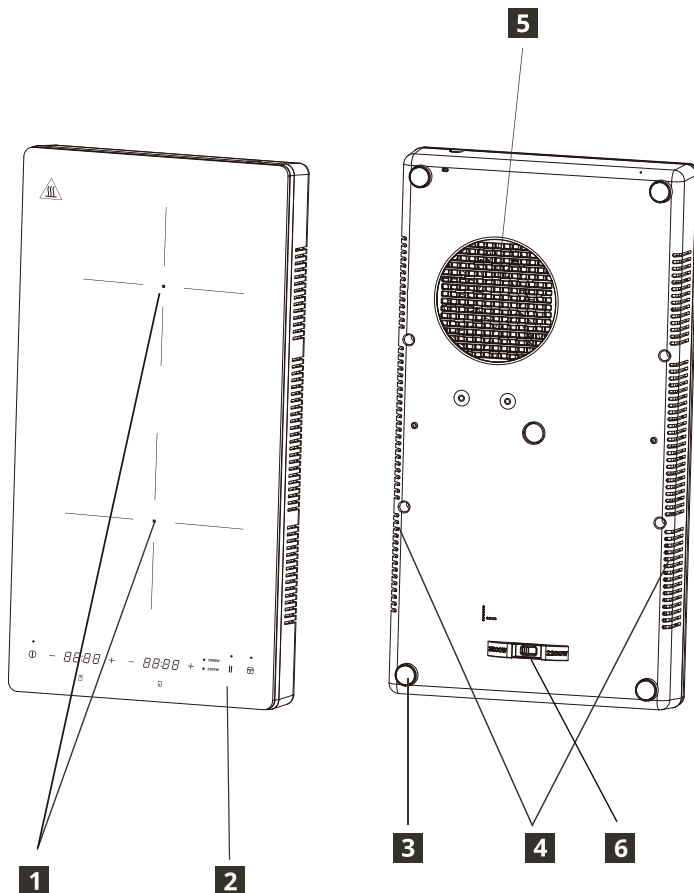

- 1** พื้นที่ให้ความร้อน
โซนปรุงอาหารด้านหน้า 180 มม. 2000 วัตต์
โซนปรุงอาหารด้านหลัง 158 มม. 1500 วัตต์
- 2** แผงควบคุม
- 3** ขาตั้งซิลิโคน
- 4** ช่องอากาศออก
- 5** ช่องอากาศเข้า
- 6** สวิตช์กลไก (ดูหัวข้อการเลือกพลังงาน)

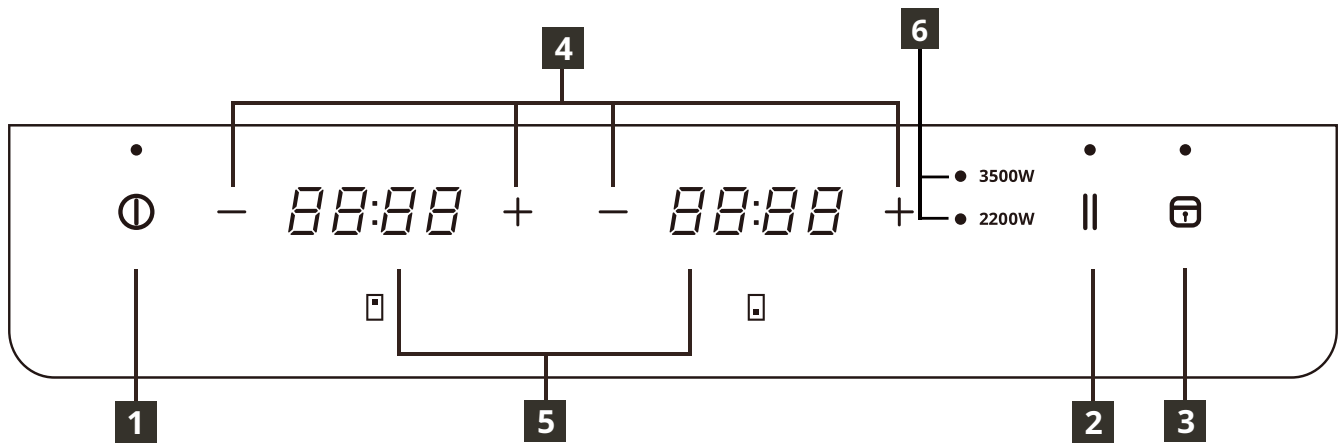

1 เปิด/ปิด

2 หยุดชั่วคราว

3 ล็อก/ล็อกป้องกันเด็ก

4 การตั้งค่าระดับพลังงาน

5 จอแสดงผลระดับพลังงาน

6 การเลือกพลังงาน

ช่องและแสดงผลเซ็นเซอร์ควบคุมสัมผัส

คุณใช้งานเตาได้โดยสัมผัสช่องเซ็นเซอร์


สัญญาณเสียงและแสดงผล (บี๊บสั้น) เป็นการยืนยันการเลือกฟังก์ชัน

การเลือกพลังงาน (สวิตช์กลไก)


ก่อนที่จะเชื่อมต่อผลิตภัณฑ์ โปรดตรวจสอบแหล่งจ่ายไฟที่บ้านของคุณ และตรวจสอบว่าแหล่งจ่ายไฟสามารถรองรับกำลังไฟฟ้าของผลิตภัณฑ์ที่กำหนดไว้ได้หรือไม่

เมื่อซื้อผลิตภัณฑ์ กำลังไฟฟ้าสูงสุดของเตาจะถูกตั้งค่าไว้ที่ 2200 วัตต์ แต่ถ้าคุณแน่ใจว่าการติดตั้งระบบไฟฟ้าของคุณรองรับกำลังไฟฟ้าที่สูงกว่านั้น คุณสามารถเพิ่มเป็น 3500 วัตต์ได้โดยทำตามขั้นตอนด้านล่าง:

- ตรวจสอบให้แน่ใจว่าเตาเหนี่ยวนำปิดอยู่
- นำหม้อใด ๆ ออกจากเตา
- พลิกเตาแม่เหล็กไฟฟ้าและเลื่อนสวิตช์กลไกไปที่กำลังไฟฟ้า 3500 วัตต์โดยใช้เครื่องมือ (เช่น ไขควง)

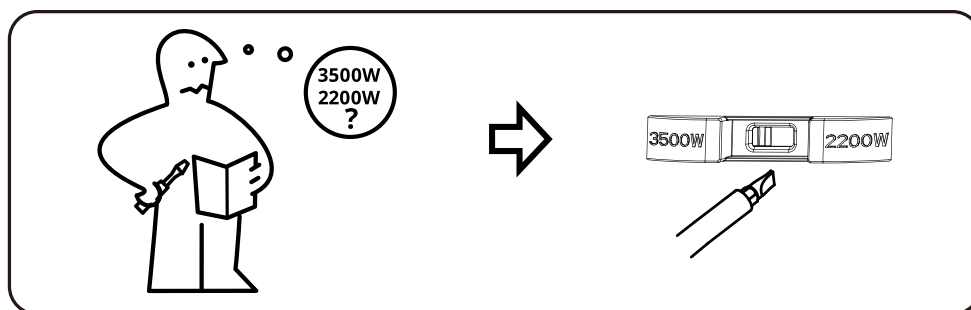

⚠ คำเตือน! ความเสี่ยงจากการเลือกกำลังไฟฟ้าสูงสุดที่ไม่ถูกต้องอาจทำให้วงจรไฟฟ้าในบ้านของคุณทำงานเกินพิกัด และฟิวส์อาจจะตัด (ในกรณีของวงจรไฟฟ้ารุ่นใหม่) หรือขาด (ในกรณีของวงจรไฟฟ้ารุ่นเก่า) ติดต่อช่างไฟฟ้าที่มีคุณสมบัติเหมาะสมเพื่อตรวจสอบความสามารถในการทำงานของวงจรไฟฟ้าในบ้านของคุณ

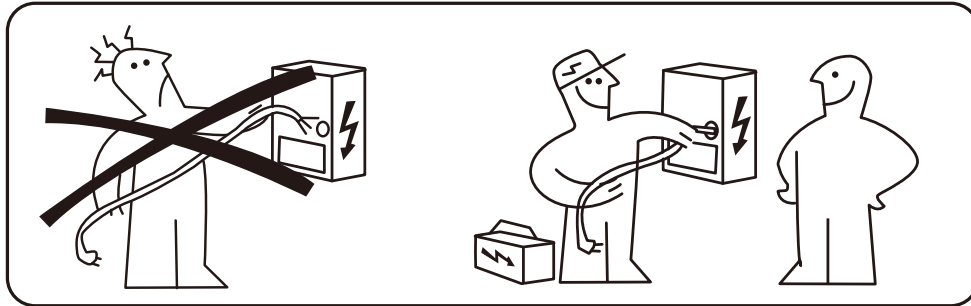

การใช้งานโหมด 3500 วัตต์

การติดตั้งระบบไฟฟ้าของคุณต้องรองรับได้อย่างน้อย 15A เลื่อนสวิตช์กลไกไปที่กำลังไฟฟ้า 3500 วัตต์

การใช้งานโหมด 2200 วัตต์

การติดตั้งระบบไฟฟ้าของคุณต้องรองรับได้อย่างน้อย 10A เลื่อนสวิตช์กลไกไปที่กำลังไฟฟ้า 2200 วัตต์

การจัดการพลังงาน

ผลิตภัณฑ์นี้มาพร้อมกับระบบการจัดการพลังงานที่ควบคุมด้วยระบบอิเล็กทรอนิกส์

สำหรับโหมด 3500 วัตต์ ทั้งสองโซนสามารถใช้พลังงานเต็มที่พร้อมกันได้

สำหรับโหมด 2200 วัตต์ ฟังก์ชันนี้จะตรวจสอบโหลดทางไฟฟ้าและจำกัดพลังงานไฟฟ้าสูงสุดของโซนต่าง ๆ เพื่อป้องกันไม่ให้เครื่องทำงานเกินพิกัด

ฟังก์ชันนี้จะแบ่งพลังงานระหว่างโซนการปรุงอาหาร และหากจำเป็น จะลดพลังงานของโซนการปรุงอาหารอื่น ๆ โดยอัตโนมัติ (คำสั่งสุดท้ายจะมีลำดับความสำคัญสูงสุด)

โปรดดูตารางด้านล่างนี้สำหรับรายละเอียด

โหมด 3500 วัตต์

พลังงานของแต่ละโซนจะระบุไว้ในตารางด้านล่างนี้:

ระดับกำลังไฟ	1	2	3	4	5	6	7	8	9
โซนด้านหน้า	200 วัตต์	300 วัตต์	600 วัตต์	900 วัตต์	1100 วัตต์	1300 วัตต์	1500 วัตต์	1800 วัตต์	2000 วัตต์
โซนด้านหลัง	100 วัตต์	200 วัตต์	500 วัตต์	600 วัตต์	700 วัตต์	900 วัตต์	1100 วัตต์	1300 วัตต์	1500 วัตต์

โหมด 2200 วัตต์

พลังงานของโซนเมื่อมีการเปิดใช้งานเพียงโซนเดียวในแต่ละครั้ง:

ระดับกำลังไฟ	1	2	3	4	5	6	7	8	9
โซนด้านหน้า	200 วัตต์	300 วัตต์	600 วัตต์	900 วัตต์	1100 วัตต์	1300 วัตต์	1500 วัตต์	1800 วัตต์	2000 วัตต์
โซนด้านหลัง	100 วัตต์	200 วัตต์	500 วัตต์	600 วัตต์	700 วัตต์	900 วัตต์	1100 วัตต์	1300 วัตต์	1500 วัตต์

พลังงานของโซนเมื่อมีการเปิดใช้งานทั้งสองโซนพร้อมกัน:

ระดับกำลังไฟ	1	2	3	4	5	6	7	8	9
โซนด้านหน้า	200 วัตต์	300 วัตต์	600 วัตต์	900 วัตต์	1000 วัตต์	1100 วัตต์	1200 วัตต์	1300 วัตต์	1500 วัตต์
โซนด้านหลัง	100 วัตต์	200 วัตต์	500 วัตต์	600 วัตต์	700 วัตต์	800 วัตต์	900 วัตต์	1000 วัตต์	1200 วัตต์

สามารถเลือกระดับพลังงานได้อย่างอิสระ แต่พลังงานรวมสูงสุดจะอยู่ที่ 2200 วัตต์ (ตัวอย่างเช่น: ระดับ 9 + ระดับ 5 หรือ ระดับ 5 + ระดับ 9)

กลยุทธ์การจัดการพลังงานจะถือตรรกะตามลำดับความสำคัญล่าสุด นั่นหมายความว่า หากตั้งโซนปรุงอาหารด้านหลังไว้ที่ระดับ 6 (800 วัตต์) ก็สามารถตั้งโซนด้านหน้าได้ถึงระดับ 8 (1300 วัตต์) หากเปลี่ยนการตั้งค่าโซนด้านหน้าเป็นระดับ 9 (1500 วัตต์) โซนด้านหลังจะลดลงโดยอัตโนมัติเป็นระดับ 5 (700 วัตต์)

ไฟแสดงสถานะ

⚠️ วางหม้อผิดตำแหน่งหรือไม่มีหม้อ

สัญลักษณ์นี้จะปรากฏขึ้นหากหม้อไม่เหมาะสำหรับการปรุงอาหารแบบเหนียวน้ำ หรือไม่ได้จัดวางอย่างถูกต้อง หรือมีขนาดที่ไม่เหมาะสมสำหรับโซนปรุงอาหารที่เลือก หลังจากเลือกโซนปรุงอาหารแล้ว หากตรวจไม่พบหม้อภายใน 30 วินาที โซนปรุงอาหารจะปิดลง

H ความร้อนตกค้าง

หากหน้าจอแสดงค่าเป็น “H” แสดงว่าโซนปรุงอาหารยังคงร้อนอยู่ เมื่อโซนปรุงอาหารเย็นลง จอแสดงผลก็จะดับ

⚠️ **คำเตือน!** ความเสี่ยงต่อการถูกลวกจากความร้อนคงค้าง!

หลังจากปิดเครื่องใช้ไฟฟ้า โซนปรุงอาหารจำเป็นต้องทิ้งระยะไว้สักครู่เพื่อรอให้เย็นลง พิจารณาที่ไฟแสดงผลความร้อนคงค้าง **[H]**

ใช้ความร้อนคงค้างเพื่อละลายและอุ่นอาหารอย่างปลอดภัยผลิตภัณฑ์โดยไม่รอ **[H]** ให้ดับไปจากจอแสดงผล

การใช้งานประจำวัน



เสียบปลั๊กเข้าเต้ารับไฟฟ้า

- หลังจากเสียบปลั๊กเข้าแหล่งจ่ายไฟหลักแล้ว ระบบล๊อคป้องกันเด็กจะเปิดใช้งาน กดปุ่ม ล๊อคป้องกันเด็ก ค้างไว้ 3 วินาทีเพื่อปิดใช้งาน

เปิด/ปิด

- กดปุ่มเปิด/ปิด หน้าจอจะแสดง “0” เมื่ออยู่ในโหมดสแตนด์บาย และไฟแสดงสถานะพลังงานจะสว่างขึ้น หากไม่มีการตั้งค่าความร้อนภายใน 30 วินาที เตาจะปิดเองโดยอัตโนมัติโดยไม่ต้องกดปุ่มเปิด/ปิด
- กดปุ่ม เปิด/ปิด ในขณะที่ใช้งาน เตาจะปิดเครื่อง



การตั้งค่าระดับพลังงาน

- กด — หรือ + เพื่อควบคุมระดับพลังงานระหว่างการใช้งาน
- กด — ระดับพลังงานจะไปที่ “9” โดยตรง
กด — เพื่อลดระดับพลังงานจาก “9” ลงมาที่ “1”
- กด + ระดับพลังงานจะเพิ่มขึ้นจาก “1”
กด + เพื่อเพิ่มระดับพลังงานจาก “1” เป็น “9”



โหมดหยุดชั่วคราว

- คุณสามารถหยุดการให้ความร้อนชั่วคราวแทนการปิดเตาได้
- เมื่อเข้าสู่โหมดหยุดชั่วคราว ปุ่มควบคุมทั้งหมด ยกเว้นปุ่มควบคุมการเปิด/ปิดจะปิดใช้งาน

การเข้าสู่โหมดหยุดชั่วคราว

แตะปุ่มควบคุมหยุดชั่วคราว

ไฟแสดงสถานะทั้งหมดจะแสดงเป็น “||”

การออกจากโหมดหยุดชั่วคราว

แตะปุ่มควบคุมหยุดชั่วคราวอีกครั้ง

⚠ เมื่อเตาอยู่ในโหมดหยุดชั่วคราว ปุ่มควบคุมทั้งหมดจะปิดใช้งาน ยกเว้นปุ่มเปิด/ปิด ① ในกรณีฉุกเฉิน คุณสามารถเปิดเตาเหนี่ยวนำได้โดยใช้ปุ่มเปิด/ปิด ① หากคุณไม่ออกจากโหมดหยุดชั่วคราว เตาจะปิดเครื่องหลังจากผ่านไป 10 นาที



ล็อก/ระบบล็อกป้องกันเด็ก

เมื่อโซนปรุงอาหารเริ่มทำงาน คุณสามารถล็อกแผงควบคุม เช่น เพื่อทำความสะอาดเตา ฟังก์ชันนี้จะช่วยป้องกันไม่ให้เกิดการตั้งค่าระดับพลังงานถูกเปลี่ยนแปลงโดยไม่ตั้งใจ เตานี้สามารถปิดเครื่องได้ด้วยปุ่มเปิด/ปิด

เปิดใช้งานการล็อก

1. ตั้งค่าระดับพลังงานที่ต้องการ
2. กด  ค้างไว้ 3 วินาที ฟังก์ชันจะเปิดใช้งานเมื่อไฟแสดงสถานะ  สว่างขึ้นและมีเสียงเตือน

ปิดใช้งานการล็อก

1. กด  ค้างไว้ 3 วินาที ฟังก์ชันจะปิดใช้งานเมื่อไฟแสดงสถานะ  ดับลงและมีเสียงเตือน
2. ระดับพลังงานจะกลับสู่การตั้งค่าก่อนหน้านี้

ฟังก์ชันล็อกป้องกันเด็ก

ในขณะที่ไม่ใช้งาน คุณสามารถล็อกแผงควบคุมได้เช่นกัน ฟังก์ชันนี้ป้องกันการใช้งานเครื่องโดยไม่ตั้งใจ

เปิดใช้งานระบบล็อกป้องกันเด็ก

1. เปิดใช้งานเครื่องใช้ไฟฟ้าด้วยปุ่มเปิด/ปิด อย่าตั้งค่าระดับพลังงานใด ๆ
2. กด  ค้างไว้ 3 วินาที ฟังก์ชันจะเปิดใช้งานเมื่อไฟแสดงสถานะ  สว่างขึ้นและมีเสียงเตือน
3. ปิดใช้งานเครื่องใช้ไฟฟ้าด้วยปุ่มเปิด/ปิด

ปิดใช้งานระบบล็อกป้องกันเด็ก

กด  ค้างไว้ 3 วินาที ฟังก์ชันจะปิดใช้งานเมื่อไฟแสดงสถานะ  ดับลงและมีเสียงเตือน

ปิดเครื่องโดยอัตโนมัติ

ฟังก์ชันนี้จะปิดเครื่องเตาโดยอัตโนมัติ ถ้า:

- โซนปรุงอาหารทั้งหมดปิดไฟ
- คุณไม่ได้ตั้งค่าระดับพลังงานภายใน 30 วินาทีหลังจากเปิดสวิตช์เตา
- คุณไม่ได้ปิดโซนปรุงอาหารหรือคุณไม่ได้ปรับระดับพลังงานหลังจาก 2 ชั่วโมง หรือหากเกิดความร้อนสูงเกินไป (เช่น เมื่อกระทะทอดจนแห้ง)

คำแนะนำเกี่ยวกับเครื่องครัว

หม้อชนิดใดที่สามารถใช้ได้

ใช้หม้อและกระทะที่มีก้นทำจากวัสดุเฟอร์โรแมกเนติก ซึ่งเหมาะสำหรับใช้งานกับเตาแม่เหล็กไฟฟ้า:

- เหล็กหล่อ
- เหล็กเคลือบ
- เหล็กคาร์บอน
- สแตนเลส (แม้ว่าจะไม่ใช่ทุกส่วน)
- อลูมิเนียมที่มีการเคลือบเฟอร์โรแมกเนติกหรือแผ่นเฟอร์โรแมกเนติก

หากต้องการตรวจสอบว่าหม้อหรือกระทะเหมาะสมหรือไม่ ให้ตรวจสอบสัญลักษณ์  (มักจะประทับตราที่ด้านล่าง) นอกจากนี้คุณอาจยึดแม่เหล็กไว้ที่ด้านล่าง

หากยึดแม่เหล็กไว้ที่ด้านล่าง เครื่องครัวจะสามารถทำงานบนเตาแม่เหล็กไฟฟ้าได้

เพื่อให้แน่ใจว่ามีประสิทธิภาพสูงสุด โปรดใช้หม้อและกระทะที่มีก้นแบนที่ให้การกระจายความร้อนอย่างสม่ำเสมอ หากก้นไม่เรียบสม่ำเสมอ จะส่งผลต่อการถ่ายเทพลังงานและการนำความร้อน

วิธีใช้

เส้นผ่าศูนย์กลางขั้นต่ำของฐานหม้อ/กระทะสำหรับพื้นที่ปรุงอาหารที่แตกต่างกัน

เพื่อให้มั่นใจว่าเตาทำงานได้อย่างถูกต้อง หม้อจะต้องครอบคลุมจุดอ้างอิงหนึ่งจุดขึ้นไปที่ถูกระบุไว้บนพื้นผิวของเตา และจะต้องมีเส้นผ่าศูนย์กลางขั้นต่ำที่เหมาะสม

ใช้โซนปรุงอาหารที่สอดคล้องกับเส้นผ่านศูนย์กลางของก้นกระทะมากที่สุด

โซนปรุงอาหาร	เส้นผ่าศูนย์กลางของเครื่องครัวที่แนะนำ [มม.]
โซนปรุงอาหารด้านหน้า	120-200
โซนปรุงอาหารด้านหลัง	120-180

หม้อเปล่า/กระทะเปล่าหรือหม้อที่บาง

ห้ามใช้หม้อ/กระทะเปล่าหรือภาชนะที่บางบนเตา มีฉะนั้นแล้ว อุณหภูมิจะสูงมากเกินไปจนทำให้กระทะหรือผิวเตาเสียหาย และไม่สามารถตรวจสอบอุณหภูมิหรือปิดเครื่องโดยอัตโนมัติได้ หากเกิดเหตุการณ์ดังกล่าวขึ้น อย่าแตะต้องส่วนใดและรอให้ส่วนประกอบทั้งหมดเย็นตัวลง

หากข้อความแสดงข้อผิดพลาดปรากฏขึ้น ให้ดูที่ “การแก้ไขปัญหา”

คำแนะนำ/เคล็ดลับ

เสียงรบกวนในระหว่างการปรุงอาหาร

เมื่อมีการเปิดใช้งานโซนปรุงอาหาร อาจมีเสียงฮัมเกิดขึ้นได้เป็นระยะเวลานั้น ๆ นี่เป็นลักษณะของโซนปรุงอาหารที่ทำจากเซรามิก แก้วทั้งหมดและไม่ทำให้ฟังก์ชันการทำงานผิดพลาดหรืออายุการใช้งานของเครื่องใช้ไฟฟ้าลดลง เสียงรบกวนจะขึ้นอยู่กับภาชนะที่ใช้ งาน หากเกิดเสียงรบกวนมาก อาจแก้ไขได้ด้วยการเปลี่ยนภาชนะ

เสียงรบกวนในการทำงานปกติของเตาแม่เหล็กไฟฟ้า

เทคโนโลยีการเหนี่ยวนำจะทำงานโดยสร้างสนามแม่เหล็กไฟฟ้าเพื่อสร้างความร้อนโดยตรงที่ก้นของภาชนะปรุงอาหาร หม้อและกระทะ อาจก่อให้เกิดเสียงรบกวนหรือการสั่นสะเทือนได้หลายแบบทั้งนี้ขึ้นอยู่กับวิธีการในการผลิตผลิตภัณฑ์

เสียงรบกวนดังกล่าวมีรายละเอียดดังนี้:

เสียงฮัมระดับต่ำ (เหมือนหม้อแปลง)

เสียงรบกวนนี้เกิดขึ้นเมื่อปรุงอาหารโดยใช้ความร้อนสูง ซึ่งจะขึ้นอยู่กับปริมาณพลังงานที่ถ่ายโอนจากเตาไปยังภาชนะปรุงอาหาร

เสียงรบกวนจะหยุดหรือเงียบลงเมื่อระดับความร้อนลดลง

เสียงหวีดเจี๊ยบ ๆ

เสียงรบกวนนี้จะเกิดขึ้นเมื่อภาชนะที่ใช้ปรุงอาหารว่างเปล่า เสียงนี้จะหายไปเมื่อใส่ของเหลวหรืออาหารลงในภาชนะ

เสียงแตก

เสียงรบกวนนี้เกิดขึ้นกับภาชนะปรุงอาหารที่ทำจากวัสดุหลายชนิด วางทับซ้อนกัน

โดยเกิดจากการสั่นสะเทือนของพื้นผิวในจุดที่วัสดุต่าง ๆ กระแทกกัน เสียงรบกวนจะเกิดขึ้นบนภาชนะปรุงอาหารและอาจมีลักษณะแตกต่างกันไปโดยขึ้นอยู่กับปริมาณอาหารหรือของเหลวและวิธีการปรุงอาหาร (เช่น ต้ม เคี้ยว ทอด)

เสียงหวีดดัง

เสียงรบกวนนี้เกิดขึ้นกับภาชนะปรุงอาหารที่ทำจากวัสดุต่าง ๆ วางทับซ้อนกัน และเกิดขึ้นเมื่อมีการใช้งานด้วยกำลังไฟฟ้าสูงสุด รวมถึงเกิดขึ้นในบริเวณปรุงอาหารทั้งสองแห่ง เสียงรบกวนจะหยุดหรือเงียบลงเมื่อระดับความร้อนลดลง

เสียงเหล่านี้เป็นเสียงรบกวนปกติของผลิตภัณฑ์

เพื่อให้ระบบอิเล็กทรอนิกส์ทำงานได้อย่างถูกต้อง อุณหภูมิของเตาจำเป็นต้องได้รับการควบคุม เพื่อให้เป็นไปตามวัตถุประสงค์นี้ เตาตั้งโต๊ะจึงมีการติดตั้งพัดลมระบายความร้อนซึ่งจะทำงานเพื่อลดและควบคุมอุณหภูมิของระบบอิเล็กทรอนิกส์ พัดลมอาจยังคงทำงานต่อหลังจากปิดเครื่องแล้วหากอุณหภูมิที่ตรวจวัดได้ของเตายังคงร้อนเกินไปหลังจากที่ปิดเครื่อง

เสียงเป็นจังหวะ คล้ายเสียงตึกตอกของนาฬิกา

เสียงรบกวนนี้เกิดขึ้นเมื่อมีโซนปรุงอาหารอย่างน้อยสามโซนทำงานและจะหายไปหรือเบาลงเมื่อการปิดใช้งานบางโซน เสียงที่อธิบายไว้ถือเป็นองค์ประกอบตามปกติของเทคโนโลยีการเหนี่ยวนำและไม่ควรถือเป็นข้อบกพร่อง

การดูแลและทำความสะอาด

⚠ คำเตือน! ปิดเครื่องใช้ไฟฟ้าแล้วปล่อยให้เย็น ก่อนถอดปลั๊ก

⚠ คำเตือน! ปิดเครื่องใช้ไฟฟ้าแล้วปล่อยให้เย็น ก่อนทำความสะอาด

⚠ คำเตือน! เพื่อเหตุผลด้านความปลอดภัย อย่าทำความสะอาดเครื่องใช้ไฟฟ้าด้วยเครื่องฟั่นไอน้ำหรือเครื่องทำความสะอาดแรงดันสูง

⚠ คำเตือน! วัตถุแหลมคมและน้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนจะทำให้เครื่องใช้ไฟฟ้าเสียหาย ทำความสะอาดเครื่องใช้ไฟฟ้าแล้วนำเศษตกค้างออกด้วยน้ำและของเหลวเพื่อการล้างหลังจากใช้งานแต่ละครั้ง ควรนำเศษตกค้างของน้ำยาทำความสะอาดออกด้วย!

❶ รอยขีดข่วนหรือคราบดำบนกลาสเซรามิกที่ขจัดออกไม่ได้ ไม่ส่งผลกระทบต่อการใช้งานของเครื่องใช้ไฟฟ้า

ลบเศษตกค้างและคราบฝังแน่น:

- อาหารที่มีน้ำตาล พลาสติก เศษฟอยล์ตะกั่วควรล้างออกทันที เครื่องมือที่ดีที่สุดสำหรับทำความสะอาดพื้นผิวกระจกคือยางปาดกระจก (ไม่ได้ให้มาพร้อมเครื่องใช้ไฟฟ้า) วางยางปาดกระจกบนพื้นผิวกลาสเซรามิกที่มุมหนึ่ง แล้วนำเศษตกค้างออกโดยเลื่อนใบยางผ่านบนพื้นผิว ปาดเครื่องใช้ไฟฟ้าด้วยผ้าชื้นและของเหลวเพื่อทำความสะอาดเล็กน้อย สุดท้าย เช็ดเครื่องใช้ไฟฟ้าให้แห้งโดยใช้ผ้าสะอาด
- ควรล้างคราบหินปูน คราบน้ำ คราบไขมัน การเปลี่ยนสีโลหะหลังจากเครื่องใช้ไฟฟ้าเย็นลง โดยใช้น้ำยาทำความสะอาดกลาสเซรามิกหรือสแตนเลส

การแก้ไขปัญหา

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องใช้ไฟฟ้าไม่ทำงาน	ไฟดับหรือไฟฟ้าลัดวงจรในแหล่งจ่ายไฟของบ้านคุณ	
	การเสียบปลั๊กเข้ากับเต้ารับไม่เหมาะสม	ตรวจสอบแหล่งจ่ายไฟให้แน่ใจว่าเชื่อมต่อได้ถูกต้อง
	เครื่องใช้ไฟฟ้าเปิดเครื่องมากกว่า 10 วินาทีขึ้นไป	เปิดเครื่องใช้ไฟฟ้าอีกครั้ง
	ระบบล๊อคป้องกันเด็กถูกเปิด	ปิดใช้งานระบบล๊อคป้องกันเด็ก (ดูที่หัวข้อ “ฟังก์ชันล๊อคป้องกันเด็ก”)
	ช่องเซ็นเซอร์หลายช่องถูกสัมผัสพร้อมกัน	ทำความสะอาดวัตถุทั้งหมดบนแผงควบคุม ตรวจสอบดูว่าเมื่อพยายามตั้งค่าการควบคุม จะไม่มีสิ่งใดไปสัมผัสกับปุ่มควบคุมอื่น
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [C]	เครื่องครัวไม่เหมาะสำหรับการเหนี่ยวนำด้วยแม่เหล็กไฟฟ้า	เปลี่ยนเป็นเครื่องครัวที่เหมาะสมกับเตาแม่เหล็กไฟฟ้า
	ไม่มีเครื่องครัวในโซนปรุงอาหารหรือเส้นผ่าศูนย์กลางของเครื่องครัวน้อยกว่า 120 มม.	วางเครื่องครัวบนโซนปรุงอาหาร
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [2]	เครื่องครัวว่างเปล่า (ต้มจนแห้ง) หรืออุณหภูมิการปรุงสูงเกินไป	ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตหลังจาก 5 นาที หาก E2 ยังคงปรากฏอยู่ โปรดติดต่อสาขา IKEA ที่อยู่ใกล้ที่สุด
	ช่องอากาศเข้าและออกถูกบล็อค	
	อุณหภูมิรอบข้างสูงเกินไป	
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [3]	แหล่งจ่ายไฟหลักสูงกว่า AC 275V	เปลี่ยนเป็นแหล่งจ่ายไฟที่เหมาะสมกับผลิตภัณฑ์
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [4]	แหล่งจ่ายไฟหลักต่ำกว่า AC 100V	เปลี่ยนเป็นแหล่งจ่ายไฟที่เหมาะสมกับผลิตภัณฑ์
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [5]	เซ็นเซอร์อุณหภูมิของเครื่องใช้ไฟฟ้าไม่ทำงาน	โปรดติดต่อร้าน IKEA ที่ใกล้ที่สุด
เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: [E] → [6]	เครื่องครัวว่างเปล่า (ต้มจนแห้ง) หรืออุณหภูมิการปรุงสูงเกินไป	ปิดเครื่องและปล่อยให้เครื่องเย็นลง รวมทั้งป้องกันไม่ให้น้ำเดือดแห้ง

เครื่องใช้ไฟฟ้าหยุดทำงาน การบ่งชี้ข้อผิดพลาด: (E) + (0)	เกิดข้อผิดพลาดในการสื่อสารระหว่าง PCBA ของจอแสดงผลกับ PCBA ของไดรเวอร์	ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตหลังจาก 5 นาที หาก E0 ยังคงปรากฏอยู่ โปรดติดต่อสาขา IKEA ที่อยู่ใกล้ที่สุด
---	--	--

รหัสข้อผิดพลาดจะปรากฏขึ้นเมื่อเปิดเตาและเมื่อตรวจพบข้อผิดพลาด ซึ่งตัวอักษร E และตัวเลขจะปรากฏขึ้นเป็นระยะ ๆ (1 วินาที) และเกิดขึ้นซ้ำ ๆ

หากมีข้อผิดพลาด ให้ลองแก้ไขโดยปฏิบัติตามแนวทางการแก้ไข ปัญหา หากไม่สามารถแก้ไขปัญหาก็ได้ โปรดติดต่อร้านค้า IKEA ที่อยู่ใกล้ที่สุด

❗ หากคุณใช้งานเครื่องใช้ไฟฟ้าผิดวิธี ตัวแทนจำหน่ายอาจต้องคิดค่าใช้จ่าย แม้ว่าจะอยู่ในระยะเวลาประกัน

ข้อมูลทางเทคนิค

รุ่น	14OP22403
ประเภทของเตา	เตาแม่เหล็กไฟฟ้าแบบตั้งพื้น
จำนวนโซนหรือพื้นที่ปรุงอาหาร	2
กำลังไฟฟ้าพิกัด	3500 วัตต์
แรงดันไฟฟ้าพิกัด	220-240 V~
ความถี่พิกัด	50/60 Hz
ความหนา	520 มม.
ความกว้าง	280 มม.
ความสูง	62 มม.
น้ำหนักสุทธิ	4.2 กก.


❗ หมายเลขเครื่องใช้และหมายเลขซีเรียลจะอยู่ที่แผ่นป้ายพิกัดที่ด้านล่างของเครื่อง

หมายเลขประจำเครื่อง (เริ่มต้นด้วย SN, รหัส 22 หลัก)

หมายเลขซีเรียล: xxxxxxxxxxxxxxxxxxxxxx

หมายเลขเครื่องใช้ (รหัส 8 หลัก)

005.931.29

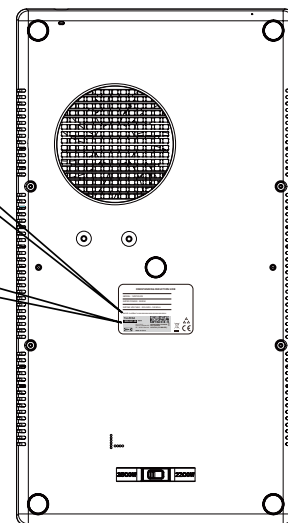

รูปภาพสำหรับการอ้างอิงเท่านั้น

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม

การกำจัดเครื่องใช้ไฟฟ้าในครัวเรือน

เครื่องหมาย  บนผลิตภัณฑ์หรือบนบรรจุภัณฑ์ระบุว่าไม่ควรกำจัดขยะผลิตภัณฑ์นี้เป็นของเสียจากครัวเรือน แต่ควรนำไปรวมไว้ในจุดที่เหมาะสมเพื่อการรีไซเคิลอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์ ด้วยการช่วยให้กำจัดผลิตภัณฑ์อย่างถูกต้อง คุณจะช่วยป้องกันผลกระทบเชิงลบต่อสิ่งแวดล้อมและสุขภาพของมนุษย์ มิฉะนั้นอาจก่อให้เกิดการจัดการของเสียจากผลิตภัณฑ์นี้อย่างไม่เหมาะสม โปรดติดต่อสภาท้องถิ่น บริการกำจัดของเสียจากครัวเรือน หรือร้านที่คุณซื้อผลิตภัณฑ์ของคุณ เพื่อขอรับข้อมูลรายละเอียดเพิ่มเติมเกี่ยวกับการรีไซเคิลผลิตภัณฑ์นี้

⚠ คำเตือน! ทำตามขั้นตอนต่อไปเพื่อกำจัดเครื่องใช้ไฟฟ้า:

- ดึงปลั๊กออกจากเต้ารับไฟฟ้า
- ตัดสายไฟหลักแล้วกำจัดทิ้งไป

การกำจัดวัสดุบรรจุภัณฑ์

วัสดุที่มีเครื่องหมาย  สามารถรีไซเคิลได้
กำจัดบรรจุภัณฑ์ในภาชนะรวบรวมที่เหมาะสมเพื่อรีไซเคิลต่อไป

การประหยัดพลังงาน

คุณสามารถประหยัดพลังงานในระหว่างการปรุงอาหารแต่ละวันได้ หากคุณปฏิบัติตามคำแนะนำด้านล่างนี้

- หากทำได้ ควรวางฝาไวนบนกระทะเสมอ
- วางเครื่องครัวไวนบนโซนปรุงอาหารก่อนเปิดเครื่อง
- ก้นเครื่องครัวควรมีความหนาและแบนเรียบเท่าที่จะทำได้
- เมื่อคุณต้องการต้มน้ำร้อน ให้ใช้เฉพาะปริมาณที่คุณต้องการเท่านั้น
- หากเป็นไปได้ ควรวางฝาไวนบนเครื่องครัวเสมอ
- วางเครื่องครัวไว้ตรงกลางโซนปรุงอาหารโดยตรง
- ใช้ความร้อนที่เหลือเพื่ออุ่นอาหารหรือละลายอาหาร
- หากทำได้ ควรวางฝาไวนบนกระทะเสมอ
- วางเครื่องครัวไวนบนโซนปรุงอาหารก่อนเปิดเครื่อง
- ก่อนที่คุณจะเปิดใช้งานโซนปรุงอาหาร ให้วางเครื่องครัวไว้ในโซนปรุงอาหารก่อน
- วางเครื่องครัวขนาดเล็กไวนบนโซนปรุงอาหารขนาดเล็ก

การรับประกันของ IKEA

การรับประกันของ IKEA มีระยะเวลานานเพียงใด

การรับประกันนี้มีอายุ 2 ปีนับจากวันแรกที่ซื้อเครื่องใช้ไฟฟ้าของคุณที่ IKEA เว้นแต่จะระบุไว้เป็นอย่างอื่นในกฎหมายของประเทศ โปรดไปที่ IKEA.com เพื่อดูว่ามี การรับประกันใดบ้างในประเทศของคุณ ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากเครื่องใช้ไฟฟ้าได้รับการซ่อมแซมภายใต้การรับประกัน การซ่อมแซมนี้จะไม่ขยายระยะเวลาการรับประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

ติดต่อร้าน IKEA ที่ใกล้ที่สุด

การรับประกันนี้ครอบคลุมอะไรบ้าง

การรับประกันครอบคลุมถึงความผิดปกติของเครื่องใช้ไฟฟ้าซึ่งเกิดจากโครงสร้างที่ผิดปกติหรือความผิดปกติของวัสดุโดยนับจากวันที่ซื้อจาก IKEA

การรับประกันนี้มีผลบังคับใช้เฉพาะกับการใช้งานภายในประเทศเท่านั้น

ข้อยกเว้นจะระบุไว้ภายใต้หัวข้อ "การรับประกันนี้ไม่ครอบคลุมอะไรบ้าง" ภายในระยะเวลาการรับประกัน ค่าใช้จ่ายในการแก้ไขความผิดปกติ เช่น การซ่อมแซมชิ้นส่วน ค่าแรงงาน และค่าเดินทางจะได้รับความคุ้มครองก็ต่อเมื่อพนักงานสามารถเข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่มีค่าใช้จ่ายพิเศษอื่น ๆ ะไหล่เก่าที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญหา

IKEA จะตรวจสอบผลิตภัณฑ์และตัดสินใจตามดุลยพินิจของตน แต่เพียงผู้เดียว หากสินค้าชิ้นนั้น ๆ อยู่ภายใต้การรับประกันนี้ หากพิจารณาว่าครอบคลุม IKEA จะตัดสินใจ (ตามดุลยพินิจของ IKEA ฝ่ายเดียว) ที่จะซ่อมแซมผลิตภัณฑ์ที่บกพร่องหรือเปลี่ยนผลิตภัณฑ์เดียวกันหรือเทียบเท่าให้

การรับประกันนี้ไม่ครอบคลุมอะไรบ้าง

- การสึกหรอและร่องรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากความตั้งใจหรือประมาท ความเสียหายที่เกิดจากการไม่ดูแลนำการใช้งาน การติดตั้งไม่ถูกต้องหรือไม่ถูกต้องกับแรงดันไฟฟ้าผิด ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า สนิมเสียหายจากการกัดกร่อนหรือน้ำ รวมถึงแต่ไม่จำกัดเพียง ความเสียหายที่เกิดจากไขปนขาวในน้ำมากเกินไป และความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ
- ชิ้นส่วนที่ไม่เกี่ยวกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดข่วนและสีที่อาจแตกต่างกันไปจากเดิม
- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอม และการทำความสะอาดหรือชำระล้างใส่กรอง ระบบระบายน้ำหรือลื่นชกใส่น้ำสบู่
- ความเสียหายที่เกิดกับชิ้นส่วนต่อไปนี้: เซรามิกแก้ว อุปกรณ์เสริม ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร ก่อน้ำดีและระบายน้ำ ซิล หลอดไฟและที่ห่อหุ้มหลอดไฟ หน้าจอ ปุ่ม ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดจากความผิดพลาดของการผลิต
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับการแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม

- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ
- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดกับผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง
- ค่าใช้จ่ายสำหรับการดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA อย่างไรก็ตาม หาก IKEA มีการแต่งตั้งผู้ให้บริการหรือพันธมิตรผู้ให้บริการที่ได้รับอนุญาต เพื่อเข้าซ่อมแซมหรือเปลี่ยนเครื่องตามเงื่อนไขของการรับประกันนี้ ผู้ให้บริการที่ได้รับการแต่งตั้งหรือพันธมิตรที่ได้รับอนุญาตจะมีหน้าที่ติดตั้งอุปกรณ์ที่ซ่อมแซมใหม่หรือติดตั้งอุปกรณ์ทดแทนหากจำเป็น

กฎหมายของประเทศมีผลอย่างไร

การรับประกันของ IKEA ให้สิทธิทางกฎหมายที่เฉพาะแก่คุณซึ่งครอบคลุมหรือเกินกว่าข้อกำหนดทางกฎหมายในท้องถิ่นทั้งหมด อย่างไรก็ตามเงื่อนไขเหล่านี้ไม่ได้จำกัดสิทธิใด ๆ ของผู้บริโภคดังที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

การรับประกันนี้ใช้ได้เฉพาะในประเทศที่ซื้อผลิตภัณฑ์เท่านั้น การบริการจะดำเนินการภายใต้กรอบของเงื่อนไขการรับประกัน การผูกพันในการให้บริการภายใต้กรอบของการรับประกันจะมีอยู่ก็ต่อเมื่ออุปกรณ์นั้น ๆ ได้รับการติดตั้งโดยสอดคล้องกับ:

- ข้อกำหนดทางเทคนิคของประเทศที่มีการเรียกร้องสิทธิการรับประกัน
- คำแนะนำการประกอบและข้อมูลความปลอดภัยของกลุ่มผู้ใช้

บริการหลังการขายสำหรับเครื่องใช้ไฟฟ้า IKEA

โปรดอย่าลังเลที่จะติดต่อ IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
- ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA

เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



ศูนย์บริการลูกค้าหลังการขาย IKEA จะช่วยเหลือคุณทางโทรศัพท์ โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูแค็ตตาล็อก IKEA หรือเยี่ยมชม www.ikea.com เพื่อค้นหาหมายเลขโทรศัพท์ร้านใกล้บ้านและเวลาทำการ

เพื่อให้บริการแก่คุณได้รวดเร็วขึ้น โปรดเตรียมหมายเลขประจำสินค้า IKEA (รหัส 8 หลัก) ซึ่งติดอยู่ที่ป้ายแสดงข้อมูลทางเทคนิคบนเครื่องใช้ไฟฟ้าของคุณไว้เสมอ

เก็บใบเสร็จรับเงินเอาไว้!

นี่เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้การรับประกัน ใบเสร็จรับเงินการขายยังแจ้งชื่อ IKEA และหมายเลขประจำสินค้า (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละเครื่องที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ของร้าน IKEA ใกล้บ้าน เราขอแนะนำให้คุณอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

