

VIGGBO



Design and Quality
IKEA of Sweden

ENGLISH	3
ไทย	11

Contents

Safety information	3	What to do if...	7
Installation	5	Technical data	8
Product description	5	Environmental concerns	9
Control panel	5	IKEA GUARANTEE	9
Cleaning and maintenance	6		

⚠ Safety information

Before first use

- For your own safety and for the correct operation of the appliance, please read this manual carefully before installation and commissioning.
- Remove cardboard protection pieces, protective film and adhesive labels from accessories. Check the appliance for any transport damage.
- To avoid damage, do not place any objects weighing more than 5 kg on the appliance.

⚠ This is the attention symbol, pertaining to safety, which alerts users to potential risks to themselves and others.

All safety warnings are preceded by the attention symbol and the following terms:

⚠ **DANGER:** Indicates a hazardous situation which, if not avoided, will cause serious injury.

⚠ **WARNING:** Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential danger/warning present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions.

Precautions and general recommendations:

- The electrical installation and the electrical connection must be carried out by a qualified technician according to the manufacturer's instructions and in compliance with the local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- The appliance must be disconnected from the power supply before carrying out any installation work.

⚠ **WARNING:** Failure to install the screws or fastening elements indicated by the instructions may cause electrical hazards.

- Earthing of the appliance is compulsory. (Not possible for class II hoods identified by the symbol  on the rating plate).
- Do not pull the power supply cable in order to unplug the appliance.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- All other maintenance services must be carried out by a specialised technician.
- When drilling through the wall pay attention not to damage electric connections and/or pipes.
- The manufacturer rejects all responsibilities for any damage caused by improper use or wrong settings.
- Appropriate maintenance and cleaning ensure the good working order and the best performance of the appliance. Regularly clean all stubborn surface dirt to avoid grease build up. Remove and clean or change the filter regularly. This must be completed in accordance with the "Cleaning and maintenance" instructions provided.
- Do not cook food over the flame ("flambé") under the appliance. The use of open flames may cause a fire.
- Failure to follow the instructions when cleaning the hood and when cleaning and replacing the filters may result in the risk of fire.
- There shall be adequate ventilation if the hood is being used at the same time as other appliances using gas or other combustible materials.
- Do not leave frying pans unattended when frying, as the frying oil may catch fire.
- The hood is not a work surface. Do not place objects weighing more than 5 kg totally on it.

- Always wear appropriate working gloves during installation and maintenance.
- This appliance is not suitable for outdoor use.

⚠ WARNING: When the hob is in use, accessible parts of the hood may become hot.

Installation and connection

In the event of problems, contact an Authorized Service Centre. To prevent any damage, only remove the appliance from its packaging at the time of installation.

Preparing for installation

⚠ WARNING: The hood should only be lifted and installed by two or more people.

The minimum distance between the hob and the bottom part of the hood must not be less than 65 cm for burning gas or other fuels and 50 cm for electric cookers. Before installation also check the minimum distances stated in the manual of the cooker.

If the installation instructions for the cooker specify a greater distance between cooker and hood, this distance must be observed.

Electrical connection

Make sure the power voltage specified on the appliance rating plate is the same as the mains voltage.

This information can be found on the inside of the hood, under the grease filter. Power cable replacement (type H05 VV-F) must be carried out by a qualified electrician. Contact an authorized service centre.

If the hood is fitted with an electric plug, connect the plug to a socket complying with current regulations, located in an accessible place.

⚠ WARNING: If no plug is fitted (direct wiring to the mains), or if the socket is not located in an accessible place, a qualified electrician should

install a standardised double pole power switch that will enable complete isolation from the mains in case of category III overvoltage conditions, in accordance with wiring rules.

Installation

The hood is designed for only “Recirculation installation”.

Recirculation installation



(see symbol in installation booklet)

The air is filtered through a charcoal filter, and then resent into the room.

IMPORTANT: Ensure appropriate air circulation around the hood.

IMPORTANT: The hood comes with a pre-installed charcoal filter.


Replacement filters are available at IKEA stores or IKEA.com

The hood should be installed away from particularly dirty areas, windows, doors and heat sources as they are likely to make the system less effective and increase the risk of fire.

The accessories for wall fixing are not included because walls made of different materials require different types of fixing accessories. Use fixing systems suitable for the walls of your home and the weight of the appliance. For more details, contact a specialised dealer.


Keep this booklet for future consultation.

Product description

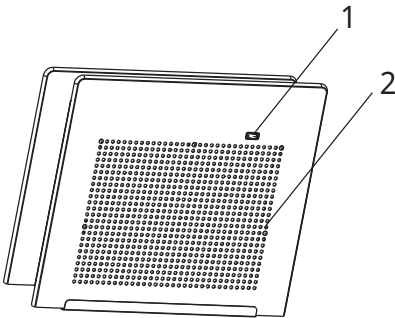

- 1 Switch
- 2 Grease filter

Control panel

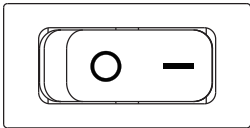

- : ON button
- : OFF button

Cleaning and maintenance

⚠ WARNING:

- Never use steam cleaning equipment.
- Disconnect the appliance from the power supply.

IMPORTANT: Do not use corrosive or abrasive detergents. If any of these products accidentally comes into contact with the appliance, clean immediately with a damp cloth.

- Clean the surface with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Finish off with a dry cloth.

IMPORTANT: Do not use abrasive sponges, metallic scrapers or scourers. Over time, these can damage the surface.

- Use detergents specifically designed for cleaning the appliance and follow the manufacturer instructions.


IMPORTANT: Clean the filters at least monthly to remove any oil or grease residuals.

Cleaning the grease filter


The metal grease filter has an unlimited life and must be washed once a month by hand or in a dishwasher using a short cycle at a low temperature. When cleaning in a dishwasher, the grease filter may become dull; this does not affect its filtering capacity.

Charcoal Filter maintenance


1. Unplug the appliance or disconnect the power supply.
2. Remove the screws.
3. Remove the panel.

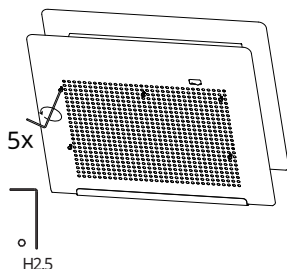


4. Rotate and remove the used activated carbon. Replace with new activated carbon. The used activated carbon cannot be recovered and cleaned. Replacement is recommended every 2-3 months.

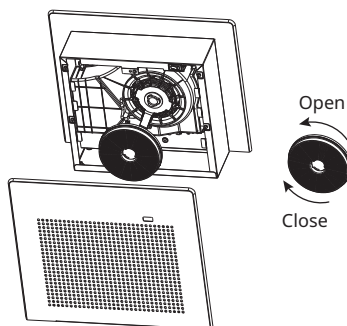

5. After disassembling the panel, take out the filter screen for cleaning.

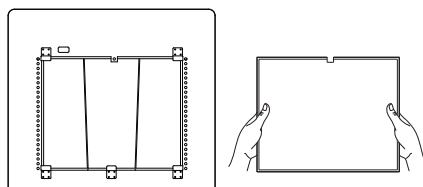

6. Put back the filter on the aesthetic panel, insert it through the back panel and tighten all 5 screws.

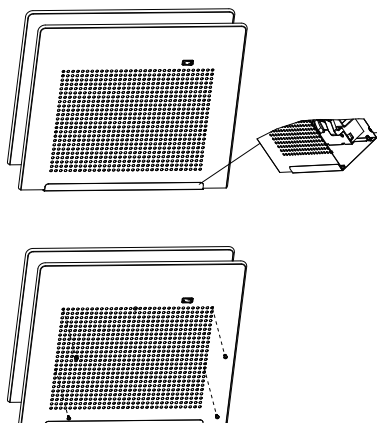

What to do if...

Problem	Possible cause	Solution
The appliance does not work	There is no mains electrical power	Check for the presence of mains electrical power. Turn off the appliance and restart it to see if the fault persists.
	The appliance is not connected to the electrical supply	Check if the appliance is connected to the electrical supply. Turn off the appliance and restart it to see if the fault persists.
The hood's suction level is not enough	The anti-odors filters are dirty	Check that the anti-odour filters are properly washed as recommended
	The air duct adjusting plate is on wrong position	Check the air duct adjustment plate set to the external exhaust mode 

Before contacting the Authorized Service Centre:
Switch the appliance on again to see if the problem has disappeared. If not, switch it off again and repeat the operation after an hour. If your appliance still does not work properly after carrying out the checks listed in the troubleshooting guide and switching the appliance on again, contact the Authorized Service Centre, clearly explaining the problem and specifying:


- the type of fault;
- the model;
- the type and serial number of the appliance (given on the rating plate).

Technical data

Type of product	Wall mounted hood		
Dimensions	Width	mm	522
	Depth	mm	458
	Total height in extraction installation version min-max	mm	149
	Total height in recirculation installation version min-max	mm	149
Total power		W	30
Installation minimum height - gas hob		mm	650
Installation minimum height - electric hob		mm	500
Product weight		kg	5.5

Model identifier		VIGGBO 80630321
Maximum air flow	m³/h	90
Power consumption off mode	W	0
A-waighted sound power emission at maximum speed	dB(A)	56

Technical information is provided on the rating plate inside the appliance.

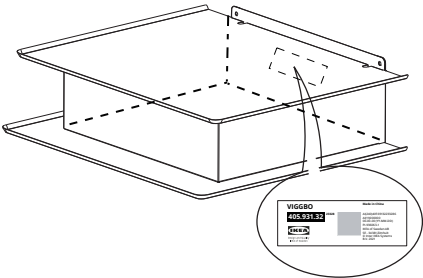

Environmental concerns

Disposal of packaging

The packaging material is 100% recyclable and is marked with the recycle symbol . The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.



The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

Electrical safety of the appliance can only be guaranteed if it is correctly connected to an approved earthing system.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA. The original sales receipt is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Who will execute the service?

IKEA service provider will provide the service through its own service operations or authorized service partner network.

What does this guarantee cover?

The guarantee covers faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This guarantee applies to domestic use only. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered, provided that the appliance is accessible for repair without special expenditure. On these conditions the respective local regulations are applicable. Replaced parts become the property of IKEA.

What will IKEA do to correct the problem?

IKEA appointed Service Provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA Service Provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage

caused by failure to observe operating instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electro-chemical reaction, rust, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.

- Consumable parts including batteries and lamps.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage caused by foreign objects or substances and cleaning or unblocking of filters, drainage systems or soap drawers.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non-original parts have been used.
- Repairs caused by installation which is faulty or not according to specification.
- The use of the appliance in a non-domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport. However, if IKEA delivers the product to the

customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.

- Cost for carrying out the initial installation of the IKEA appliance.
- However, if an IKEA appointed Service Provider or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the appointed Service Provider or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.
- All plumbing and electrical installation, are not the responsibility of IKEA, and customer must complete these work before the execution work.

How country law applies

The IKEA guarantee gives you specific legal rights, which cover or exceed all the local legal demands. However these conditions do not limit in any way consumer rights described in the local legislation.

Area of validity

This warranty is valid only in the country where the product has been purchased; the services will be provided in the framework of the guarantee conditions. An obligation to carry out services in the framework of the guarantee exists only if the appliance complies and is installed in accordance with:

- the technical specifications of the country in which the guarantee claim is made;
- the Assembly Instructions and User Manual Safety Information;

The dedicated AFTER SALES for IKEA appliances

Please don't hesitate to contact IKEA appointed Authorized Service Centre to:

- make a service request under this guarantee;
- ask for clarifications on installation of the IKEA appliance in the dedicated IKEA kitchen furniture;
- ask for clarification on functions of IKEA appliances.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual before contacting us.

How to reach us if you need our service



i The IKEA after sales customer service centre will assist you on the phone with basic trouble-shooting for your appliances at the time of service call request. Please refer to **www.IKEA.com** and select your local store for local store phone numbers and opening times.

i Before calling us, assure that You have to hand the IKEA article number (8 digit code) and the Serial Number (8 digit code that can be found on the rating plate) for the appliance of which you need our assistance.

i **SAVE THE SALES RECEIPT!** It is your proof of purchase and required for the guarantee to apply. Note that the receipt reports also the IKEA article name and number (8 digit code) for each of the appliances you have purchased.

Do you need extra help?

For any additional questions not related to After Sales of your appliances please contact your nearest IKEA store call centre. We recommend you read the appliance documentation carefully before contacting us.

สารบัญ

ข้อมูลเพื่อความปลอดภัย	11	ต้องทำอะไรถ้า...	15
การติดตั้ง	13	ข้อมูลทางเทคนิค	16
คำอธิบายของผลิตภัณฑ์	13	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	17
แผนกควบคุม	13	การรับประกันของ IKEA	17
การทำความสะอาดและการบำรุงรักษา	14		

⚠ ข้อมูลเพื่อความปลอดภัย

ก่อนใช้งานครั้งแรก

- เพื่อความปลอดภัยของคุณเองและเพื่อการใช้งานเครื่องใช้ไฟฟ้าอย่างถูกต้อง โปรดอ่านคู่มือเล่มนี้อย่างละเอียดก่อนที่จะทำการติดตั้งและใช้งาน
- ถอดชิ้นส่วนป้องกันที่เป็นกระดาษแข็ง ฟลัมป้องกัน และฉลากกาวออกจากอุปกรณ์เสริม ตรวจสอบว่าเครื่องใช้ไฟฟ้ามีความเสียหายเนื่องจากการขนส่งหรือไม่
- เพื่อเป็นการหลีกเลี่ยงความเสียหาย โปรดอย่าวางวัตถุที่มีน้ำหนักมากกว่า 5 กก. ไว้บนเครื่องใช้ไฟฟ้า

⚠ นี่เป็นสัญลักษณ์ความใส่ใจที่เกี่ยวข้องกับความปลอดภัย ซึ่งจะแจ้งเตือนผู้ใช้ให้ทราบถึงความเสี่ยงที่อาจเกิดขึ้นต่อตนเองและผู้อื่น คำเตือนด้านความปลอดภัยทั้งหมดจะขึ้นต้นด้วยสัญลักษณ์ความใส่ใจและข้อความต่อไปนี้:

⚠ **อันตราย:** บ่งบอกถึงสถานการณ์ที่เป็นอันตราย ซึ่งหากไม่หลีกเลี่ยง จะส่งผลให้เกิดการบาดเจ็บอย่างร้ายแรงได้

⚠ **คำเตือน:** บ่งบอกถึงสถานการณ์ที่อันตราย ซึ่งหากไม่หลีกเลี่ยง อาจส่งผลให้เกิดการบาดเจ็บอย่างร้ายแรงได้

คำเตือนด้านความปลอดภัยทั้งหมดจะให้รายละเอียดที่เฉพาะเจาะจงเกี่ยวกับคำเตือน/อันตรายที่อาจเกิดขึ้น รวมถึงวิธีการในการลดความเสี่ยงที่อาจทำให้เกิดการบาดเจ็บ ความเสียหาย และไฟฟ้าช็อต ซึ่งเป็นผลมาจากการใช้งานเครื่องใช้ไฟฟ้าอย่างไม่เหมาะสม ทำตามคำแนะนำต่อไปนี้อย่างระมัดระวัง

ข้อควรระวังและคำแนะนำทั่วไป:

- การติดตั้งอุปกรณ์ไฟฟ้าและการเชื่อมต่อกระแสไฟฟ้าจะต้องดำเนินการโดยช่างผู้ชำนาญตามคำแนะนำของผู้ผลิตและเป็นไป

ตามข้อกำหนดด้านความปลอดภัยในท้องถิ่น ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใด ๆ ของเครื่องใช้ไฟฟ้า เว้นแต่จะได้รับการระบุไว้อย่างเฉพาะเจาะจงในคู่มือการใช้งาน

- เครื่องใช้ไฟฟ้าจะต้องถูกตัดการเชื่อมต่อจากแหล่งจ่ายไฟก่อนที่จะดำเนินการติดตั้งใด ๆ

⚠ **คำเตือน:** ความผิดพลาดในการติดตั้งสกปรกหรือส่วนประกอบการยึดเหนี่ยวตามที่ระบุไว้ในคำแนะนำ อาจส่งผลให้เกิดอันตรายทางไฟฟ้าได้

- การต่อสายดินของเครื่องใช้ไฟฟ้าเป็นสิ่งที่ไม่ได้ (ไม่สามารถใช้ได้กับเครื่องดูดควันที่มีสัญลักษณ์ระบุเป็นคลาส II  เป็นป้ายพิกัด)
- อย่าดึงที่สายไฟโดยตรงเพื่อถอดปลั๊กเครื่องใช้ไฟฟ้า
- ส่วนประกอบทางไฟฟ้าจะต้องไม่สามารถเข้าถึงได้โดยผู้ใช้หลังจากที่ติดตั้งเสร็จเรียบร้อยแล้ว
- ห้ามสัมผัสกับเครื่องใช้ไฟฟ้าด้วยส่วนของร่างกายที่เปียก และห้ามใช้งานเครื่องเมื่อเต็มไปด้วยเหงื่อ
- เด็กอายุ 8 ขวบขึ้นไปและผู้บกพร่องทางกายภาพ ความรู้สึก หรือทางจิตใจ หรือขาดประสบการณ์และความรู้สามารถใช้เครื่องใช้ไฟฟ้าไม่ได้ หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้านี้ด้วยวิธีที่ปลอดภัย และเข้าถึงอันตรายที่อาจเกิดขึ้น ไม่ควรปล่อยให้เด็กเล่นเตา ไม่ควรให้เด็กทำความสะอาดและบำรุงรักษาโดยไม่มีผู้ใหญ่ดูแล
- บริการด้านการบำรุงรักษาอื่น ๆ ทั้งหมดจะต้องได้รับการดำเนินการโดยช่างเทคนิคเฉพาะทาง
- เมื่อทำการเจาะรูบนผนัง ต้องระมัดระวังอย่าให้เกิดความเสียหายกับขั้วต่อไฟฟ้าและ/หรือท่อ
- ผู้ผลิตปฏิเสธความรับผิดชอบทั้งหมดสำหรับความเสียหายใด ๆ ที่เกิดจากการใช้งานที่ไม่ถูกต้องหรือการตั้งค่าที่ผิดพลาด

- การบำรุงรักษาและการทำความสะอาดอย่างเหมาะสมจะช่วยให้แน่ใจว่าเครื่องใช้ไฟฟ้าสามารถทำงานได้เป็นอย่างดีและมีประสิทธิภาพสูงสุด ทำความสะอาดคราบสกปรกที่ฝังแน่นบนพื้นผิวอย่างสม่ำเสมอเพื่อหลีกเลี่ยงการสะสมของไขมัน ถอดทำความสะอาดหรือเปลี่ยนตัวกรองเป็นประจำ การดำเนินการนี้จะต้องได้รับการดำเนินการโดยสอดคล้องกับคำแนะนำเกี่ยวกับ “การทำความสะอาดและการบำรุงรักษา” ที่ได้รับไว้
- ห้ามทำการปรุงอาหารด้วยเปลวไฟ (“flambé”) ที่อยู่ใต้เครื่อง การใช้เปลวไฟปรุงอาหารโดยตรงอาจส่งผลให้เกิดไฟไหม้ได้
- การไม่ปฏิบัติตามคำแนะนำเมื่อทำความสะอาดเครื่องดูดควัน และในระหว่างที่ทำความสะอาดและเปลี่ยนตัวกรอง อาจส่งผลให้เกิดความเสี่ยงในการเกิดไฟไหม้ได้
- การระบายอากาศที่เพียงพอถือเป็นสิ่งจำเป็น หากเครื่องดูดควันถูกใช้งานพร้อมกับเครื่องใช้ไฟฟ้าอื่น ๆ ที่ใช้แก๊สหรือวัสดุติดไฟได้
- ห้ามทิ้งกระถังไว้โดยไม่มีการเฝ้าดูในระหว่างที่ทอด เนื่องจากน้ำมันที่ทอดอาจติดไฟได้
- เครื่องดูดควันไม่ใช่พื้นผิวสำหรับการทำงาน ดังนั้นจะต้องไม่วางสิ่งของที่น้ำหนักมากกว่า 5 กิโลกรัมไว้บนตัวเครื่องโดยตรง
- ในระหว่างที่ทำการติดตั้งและบำรุงรักษาเครื่อง จะต้องสวมถุงมือทำงานที่เหมาะสมอยู่เสมอ
- เครื่องใช้ไฟฟ้านี้ไม่เหมาะสำหรับการใช้งานภายนอกอาคาร

⚠ คำเตือน: ในระหว่างที่ใช้งานเตา ส่วนที่เข้าถึงได้ของเครื่องดูดควันอาจมีความร้อน

การติดตั้งและการเชื่อมต่อ

หากเกิดปัญหาขึ้น โปรดติดต่อศูนย์บริการที่ได้รับอนุญาต เพื่อเป็นการป้องกันความเสียหาย โปรดถอดเฉพาะเครื่องใช้ไฟฟ้าออกจากบรรจุกitchen ในระหว่างที่ติดตั้ง

การเตรียมการสำหรับการติดตั้ง

⚠ คำเตือน: การยกเครื่องดูดควันขึ้นเพื่อทำการติดตั้งควรได้รับการดำเนินการโดยบุคคลตั้งแต่สองคนขึ้นไปเท่านั้น

ระยะห่างขั้นต่ำระหว่างเตากับส่วนล่างของเครื่องดูดควันต้องไม่น้อยกว่า 65 ซม. เมื่อใช้แก๊สหรือเชื้อเพลิงอื่น ๆ และไม่น้อยกว่า 50 ซม. เมื่อใช้เตาไฟฟ้า ก่อนที่จะทำการติดตั้ง ควรตรวจสอบระยะห่างขั้นต่ำตามที่ระบุไว้ในคู่มือสำหรับเตา

หากคำแนะนำสำหรับการติดตั้งเตา มีภาระบ่งชี้ระยะห่างระหว่างเตากับเครื่องดูดควันที่มากกว่าค่านี้ โปรดใช้ระยะห่างดังกล่าว

การเชื่อมต่อไฟฟ้า

ตรวจสอบว่าแรงดันไฟฟ้าที่ระบุอยู่บนป้ายพิกัดของเครื่องใช้ไฟฟ้ามีค่าเท่ากับแรงดันไฟฟ้าเมนที่ใช้งานอยู่

ข้อมูลนี้สามารถพบได้ที่ด้านในของเครื่องดูดควัน โดยอยู่ใต้ตัวกรองไขมัน การเปลี่ยนสายไฟ (ประเภท H05 VV-F) จะต้องได้รับการดำเนินการโดยช่างไฟฟ้าผู้ชำนาญ โปรดติดต่อศูนย์บริการที่ได้รับอนุญาต

หากเครื่องดูดควันมาพร้อมกับปลั๊กไฟ ให้เสียบปลั๊กไฟเข้ากับเต้ารับที่เป็นไปตามข้อบังคับเกี่ยวกับปริมาณกระแสไฟฟ้าและอยู่ในตำแหน่งที่เข้าถึงได้

⚠ คำเตือน: หากไม่ได้มาพร้อมกับปลั๊กไฟ (ต่อสายตรงเข้ากับไฟเมน) หรือหากเต้ารับอยู่ในจุดที่ไม่สามารถเข้าถึงได้ ช่างไฟฟ้าผู้ชำนาญควรติดตั้งสวิตช์ไฟมาตรฐานแบบสองขั้วที่สามารถตัดการเชื่อมต่อจากแหล่งจ่ายไฟหลักได้อย่างสมบูรณ์ ในกรณีที่มีแรงดันไฟฟ้าเกินประเภท III ตามกฎระเบียบการเดินสายไฟ

การติดตั้ง

เครื่องดูดควันได้รับการออกแบบมาโดยเฉพาะสำหรับ "การติดตั้งแบบหมุนเวียนอากาศ"

การติดตั้งแบบหมุนเวียนอากาศ



(โปรดดูสัญลักษณ์ ในคู่มือการติดตั้ง)

อากาศจะถูกกรองผ่านตัวกรองถ่าน แล้วถูกส่งกลับเข้าไปในห้อง

สิ่งสำคัญ: ตรวจสอบให้แน่ใจว่าอากาศหมุนเวียนรอบ ๆ เครื่องดูดควันได้อย่างเหมาะสม

สิ่งสำคัญ: เครื่องดูดควันมาพร้อมกับตัวกรองถ่านที่ได้รับการติดตั้งไว้ล่วงหน้า


ตัวกรองทดแทนสามารถหาซื้อได้ที่ร้าน IKEA หรือที่ IKEA.com

เครื่องดูดควันควรได้รับการติดตั้งในตำแหน่งที่ห่างจากบริเวณที่สกปรกเป็นพิเศษ หน้าต่าง ประตู และแหล่งกำเนิดความร้อน เนื่องจากบริเวณเหล่านี้อาจทำให้ระบบทำงานด้วยประสิทธิภาพที่ต่ำลงและส่งผลให้เกิดความเสี่ยงต่อการเกิดไฟไหม้ได้

อุปกรณ์เสริมสำหรับการยึดผนังจะไม่รวมอยู่ในบรรจุภัณฑ์เนื่องจากผนังสามารถทำจากวัสดุได้หลายชนิด ซึ่งต้องใช้อุปกรณ์เสริมสำหรับการยึดที่แตกต่างกัน โปรดใช้ระบบการยึดที่เหมาะสมสำหรับผนังบ้านของคุณและน้ำหนักของเครื่องใช้ไฟฟ้า หากต้องการรายละเอียดเพิ่มเติม โปรดติดต่อตัวแทนจำหน่ายเฉพาะทาง


โปรดเก็บคู่มือเล่มนี้ไว้เพื่อใช้อ้างอิงข้อมูลในอนาคต

คำอธิบายของผลิตภัณฑ์

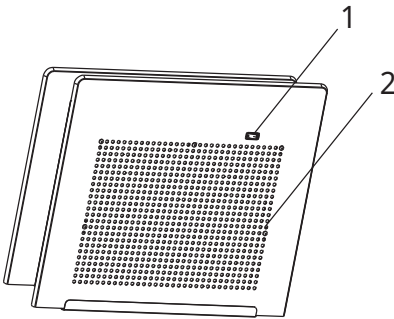

- 1 สวิทช์
- 2 ตัวกรองไขมัน

แผงควบคุม

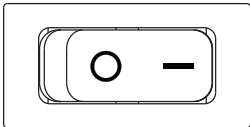

- : ปุ่มเปิด
- : ปุ่มปิด

การทำความสะอาดและการบำรุงรักษา

⚠ คำเตือน:

- ห้ามใช้อุปกรณ์ที่ทำความสะอาดด้วยไอน้ำอย่างเด็ดขาด
- ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟ

สิ่งสำคัญ: ห้ามใช้น้ำยาซักล้างที่มีฤทธิ์กัดกร่อนหรือสารขัดสี หากผลิตภัณฑ์เหล่านี้สัมผัสกับเครื่องใช้ไฟฟ้าโดยบังเอิญ จะต้องทำความสะอาดด้วยผ้าเปียกโดยทันที

- ทำความสะอาดพื้นผิวด้วยผ้าเปียก หากเครื่องใช้ไฟฟ้าสกปรกมาก ให้หยดน้ำยาซักล้างลงในน้ำเพียงสองสามหยด จากนั้นให้ใช้ผ้าแห้งเช็ดในชั้นสุดท้าย

สิ่งสำคัญ: ห้ามใช้ฟองน้ำที่มีฤทธิ์กัดกร่อน เครื่องถูกที่เป็นโลหะ หรือใยขัด เมื่อเวลาผ่านไป อุปกรณ์เหล่านี้อาจสร้างความเสียหายแก่พื้นผิวได้

- ใช้น้ำยาซักล้างที่ออกแบบมาโดยเฉพาะสำหรับทำความสะอาดเครื่องใช้ไฟฟ้า และปฏิบัติตามคำแนะนำของผู้ผลิต


สิ่งสำคัญ: ทำความสะอาดตัวกรองอย่างน้อยทุก ๆ เดือน เพื่อจัดระบบน้ำดื่มหรือไข่มັນที่ตกค้าง

การทำความสะอาดตัวกรองไข่มัน


ตัวกรองไข่มันที่เป็นโลหะมีอายุการใช้งานไม่จำกัด และต้องได้รับการชำระล้างด้วยมือเดือนละครั้ง หรือทำความสะอาดด้วยเครื่องล้างจานโดยใช้รอบสั้นที่อุณหภูมิต่ำ เมื่อทำความสะอาดในเครื่องล้างจาน ตัวกรองไข่มันอาจดูหมองลง แต่ไม่ส่งผลต่อความสามารถในการกรอง

การบำรุงรักษาตัวกรองถ่าน


1. ถอดปลั๊กเครื่องใช้ไฟฟ้าออกหรือตัดการเชื่อมต่อจากแหล่งจ่ายไฟ
2. ถอดสกรูออก
3. ถอดแผงออก

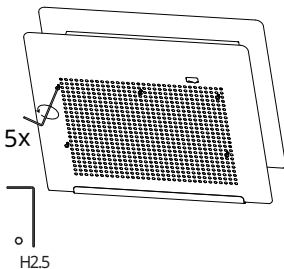


4. หมุนและนำคาร์บอนกับมันต์ที่ใช้แล้วออก เปลี่ยนด้วยคาร์บอนกับมันต์ใหม่ คาร์บอนกับมันต์ที่ใช้แล้วจะไม่สามารถนำกลับมาใช้ใหม่ได้ และไม่สามารถทำความสะอาดได้ ขอแนะนำให้เปลี่ยนใหม่ทุก ๆ 2-3 เดือน

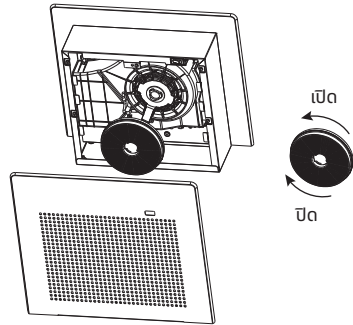

5. หลังจากถอดแผงออกมาแล้ว ให้นำตะแกรงของตัวกรองออกมาทำความสะอาด

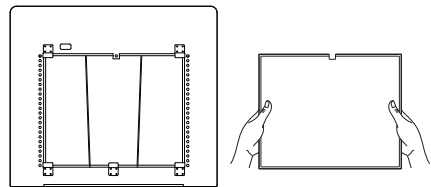

6. ใส่ตัวกรองกลับคืนเข้าไปที่แผง โดยสอดผ่านแผงด้านหลัง แล้วขันยึดสกรูทั้ง 5 ตัว

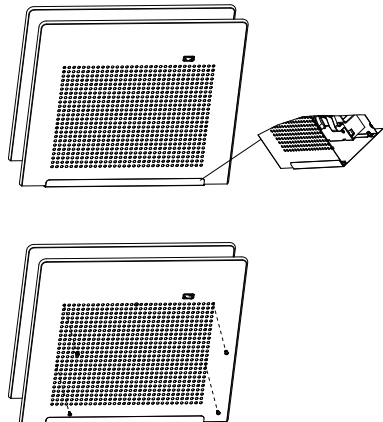

ต้องทำอย่างไรถ้า...

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องใช้ไฟฟ้าไม่ทำงาน	ไม่มีไฟเมน	ตรวจสอบว่ามีไฟเมนอยู่ ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตาร์ก จากนั้นดูว่ายังคงมี ปัญหาอยู่หรือไม่
	ไม่ได้เชื่อมต่อเครื่องใช้ไฟฟ้าเข้ากับ แหล่งจ่ายไฟ	ตรวจสอบว่าเครื่องใช้ไฟฟ้าได้รับการเชื่อมต่อกับ แหล่งจ่ายไฟหรือไม่ ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตาร์ก จากนั้นดูว่ายังคงมี ปัญหาอยู่หรือไม่
ระดับการดูดของเครื่องดูด ควันไม่เพียงพอ	ตัวกรองป้องกันกลิ่นอยู่ในสภาพที่ สกปรก	ตรวจสอบว่าได้ชำระล้างตัวกรองป้องกันกลิ่นอย่าง ถูกต้องตามคำแนะนำแล้ว
	แผ่นปรับท้ออากาศอยู่ในตำแหน่งที่ ไม่ถูกต้อง	ตรวจสอบว่าแผ่นปรับท้ออากาศได้รับการตั้งค่าเป็น  โหมดระบายอากาศแบบภายนอก

ก่อนที่จะทำการติดต่อศูนย์บริการที่ได้รับอนุญาต:
ทดลองเปิดเครื่องอีกครั้งเพื่อดูว่ายังคงมีปัญหาอยู่หรือไม่
หากไม่ ให้ปิดเครื่องและทำขั้นตอนเดิมซ้ำอีกครั้งหลังจาก
ผ่านไประยะหนึ่งชั่วโมง หากเครื่องใช้ไฟฟ้ายังคงทำงานไม่ถูก
ต้องหลังจากที่ได้ตรวจสอบตามรายการในคู่มือการแก้ไข
ปัญหาและได้ทำการเปิดเครื่องใช้ไฟฟ้าใหม่แล้ว โปรดติดต่อ
ศูนย์บริการที่ได้รับอนุญาต พร้อมอธิบายปัญหาอย่างชัดเจน
พร้อมทั้งระบุรายละเอียดเช่น:


- ประเภทของความบกพร่อง
- รุ่น
- ประเภทและหมายเลขประจำเครื่องของเครื่องใช้ไฟฟ้า
(อยู่บนป้ายพิกัด)

ข้อมูลทางเทคนิค

ประเภทของผลิตภัณฑ์	เครื่องดูดควันแบบติดตั้ง	
ขนาด	ความกว้าง	มม. 522
	ความหนา	มม. 458
	ความสูงโดยรวมต่ำสุด-สูงสุดสำหรับเวอร์ชันที่ติดตั้งแบบสก๊อตอากาศ	มม. 149
	ความสูงโดยรวมต่ำสุด-สูงสุดสำหรับเวอร์ชันที่ติดตั้งแบบหมุนเวียนอากาศ	มม. 149
กำลังไฟฟ้าโดยรวม		วัตต์ 30
ความสูงในการติดตั้งขั้นต่ำ - เตาแก๊ส		มม. 650
ความสูงในการติดตั้งขั้นต่ำ - เตาไฟฟ้า		มม. 500
น้ำหนักผลิตภัณฑ์		กก. 5.5

ตัวระบุรุ่น		VIGGBO 80630321
การไหลของอากาศสูงสุด	ม. ³ /ชม.	90
ปริมาณการใช้กำลังไฟฟ้า โหมดปิด	วัตต์	0
การปล่อยพลังเสียงแบบถ่วงน้ำหนักที่ความเร็วสูงสุด	dB(A)	56

ข้อมูลทางเทคนิคจะอยู่บนป้ายพิกัดภายในเครื่องใช้ไฟฟ้า

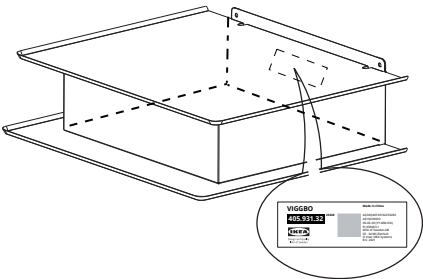

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม

การกำจัดบรรจุภัณฑ์

วัสดุบรรจุภัณฑ์สามารถนำไปรีไซเคิลได้ 100% และมีการทำเครื่องหมายสัญลักษณ์รีไซเคิล ♻️ ดังนั้นส่วนต่าง ๆ ของบรรจุภัณฑ์จึงต้องได้รับการกำจัดอย่างรับผิดชอบและปฏิบัติตามกฎระเบียบของหน่วยงานท้องถิ่นที่ควบคุมดูแลการจัดขยะ



สัญลักษณ์ — บบผลิตภัณฑ์หรือในเอกสารประกอบ บ่งบอกว่าอุปกรณ์ไม่ควรถูกทิ้งเป็นขยะในครัวเรือน แต่จะต้องนำไปที่ศูนย์รวบรวมขยะที่เหมาะสมเพื่อทำการรีไซเคิลอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

เครื่องใช้ไฟฟ้าสามารถรับประกันในเรื่องความปลอดภัยทางไฟฟ้าได้หากมีการเชื่อมต่อกับระบบสายดินที่ได้รับการรับรองอย่างถูกต้องเท่านั้น

การรับประกันของ IKEA

ระยะเวลารับประกันของ IKEA เป็นเวลาเท่าใด

การรับประกันนี้มีอายุห้า (5) ปีนับจากวันที่ซื้อเครื่องใช้ไฟฟ้าของคุณที่ IKEA ต้องใช้ใบเสร็จรับเงินต้นฉบับเป็นหลักฐานการซื้อ หากมีการเข้ารับบริการภายใต้การรับประกัน จะไม่ขยายระยะเวลาประกันสำหรับเครื่องใช้ไฟฟ้า

ใครจะดำเนินการให้บริการ

ผู้ให้บริการของ IKEA จะให้บริการผ่านหน่วยบริการของตนเองหรือเครือข่ายพันธมิตรด้านการบริการที่ได้รับอนุญาต

การรับประกันนี้ครอบคลุมสิ่งใดบ้าง

การรับประกันครอบคลุมความบกพร่องของเครื่องใช้ไฟฟ้าซึ่งเกิดขึ้นจากการผลิตหรือวัสดุที่มีข้อผิดพลาดนับจากวันที่ซื้อจาก IKEA การรับประกันนี้มีผลต่อการใช้งานในประเทศเท่านั้น ข้อยกเว้นระบุไว้ภายใต้หัวข้อ "มีสิ่งใดที่ไม่ได้รับความคุ้มครองภายใต้การรับประกันนี้" ภายในระยะเวลาประกัน จะครอบคลุมค่าใช้จ่ายเพื่อแก้ไขข้อบกพร่อง เช่น การซ่อมแซม อะไหล่ ค่าแรง และค่าเดินทาง ในกรณีที่เข้าถึงเครื่องใช้ไฟฟ้าเพื่อซ่อมแซมได้โดยไม่มีค่าใช้จ่ายพิเศษ ในเงื่อนไขเหล่านี้ กฎข้อบังคับของท้องถิ่นที่เกี่ยวข้องจะมีผลบังคับใช้ อะไหล่ที่ถอดออกจะเป็นทรัพย์สินของ IKEA

IKEA จะทำสิ่งใดเพื่อแก้ไขปัญหานี้

ผู้ให้บริการที่ได้รับการแต่งตั้งจาก IKEA จะตรวจสอบผลิตภัณฑ์และตัดสินใจตามดุลยพินิจของผู้ให้บริการแต่เพียงผู้เดียว หากผลิตภัณฑ์นั้นยังอยู่ภายใต้การรับประกัน หากพิจารณาแล้วว่าปัญหาดังกล่าวอยู่ภายใต้ความคุ้มครอง ผู้ให้บริการของ IKEA หรือพันธมิตรผู้ให้บริการที่ได้รับอนุญาตที่มีหน่วยบริการของตนเองจะทำการซ่อมแซมผลิตภัณฑ์ที่มีข้อบกพร่องหรือเปลี่ยนผลิตภัณฑ์ใหม่ที่เกี่ยวข้องเท่า อนุญาตโดยผู้ให้บริการ

มีสิ่งใดที่ไม่ได้รับความคุ้มครองภายใต้การรับประกันนี้

- การสึกหรอและร่องรอยจากการใช้งานปกติ
- ความเสียหายที่เกิดจากการไม่ดูคำแนะนำการใช้งาน การติดตั้งไม่ถูกต้องหรือเชื่อมต่อกับแรงดันไฟฟ้าผิดพลาด ความเสียหายที่เกิดจากสารเคมีหรือปฏิกิริยาเคมีไฟฟ้า สนิม เสียหายจากการกัดกร่อนหรือน้ำ รวมถึงแต่ไม่จำกัดเพียง ความเสียหายที่เกิดจากใช้ปูนขาวในน้ำมากเกินไป และความเสียหายที่เกิดจากสภาพแวดล้อมผิดปกติ
- ชิ้นส่วนสิ้นเปลือง ได้แก่ แบตเตอรี่และหลอดไฟ

- ชิ้นส่วนที่ไม่เกี่ยวข้องกับการใช้งานและเพื่อตกแต่งซึ่งไม่ส่งผลกระทบต่อการใช้งานเครื่องใช้ไฟฟ้าตามปกติ รวมถึงรอยขีดและสีที่อาจแตกต่างไปจากเดิม
- ความเสียหายจากอุบัติเหตุที่เกิดจากวัตถุหรือสารแปลกปลอม และการทำความสะอาดหรือชำระล้างไส้กรองระบบระบายน้ำหรือลิ้นชักใส่น้ำเสีย
- ความเสียหายที่เกิดขึ้นส่วนต่อไม่: เซรามิกแก้ว อุปกรณ์เสริม ตะกร้าเครื่องถ้วยชามและเครื่องใช้บนโต๊ะอาหาร กอน้ำดีและระบายน้ำ ชิล หลอดไฟและที่ห่อหุ้มหลอดไฟ หน้าจอ ปุ่ม ตัวเครื่อง และชิ้นส่วนของตัวเครื่อง นอกเหนือจากความเสียหายเหล่านี้สามารถพิสูจน์ว่าเกิดความผิดพลาดของการผลิต
- กรณีที่ไม่นับข้อผิดพลาดในระหว่างการเข้าตรวจสอบของช่างเทคนิค
- การซ่อมแซมที่ไม่ได้ดำเนินการโดยผู้ให้บริการที่ได้รับการแต่งตั้งของเรา และ/หรือ คู่สัญญาบริการที่ได้รับอนุญาต หรือใช้ชิ้นส่วนอะไหล่เทียม
- การซ่อมแซมที่เกิดจากการติดตั้งไม่ถูกต้องหรือไม่เป็นไปตามข้อมูลจำเพาะ
- การใช้งานเครื่องใช้ไฟฟ้าในสภาพแวดล้อมที่ไม่ใช่ในบ้าน เช่น ใช้เพื่อประกอบอาชีพ
- ความเสียหายจากการขนส่ง หากลูกค้าขนส่งผลิตภัณฑ์ไปที่บ้านหรือที่อยู่อื่น IKEA จะไม่รับผิดชอบต่อความเสียหายที่อาจเกิดขึ้นในระหว่างขนส่ง อย่างไรก็ตาม หาก IKEA ส่งมอบผลิตภัณฑ์ไปยังที่อยู่ของลูกค้า ความเสียหายที่เกิดขึ้นผลิตภัณฑ์ในระหว่างการส่งมอบนี้ IKEA จะครอบคลุมถึง
- ค่าใช้จ่ายสำหรับดำเนินการติดตั้งครั้งแรกของเครื่องใช้ไฟฟ้า IKEA
- อย่างไรก็ตาม หากผู้ให้บริการที่ได้รับแต่งตั้งของ IKEA หรือคู่สัญญาบริการที่ได้รับอนุญาตซ่อมแซมหรือเปลี่ยนเครื่องใช้ไฟฟ้าภายใต้ข้อกำหนดของการรับประกัน ผู้ให้บริการที่ได้รับแต่งตั้งหรือคู่สัญญาบริการที่ได้รับอนุญาตจะติดตั้งเครื่องใช้ไฟฟ้าที่ซ่อมแซมแล้วหรือติดตั้งเครื่องทดแทนให้ใหม่ หากจำเป็น
- การติดตั้งระบบประปาและระบบไฟฟ้าทั้งหมดไม่ใช่ความรับผิดชอบของ IKEA และลูกค้าต้องจัดการเรื่องเหล่านี้ให้เสร็จก่อนที่จะใช้งาน

กฎหมายของประเทศมีผลอย่างไร

IKEA รับประกันว่าจะให้สิทธิทางกฎหมายเฉพาะแก่คุณ ซึ่งครอบคลุมหรือเกินกว่าที่กฎหมายท้องถิ่นกำหนดไว้ อย่างไรก็ตามก็ตามเงื่อนไขเหล่านี้ไม่ได้จำกัดสิทธิใด ๆ ของผู้บริโภคดังที่อธิบายไว้ในกฎหมายท้องถิ่น

พื้นที่ที่มีผลบังคับใช้

การรับประกันนี้ใช้ได้เฉพาะในประเทศที่ซื้อผลิตภัณฑ์เท่านั้น การซ่อมแซมจะให้บริการภายใต้กรอบของเงื่อนไขการรับประกัน ข้อผูกพันที่มีต่อการให้บริการในกรอบของการรับประกันจะยังคงอยู่ ก็ต่อเมื่อเครื่องใช้ไฟฟ้ามีความสอดคล้องและได้รับการติดตั้งโดยเป็นไปตามสิ่งต่อไปนี้:

- ข้อมูลจำเพาะทางเทคนิคของประเทศซึ่งมีการเรียกหรือการรับประกัน
- คำแนะนำการประกอบและข้อมูลความปลอดภัยของคู่มือผู้ใช้

บริการหลังการขายที่เฉพาะสำหรับเครื่องใช้ไฟฟ้าของ IKEA

โปรดอย่าลังเลที่จะติดต่อศูนย์บริการที่ได้รับการแต่งตั้งจาก IKEA เพื่อ:

- ร้องขอบริการภายใต้การรับประกันนี้
- ขอคำชี้แจงเกี่ยวกับการติดตั้งเครื่องใช้ไฟฟ้าของ IKEA เข้ากับเฟอร์นิเจอร์ห้องครัวของ IKEA
- ขอคำชี้แจงเกี่ยวกับฟังก์ชันของเครื่องใช้ไฟฟ้า IKEA เพื่อให้มั่นใจว่าเราให้ความช่วยเหลือที่ดีที่สุดแก่คุณ โปรดอ่านคำแนะนำการประกอบ และ/หรือคู่มือผู้ใช้อย่างละเอียดก่อนติดต่อเรา

วิธีการติดต่อเราหากคุณต้องการรับบริการ



- i ศูนย์บริการลูกค้าหลังการขายของ IKEA จะช่วยเหลือคุณทางโทรศัพท์โดยแก้ไขปัญหาพื้นฐานของเครื่องใช้ไฟฟ้าของคุณในเวลาที่คุณโทรขอรับบริการ โปรดดูที่ **www.IKEA.com** และเลือกร้านค้าในพื้นที่ของคุณเพื่อดูหมายเลขโทรศัพท์ของร้านค้าในพื้นที่และเวลาเปิดทำการ
- i ก่อนที่จะโทรหาเรา โปรดตรวจสอบให้แน่ใจว่าคุณมีหมายเลขเครื่องใช้ของ IKEA (รหัส 8 หลัก) และหมายเลขประจำเครื่อง (รหัส 8 หลักที่สามารถพบได้บนป้ายผลิตภัณฑ์) สำหรับอุปกรณ์ที่คุณต้องการความช่วยเหลือจากเรา
- i **เก็บใบเสร็จรับเงินเอาไว้!** เป็นหลักฐานการซื้อและจำเป็นสำหรับการรับบริการภายใต้การรับประกัน โปรดทราบว่าเอกสารใบเสร็จรับเงินจะมีชื่อของเครื่องใช้ไฟฟ้าและหมายเลขของ IKEA (รหัส 8 หลัก) สำหรับเครื่องใช้ไฟฟ้าแต่ละชิ้นที่คุณซื้อ

คุณต้องการความช่วยเหลือพิเศษหรือไม่

หากคุณมีคำถามเพิ่มเติมที่ไม่เกี่ยวข้องกับฝ่ายบริการหลังการขายของเครื่องใช้ไฟฟ้าของคุณ โปรดติดต่อศูนย์ลูกค้าสัมพันธ์ของร้าน IKEA ใกล้บ้าน เราขอแนะนำให้คุณอ่านเอกสารประกอบของเครื่องใช้ไฟฟ้าอย่างละเอียดก่อนติดต่อเรา

