

VIGGBO



Design and Quality
IKEA of Sweden

ENGLISH	3
ไทย	10

Contents

Safety information	3	What to do if...	7
Installation	5	Technical data	8
Product description	5	Environmental concerns	9
Control panel	5	IKEA guarantee	9
Cleaning and maintenance	6		

⚠ Safety information

Before first use

- For your own safety and for the correct operation of the appliance, please read this manual carefully before installation and commissioning.
- Remove cardboard protection pieces, protective film and adhesive labels from accessories. Check the appliance for any transport damage.
- To avoid damage, do not place any objects weighing more than 5 kg on the appliance.

⚠ This is the attention symbol, pertaining to safety, which alerts users to potential risks to themselves and others.

All safety warnings are preceded by the attention symbol and the following terms:

⚠ **DANGER:** Indicates a hazardous situation which, if not avoided, will cause serious injury.

⚠ **WARNING:** Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential danger/warning present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions.

Precautions and general recommendations:

- The electrical installation and the electrical connection must be carried out by a qualified technician according to the manufacturer's instructions and in compliance with the local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- The appliance must be disconnected from the power supply before carrying out any installation work.

⚠ **WARNING:** Failure to install the screws or fastening elements indicated by the instructions may cause electrical hazards.

- Earthing of the appliance is compulsory. (Not possible for class II hoods identified by the symbol  on the rating plate).
- Do not pull the power supply cable in order to unplug the appliance.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been

given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- All other maintenance services must be carried out by a specialised technician.
- When drilling through the wall pay attention not to damage electric connections and/or pipes.
- The manufacturer rejects all responsibilities for any damage caused by improper use or wrong settings.
- Appropriate maintenance and cleaning ensure the good working order and the best performance of the appliance. Regularly clean all stubborn surface dirt to avoid grease build up. Remove and clean or change the filter regularly. This must be completed in accordance with the "Cleaning and maintenance" instructions provided.
- Do not cook food over the flame ("flambé") under the appliance. The use of open flames may cause a fire.
- Failure to follow the instructions when cleaning the hood and when cleaning and replacing the filters may result in the risk of fire.
- There shall be adequate ventilation if the hood is being used at the same time as other appliances using gas or other combustible materials.
- Do not leave frying pans unattended when frying, as the frying oil may catch fire.
- The hood is not a work surface. Do not place objects weighing more than 5 kg totally on it.

- Always wear appropriate working gloves during installation and maintenance.
- This appliance is not suitable for outdoor use.

⚠ WARNING: When the hob is in use, accessible parts of the hood may become hot.

Installation and connection

In the event of problems, contact an Authorized Service Centre. To prevent any damage, only remove the appliance from its packaging at the time of installation.

Preparing for installation

⚠ WARNING: The hood should only be lifted and installed by two or more people.

The minimum distance between the hob and the bottom part of the hood must not be less than 65 cm for burning gas or other fuels and 50 cm for electric cookers. Before installation also check the minimum distances stated in the manual of the cooker.

If the installation instructions for the cooker specify a greater distance between cooker and hood, this distance must be observed.

Electrical connection

Make sure the power voltage specified on the appliance rating plate is the same as the mains voltage.

This information can be found on the inside of the hood, under the grease filter. Power cable replacement (type H05 VV-F) must be carried out by a qualified electrician. Contact an authorized service centre.

If the hood is fitted with an electric plug, connect the plug to a socket complying with current regulations, located in an accessible place.

⚠ WARNING: If no plug is fitted (direct wiring to the mains), or if the socket is not located in an accessible place, a qualified electrician should

install a standardised double pole power switch that will enable complete isolation from the mains in case of category III overvoltage conditions, in accordance with wiring rules.

Installation

The hood is designed for only “Recirculation installation”.

Recirculation installation



(see symbol in installation booklet)

The air is filtered through a charcoal filter, and then resent into the room.

IMPORTANT: Ensure appropriate air circulation around the hood.

IMPORTANT: The hood comes with a pre-installed charcoal filter.


Replacement filters are available at IKEA stores or IKEA.com

The hood should be installed away from particularly dirty areas, windows, doors and heat sources as they are likely to make the system less effective and increase the risk of fire.

The accessories for wall fixing are not included because walls made of different materials require different types of fixing accessories. Use fixing systems suitable for the walls of your home and the weight of the appliance. For more details, contact a specialised dealer.


Keep this booklet for future consultation.

Product description

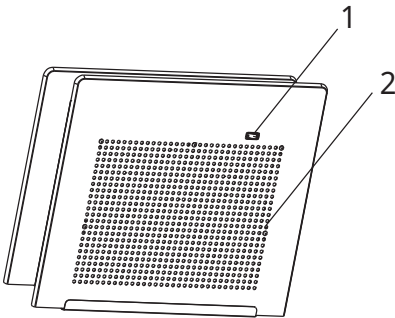

- 1 Switch
- 2 Grease filter

Control panel

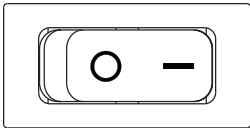

- : ON button
- : OFF button

Cleaning and maintenance

⚠ WARNING:

- Never use steam cleaning equipment.
- Disconnect the appliance from the power supply.

IMPORTANT: Do not use corrosive or abrasive detergents. If any of these products accidentally comes into contact with the appliance, clean immediately with a damp cloth.

- Clean the surface with a damp cloth. If it is very dirty, add a few drops of washing up detergent to the water. Finish off with a dry cloth.

IMPORTANT: Do not use abrasive sponges, metallic scrapers or scourers. Over time, these can damage the surface.

- Use detergents specifically designed for cleaning the appliance and follow the manufacturer instructions.


IMPORTANT: Clean the filters at least monthly to remove any oil or grease residuals.

Cleaning the grease filter


The metal grease filter has an unlimited life and must be washed once a month by hand or in a dishwasher using a short cycle at a low temperature. When cleaning in a dishwasher, the grease filter may become dull; this does not affect its filtering capacity.

Charcoal Filter maintenance


1. Unplug the appliance or disconnect the power supply.
2. Remove the screws.
3. Remove the panel.

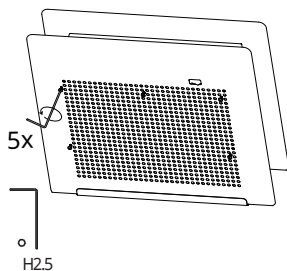


4. Rotate and remove the used activated carbon. Replace with new activated carbon. The used activated carbon cannot be recovered and cleaned. Replacement is recommended every 2-3 months.

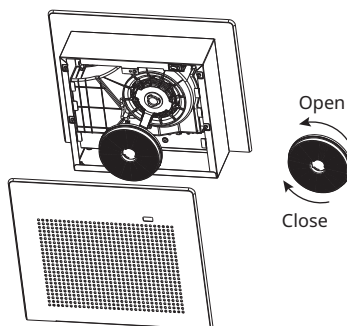

5. After disassembling the panel, take out the filter screen for cleaning.

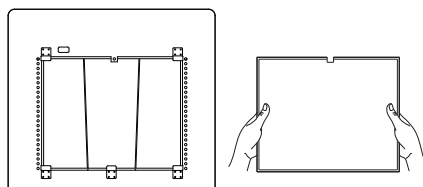

6. Put back the filter on the aesthetic panel, insert it through the back panel and tighten all 5 screws.

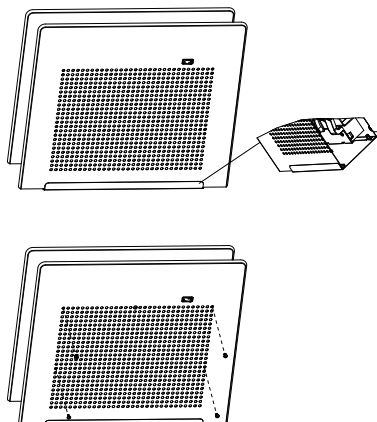

What to do if...

Problem	Possible cause	Solution
The appliance does not work	There is no mains electrical power	Check for the presence of mains electrical power. Turn off the appliance and restart it to see if the fault persists.
	The appliance is not connected to the electrical supply	Check if the appliance is connected to the electrical supply. Turn off the appliance and restart it to see if the fault persists.
The hood's suction level is not enough	The anti-odors filters are dirty	Check that the anti-odour filters are properly washed as recommended
	The air duct adjusting plate is on wrong position	Check the air duct adjustment plate set to the external exhaust mode 

Before contacting the Authorized Service Centre:
Switch the appliance on again to see if the problem has disappeared. If not, switch it off again and repeat the operation after an hour. If your appliance still does not work properly after carrying out the checks listed in the troubleshooting guide and switching the appliance on again, contact the Authorized Service Centre, clearly explaining the problem and specifying:


- the type of fault;
- the model;
- the type and serial number of the appliance (given on the rating plate).

Technical data

Type of product	Wall mounted hood		
Dimensions	Width	mm	522
	Depth	mm	458
	Total height in extraction installation version min-max	mm	149
	Total height in recirculation installation version min-max	mm	149
Total power		W	30
Installation minimum height - gas hob		mm	650
Installation minimum height - electric hob		mm	500
Product weight		kg	5.5

Model identifier		VIGGBO 80630321
Maximum air flow	m³/h	90
Power consumption off mode	W	0
A-waighted sound power emission at maximum speed	dB(A)	56

Technical information is provided on the rating plate inside the appliance.

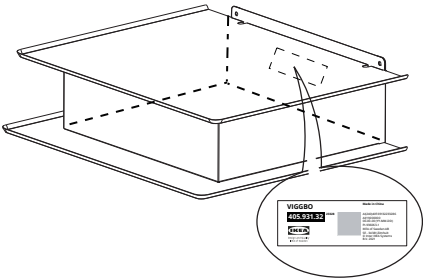

Environmental concerns

Disposal of packaging

The packaging material is 100% recyclable and is marked with the recycle symbol . The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.



The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

Electrical safety of the appliance can only be guaranteed if it is correctly connected to an approved earthing system.

IKEA guarantee

If you want to claim your product warranty or get product support



Please contact IKEA Customer Support, you find the link to the self-service portal or phone number on www.IKEA.com.

To complete your request for service on the selfservice portal, easier find information about your product or spare parts connected to your product, we urge you to note the IKEA article number (8-digits) and the Serial number on the product label.

In the section Technical data / rating plate You can find where the rating plate is located

KEEP THE PURCHASE/DELIVERY DOCUMENT!

It is your proof of purchase, the warranty will not be valid without it. The receipt also features the name and the IKEA article number (8-digits) for each appliance purchased.

Please read the technical documentation provided with your appliance carefully before contacting us.

สารบัญ

ข้อมูลเพื่อความปลอดภัย	10	ต้องทำอะไรถ้า...	15
การติดตั้ง	12	ข้อมูลทางเทคนิค	16
คำอธิบายของผลิตภัณฑ์	12	ข้อกังวลเกี่ยวกับสิ่งแวดล้อม	17
แผงควบคุม	13	การรับประกันของ IKEA	17
การทำความสะอาดและการบำรุงรักษา	14		

⚠ ข้อมูลเพื่อความปลอดภัย

ก่อนใช้งานครั้งแรก

- เพื่อความปลอดภัยของคุณเองและเพื่อการใช้งานเครื่องใช้ไฟฟ้าอย่างถูกต้อง โปรดอ่านคู่มือเล่มนี้อย่างละเอียดก่อนที่จะทำการติดตั้งและใช้งาน
- ถอดชิ้นส่วนป้องกันที่เป็นกระดาษแข็ง ฟิล์มป้องกัน และฉลากกาวออกจากอุปกรณ์เสริม ตรวจสอบว่าเครื่องใช้ไฟฟ้ามีความเสียหายเนื่องจากการขนส่งหรือไม่
- เพื่อเป็นการหลีกเลี่ยงความเสียหาย โปรดอย่าวางวัตถุที่มีน้ำหนักมากกว่า 5 กก. ไว้บนเครื่องใช้ไฟฟ้า

⚠ นี่เป็นสัญลักษณ์ความใส่ใจที่เกี่ยวข้องกับความปลอดภัย ซึ่งจะแจ้งเตือนผู้ใช้ให้ทราบถึงความเสี่ยงที่อาจเกิดขึ้นต่อตนเองและผู้อื่น คำเตือนด้านความปลอดภัยทั้งหมดจะขึ้นต้นด้วยสัญลักษณ์ความใส่ใจและข้อความต่อไปนี้:

⚠ **อันตราย:** บ่งบอกถึงสถานการณ์ที่เป็นอันตราย ซึ่งหากไม่หลีกเลี่ยง จะส่งผลให้เกิดการบาดเจ็บอย่างร้ายแรงได้

⚠ **คำเตือน:** บ่งบอกถึงสถานการณ์ที่อันตราย ซึ่งหากไม่หลีกเลี่ยง อาจส่งผลให้เกิดการบาดเจ็บอย่างร้ายแรงได้

คำเตือนด้านความปลอดภัยทั้งหมดจะให้รายละเอียดที่เฉพาะเจาะจงเกี่ยวกับคำเตือน/อันตรายที่อาจเกิดขึ้น รวมถึงวิธีการในการลดความเสี่ยงที่อาจทำให้เกิดการบาดเจ็บ ความเสียหาย และไฟฟ้าช็อต ซึ่งเป็นผลมาจากการใช้งานเครื่องใช้ไฟฟ้าอย่างไม่เหมาะสม ทำตามคำแนะนำต่อไปนี้อย่างระมัดระวัง

ข้อควรระวังและคำแนะนำทั่วไป:

- การติดตั้งอุปกรณ์ไฟฟ้าและการเชื่อมต่อกระแสไฟฟ้าจะต้องดำเนินการโดยช่างผู้ชำนาญตามคำแนะนำของผู้ผลิตและเป็นไป

ตามข้อกำหนดด้านความปลอดภัยในท้องถิ่น ห้ามซ่อมแซมหรือเปลี่ยนชิ้นส่วนใด ๆ ของเครื่องใช้ไฟฟ้า เว้นแต่จะได้รับการระบุไว้อย่างเฉพาะเจาะจงในคู่มือการใช้งาน

- เครื่องใช้ไฟฟ้าจะต้องถูกตัดการเชื่อมต่อจากแหล่งจ่ายไฟก่อนที่จะดำเนินการติดตั้งใด ๆ

⚠ **คำเตือน:** ความผิดพลาดในการติดตั้งสกปรกหรือส่วนประกอบการยึดเหนี่ยวตามที่ระบุไว้ในคำแนะนำ อาจส่งผลให้เกิดอันตรายทางไฟฟ้าได้

- การต่อสายดินของเครื่องใช้ไฟฟ้าเป็นสิ่งที่ไม่ได้ (ไม่สามารถใช้ได้กับเครื่องดูดควันที่มีสัญลักษณ์ระบุเป็นคลาส II  เป็นป้ายพิกัด)
- อย่าดึงที่สายไฟโดยตรงเพื่อถอดปลั๊กเครื่องใช้ไฟฟ้า
- ส่วนประกอบทางไฟฟ้าจะต้องไม่สามารถเข้าถึงได้โดยผู้ใช้หลังจากที่ติดตั้งเสร็จเรียบร้อยแล้ว
- ห้ามสัมผัสกับเครื่องใช้ไฟฟ้าด้วยส่วนของร่างกายที่เปียก และห้ามใช้งานเครื่องเมื่อเต็มไปด้วยน้ำ
- เด็กอายุ 8 ขวบขึ้นไปและผู้บกพร่องทางกายภาพ ความรู้สึก หรือทางจิตใจ หรือขาดประสบการณ์และความรู้สามารถใช้เครื่องใช้ไฟฟ้าไม่ได้ หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องใช้ไฟฟ้านี้ด้วยวิธีที่ปลอดภัย และเข้าถึงอันตรายที่อาจเกิดขึ้น ไม่ควรปล่อยให้เด็กเล่นเตา ไม่ควรให้เด็กทำความสะอาดและบำรุงรักษาโดยไม่มีผู้ใหญ่ดูแล
- บริการด้านการบำรุงรักษาอื่น ๆ ทั้งหมดจะต้องได้รับการดำเนินการโดยช่างเทคนิคเฉพาะทาง
- เมื่อทำการเจาะรูบนผนัง ต้องระมัดระวังอย่าให้เกิดความเสียหายกับขั้วต่อไฟฟ้าและ/หรือท่อ
- ผู้ผลิตปฏิเสธความรับผิดชอบทั้งหมดสำหรับความเสียหายใด ๆ ที่เกิดจากการใช้งานที่ไม่ถูกต้องหรือการตั้งค่าที่ผิดพลาด

- การบำรุงรักษาและการทำความสะอาดอย่างเหมาะสมจะช่วยให้แน่ใจว่าเครื่องใช้ไฟฟ้าสามารถทำงานได้เป็นอย่างดีและมีประสิทธิภาพสูงสุด ทำความสะอาดคราบสกปรกที่ฝังแน่นบนพื้นผิวอย่างสม่ำเสมอเพื่อหลีกเลี่ยงการสะสมของไขมัน ถอดทำความสะอาดหรือเปลี่ยนตัวกรองเป็นประจำ การดำเนินการนี้จะต้องได้รับการดำเนินการโดยสอดคล้องกับคำแนะนำเกี่ยวกับ “การทำความสะอาดและการบำรุงรักษา” ที่ได้รับไว้
- ห้ามทำการปรุงอาหารด้วยเปลวไฟ (“flambé”) ที่อยู่ใต้เครื่อง การใช้เปลวไฟปรุงอาหารโดยตรงอาจส่งผลให้เกิดไฟไหม้ได้
- การไม่ปฏิบัติตามคำแนะนำเมื่อทำความสะอาดเครื่องดูดควัน และในระหว่างที่ทำความสะอาดและเปลี่ยนตัวกรอง อาจส่งผลให้เกิดความเสี่ยงในการเกิดไฟไหม้ได้
- การระบายอากาศที่เพียงพอถือเป็นสิ่งจำเป็น หากเครื่องดูดควันถูกใช้งานพร้อมกับเครื่องใช้ไฟฟ้าอื่น ๆ ที่ใช้แก๊สหรือวัสดุติดไฟได้
- ห้ามทิ้งกระถังไว้โดยไม่มีการเฝ้าดูในระหว่างที่ทอด เนื่องจากน้ำมันที่ทอดอาจติดไฟได้
- เครื่องดูดควันไม่ใช่พื้นผิวสำหรับการทำงาน ดังนั้นจะต้องไม่วางสิ่งของที่น้ำหนักมากกว่า 5 กิโลกรัมไว้บนตัวเครื่องโดยตรง
- ในระหว่างที่ทำการติดตั้งและบำรุงรักษาเครื่อง จะต้องสวมถุงมือทำงานที่เหมาะสมอยู่เสมอ
- เครื่องใช้ไฟฟ้านี้ไม่เหมาะสำหรับการใช้งานภายนอกอาคาร

⚠ คำเตือน: ในระหว่างที่ใช้งานเตา ส่วนที่เข้าถึงได้ของเครื่องดูดควันอาจมีความร้อน

การติดตั้งและการเชื่อมต่อ

หากเกิดปัญหาขึ้น โปรดติดต่อศูนย์บริการที่ได้รับอนุญาต เพื่อเป็นการป้องกันความเสียหาย โปรดถอดเฉพาะเครื่องใช้ไฟฟ้าออกจากบรรจุกitchen ในระหว่างที่ติดตั้ง

การเตรียมการสำหรับการติดตั้ง

⚠ คำเตือน: การยกเครื่องดูดควันขึ้นเพื่อทำการติดตั้งควรได้รับการดำเนินการโดยบุคคลตั้งแต่สองคนขึ้นไปเท่านั้น

ระยะห่างขั้นต่ำระหว่างเตากับส่วนล่างของเครื่องดูดควันต้องไม่น้อยกว่า 65 ซม. เมื่อใช้แก๊สหรือเชื้อเพลิงอื่น ๆ และไม่น้อยกว่า 50 ซม. เมื่อใช้เตาไฟฟ้า ก่อนที่จะทำการติดตั้ง ควรตรวจสอบระยะห่างขั้นต่ำตามที่ระบุไว้ในคู่มือสำหรับเตา

หากคำแนะนำสำหรับการติดตั้งเตา มีภาระบ่งชี้ระยะห่างระหว่างเตากับเครื่องดูดควันที่มากกว่าค่านี้ โปรดใช้ระยะห่างดังกล่าว

การเชื่อมต่อไฟฟ้า

ตรวจสอบว่าแรงดันไฟฟ้าที่ระบุอยู่บนป้ายพิกัดของเครื่องใช้ไฟฟ้ามีค่าเท่ากับแรงดันไฟฟ้าเมนที่ใช้งานอยู่

ข้อมูลนี้สามารถพบได้ที่ด้านในของเครื่องดูดควัน โดยอยู่ใต้ตัวกรองไขมัน การเปลี่ยนสายไฟ (ประเภท H05 VV-F) จะต้องได้รับการดำเนินการโดยช่างไฟฟ้าผู้ชำนาญ โปรดติดต่อศูนย์บริการที่ได้รับอนุญาต

หากเครื่องดูดควันมาพร้อมกับปลั๊กไฟ ให้เสียบปลั๊กไฟเข้ากับเต้ารับที่เป็นไปตามข้อบังคับเกี่ยวกับปริมาณกระแสไฟฟ้าและอยู่ในตำแหน่งที่เข้าถึงได้

⚠ คำเตือน: หากไม่ได้มาพร้อมกับปลั๊กไฟ (ต่อสายตรงเข้ากับไฟเมน) หรือหากเต้ารับอยู่ในจุดที่ไม่สามารถเข้าถึงได้ ช่างไฟฟ้าผู้ชำนาญควรติดตั้งสวิตช์ไฟมาตรฐานแบบสองขั้วที่สามารถตัดการเชื่อมต่อจากแหล่งจ่ายไฟหลักได้อย่างสมบูรณ์ ในกรณีที่มีแรงดันไฟฟ้าเกินประเภท III ตามกฎระเบียบการเดินสายไฟ

การติดตั้ง

เครื่องดูดควันได้รับการออกแบบมาโดยเฉพาะสำหรับ "การติดตั้งแบบหมุนเวียนอากาศ"

การติดตั้งแบบหมุนเวียนอากาศ



(โปรดดูสัญลักษณ์ **ในคู่มือการติดตั้ง**)

อากาศจะถูกกรองผ่านตัวกรองถ่าน แล้วถูกส่งกลับเข้าไปในห้อง

สิ่งสำคัญ: ตรวจสอบให้แน่ใจว่าอากาศหมุนเวียนรอบ ๆ เครื่องดูดควันได้อย่างเหมาะสม

สิ่งสำคัญ: เครื่องดูดควันมาพร้อมกับตัวกรองถ่านที่ได้รับการติดตั้งไว้ล่วงหน้า


ตัวกรองทดแทนสามารถหาซื้อได้ที่ร้าน IKEA หรือที่ IKEA.com

เครื่องดูดควันควรได้รับการติดตั้งในตำแหน่งที่ห่างจากบริเวณที่สกปรกเป็นพิเศษ หน้าต่าง ประตู และแหล่งกำเนิดความร้อน เนื่องจากบริเวณเหล่านี้อาจทำให้ระบบทำงานด้วยประสิทธิภาพที่ต่ำลงและส่งผลให้เกิดความเสี่ยงต่อการเกิดไฟไหม้ได้

อุปกรณ์เสริมสำหรับการยึดผนังจะไม่รวมอยู่ในบรรจุภัณฑ์เนื่องจากผนังสามารถทำจากวัสดุได้หลายชนิด ซึ่งต้องใช้อุปกรณ์เสริมสำหรับการยึดที่แตกต่างกัน โปรดใช้ระบบการยึดที่เหมาะสมสำหรับผนังบ้านของคุณและน้ำหนักของเครื่องใช้ไฟฟ้า หากต้องการรายละเอียดเพิ่มเติม โปรดติดต่อตัวแทนจำหน่ายเฉพาะทาง


โปรดเก็บคู่มือเล่มนี้ไว้เพื่อใช้อ้างอิงข้อมูลในอนาคต

คำอธิบายของผลิตภัณฑ์

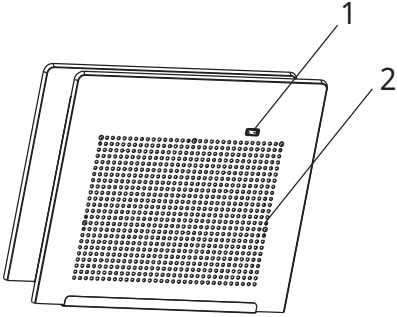

- 1 สวิตช์
- 2 ตัวกรองไขมัน

แผงควบคุม

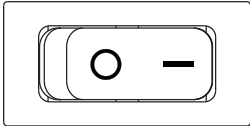

- : ปุ่มเปิด
- : ปุ่มปิด

การทำความสะอาดและการบำรุงรักษา

⚠ คำเตือน:

- ห้ามใช้อุปกรณ์ที่ทำความสะอาดด้วยไอน้ำอย่างเด็ดขาด
- ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากแหล่งจ่ายไฟ

สิ่งสำคัญ: ห้ามใช้น้ำยาซักล้างที่มีฤทธิ์กัดกร่อนหรือสารขัดสี หากผลิตภัณฑ์เหล่านี้สัมผัสกับเครื่องใช้ไฟฟ้าโดยบังเอิญ จะต้องทำความสะอาดด้วยผ้าเปียกโดยทันที

- ทำความสะอาดพื้นผิวด้วยผ้าเปียก หากเครื่องใช้ไฟฟ้าสกปรกมาก ให้หยดน้ำยาซักล้างลงในน้ำเพียงสองสามหยด จากนั้นให้ใช้ผ้าแห้งเช็ดในชั้นสุดท้าย

สิ่งสำคัญ: ห้ามใช้ฟองน้ำที่มีฤทธิ์กัดกร่อน เครื่องถูกที่เป็นโลหะ หรือใยขัด เมื่อเวลาผ่านไป อุปกรณ์เหล่านี้อาจสร้างความเสียหายแก่พื้นผิวได้

- ใช้น้ำยาซักล้างที่ออกแบบมาโดยเฉพาะสำหรับทำความสะอาดเครื่องใช้ไฟฟ้า และปฏิบัติตามคำแนะนำของผู้ผลิต


สิ่งสำคัญ: ทำความสะอาดตัวกรองอย่างน้อยทุก ๆ เดือน เพื่อจัดรบน้ำมันหรือไขมันที่ตกค้าง

การทำความสะอาดตัวกรองไขมัน


ตัวกรองไขมันที่เป็นโลหะมีอายุการใช้งานไม่จำกัด และต้องได้รับการชำระล้างด้วยมือเดือนละครั้ง หรือทำความสะอาดด้วยเครื่องล้างจานโดยใช้รอบสั้นที่อุณหภูมิต่ำ เมื่อทำความสะอาดในเครื่องล้างจาน ตัวกรองไขมันอาจดูหมองลง แต่ไม่ส่งผลต่อความสามารถในการกรอง

การบำรุงรักษาตัวกรองถ่าน


1. ถอดปลั๊กเครื่องใช้ไฟฟ้าหรือตัดการเชื่อมต่อจากแหล่งจ่ายไฟ
2. ถอดสกรูออก
3. ถอดแผงออก

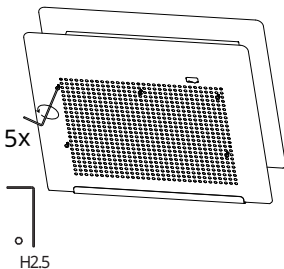


4. หมุนและนำคาร์บอนกัมมันต์ที่ใช้แล้วออก เปลี่ยนด้วยคาร์บอนกัมมันต์ใหม่ คาร์บอนกัมมันต์ที่ใช้แล้วจะไม่สามารถนำกลับมาใช้ใหม่ได้ และไม่สามารถทำความสะอาดได้ ขอแนะนำให้เปลี่ยนใหม่ทุก ๆ 2-3 เดือน

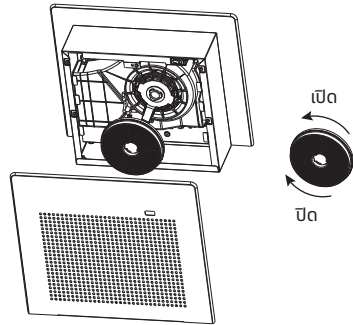

5. หลังจากถอดแผงออกมาแล้ว ให้นำตะแกรงของตัวกรองออกมาทำความสะอาด

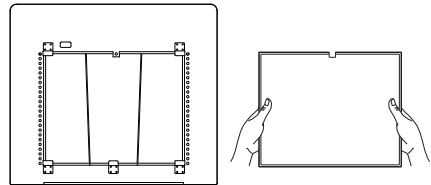

6. ใส่ตัวกรองกลับคืนเข้าไปที่แผง โดยสอดผ่านแผงด้านหลัง แล้วขันยึดสกรูทั้ง 5 ตัว

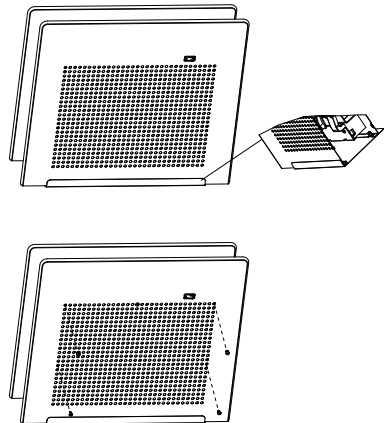

ต้องทำอะไรถ้า...

ปัญหา	สาเหตุที่เป็นไปได้	การแก้ไข
เครื่องใช้ไฟฟ้าไม่ทำงาน	ไม่มีไฟเมน	ตรวจสอบว่ามีไฟเมนอยู่ ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตาร์ก จากนั้นดูว่ายังคงมี ปัญหาอยู่หรือไม่
	ไม่ได้เชื่อมต่อเครื่องใช้ไฟฟ้าเข้ากับ แหล่งจ่ายไฟ	ตรวจสอบว่าเครื่องใช้ไฟฟ้าได้รับการเชื่อมต่อกับ แหล่งจ่ายไฟหรือไม่ ปิดเครื่องใช้ไฟฟ้าแล้วรีเซ็ตาร์ก จากนั้นดูว่ายังคงมี ปัญหาอยู่หรือไม่
ระดับการดูดของเครื่องดูด ควันไม่เพียงพอ	ตัวกรองป้องกันกลิ่นอยู่ในสภาพที่ สกปรก	ตรวจสอบว่าได้ชำระล้างตัวกรองป้องกันกลิ่นอย่าง ถูกต้องตามคำแนะนำแล้ว
	แผ่นปรับท่ออากาศอยู่ในตำแหน่งที่ ไม่ถูกต้อง	ตรวจสอบว่าแผ่นปรับท่ออากาศได้รับการตั้งค่าเป็น  โหมดระบายอากาศแบบภายนอก

ก่อนที่จะทำการติดต่อศูนย์บริการที่ได้รับอนุญาต:
ทดลองเปิดเครื่องอีกครั้งเพื่อดูว่ายังคงมีปัญหาอยู่หรือไม่
หากไม่ ให้ปิดเครื่องและทำขั้นตอนเดิมซ้ำอีกครั้งหลังจาก
ผ่านไประยะหนึ่งชั่วโมง หากเครื่องใช้ไฟฟ้ายังคงทำงานไม่ถูก
ต้องหลังจากที่ได้ตรวจสอบตามรายการในคู่มือการแก้ไข
ปัญหาและได้ทำการเปิดเครื่องใช้ไฟฟ้าใหม่แล้ว โปรดติดต่อ
ศูนย์บริการที่ได้รับอนุญาต พร้อมอธิบายปัญหาอย่างชัดเจน
พร้อมทั้งระบุรายละเอียดเช่น:


- ประเภทของความบกพร่อง
- รุ่น
- ประเภทและหมายเลขประจำเครื่องของเครื่องใช้ไฟฟ้า
(อยู่บนป้ายพิกัด)

ข้อมูลทางเทคนิค

ประเภทของผลิตภัณฑ์	เครื่องดูดควันแบบติดตั้ง		
ขนาด	ความกว้าง	มม.	522
	ความหนา	มม.	458
	ความสูงโดยรวมต่ำสุด-สูงสุดสำหรับเวอร์ชันที่ติดตั้งแบบสก๊อตอากาศ	มม.	149
	ความสูงโดยรวมต่ำสุด-สูงสุดสำหรับเวอร์ชันที่ติดตั้งแบบหมุนเวียนอากาศ	มม.	149
กำลังไฟฟ้าโดยรวม		วัตต์	30
ความสูงในการติดตั้งขั้นต่ำ - เตาแก๊ส		มม.	650
ความสูงในการติดตั้งขั้นต่ำ - เตาไฟฟ้า		มม.	500
น้ำหนักผลิตภัณฑ์		กก.	5.5

ตัวระบุรุ่น		VIGGBO 80630321
การไหลของอากาศสูงสุด	ม. ³ /ชม.	90
ปริมาณการใช้กำลังไฟฟ้า โหมดปิด	วัตต์	0
การปล่อยพลังเสียงแบบถ่วงน้ำหนักที่ความเร็วสูงสุด	dB(A)	56

ข้อมูลทางเทคนิคจะอยู่บนป้ายพิกัดภายในเครื่องใช้ไฟฟ้า

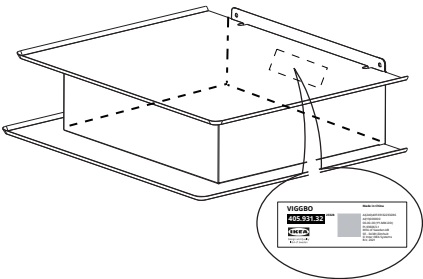

ข้อกังวลเกี่ยวกับสิ่งแวดล้อม

การกำจัดบรรจุภัณฑ์

วัสดุบรรจุภัณฑ์สามารถนำไปรีไซเคิลได้ 100% และมีการทำเครื่องหมายสัญลักษณ์รีไซเคิล ♻️ ดังนั้นส่วนต่าง ๆ ของบรรจุภัณฑ์จึงต้องได้รับการกำจัดอย่างรับผิดชอบและปฏิบัติตามกฎระเบียบของหน่วยงานท้องถิ่นที่ควบคุมดูแลการกำจัดขยะ



สัญลักษณ์  บนผลิตภัณฑ์หรือในเอกสารประกอบ บ่งบอกว่าอุปกรณ์ไม่ควรถูกทิ้งเป็นขยะในครัวเรือน แต่จะต้องนำไปที่ศูนย์รวบรวมขยะที่เหมาะสมเพื่อทำการรีไซเคิล อุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

เครื่องใช้ไฟฟ้าสามารถรับประกันในเรื่องความปลอดภัยทางไฟฟ้าได้หากมีการเชื่อมต่อกับระบบสายดินที่ได้รับการรับรองอย่างถูกต้องเท่านั้น

การรับประกันของ IKEA

หากคุณต้องการเรียกร้องสิทธิ์การรับประกันผลิตภัณฑ์หรือขอรับการสนับสนุนเกี่ยวกับผลิตภัณฑ์



โปรดติดต่อ IKEA Customer Support คุณสามารถค้นหาลิงก์ไปยังพอร์ทัลบริการตนเองหรือหมายเลขโทรศัพท์ได้ที่ www.IKEA.com

เพื่อที่จะขอรับบริการผ่านพอร์ทัลบริการตนเอง และเพื่อให้ค้นหาข้อมูลเกี่ยวกับผลิตภัณฑ์หรืออะไหล่ที่เกี่ยวข้องกับผลิตภัณฑ์ของคุณได้ง่ายยิ่งขึ้น เราขอแนะนำให้คุณจดบันทึกหมายเลขผลิตภัณฑ์ IKEA (8 หลัก) และหมายเลขซีเรียลที่อยู่บนฉลากผลิตภัณฑ์

คุณสามารถดูตำแหน่งของป้ายแสดงข้อมูลจำเพาะได้ในส่วนข้อมูลทางเทคนิค / ป้ายแสดงข้อมูลจำเพาะ

เก็บรักษาเอกสารการจัดซื้อ/การจัดส่งเอาไว้!

เอกสารดังกล่าวเป็นหลักฐานการซื้อของคุณ และการรับประกันจะไม่สามารถใช้งานได้หากไม่มีเอกสารนี้ นอกจากนี้ใบเสร็จยังระบุชื่อและหมายเลขผลิตภัณฑ์ IKEA (8 หลัก) ของเครื่องใช้ไฟฟ้าแต่ละรายการที่ซื้อ โปรดอ่านเอกสารทางเทคนิคที่มาพร้อมกับการ์ดเครื่องใช้ไฟฟ้าของคุณอย่างละเอียดก่อนติดต่อเรา

