

HAUGA

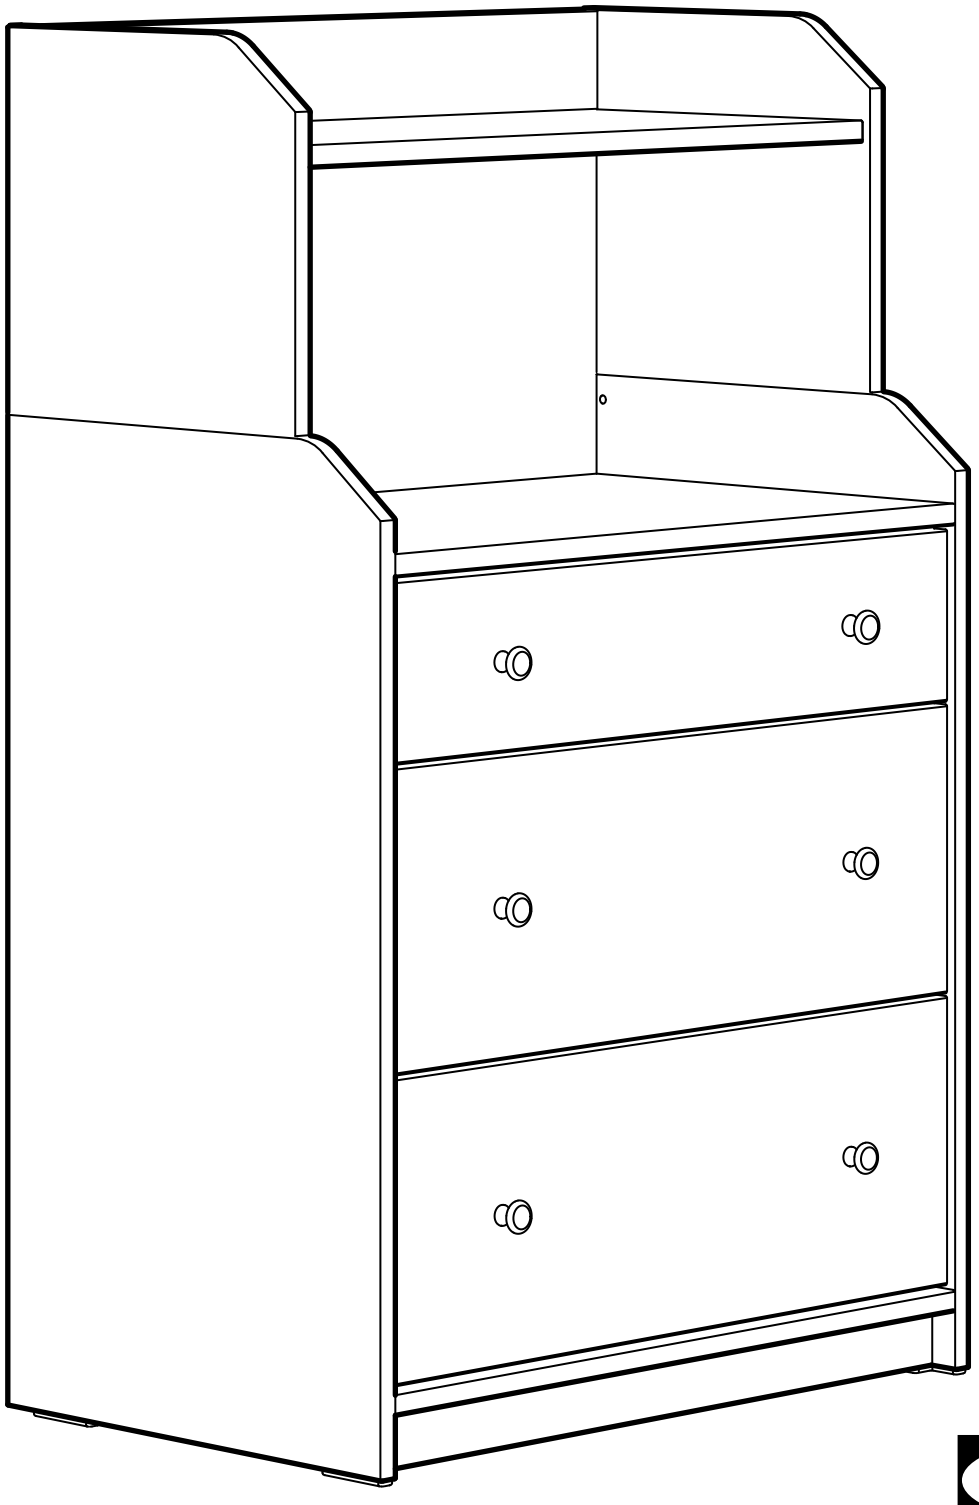

Design and Quality
IKEA of Sweden

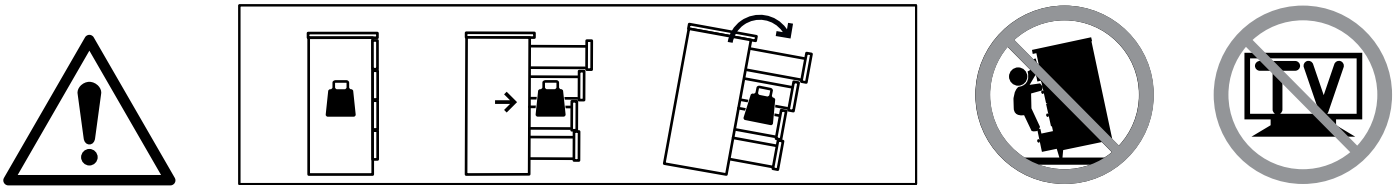

English

WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.

ALWAYS secure this furniture to the wall using tip-over restraints.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.

עברית

אזהרה

נפילת הרהיט עלולה לגרום לפגיעה גופנית חמורה או קטלנית.

יש לקבע את הרהיט לקיר באמצעות אבזרי הקיבוע המצורפים.

על-מנת למזער את סכנת הפגיעה הגופנית או המוות מנפילת רהיטים:


מקמו את הפריטים הכבדים ביותר במגירה התחתונה.

הימנעו מלהניח טלוויזיות או פריטים כבדים אחרים על מוצר זה.

אין לאפשר לילדים לטפס על המגירות, הדלתות או המדפים.

AA-2204456-5




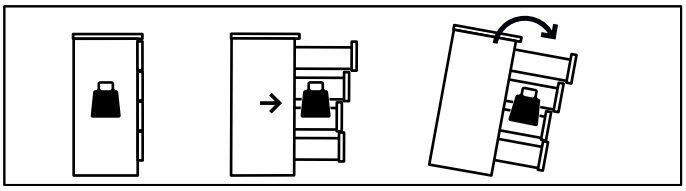




TV




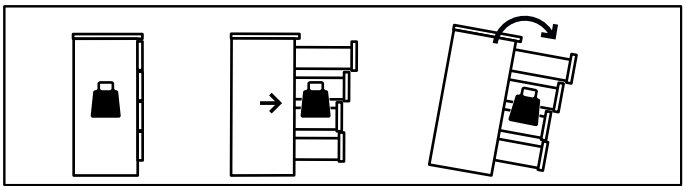





TV




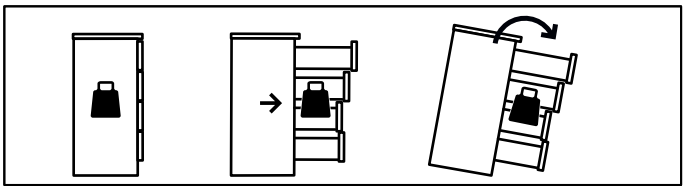







TV

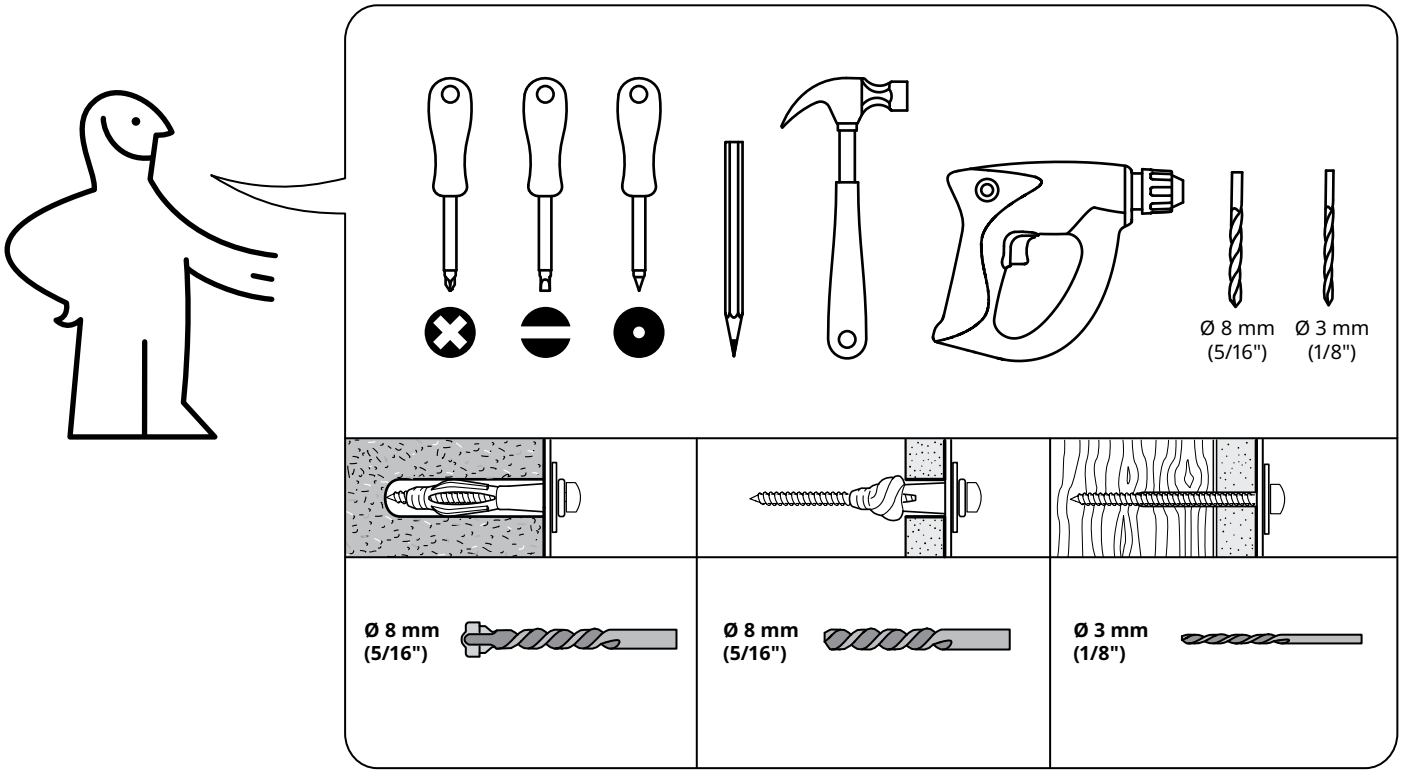

Ø 8 mm
(5/16")
Ø 3 mm
(1/8")
Ø 8 mm
(5/16")
Ø 8 mm
(5/16")
Ø 3 mm
(1/8")

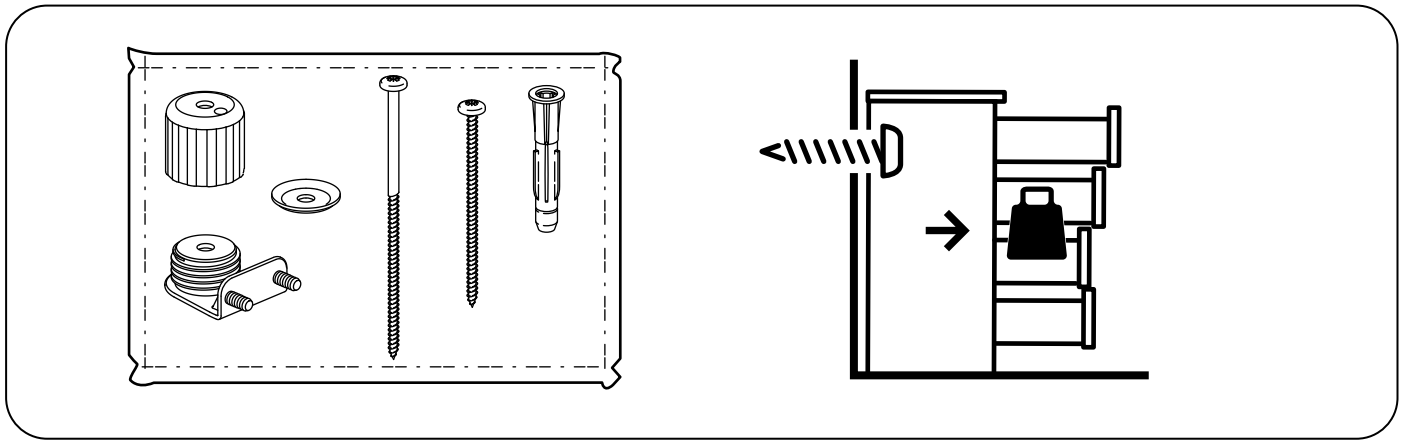

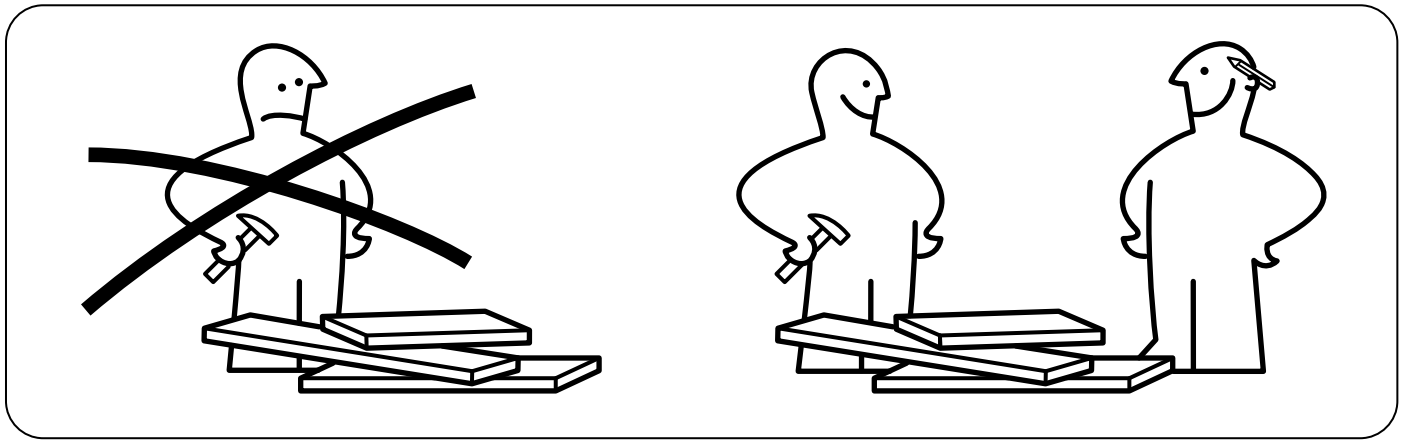


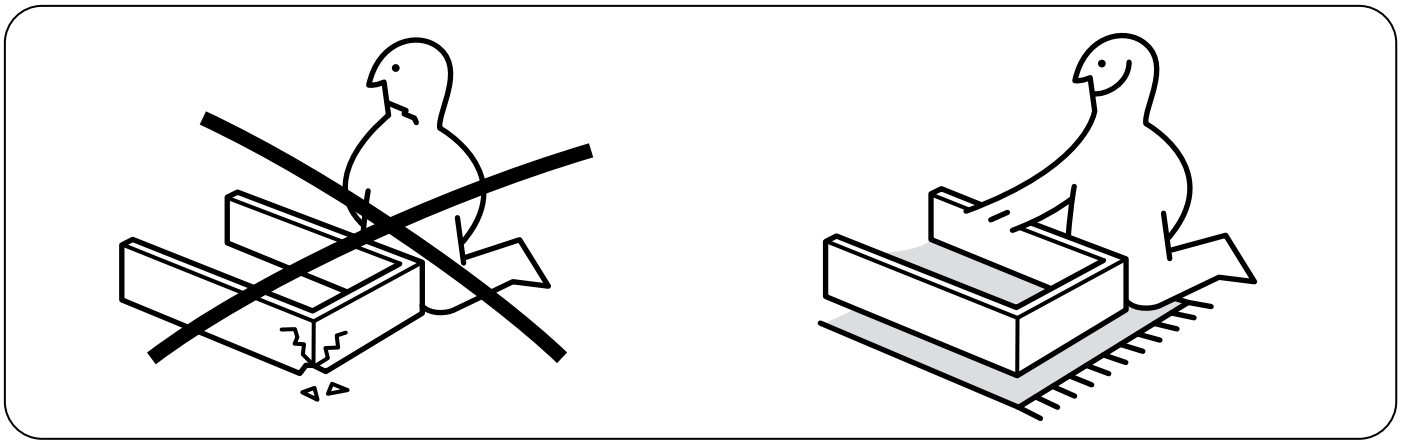

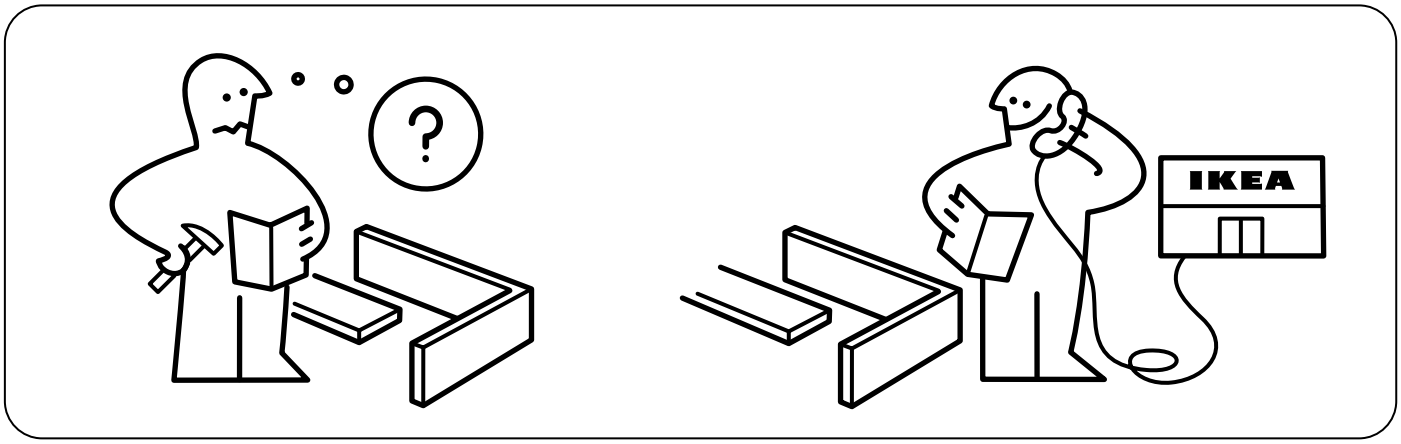

IKEA

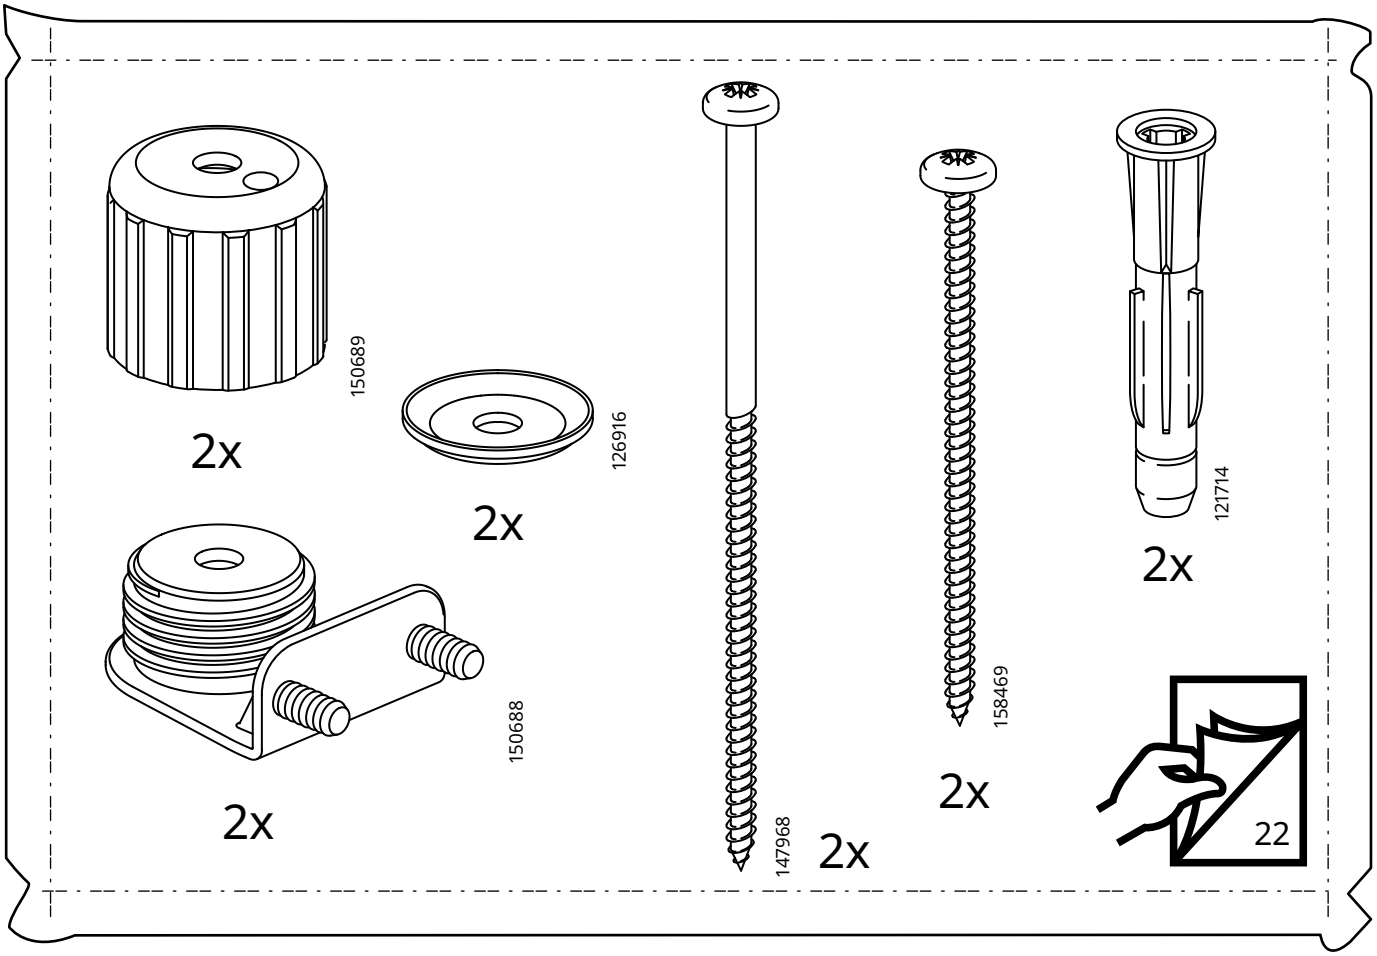
327495
150689
2x
126916
2x
150688
2x
147968
2x
158469
2x
121714
2x
22

1


120173

4x


101345


5x


146114
1004962


18x


10047146
10047130


2x

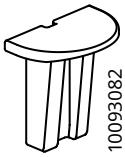
10093082


8x

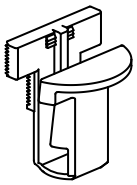
10093081


8x


151706
151708


10x


151705
151707


10x

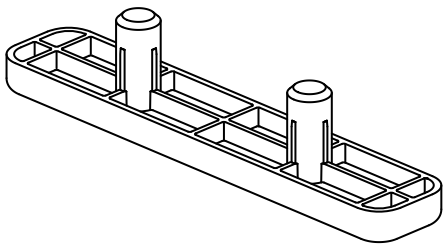
153548
158568

2x

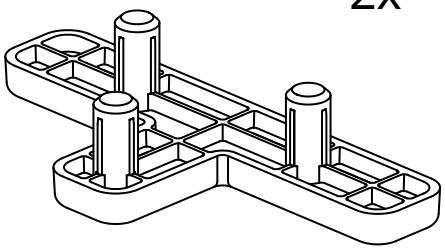
10040039
10051022


2x

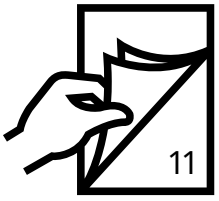

2


144575


8x


144574


8x

10049270


2x

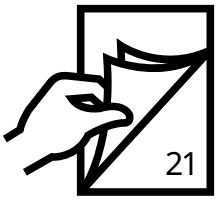

A


118331


12x


119976


6x


146114

18x


145718
159553


12x


101345


10x


119030
118224


24x

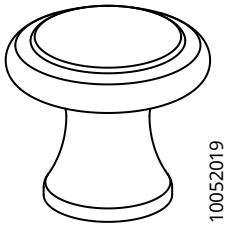

10052019

6x

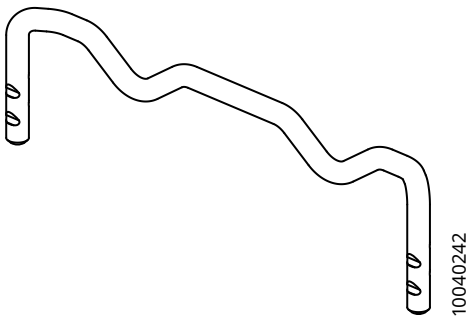
10040242

3x

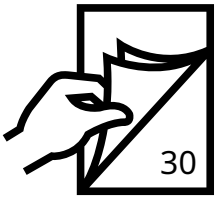


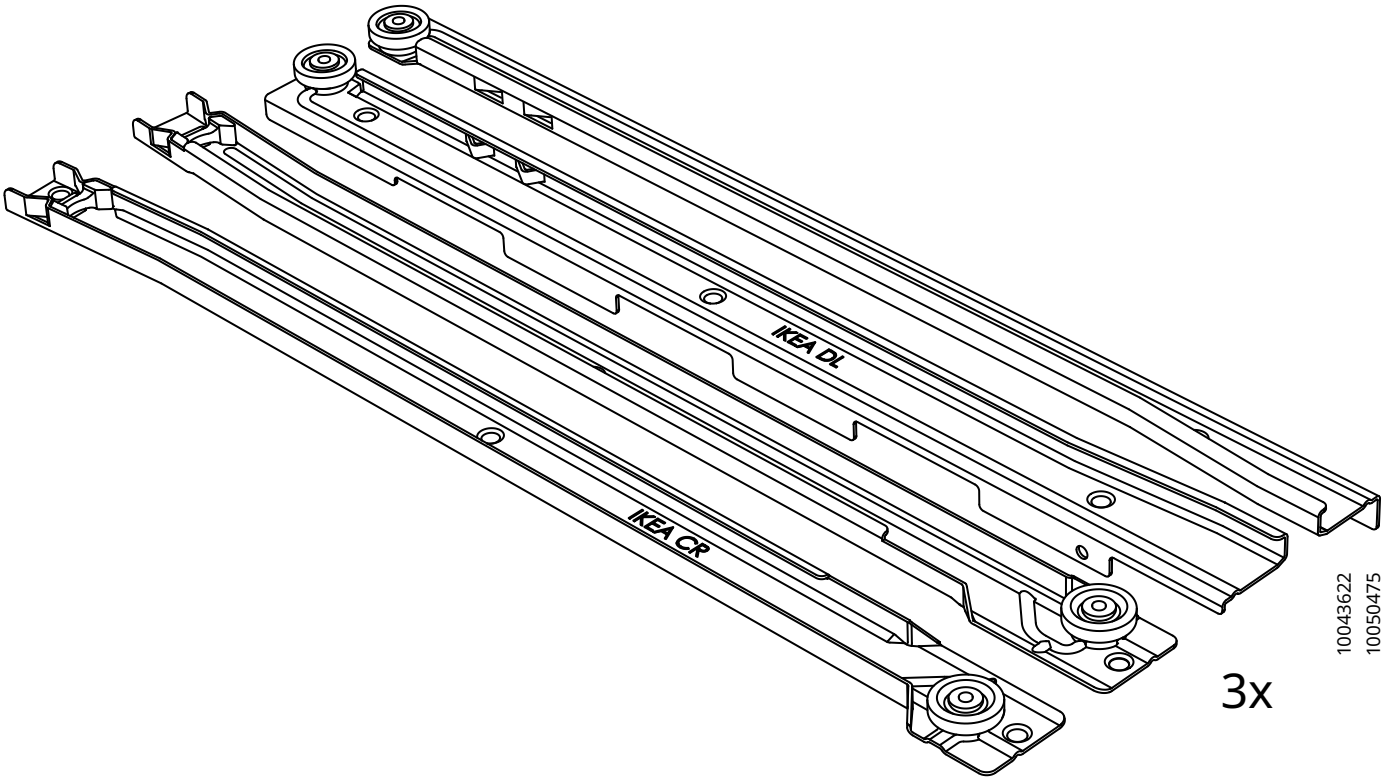


10043622
10050475


3x

1

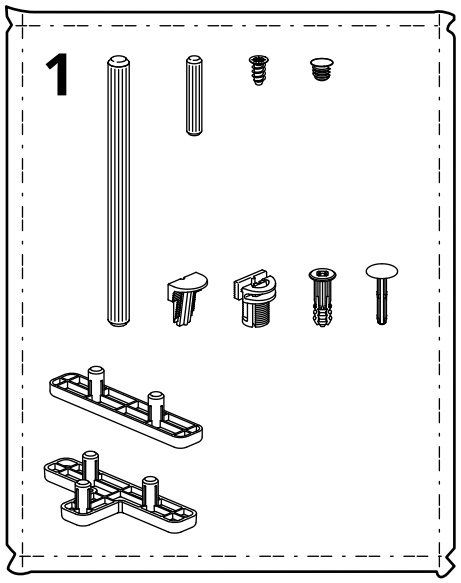


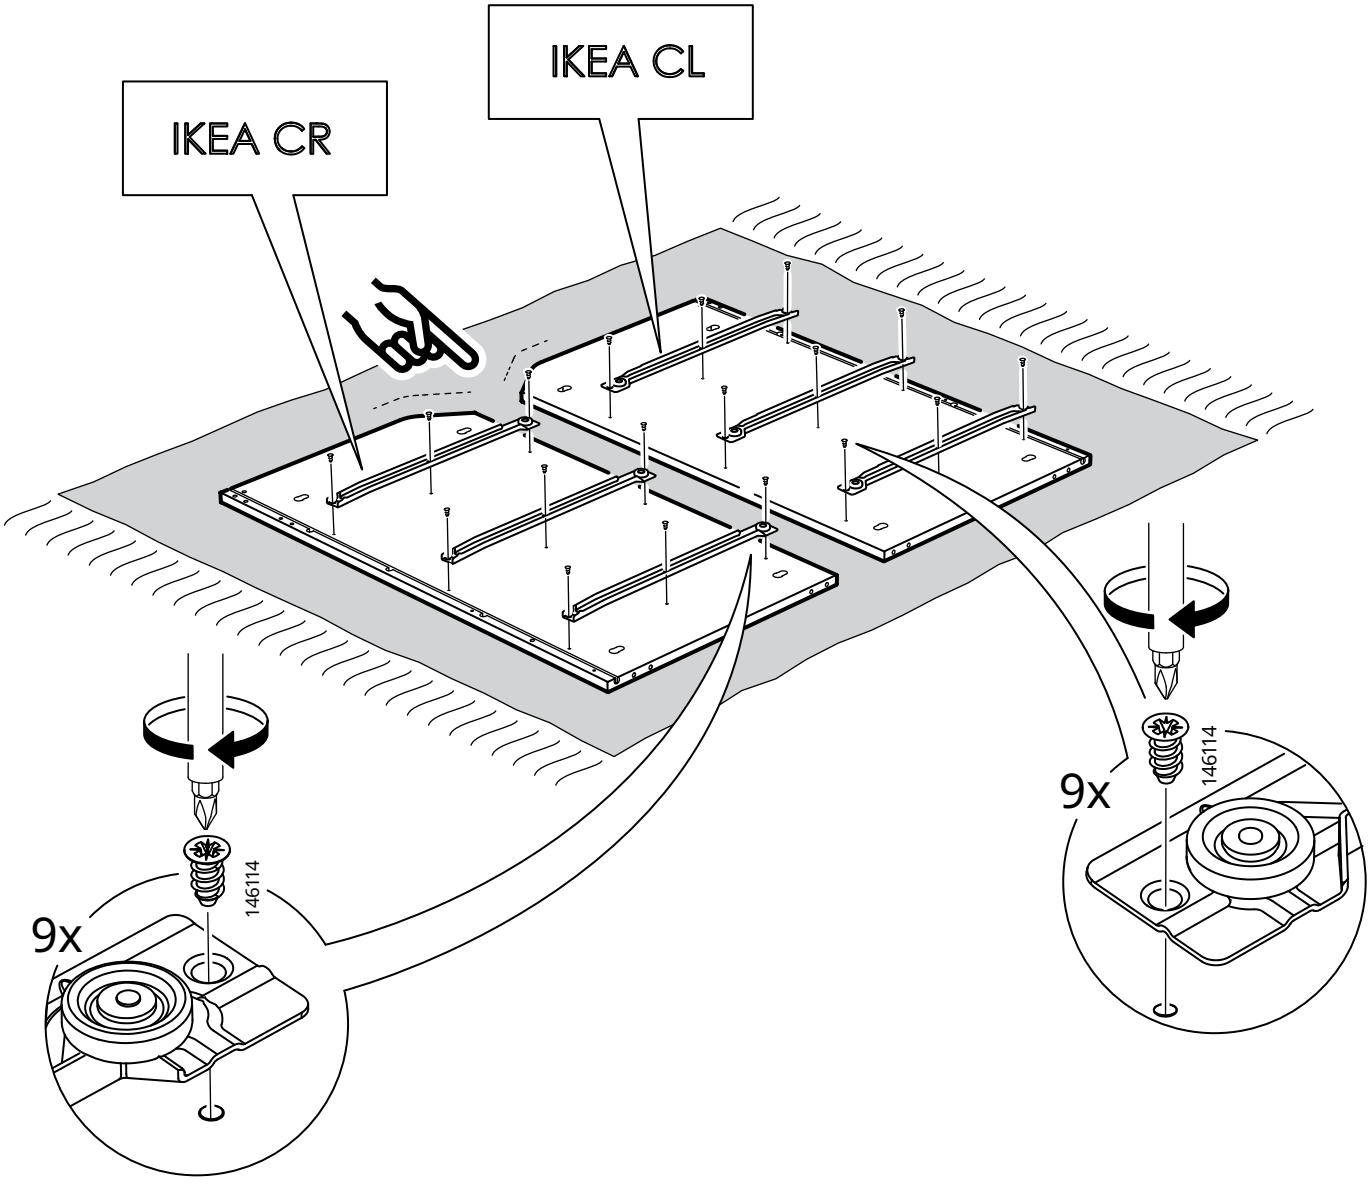


2

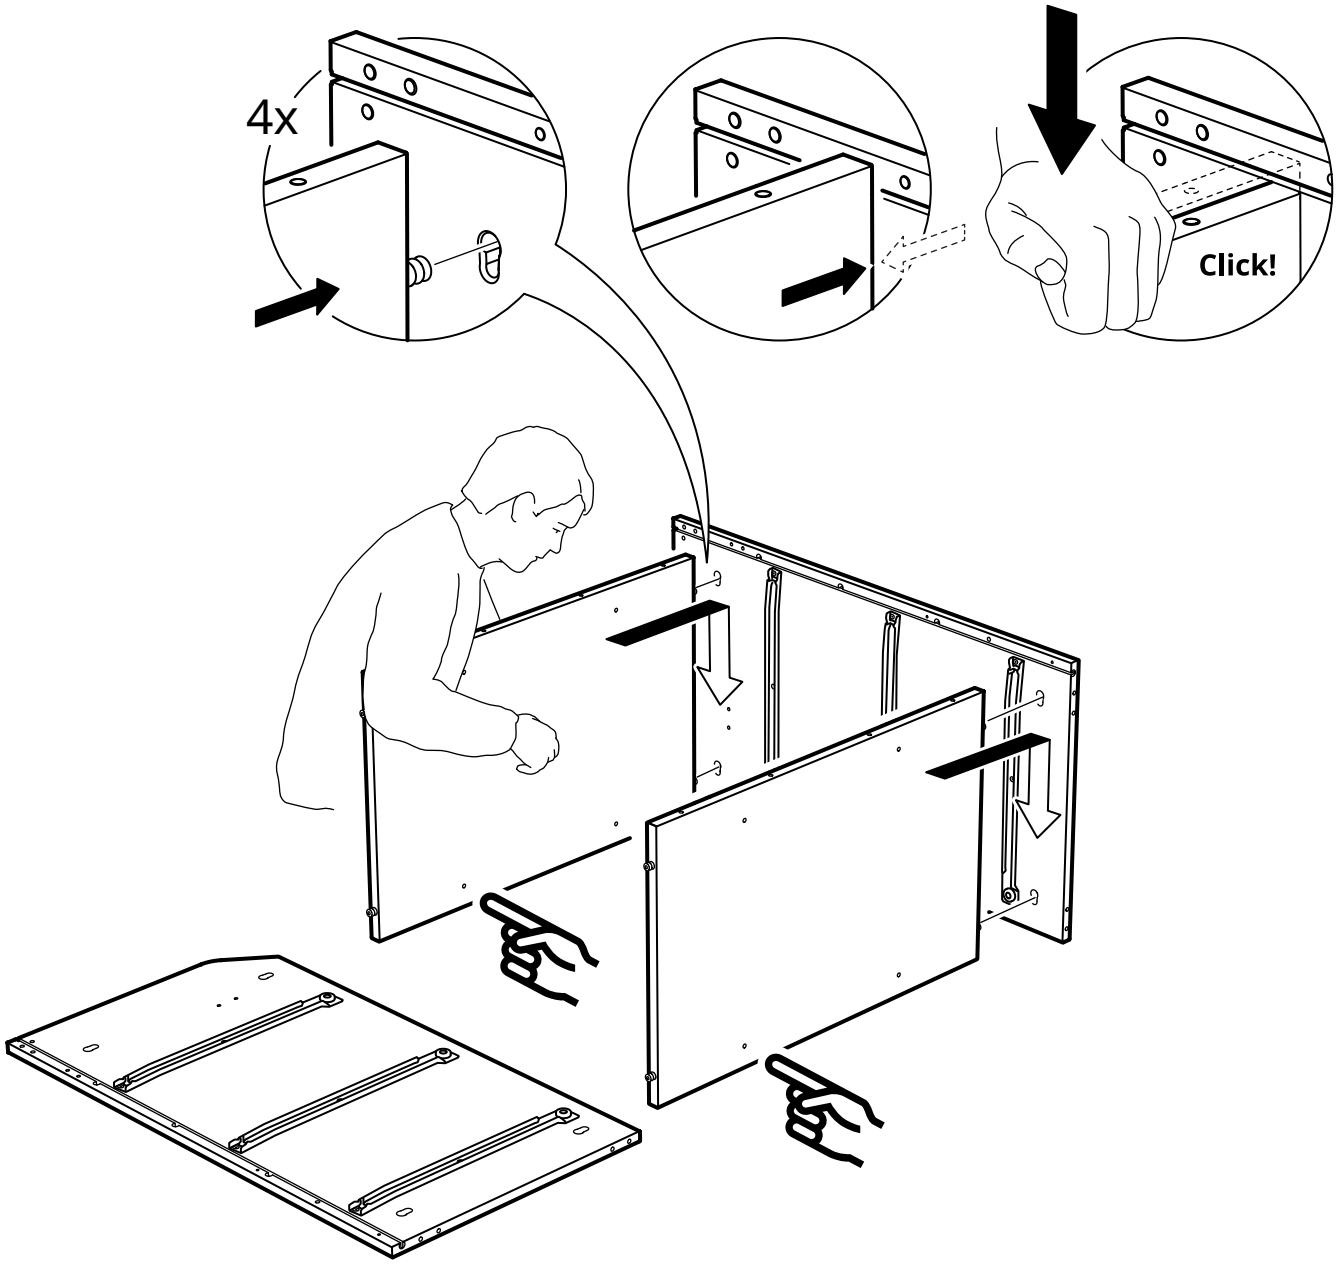


3

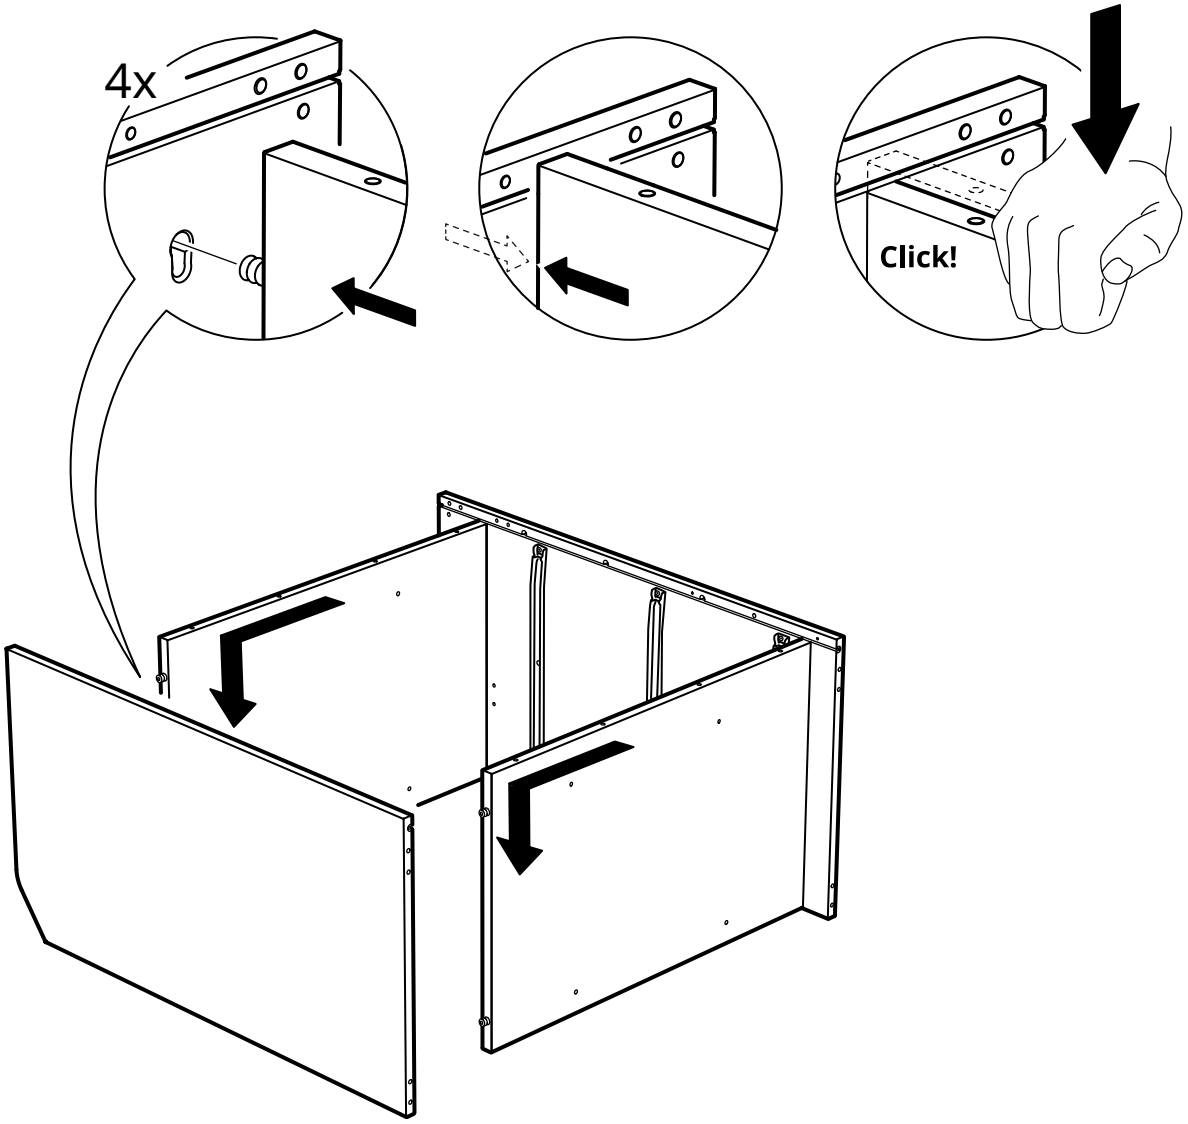


4

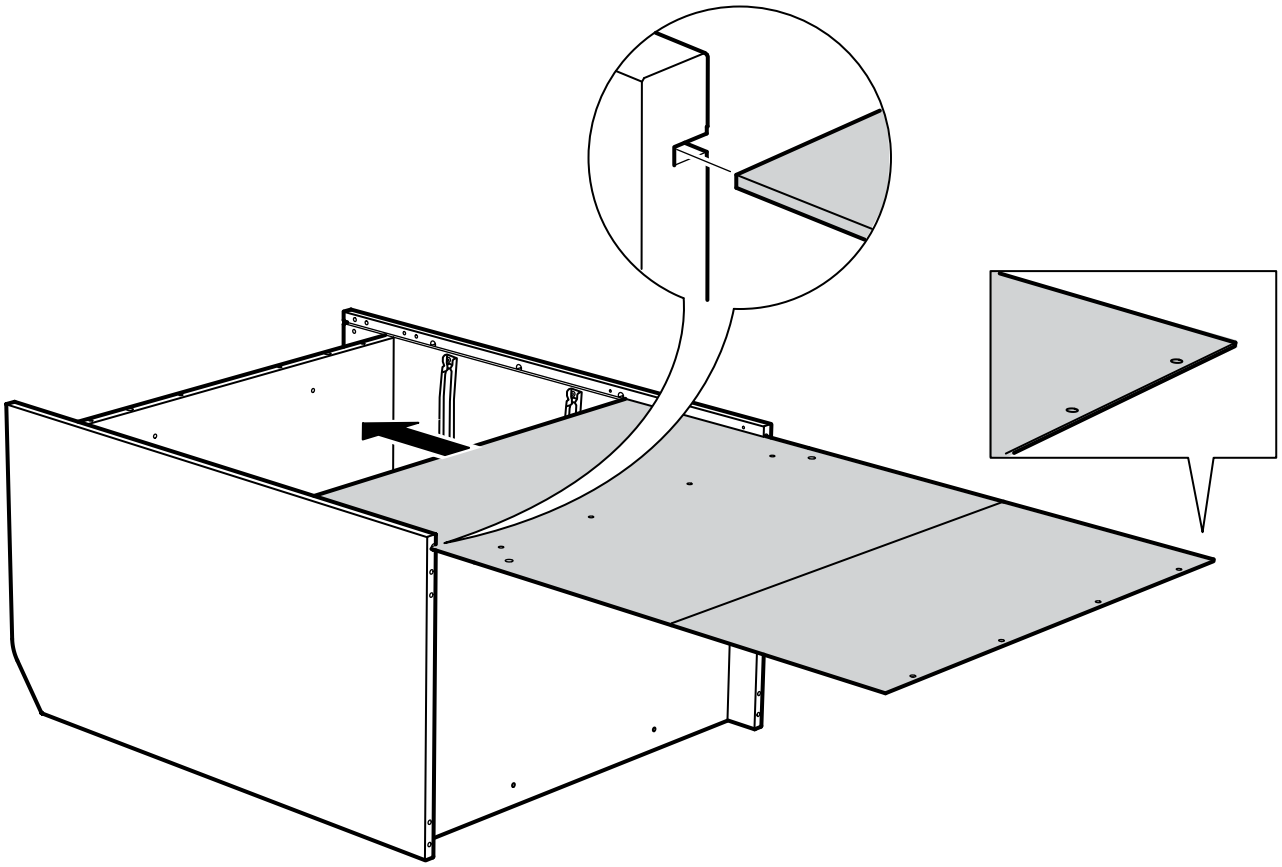


5

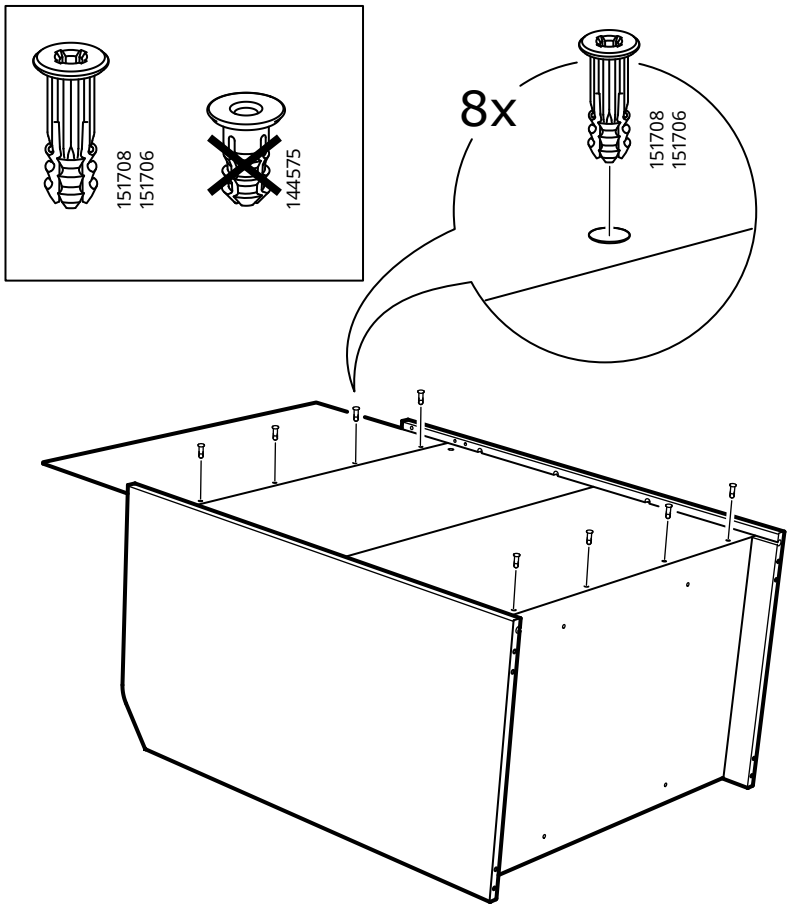


6

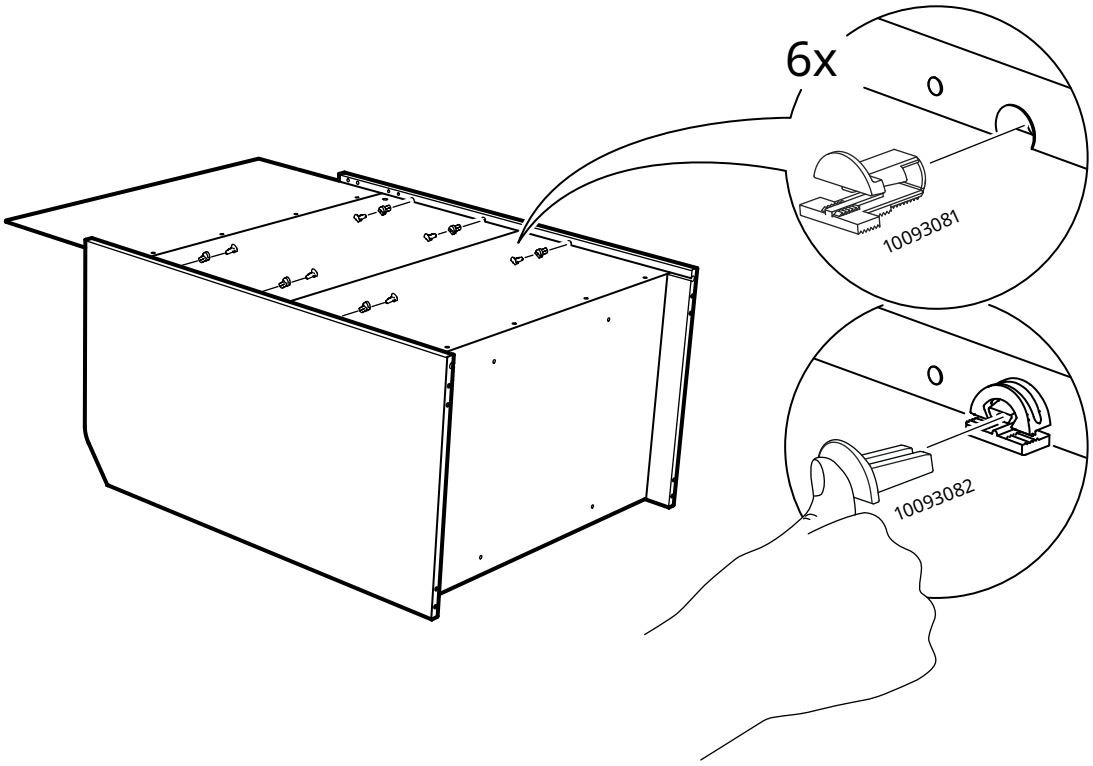
6x
10093081
10093082


7

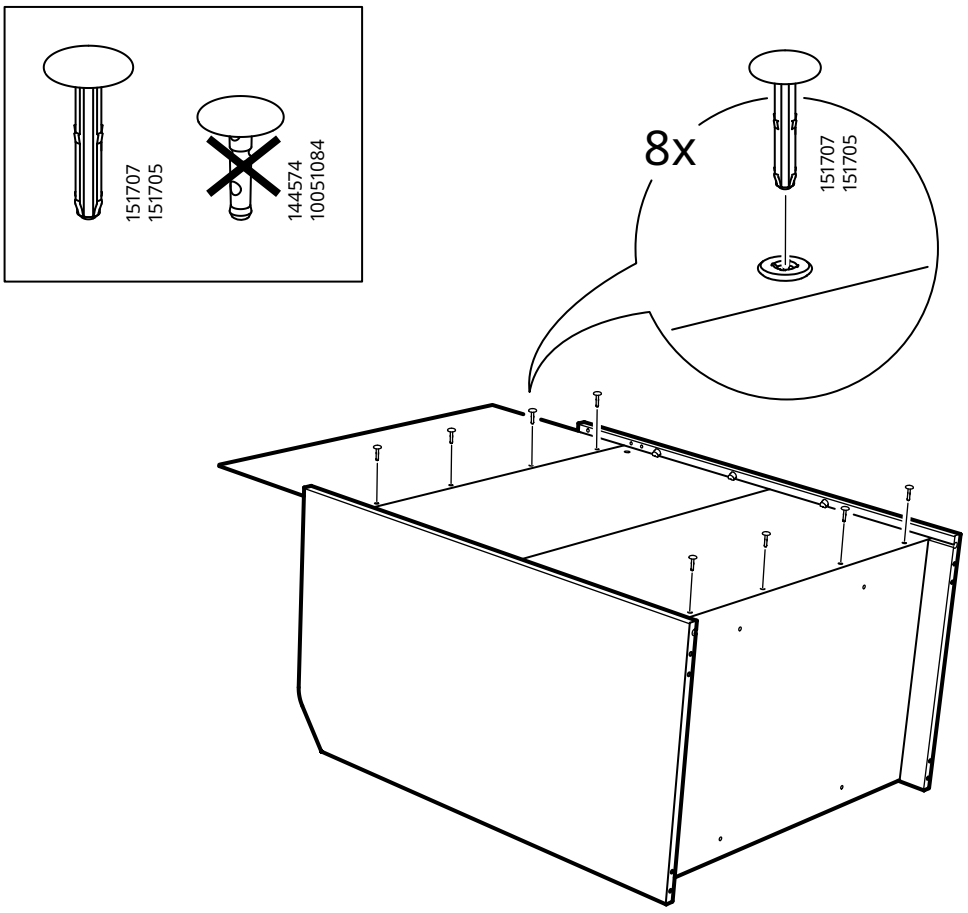

151707
151705
144574
10051084
8x
151707
151705


8

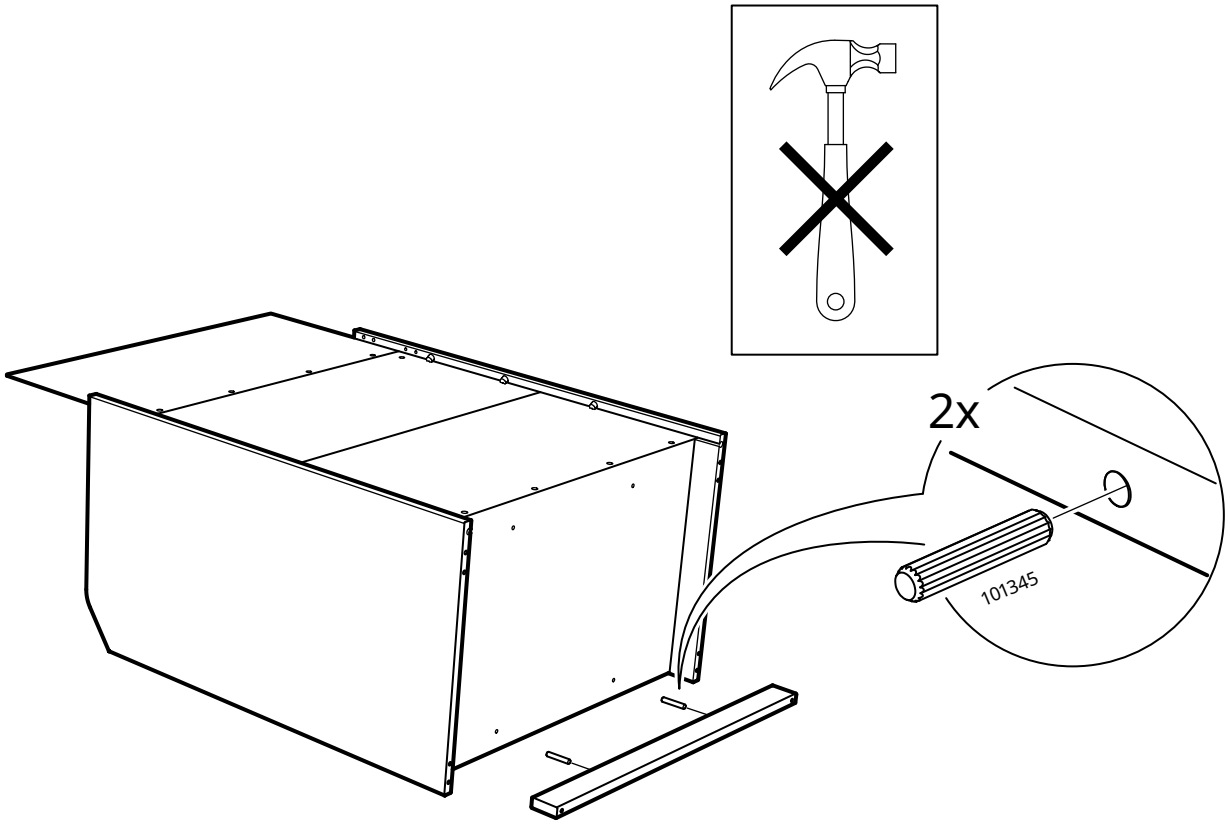


9

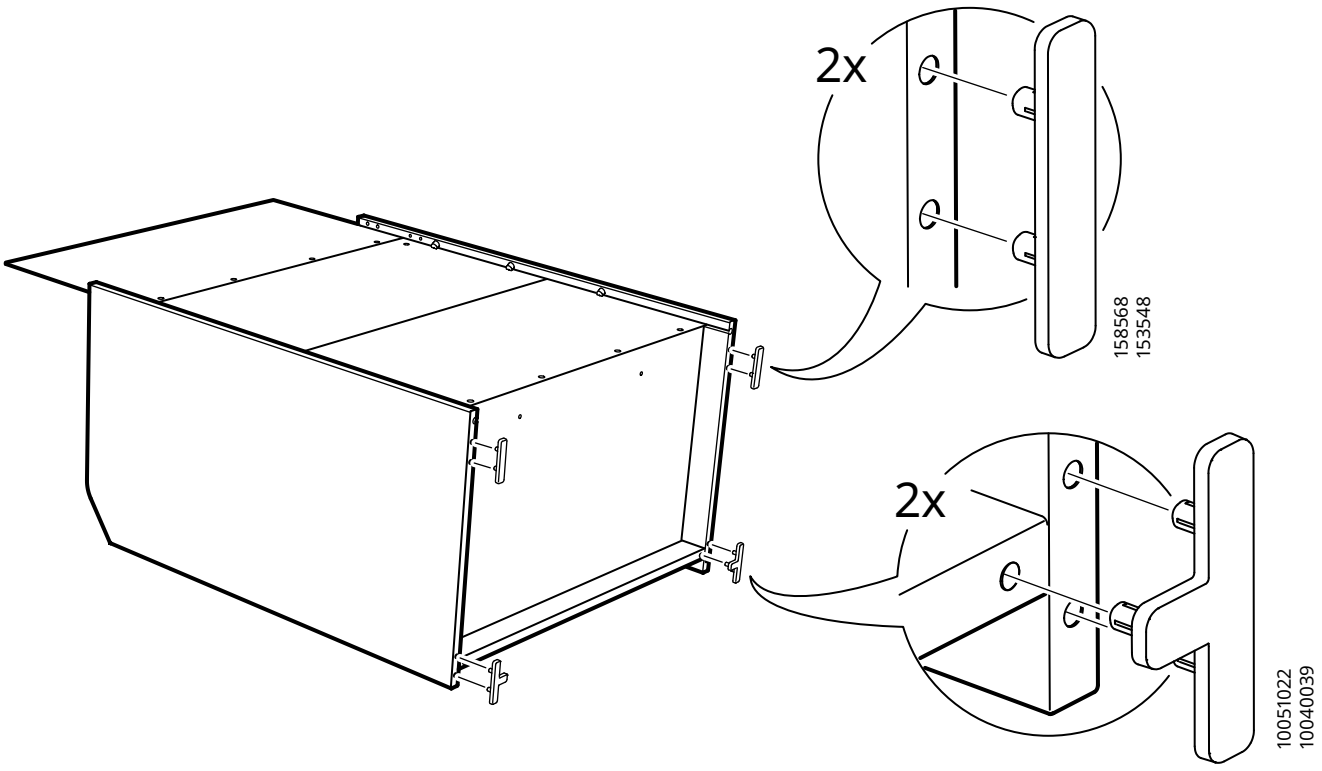

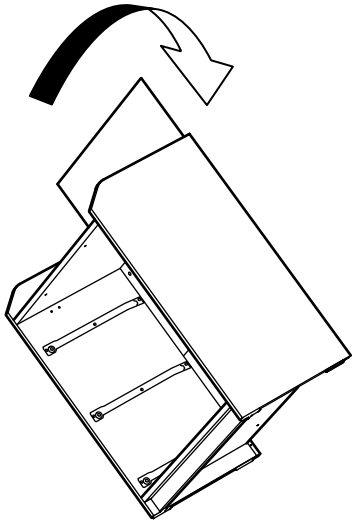


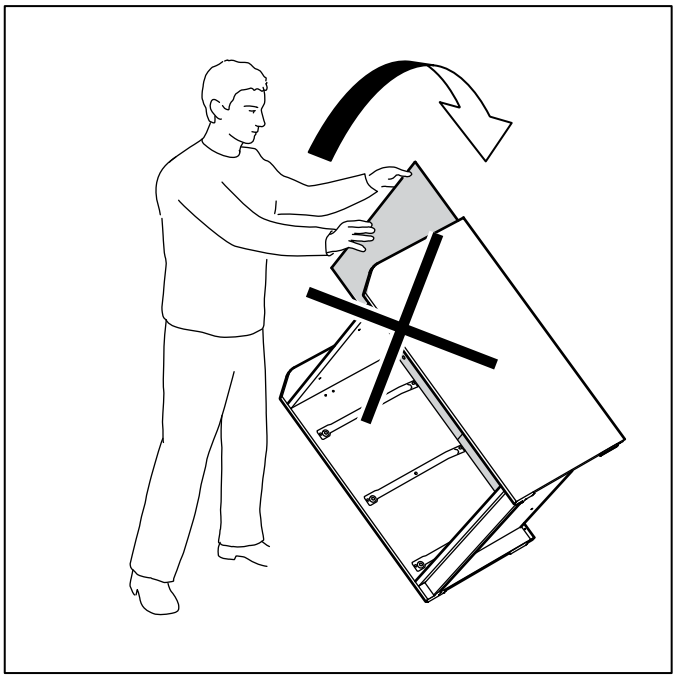


10

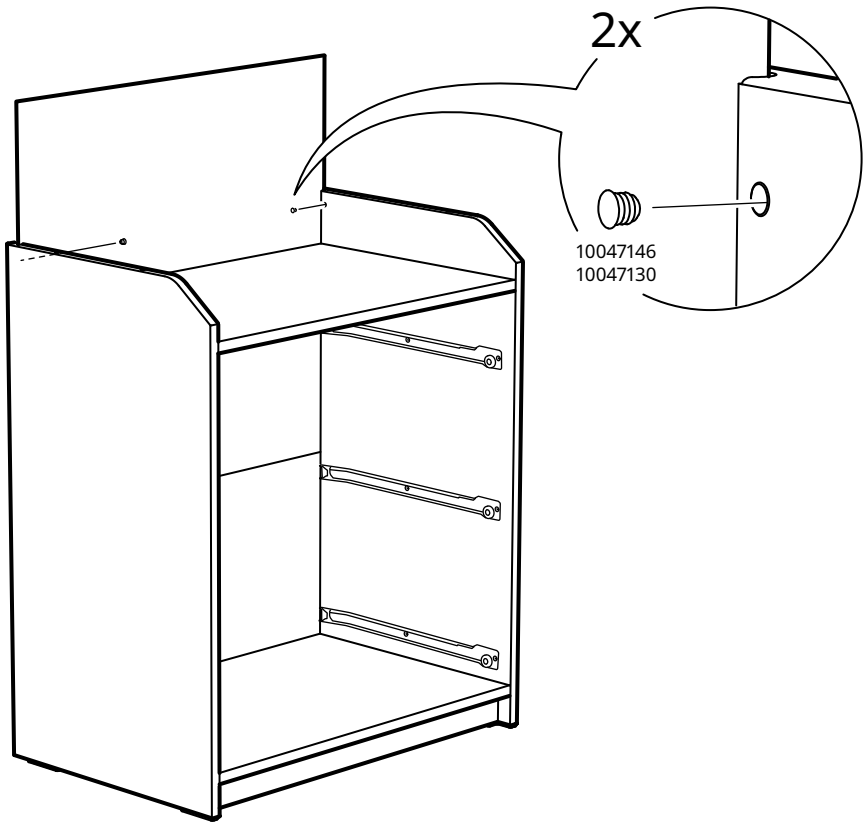


11

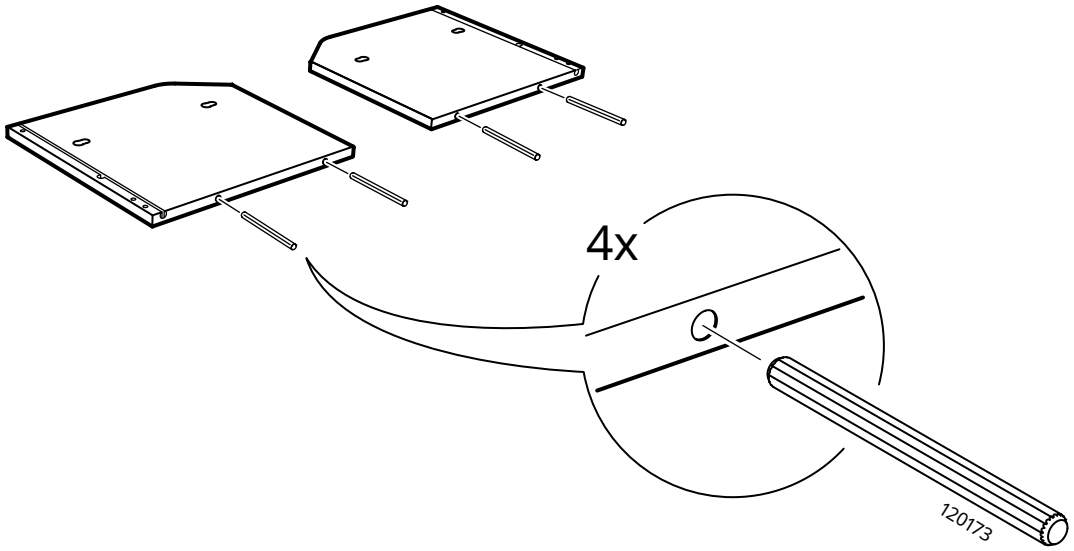


12

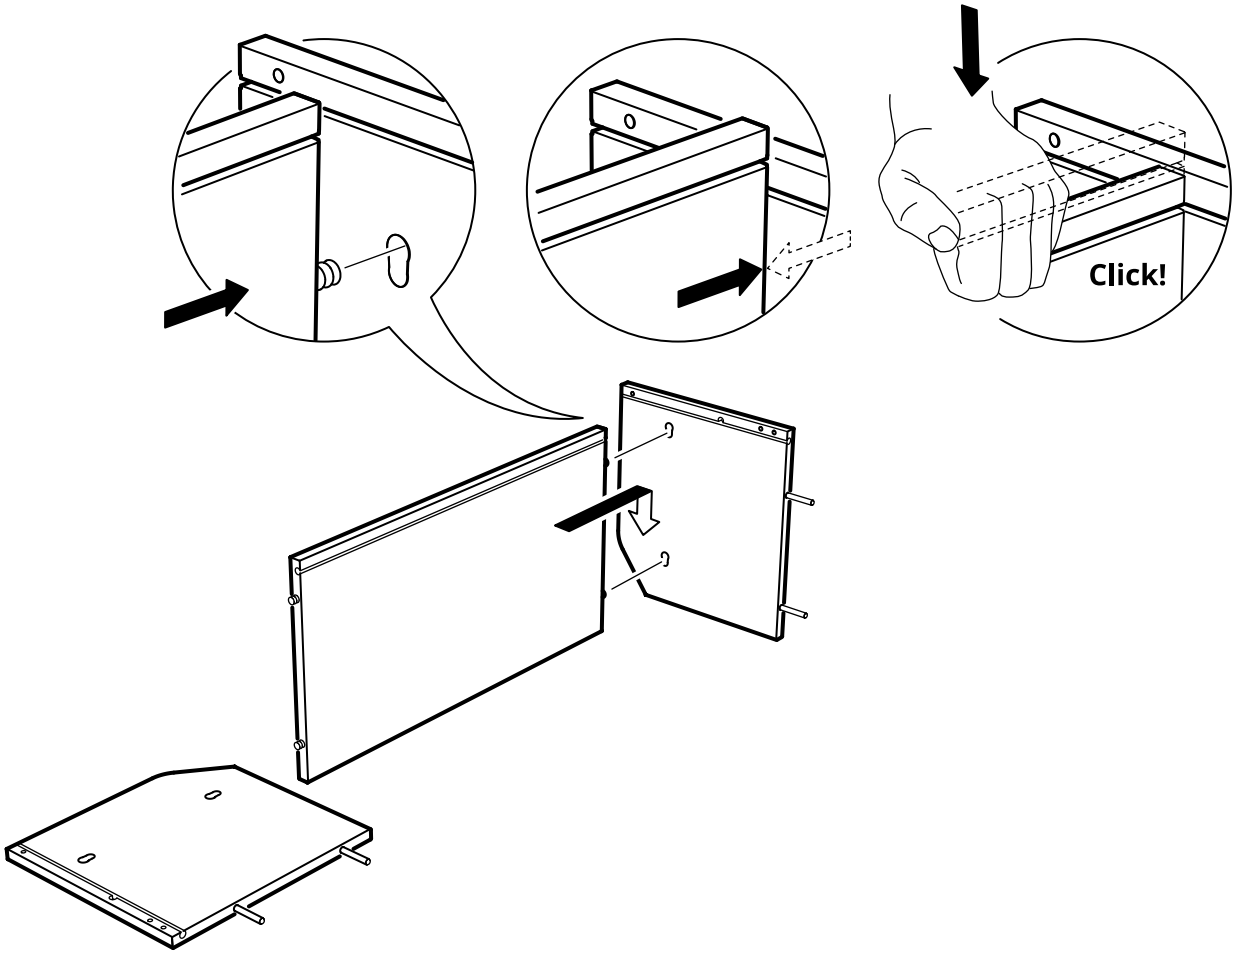


13

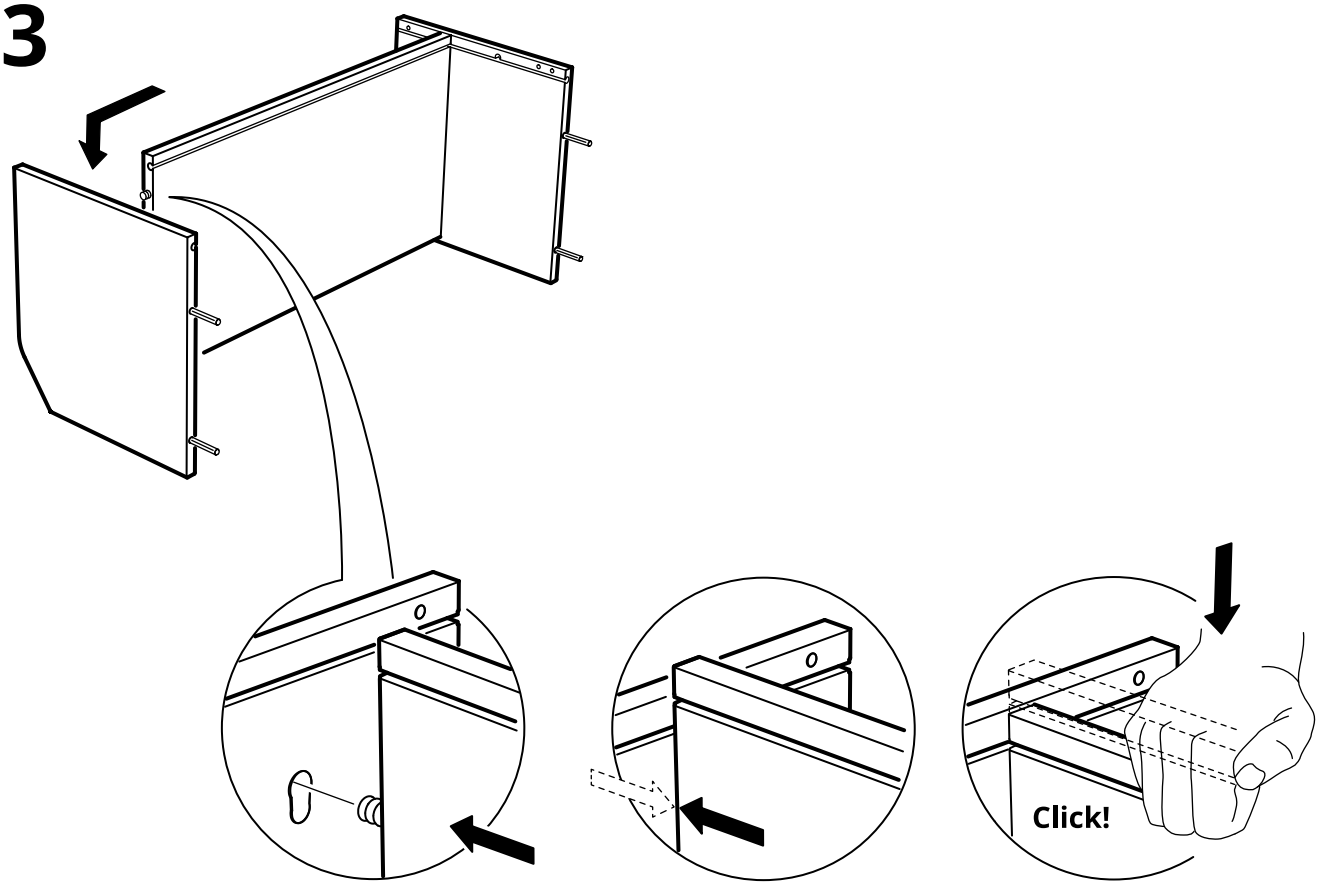


14

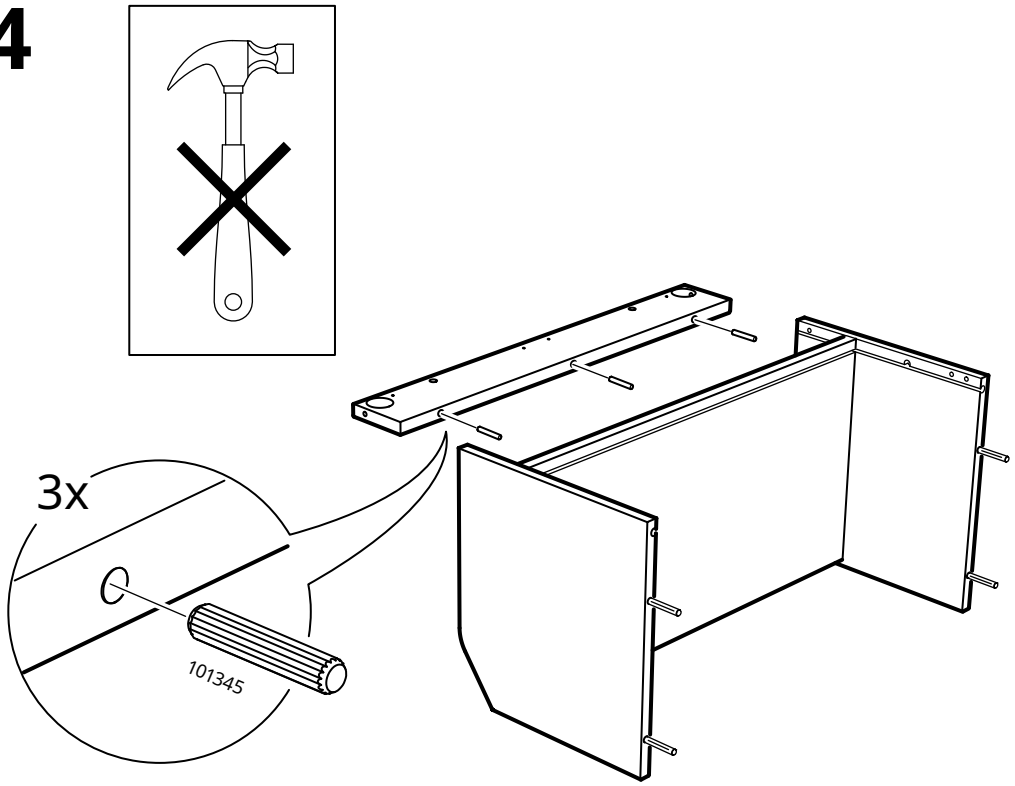


15

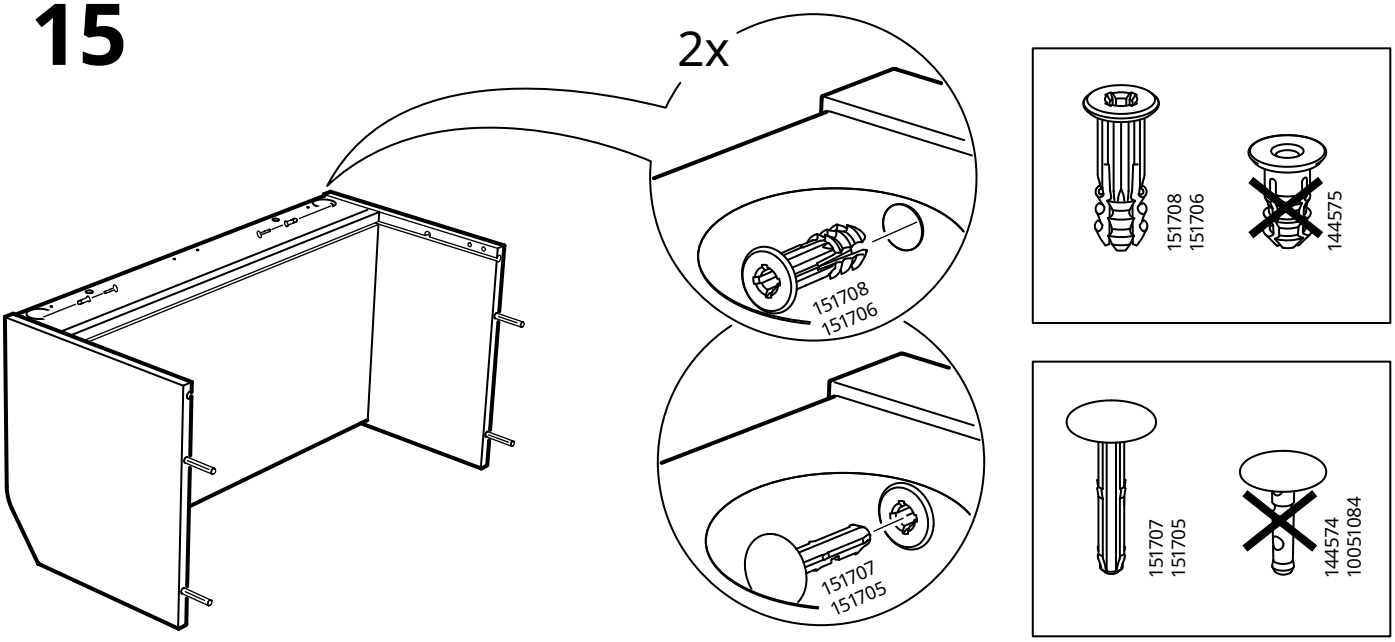

2x
151708
151706
151708
151706
144575
151707
151705
151707
151705
144574
10051084


16

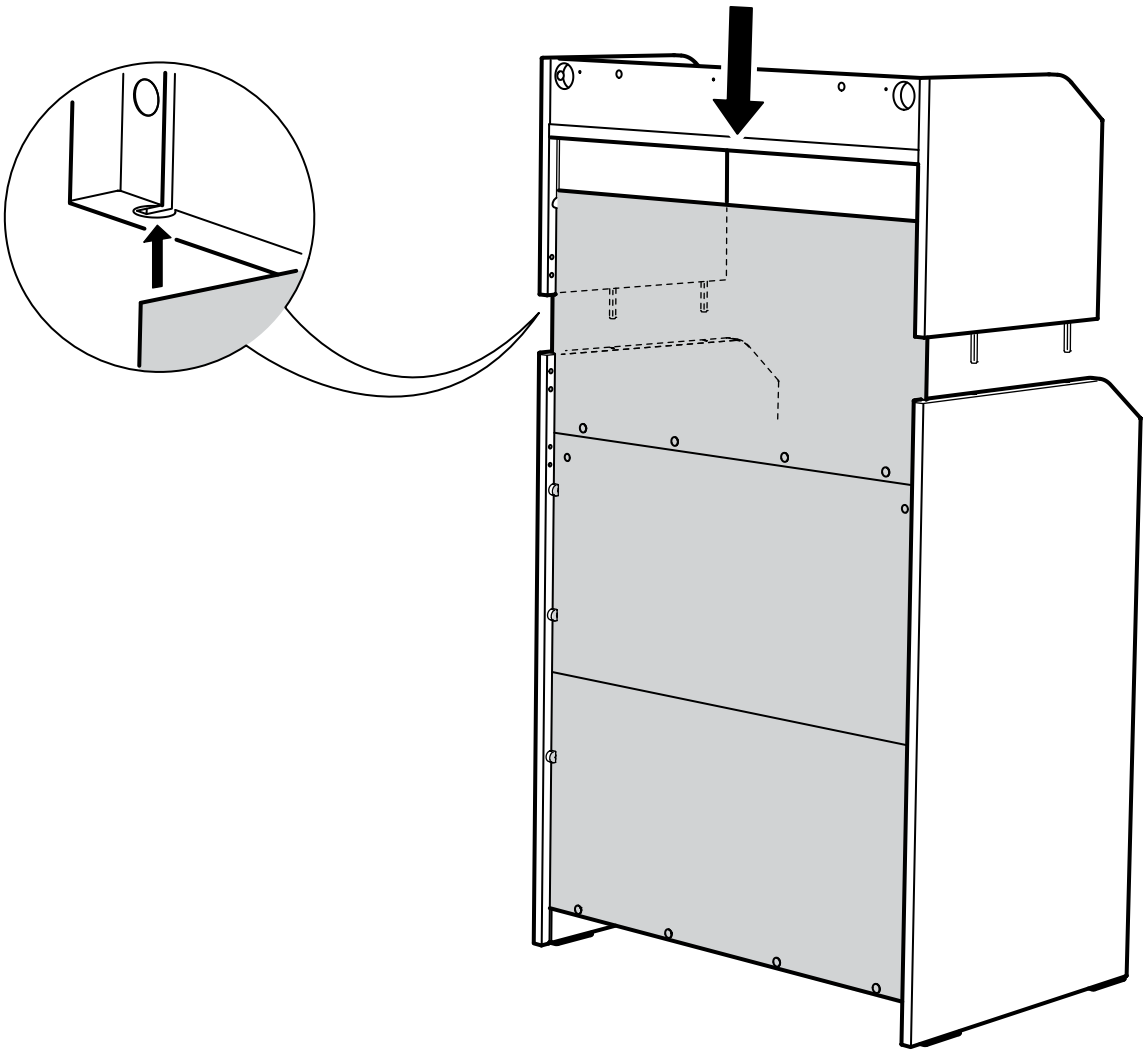


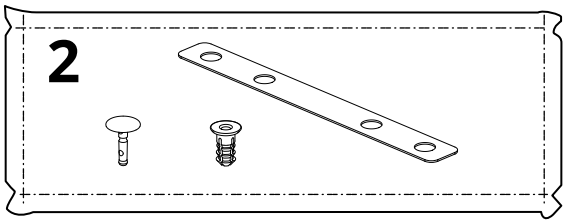
2


17

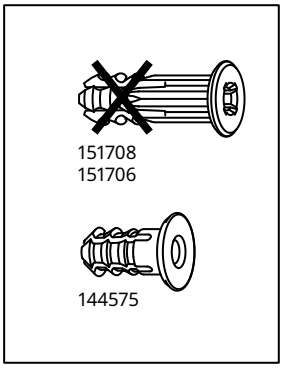
151708
151706
144575

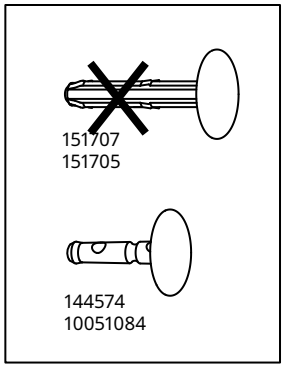

151707
151705
144574
10051084

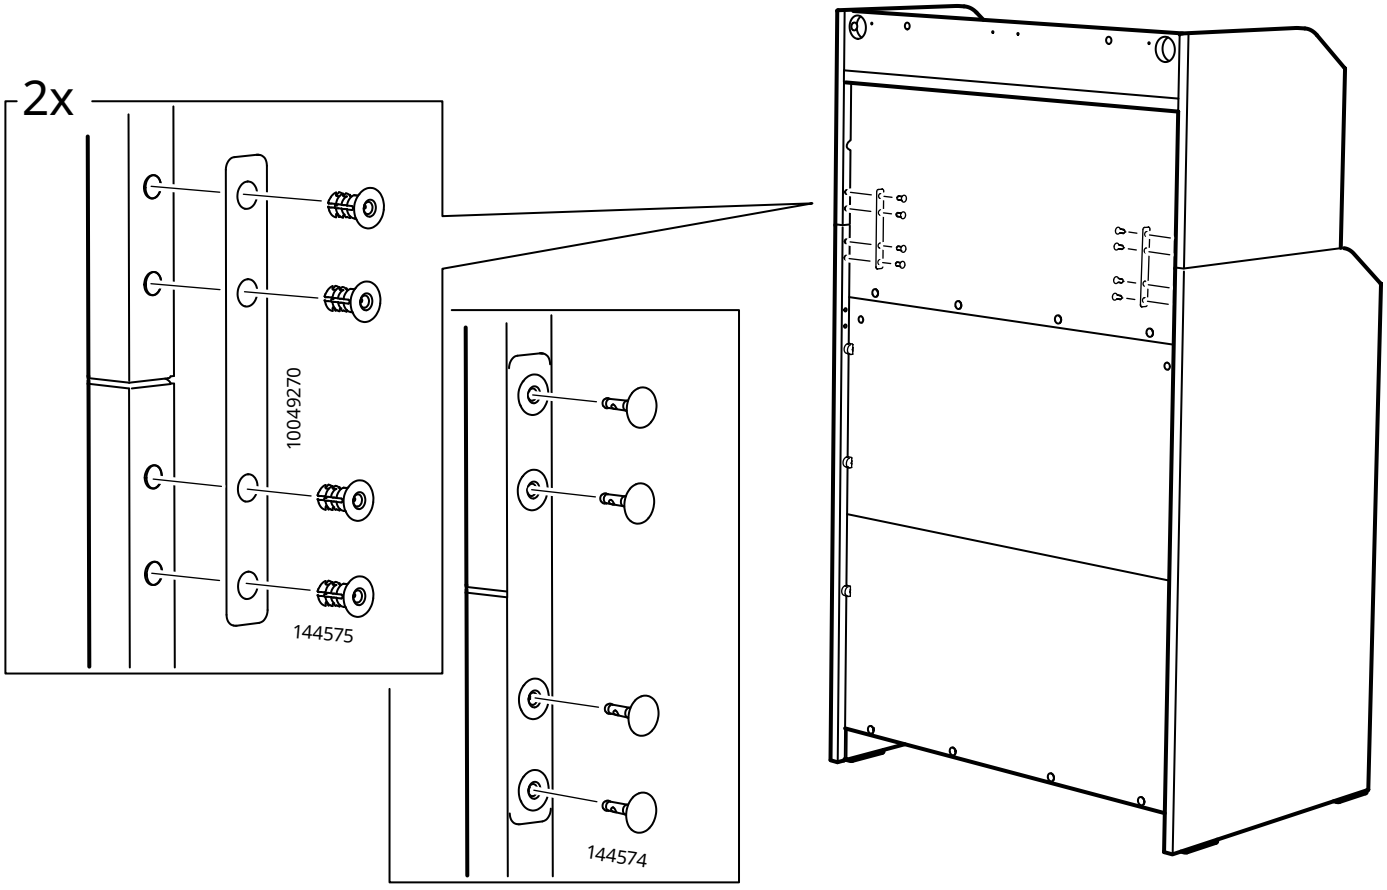

2x
10049270
144575
144574

18

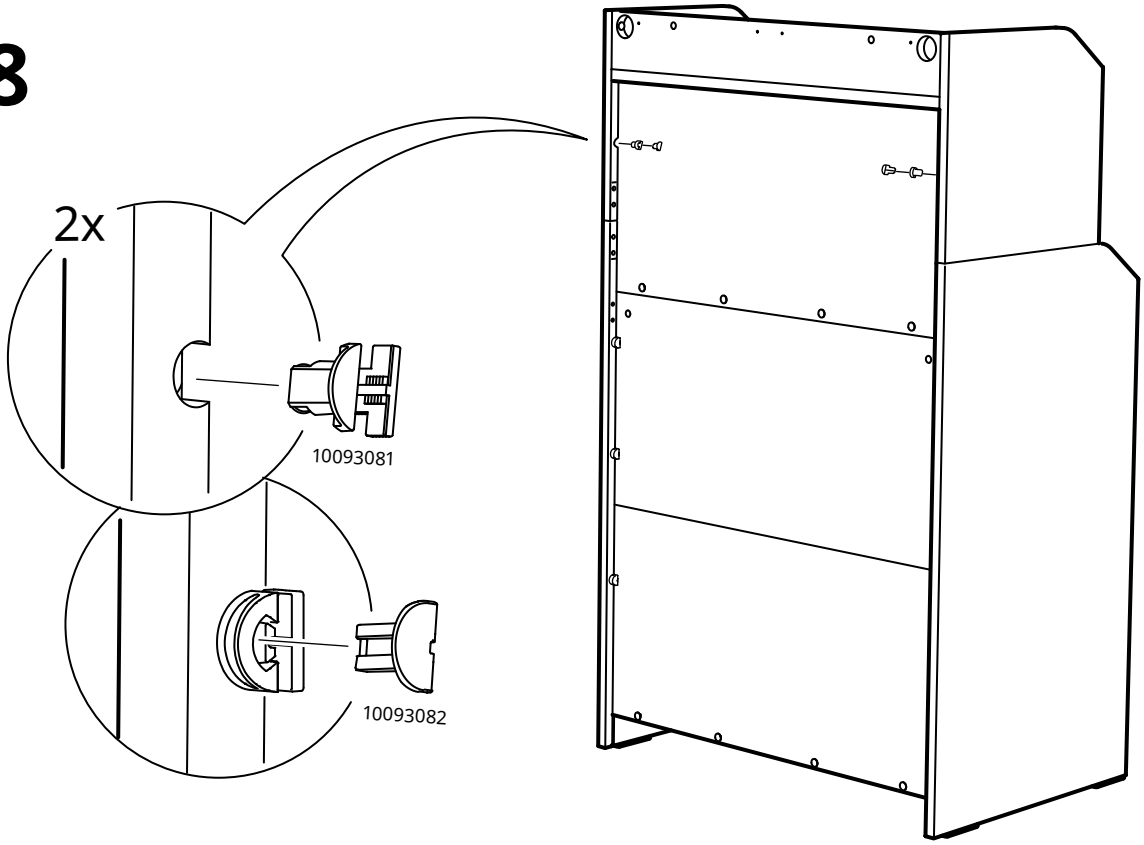


19

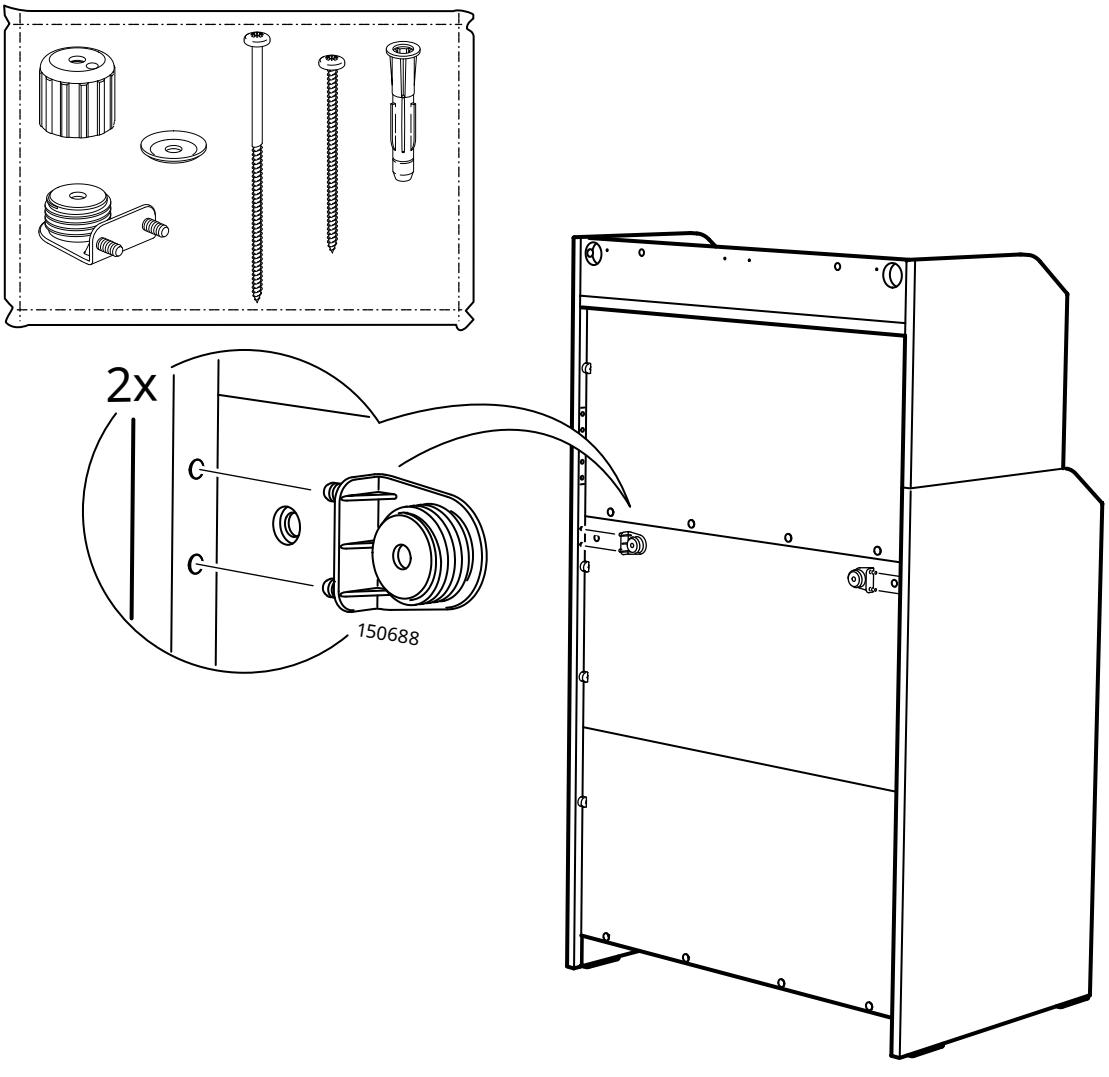


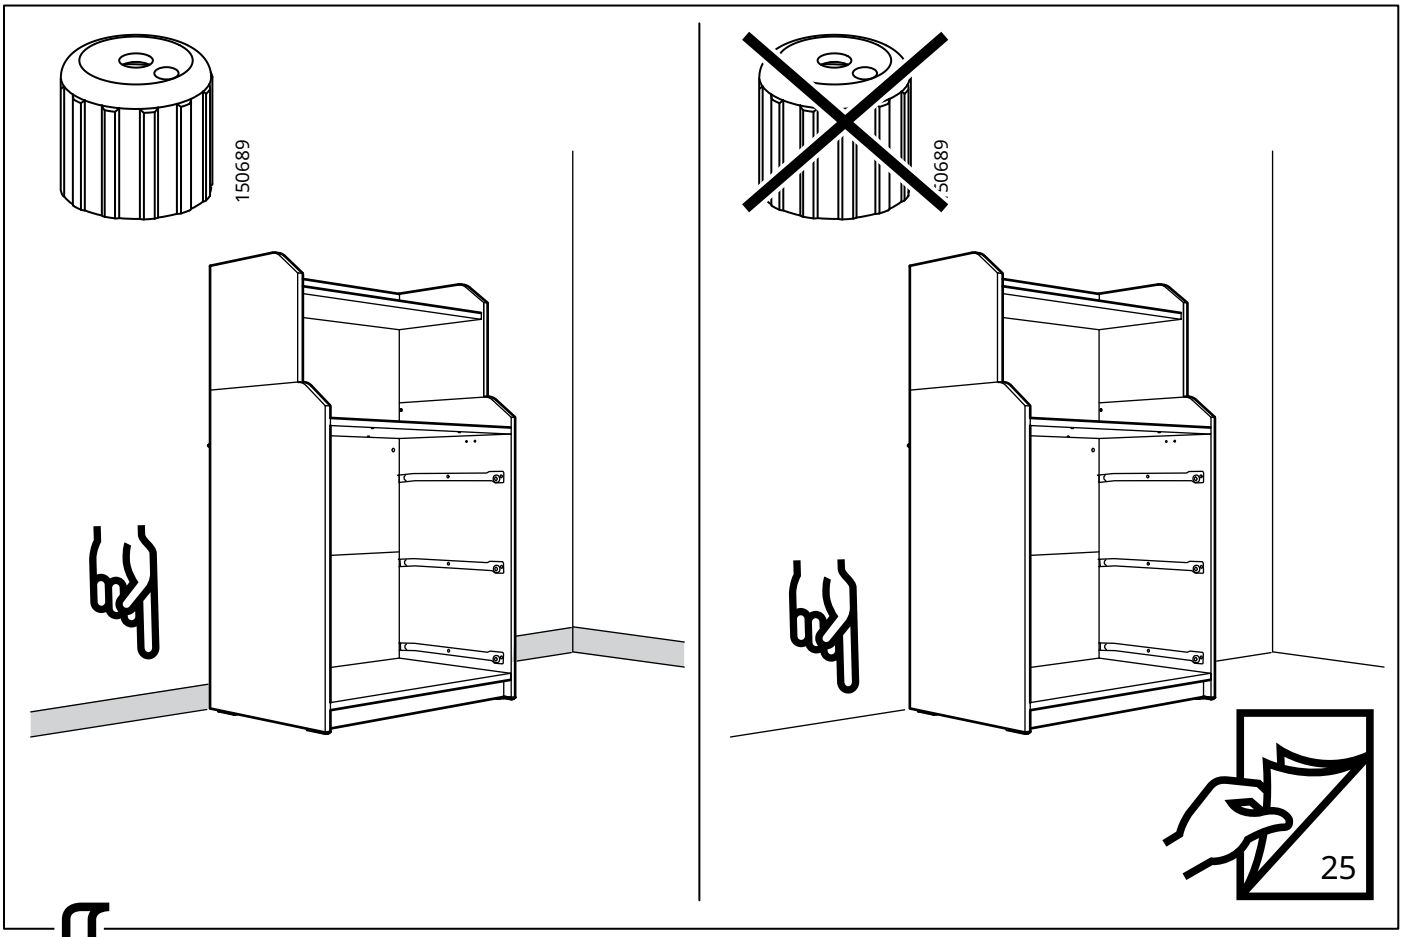


20

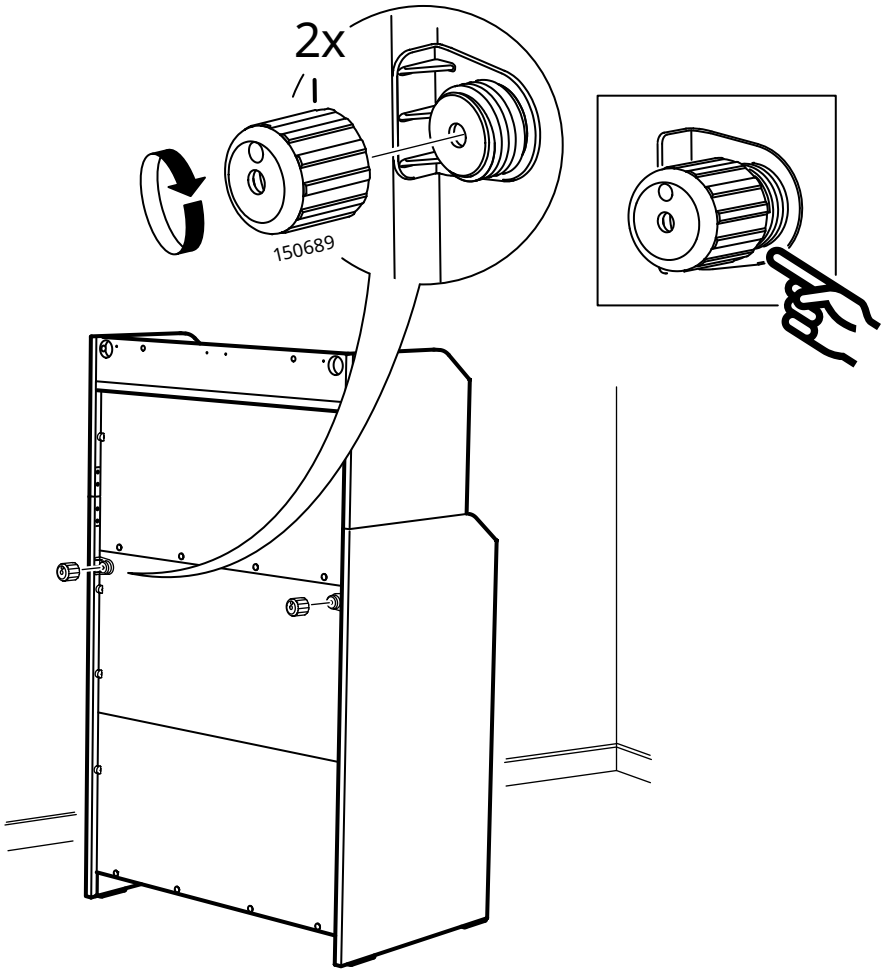


21

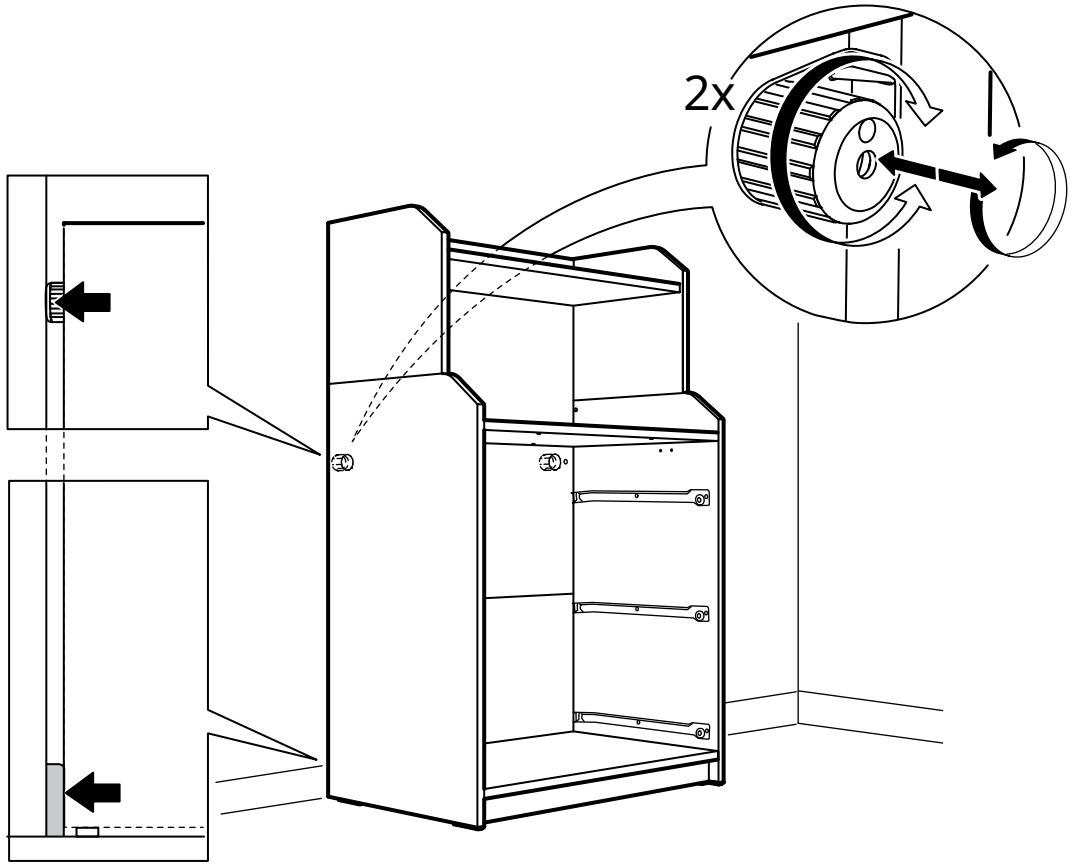

22

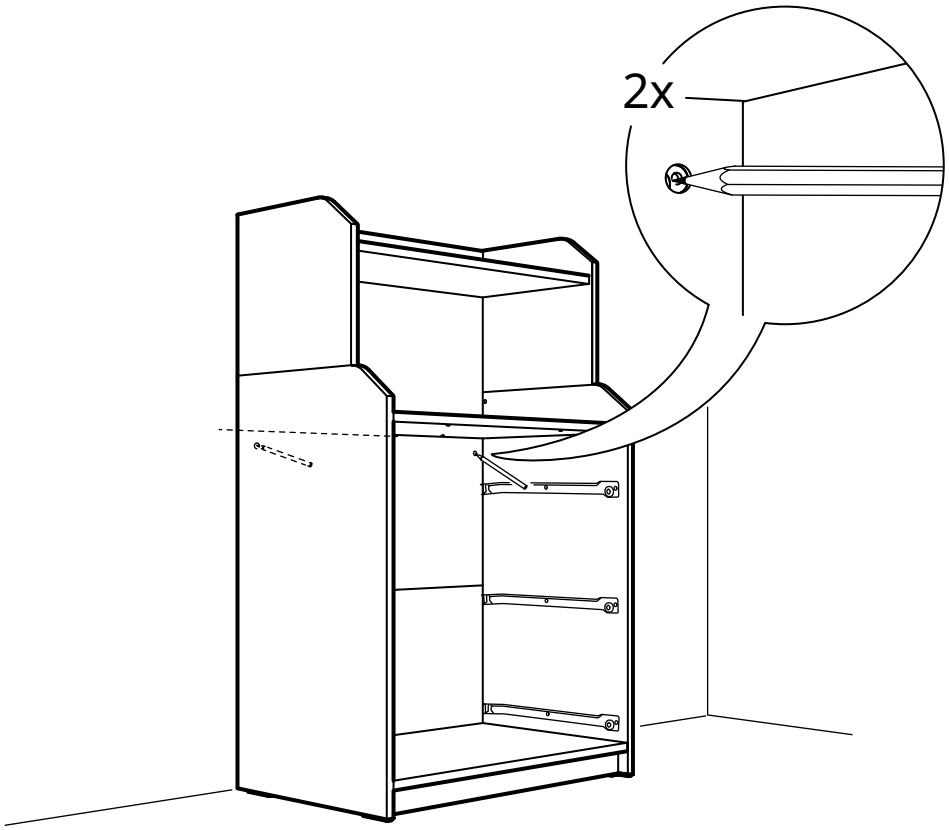


23

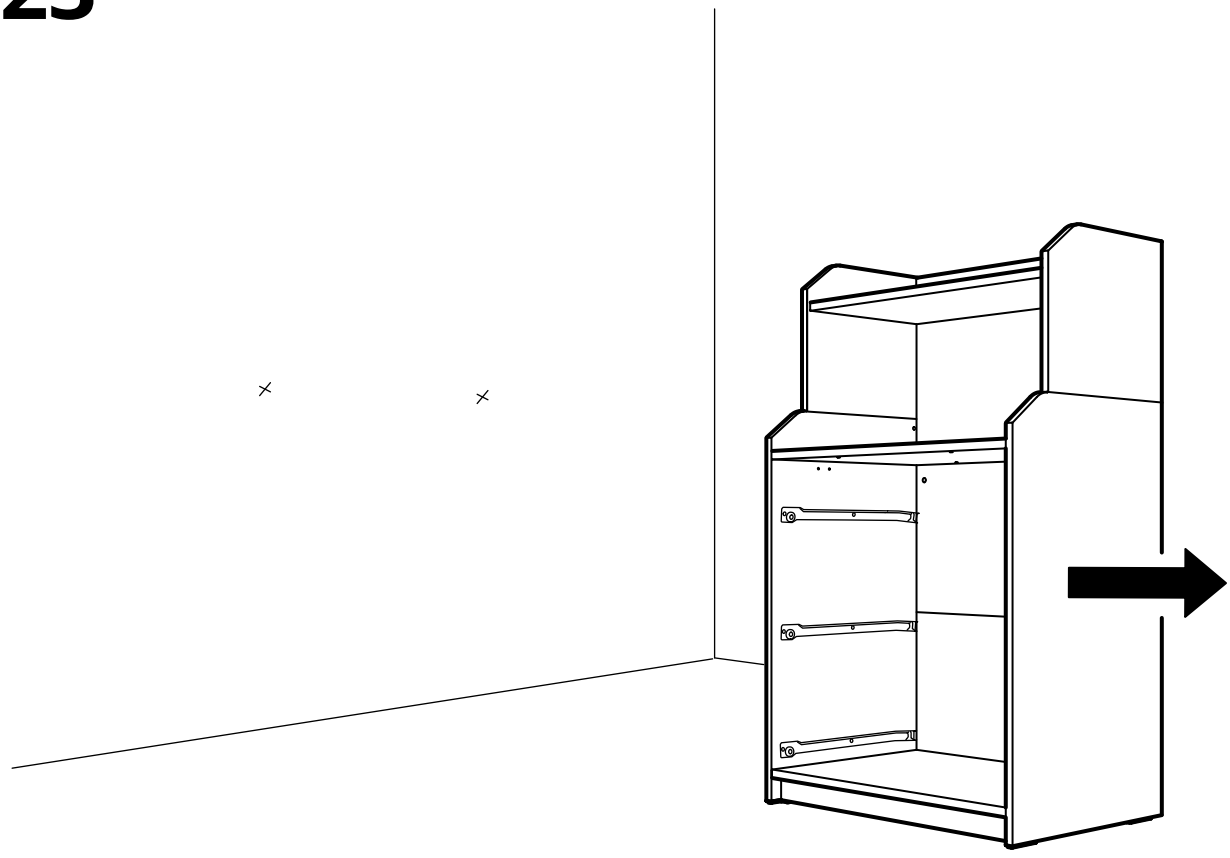



www.IKEA.com/secure-it

www.IKEA.cn/secure-it

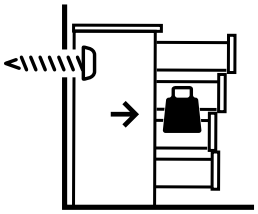


24


English


The screw(s) and plug(s) supplied can be used with most solid (A) and hollow (B) walls. For solid wood (C) use the screw(s) without plug(s). If you are uncertain, seek professional advice.

עברית


הבורג(ים) והדיבל(ים) המצורפים מתאימים לרוב סוגי הקירות המוצקים (A) והקירות החלולים (B). לקירות עץ (C) השתמשו בבורג (ים) ללא דיבל(ים). במידה ואינכם בטוחים, יש להתייעץ עם איש מקצוע.

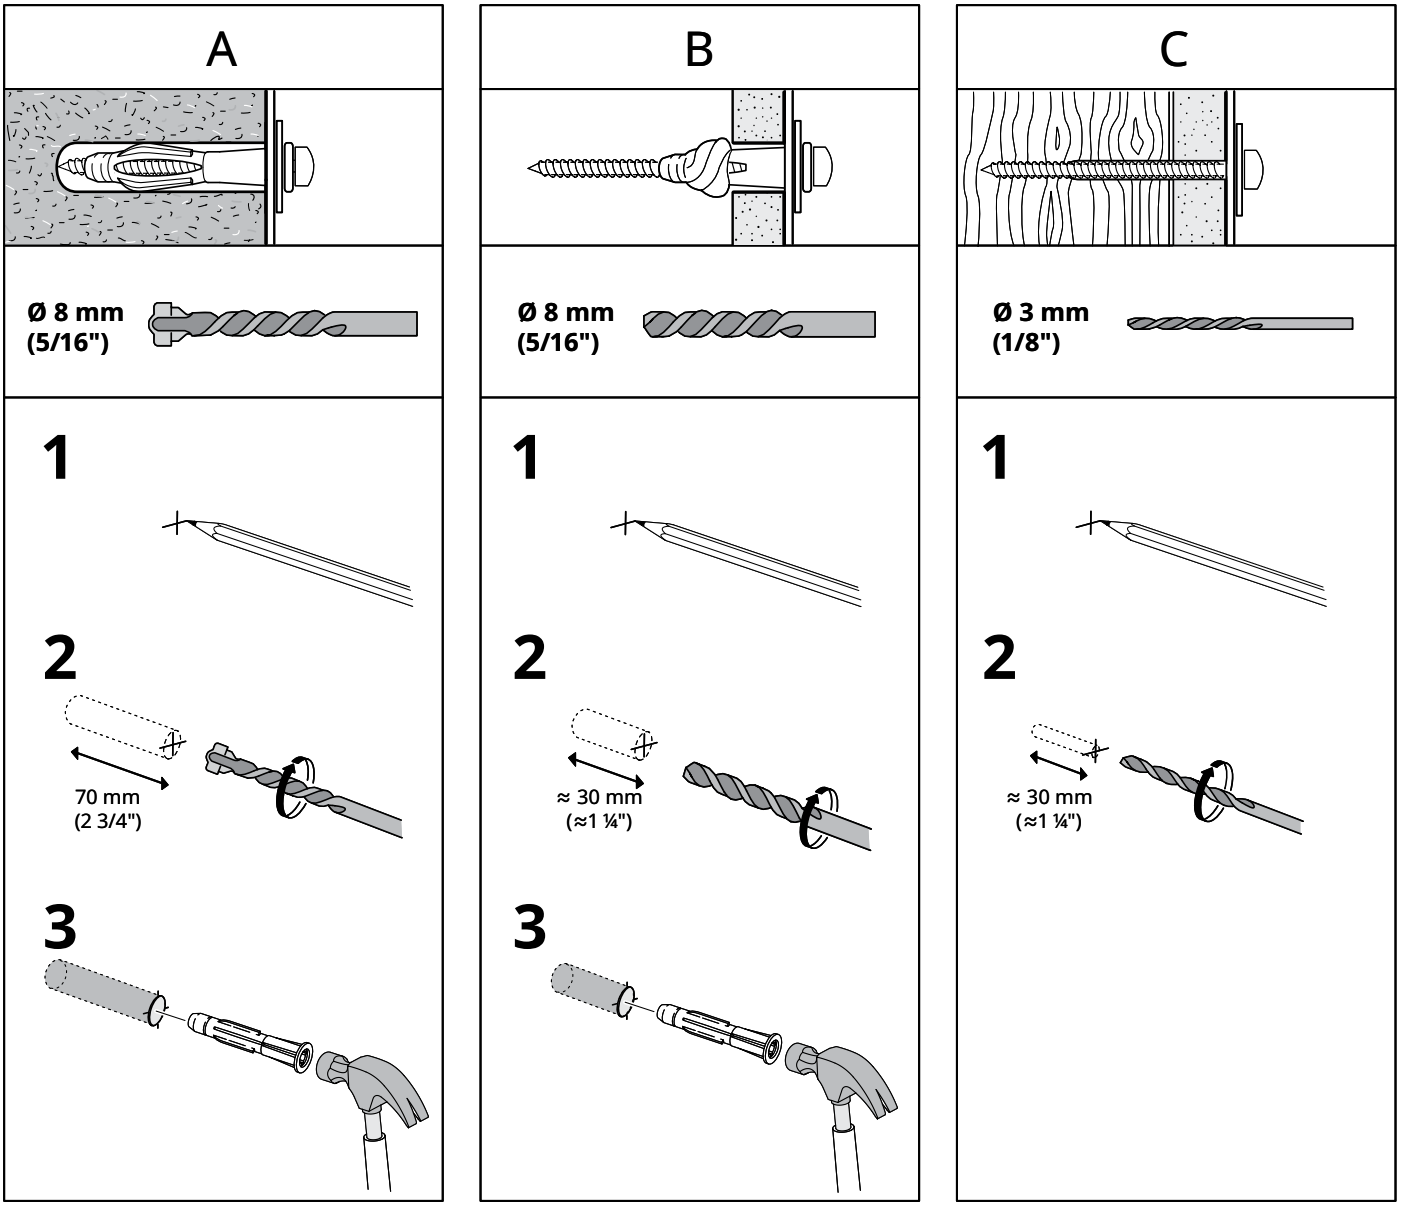

A
Ø 8 mm
(5/16")
1
2
70 mm
(2 3/4")
3
B
Ø 8 mm
(5/16")
1
2
≈ 30 mm
(≈1 ¼")
3
C
Ø 3 mm
(1/8")
1
2
≈ 30 mm
(≈1 ¼")

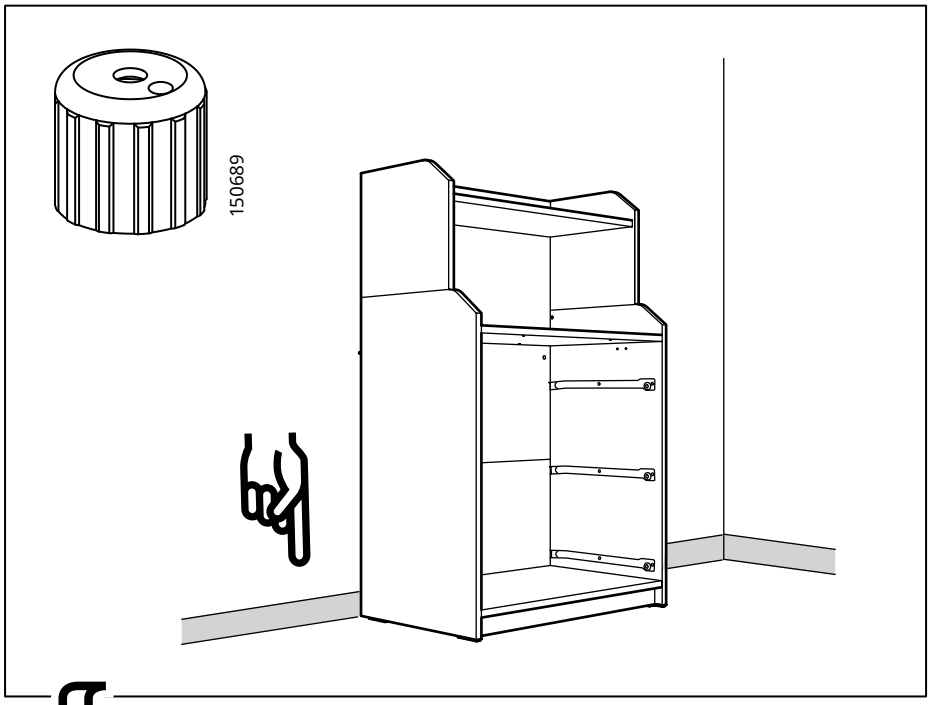


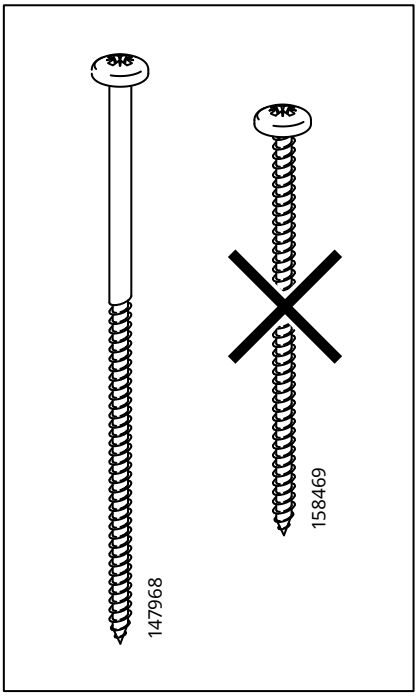


25

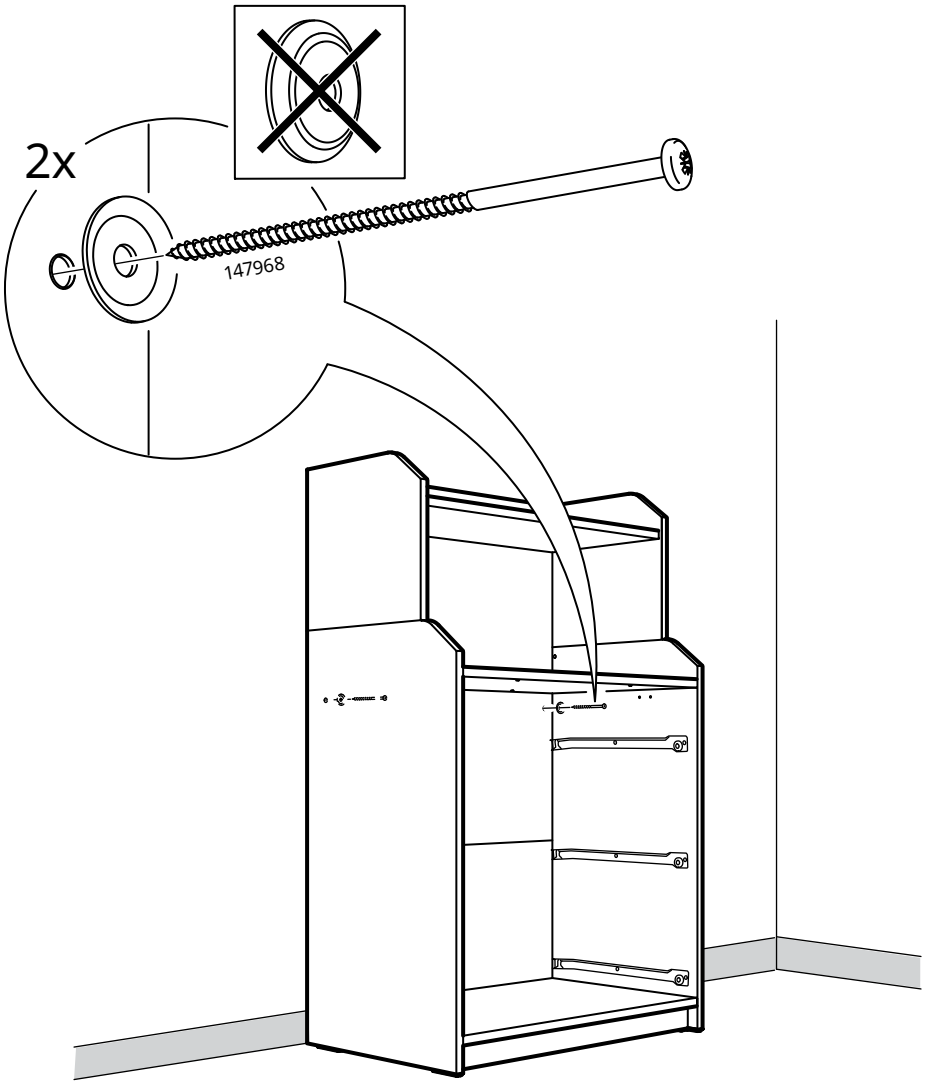


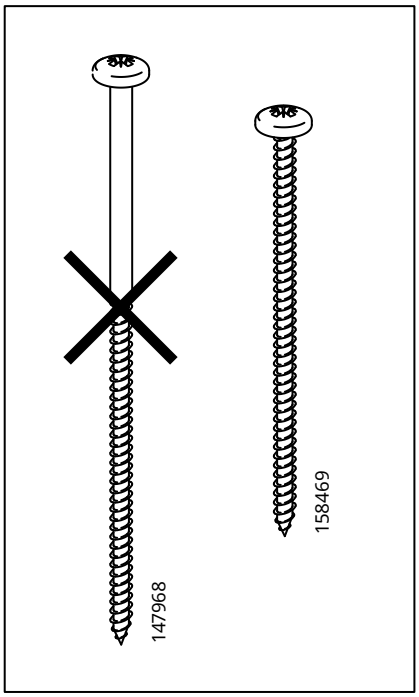


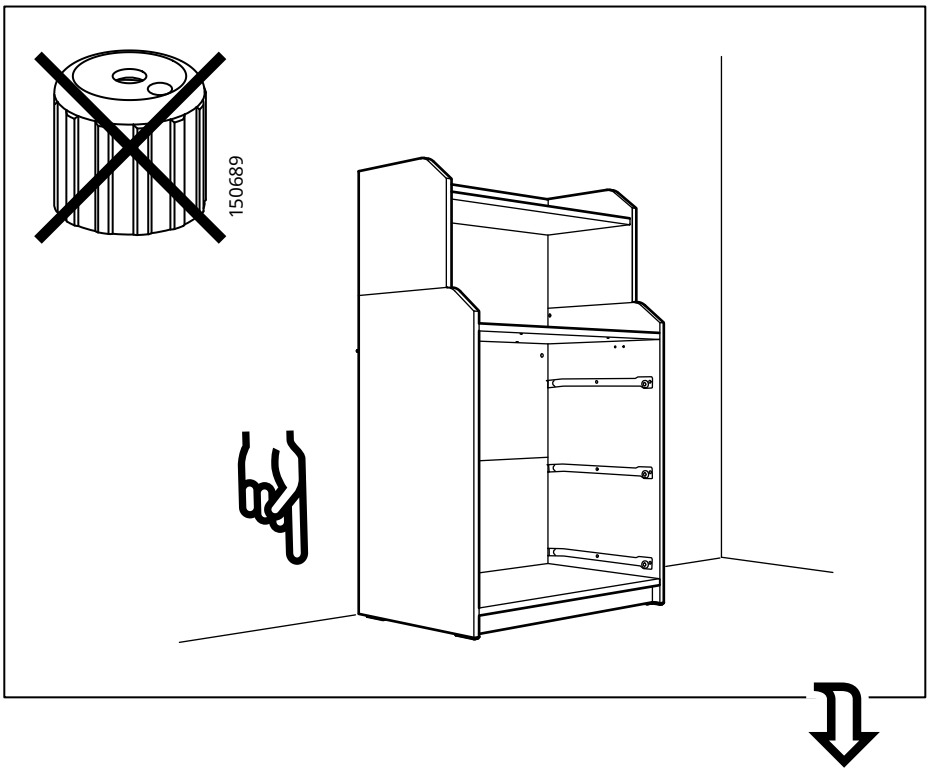


25

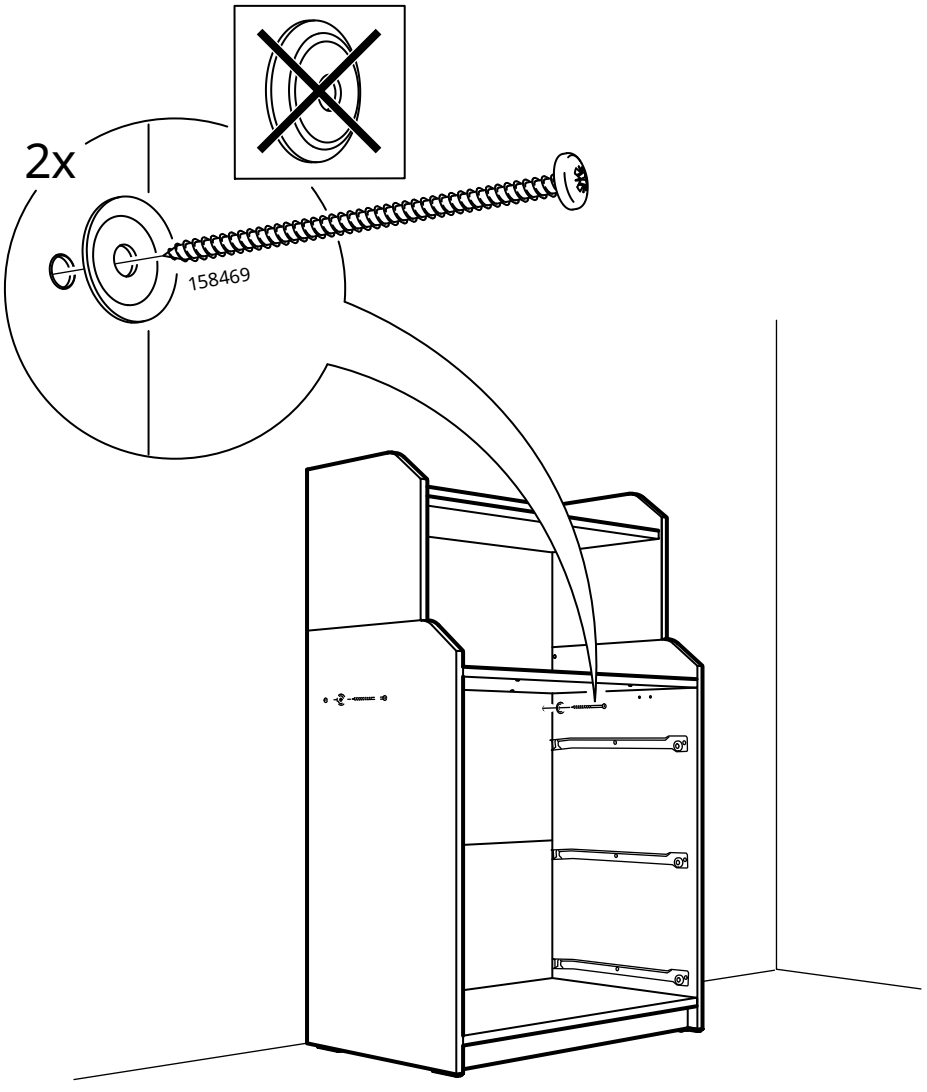


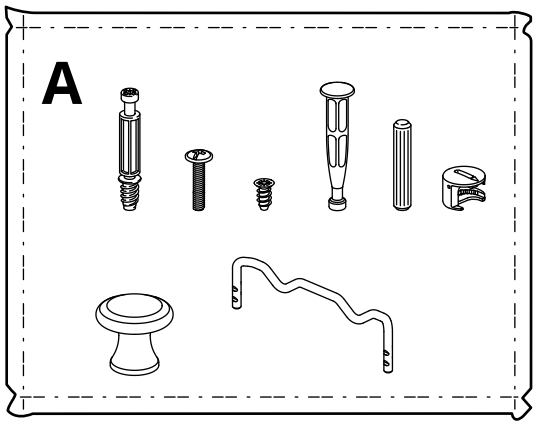


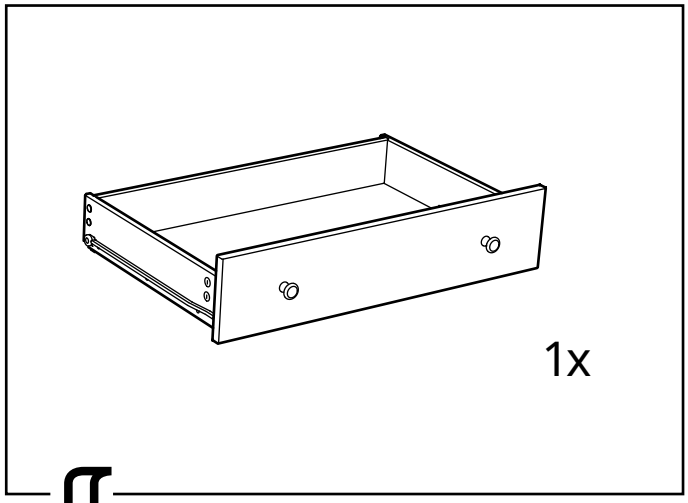

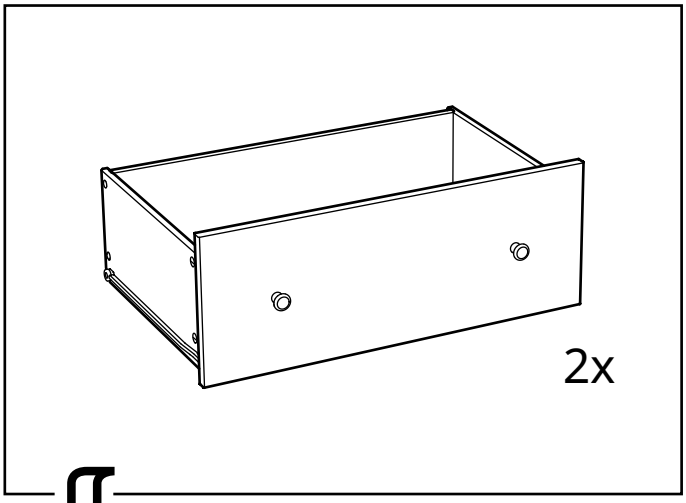



26

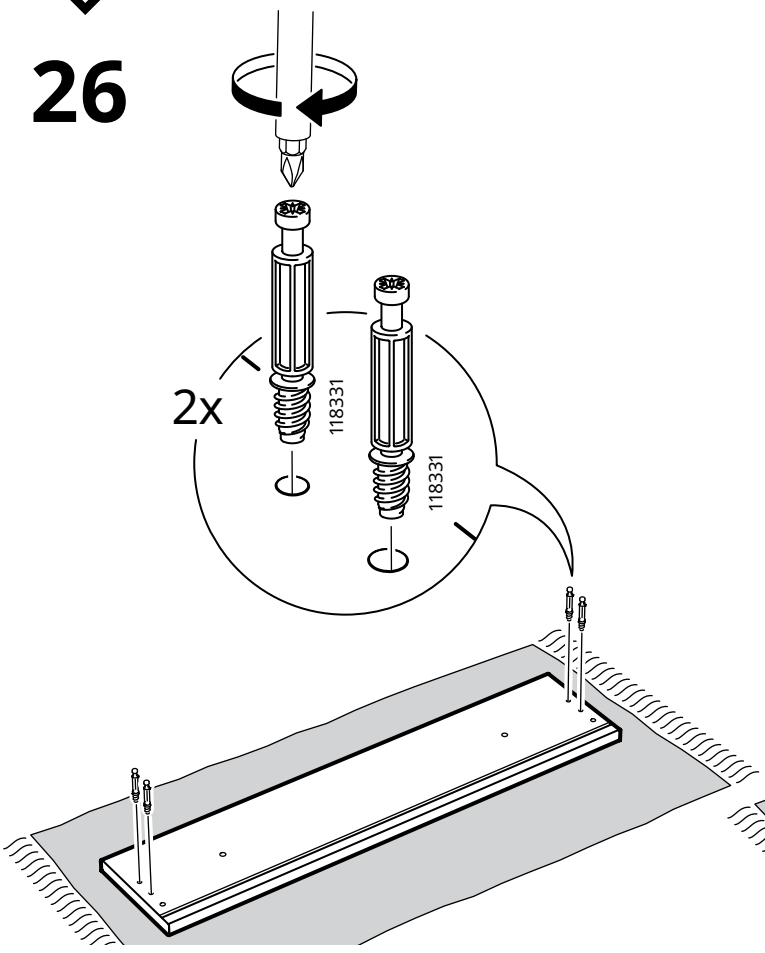

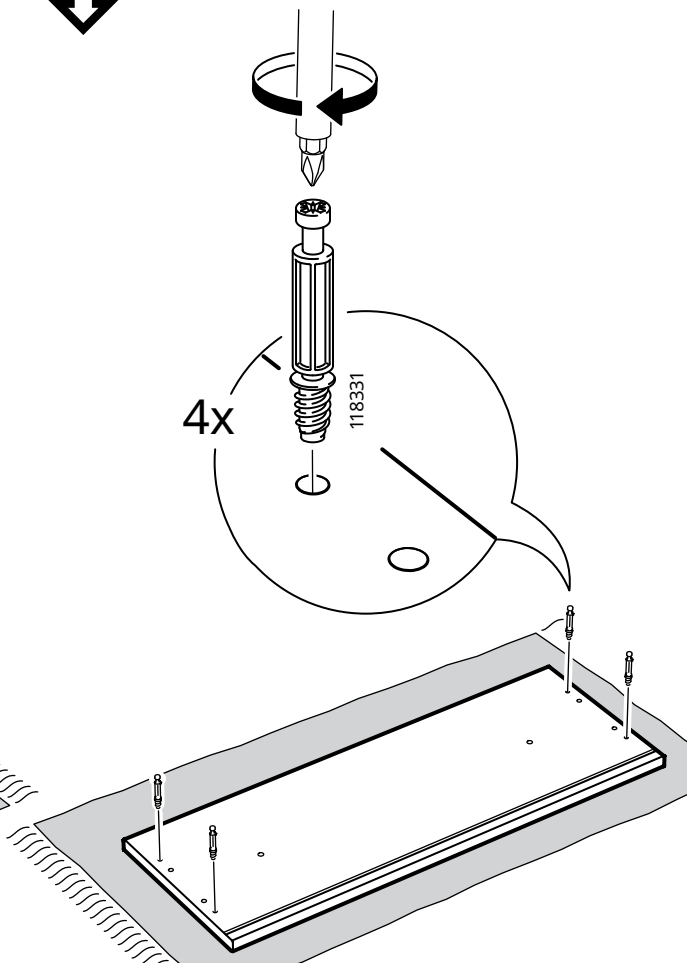



27

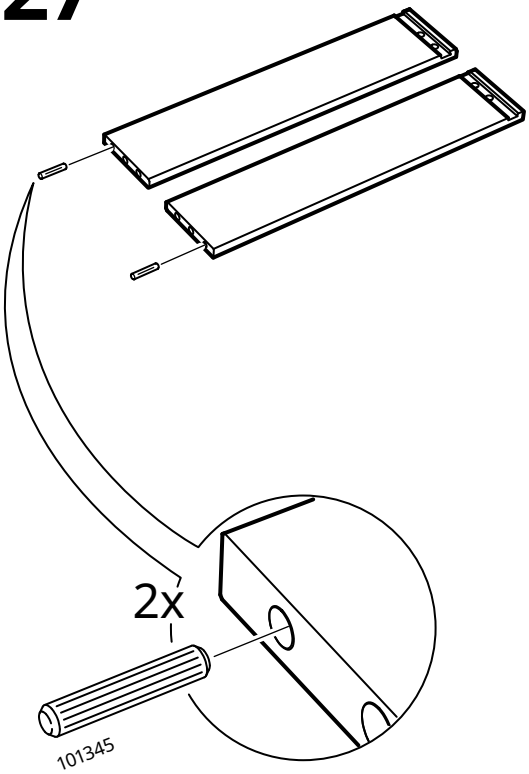

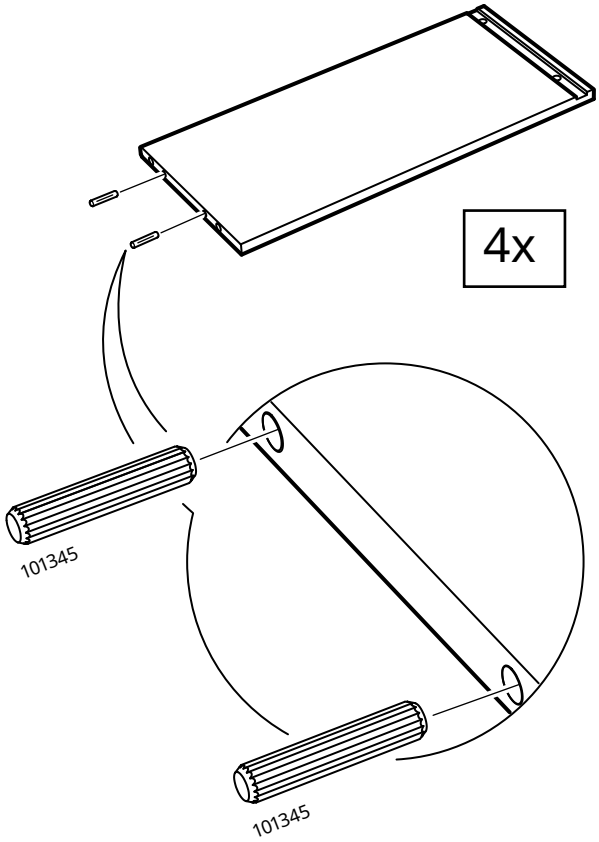


28

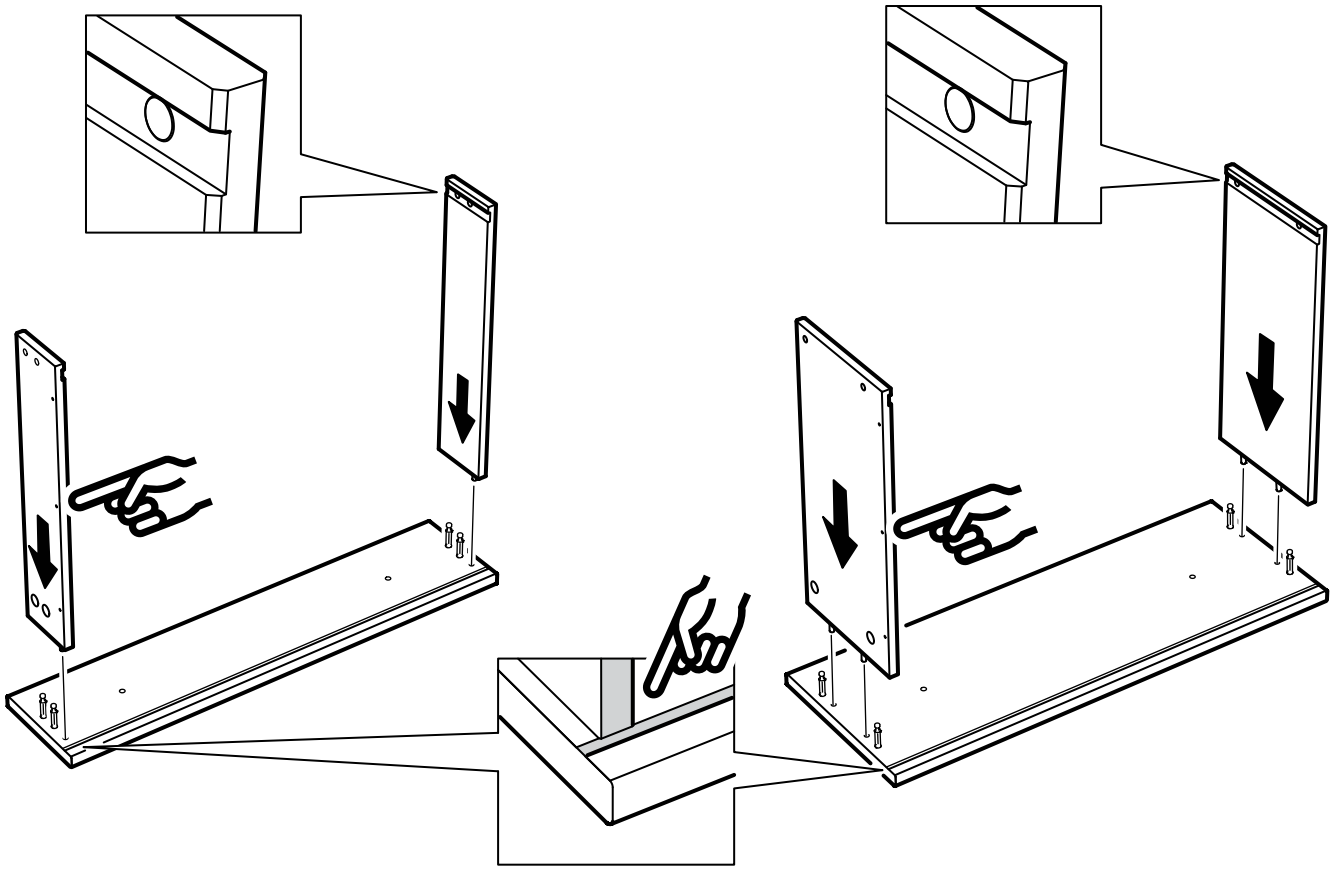


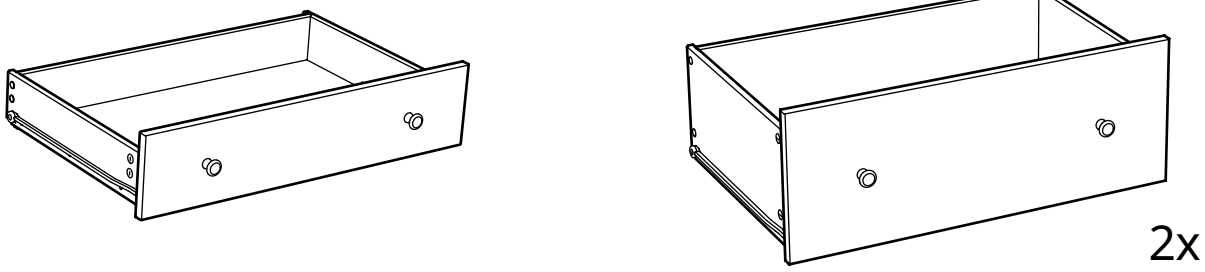


29

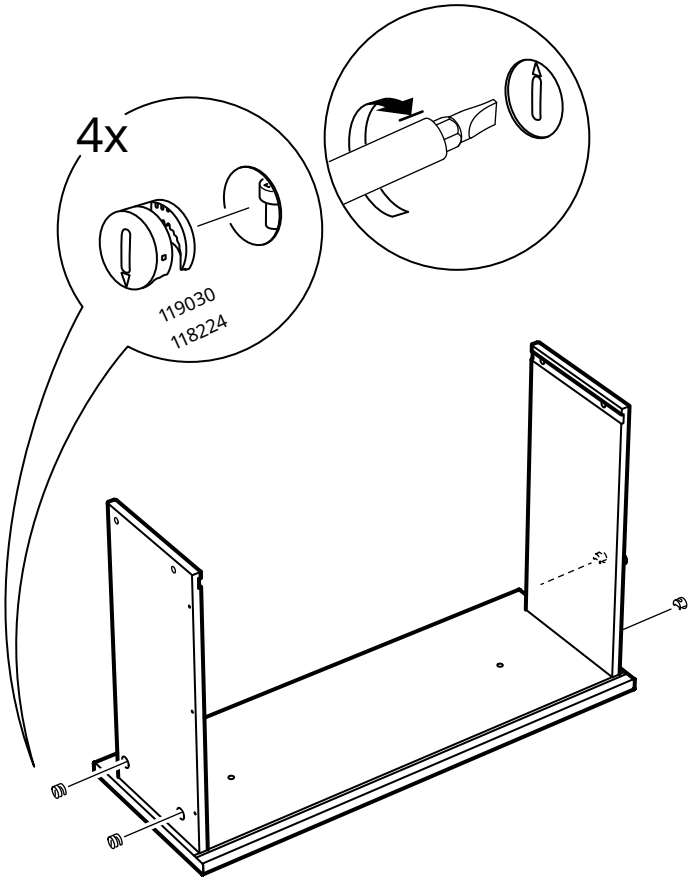


30

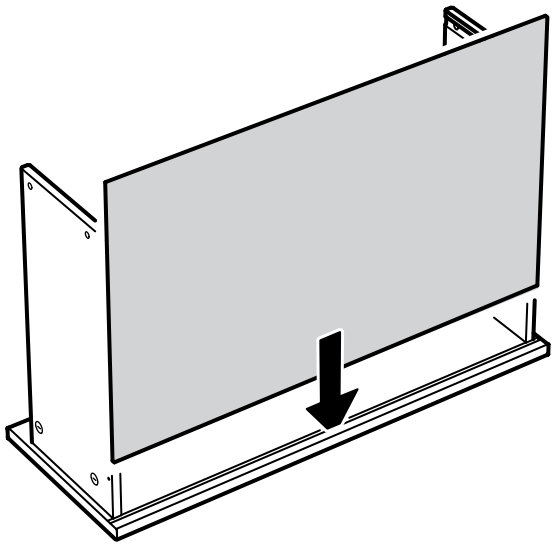


31

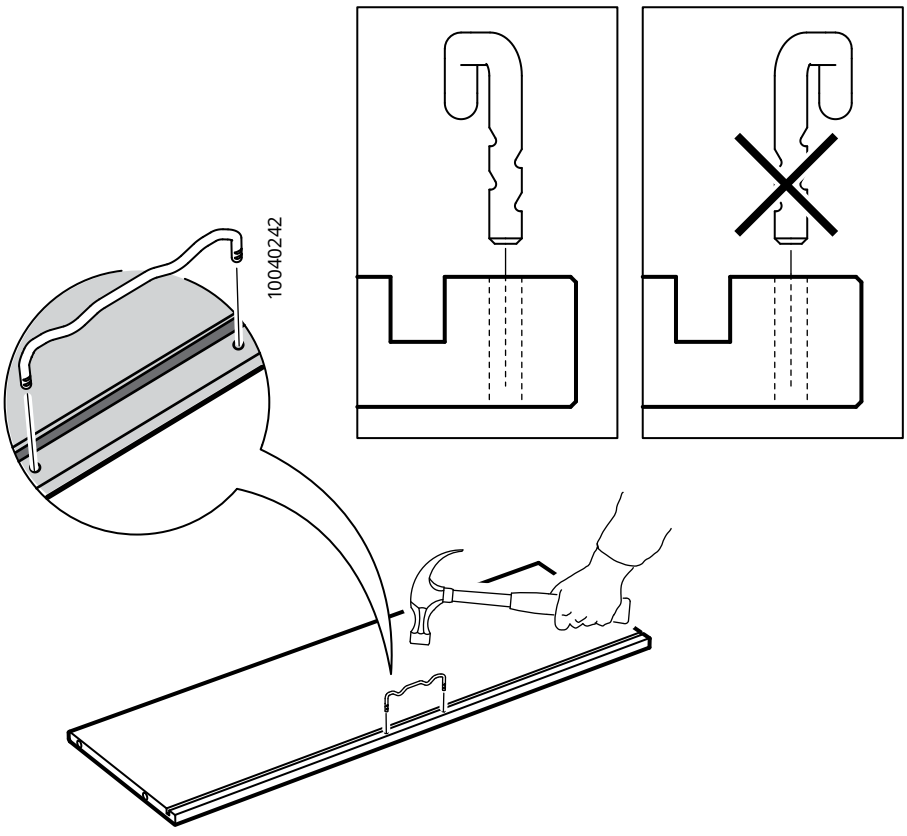


32

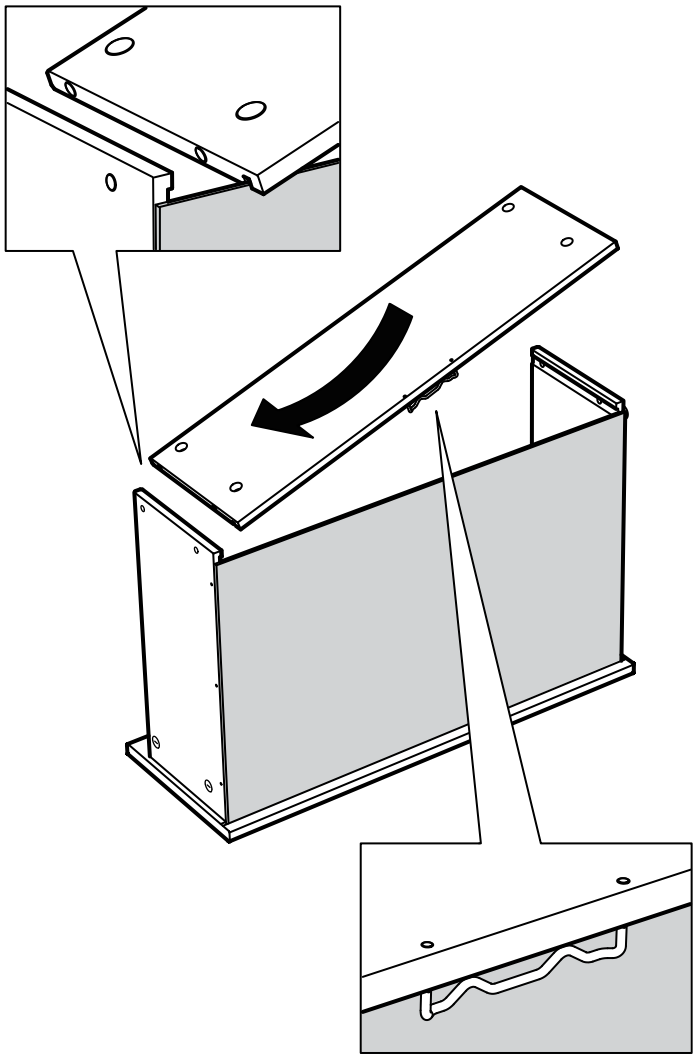


33

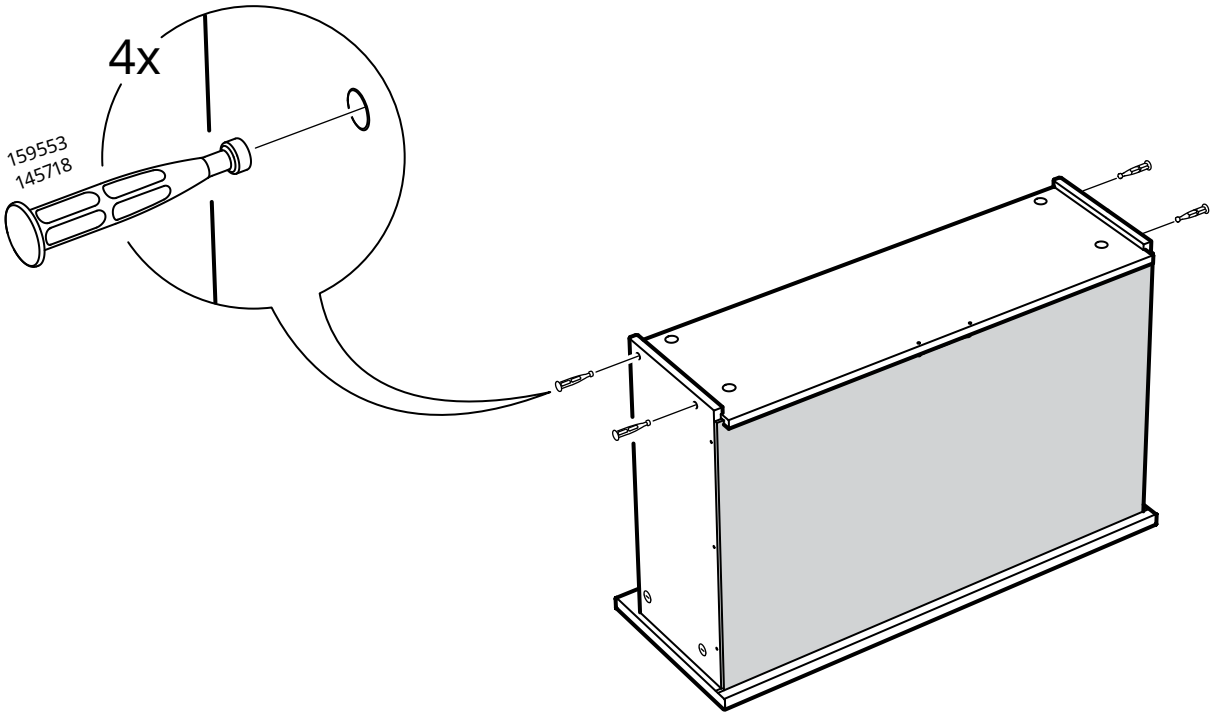


34

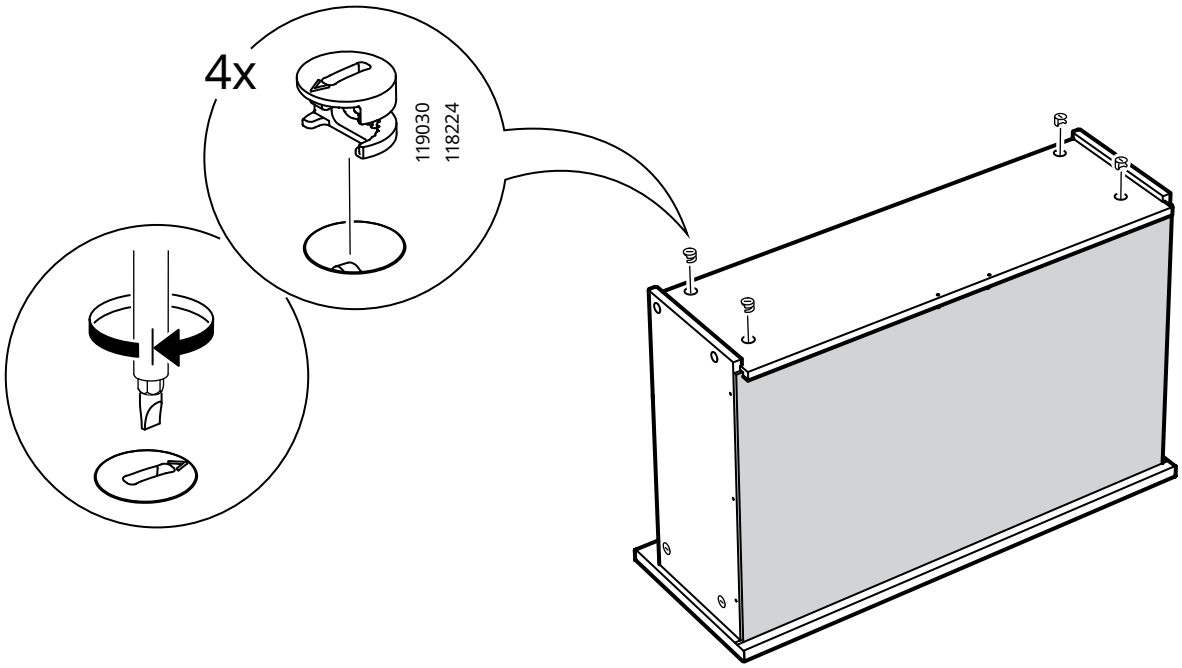
4x
119030
118224


35

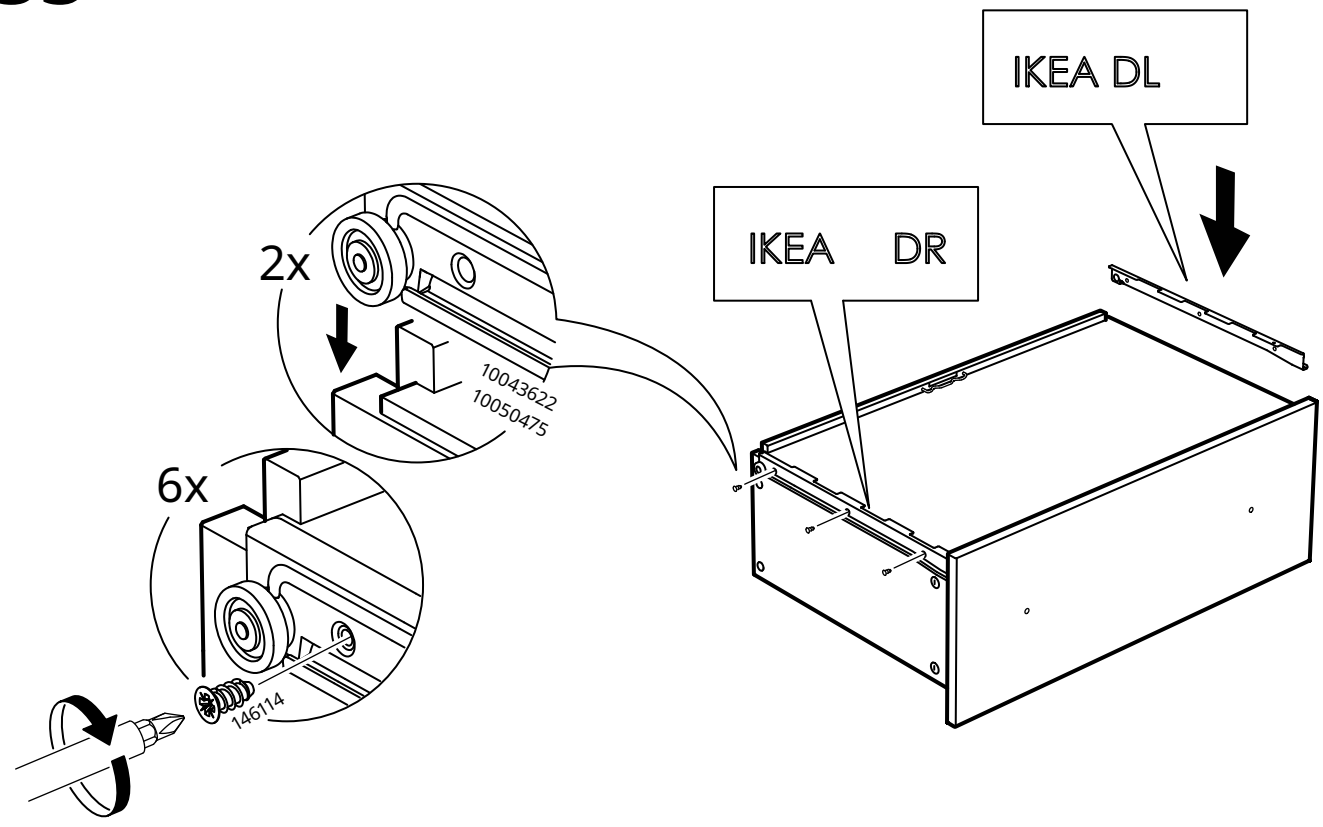
IKEA DL
IKEA DR
2x
10043622
10050475
6x
146114

36

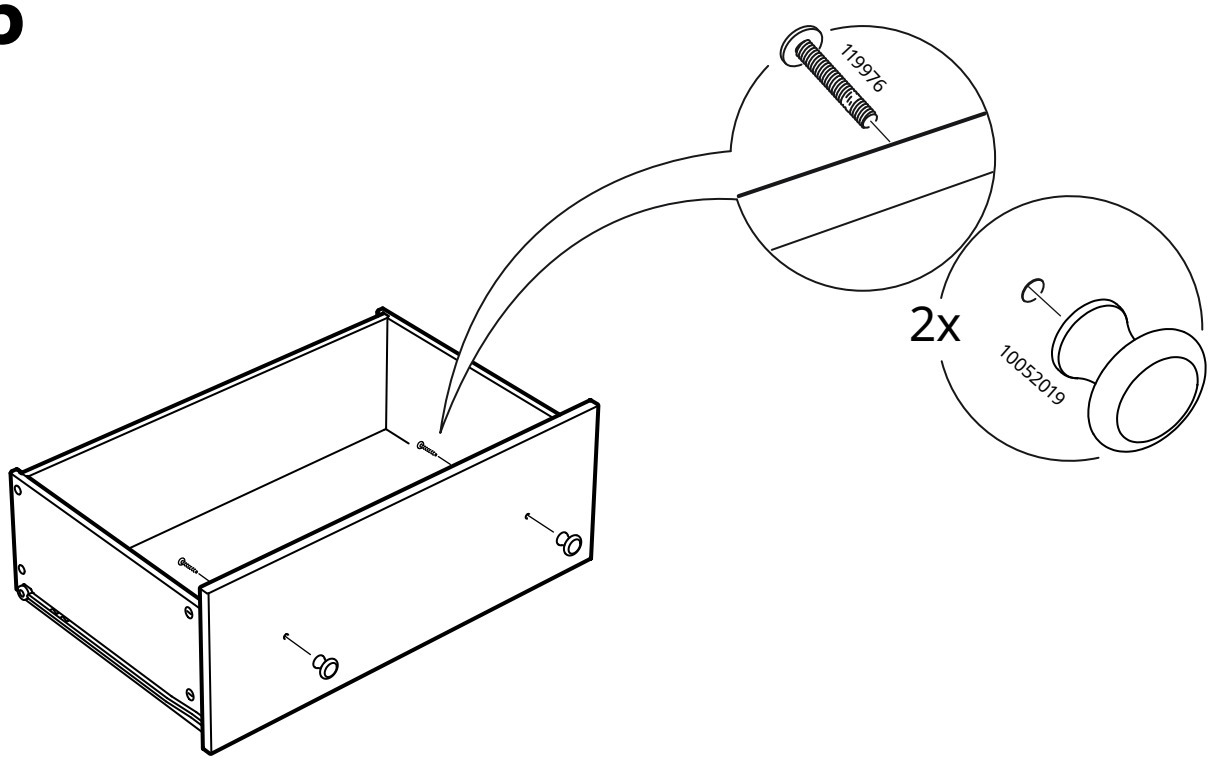

37

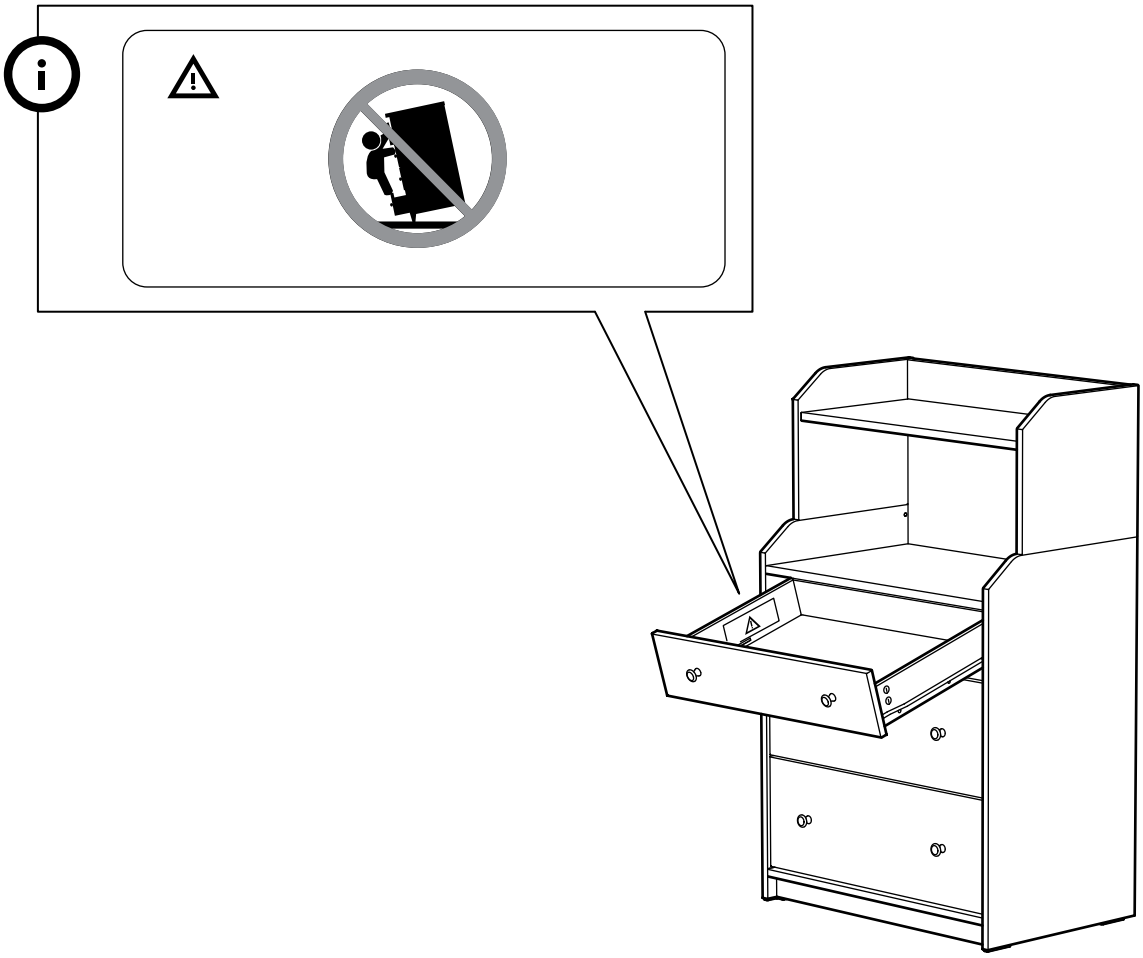

© Inter IKEA Systems B.V. 2024