



A limited edition promotional flatpack to give mess the boot.

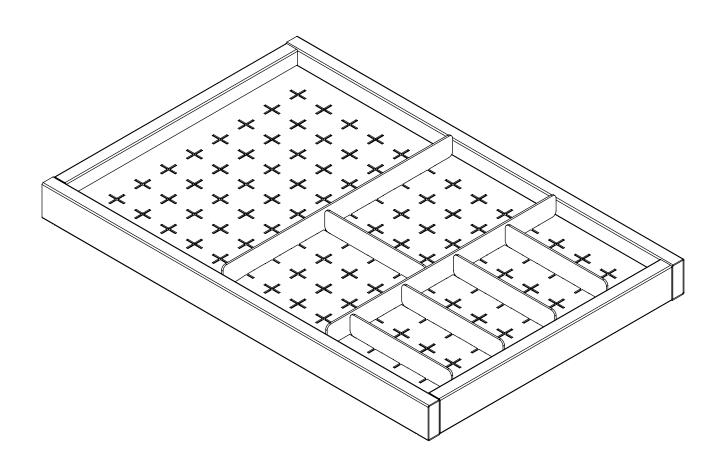




# **How to install**


#### What's included in the pack

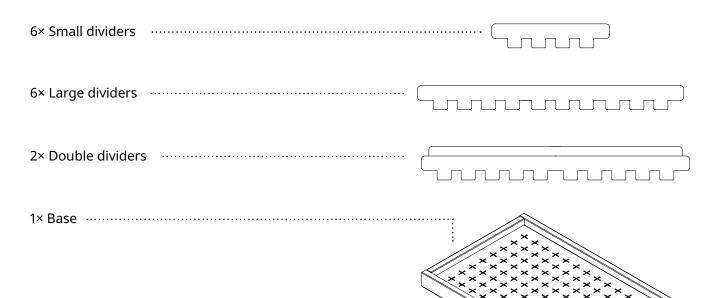

#### Step 1.

Remove all the items from your boot and place the KÖR platform into your boot.

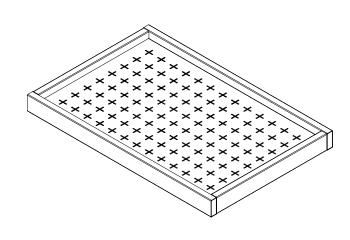

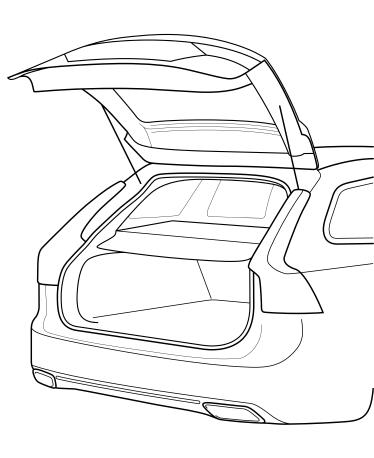


#### Step 2.


Then choose a theme from the following pages that best fits how you need to organise your boot mess.



#### Step 3.


Insert the dividers following the guides on the theme page you selected. Note. You may need to trim some dividers with a pair of scissors so check the sizes required.

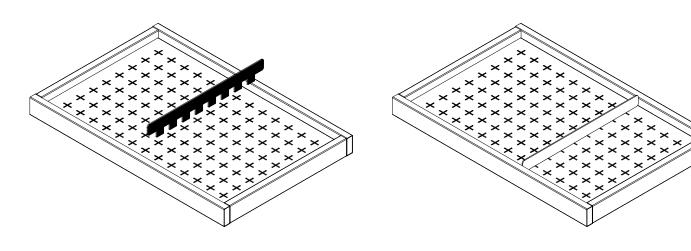

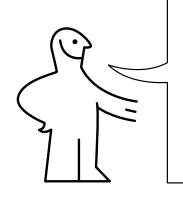

### Tip

If one of the divider holes is a little blocked use slot screw driver to push over the stabiliser that may have moved in transport.

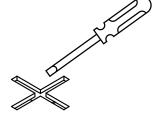

Screwdriver not included.




# **Fashion Influencer**

Visit the KÖR page on the IKEA Australia website for a list of storage products to transform your boot as above.



Scan QR code to view the assemble video

## Layout

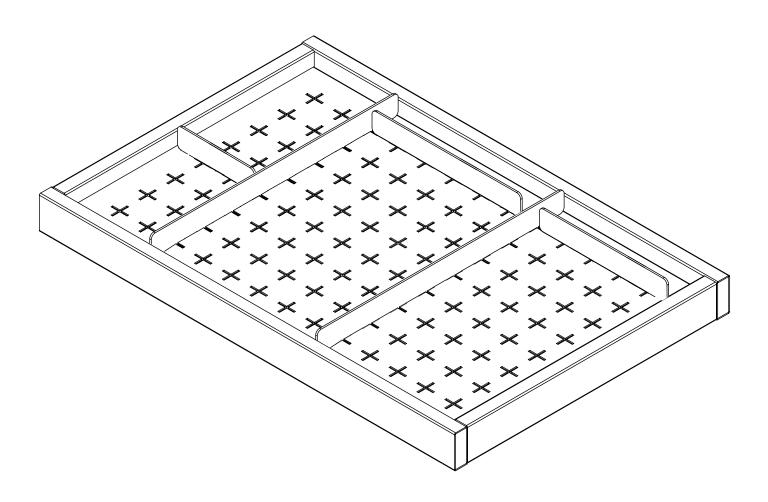

## **Dividers required**

