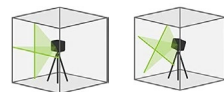


Important min distances for quartz / HPC porcelain / recycled glass worktops

		Length		Depth	
	Worktop	Min (mm)	Max (mm)	Min (mm)	Max (mm)
Quartz	KASKER	150	3000	300	1400
HPC Porcelain	MÖCKLARP	150	3150	300	1400
Recycled glass	LOCKEBO	150	3000	300	1400

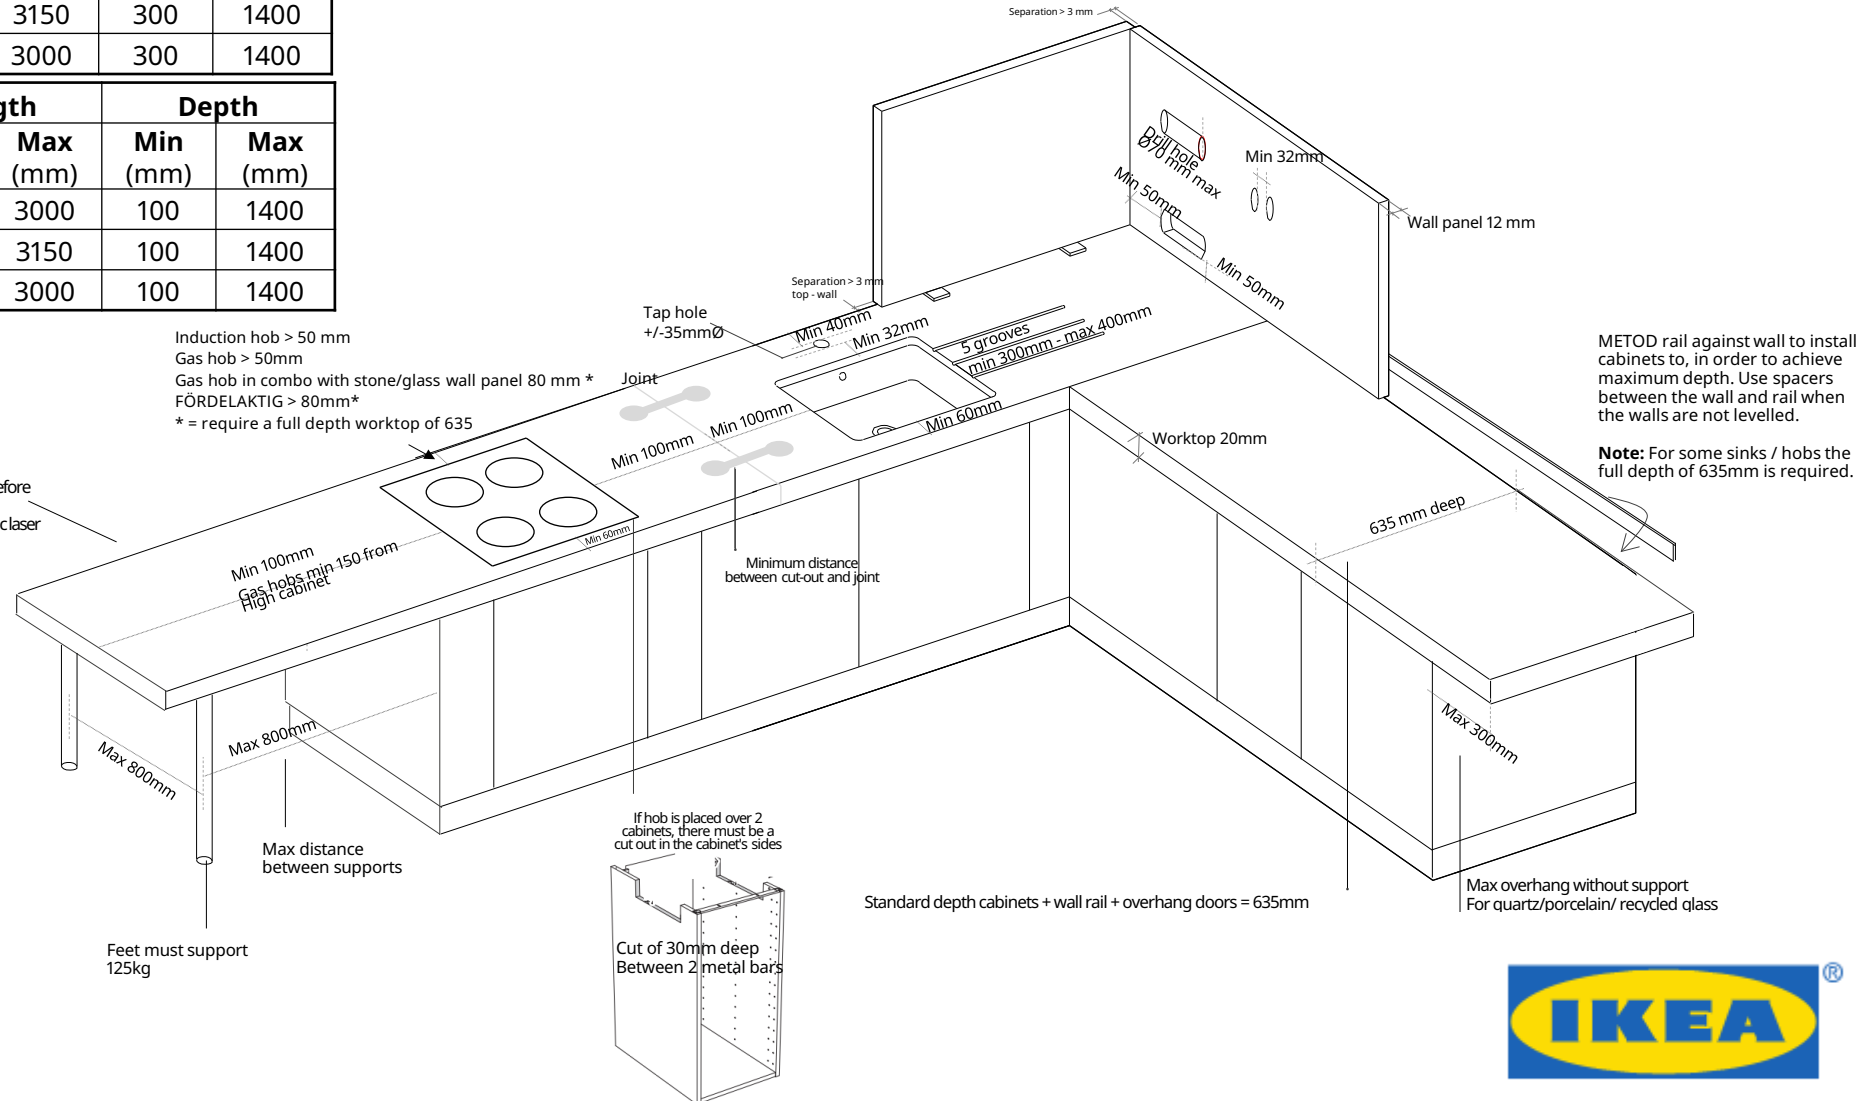
		Length		Depth	
	Wall panels	Min (mm)	Max (mm)	Min (mm)	Max (mm)
Quartz	RÅHULT	200	3000	100	1400
HPC Porcelain	RUNSBÄCK	200	3150	100	1400
Recycled glass	TÄRNHULT	200	3000	100	1400

Important: when a worktop is not supported by a cabinet or leg, check when you need to add a FIXA support 702-746-28



Kitchen must be level and aligned before placing the worktop,
Best way to check this with an electric laser tool

Induction hob > 50 mm
Gas hob > 50mm
Gas hob in combo with stone/glass wall panel 80 mm *
FÖRDELAKTIG > 80mm*
* = require a full depth worktop of 635

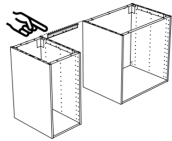
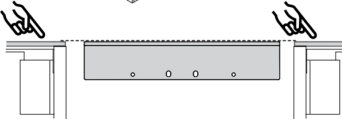
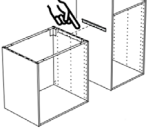
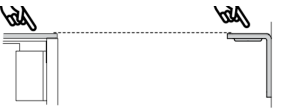
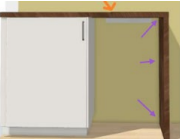
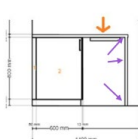
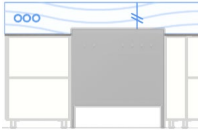


Always use a cutting board while cutting, a roaster against the heat on your worktop to keep your worktop in the best condition



When to add FIXA support? (702-746-28)

Checkbox
customer

When a dishwasher / washing- / drying machine is between 2 cabinets, you must install a FIXA support behind the appliance. Any open space without a cabinet where a worktop continues must be supported by a FIXA support.	 	
When a dishwasher / washing / drying machine is next to a high cabinet, you must install 1 against the high cabinet and 1 against the wall.	  	
When a dishwasher is at the end with a side panel, you need 4 FIXA supports. 1 behind the dishwasher, 1 side panel connected to worktop, 1 side panel connecting to the wall and 1 to connect with the floor (drilled or glued). ! A better solution is not ending with a dishwasher but with a small cabinet at the end.		
When a dishwasher is next to a lost corner. The best solution is to place a cabinet of min 40 or 60 cm in the other direction. You can fix the filler piece on the back side very easy, and the worktop is supported. With a 40cm cabinet you can add 1 FIXA support against the wall to cover the open space	 	
An empty or lost corner: 1 empty cabinet is needed to place underneath to support the worktop. This can be an undeeep cabinet. The side of the cabinet must support the joint of the worktop. The other open space can be finished with a FIXA support.	 	
An open space with a Waterfall solution (max 60cm width) against a wall, demands min 3 FIXA supports. 1 under the worktop of the open space, 1 will be glued in the joint by the supplier and 1 will be attached vertical at the leg and wall. A 4th FIXA can be placed on the wall (screw or glue). In case of a dishwasher an extra side panel is needed between the leg and dishwasher. In this case the FIXA will be mounted on the side panel.	 	
In case of an independent stove and there is a finishing of a wall panel in stone/porcelain with a joint. It might be that extra support is needed. In this case it will be mentioned at the measurement taking.		
When you have 2 appliances next to each other. Behind each appliance a FIXA support is needed. As well a side panel in between the 2 appliances that support the worktop. This side panel must be fixed against the wall, worktop and floor on both sides. Also, FIXA can be used for this. ! A better solution is a small cabinet between the 2 appliances.		

Conditions Pre-visit measurement

SERVICE	PRECONDITION	MUST (IF NOT= SERVICE STOP)	PRESENT	Checkbox customer
PRE-VISIT MEASUREMENT	On the day and time scheduled, the client or someone appointed by him, (with decision-making power), present at the job site;	X		
	All kitchen furniture (cabinets) must be installed completely accordingly to the kitchen plan of IKEA. They must be 100% levelled from one side to another with a laser tool and attached to the walls.	X		
	The kitchen doors and drawers, door handles are installed and aligned with the final adjustments.	X		
	The METOD Aluminum rail 602-056-64 or other spacers is used when full depth is required for certain sinks / hobs (full depth = 635mm)	X		
	All side panels (side, back, „) for worktops are installed before the measurement takes place. For top cabinets it can be that you must install it after the wall panel. Depending on the directions you have received from the kitchen co-worker.	X		
	Hob, sink, and watertrap with technical drawing are available at the job site;	X		
	Any extra goods (ex: Kitchen accessories: soap dispenser, power sockets, UTBY feet for tables) are also in place with technical drawings.		X	
	Room/worktop surface must be clean (empty worktop) to be able to take measurements.	x		
	All outlets and switches must be installed on the correct places.	x		
	Enough place between socket and end wall/worktop/cabinets , check min distance	x		
	Temporary worktops can be installed but not be fixed. The sink, hob and tap can be installed and connected. Cut outs must be installed exactly according to the plan. All items cannot be glued, during the measurement they must easy be disconnected to take all measurements.	x		
	Some hobs have a different way of installation depending the worktop thickness. Installation for stone/ceramic requires to follow the guidelines of 18mm even if the temporary worktop will be 28mm.	x		
	If a hob is placed over more than 1 cabinet, the cabinets underneath must be cut out. Hobs are thicker than worktops of 20mm. A cut out of 25mm/30mm is needed in the cabinet sides. This must be done before the measurement takes place.	x		
	If the measurement has not been able to proceed completely because of the above conditions being missing or incomplete, an additional measurement will be required. Each measurement is charged and will not be refunded , even if the customer decides not to place an order after the measurement.	x		



Conditions Installations

SERVICE	PRECONDITION	MUST (IF NOT=SERVICE STOP)	PRESENT	Checkbox customer
INSTALLATION	All the MUST conditions established for the measures MUST be also assured;	X		
	On the day and time scheduled, the client or someone appointed by him will be present to give access to the job site and sign the final report;	X		
	Suitable and accessible electricity + water point on the job site;	X		
	Access for delivery of the worktops at the job site (ex: lift; parking panels reserved, etc, if necessary);	X		
GENERAL	If, on the day and time previously booked the customer is absent, our teams will wait 15 minutes on site, after which the service will be considered a failure and subject to rescheduling.			

