



Design and Quality
IKEA of Sweden

ENGLISH

3

עברית

4


WALL ANCHORING GUIDE:

The hardware you should use to secure your furniture to the wall depends on both the type of furniture you have and your wall material.

Type of Wall Material:


Using the guide below, identify your wall material and the appropriate steps to take for that wall material.

Drywall or plaster with available wood stud:

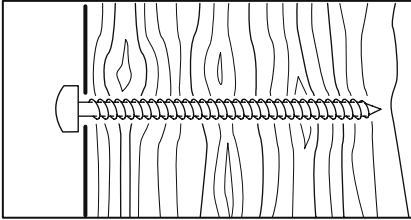


- Mark the attachment point(s) with a pencil at the appropriate height and positioned over wood stud(s).
- Drill 1/8-inch (3mm) diameter pilot hole(s) into the wood stud(s), at the height you marked with pencil.

Drywall without available wood stud:

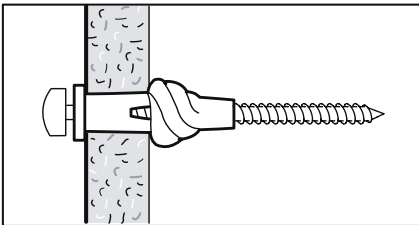

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) through the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.


Masonry:

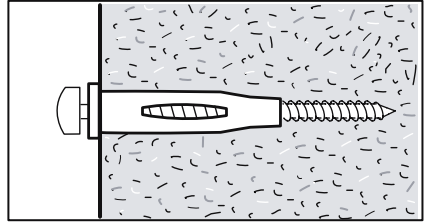

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) 2 and 3/4-inches (70mm) deep into the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

If your wall material is not listed here, or if you have any questions, consult your local hardware store.

קיר בטון:

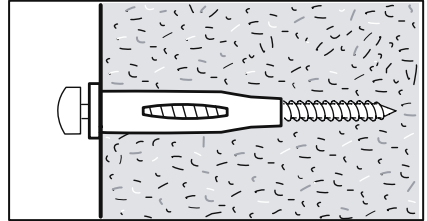

- סמנו את נקודה(ות) החיבור בעיפרון בגובה המתאים.
- קדחו חור(ים) בקיר בקוטר של 8 מ"מ בעומק 70 מ"מ בגובה שסימנתם בעיפרון.
- הכניסו את הדיבל(ים) לחור(ים); השתמשו בפטיש במידת הצורך.

אם סוג הקיר אינו מצוין לעיל או במידה ויש לכם שאלה, מומלץ להתייעץ עם איש מקצוע או לפנות לחנות איקאה הקרובה לביתכם.

מדריך קיבוע לקיר:

החומרה בה אתם משתמשים לקיבוע הרהיט שלכם לקיר תלויה בסוג הרהיט והחומר ממנו עשוי הקיר שלכם.


סוג חומר הקיר:

זהו את סוג חומר הקיר אליו מיועד הקיבוע ופעלו בהתאם לשלבים המתאימים לסוגו

בעזרת המדריך הבא:


קיר גבס

עם קורות עץ:

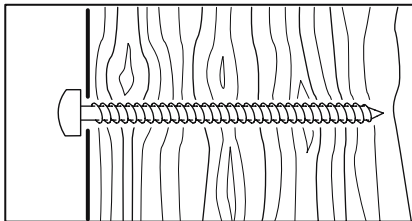

- סמנו את נקודה(ות) החיבור בעיפרון בגובה המתאים על קורה(ות) העץ.
- קדחו בקורה (ות) העץ חור(ים) בקוטר של 3 מ"מ בגובה שסימנתם.

קיר גבס ללא קורות עץ:

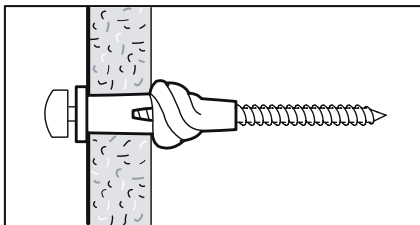

- סמנו את נקודה(ות) החיבור בעיפרון בגובה המתאים.
- קדחו חור(ים) בקיר בקוטר של 8 מ"מ בגובה שסימנתם בעיפרון.
- הכניסו את הדיבל(ים) חור(ים); השתמשו בפטיש במידת הצורך.