



Design and Quality
IKEA of Sweden

English

3

עברית

4

English


WALL ANCHORING GUIDE:

The hardware you should use to secure your furniture to the wall depends on both the type of furniture you have and your wall material.

Type of Wall Material:


Using the guide below, identify your wall material and the appropriate steps to take for that wall material.

Drywall or plaster with available wood stud:

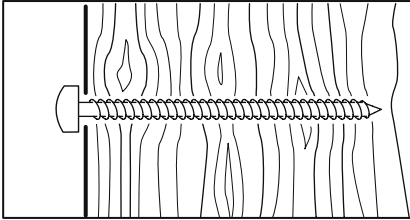


- Mark the attachment point(s) with a pencil at the appropriate height and positioned over wood stud(s).
- Drill 1/8-inch (3mm) diameter pilot hole(s) into the wood stud(s), at the height you marked with pencil.

Drywall without available wood stud:

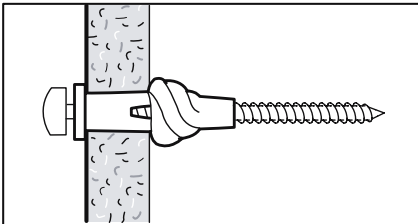

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) through the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.


Masonry:

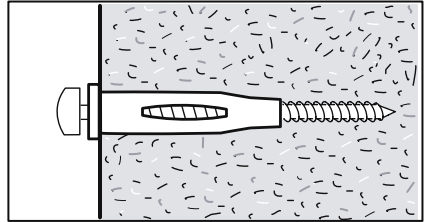

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) 2 and 3/4-inches (70mm) deep into the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

If your wall material is not listed here, or if you have any questions, consult your local hardware store.

בנייה:

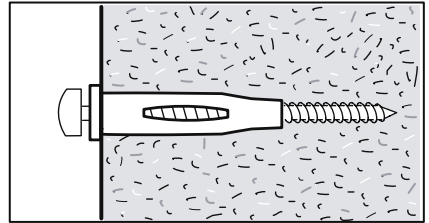

- סמנו את נקודות החיבור בעיפרון בגובה המתאים.
- קדחו חור/ים בקיר בקוטר של 8 מ"מ ובעומק של 70 מ"מ בגובה שסומן בעיפרון.
- הכניסו דיבל לתוך החור/ים. השתמשו בפטיש, ככל שיידרש.

אם סוג הקיר בביתכם אינו מופיע ברשימה, או במידה ויש לכם שאלות נוספות, פנו לחנות מקומית לחומרי בניה.


מדריך קיבוע לקיר:

החומרה בה אתם משתמשים לקיבוע הרהיט שלכם לקיר תלויה בסוג הרהיט והחומר ממנו עשוי הקיר שלכם.

החומר ממנו עשוי הקיר בביתכם:


תוכלו לזהות את החומר ממנו עשוי הקיר בביתכם ואת הצעדים בהם יש לנקוט בעזרת המדריך הבא.

קיר גבס עם יתד עץ:

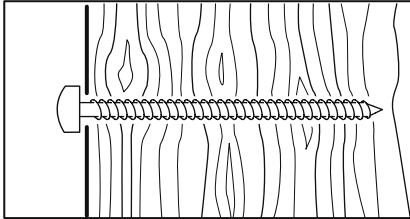

- סמנו את נקודות החיבור בעיפרון בגובה המתאים מעל יתד העץ.
- קדחו חור/ים בקיר בקוטר של 3 מ"מ ביתד העץ ובגובה שסומן בעיפרון.

קיר גבס ללא יתד עץ:

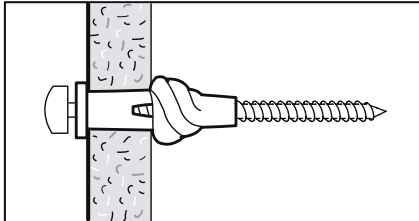

- סמנו את נקודות החיבור בעיפרון בגובה המתאים.
- קדחו חור/ים בקיר בקוטר של 8 מ"מ בגובה שסומן בעיפרון.
- הכניסו דיבל לתוך החור/ים. השתמשו בפטיש, ככל שיידרש.