



Design and Quality
IKEA of Sweden

ENGLISH	3
עברית	4


WALL ANCHORING GUIDE:

The hardware you should use to secure your chest of drawers to the wall depends on both the type of chest of drawers you have and your wall material.

Type of Wall Material:


Using the guide below, identify your wall material and the appropriate steps to take for that wall material.

Drywall or plaster with available wood stud:

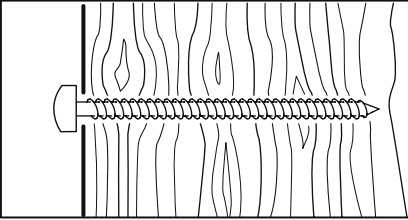


- Mark the attachment point(s) with a pencil at the appropriate height and positioned over wood stud(s).
- Drill 1/8-inch (3mm) diameter pilot hole(s) into the wood stud(s), at the height you marked with pencil.

Drywall without available wood stud:

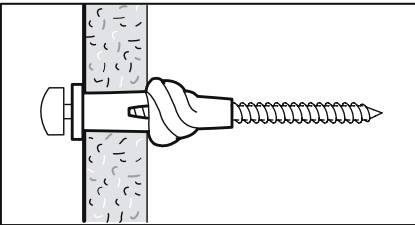


- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) through the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.

Masonry:

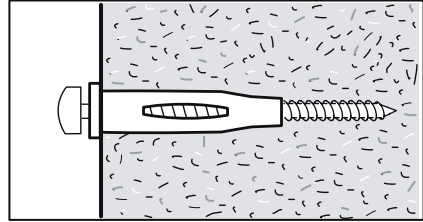

- Mark the attachment point(s) with a pencil at the appropriate height.
- Drill 5/16-inch (8mm) diameter hole(s) 2 and 3/4-inches (70mm) deep into the wall at the height you marked with pencil.
- Drive the plastic plug(s) into the hole(s), using a hammer if needed.


If your wall material is not listed here, or if you have any questions, consult your local hardware store.

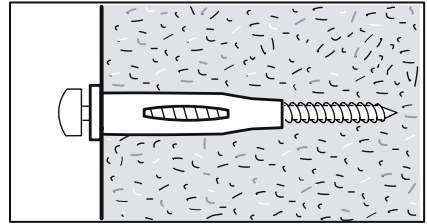בנייה - קיר מוצק:**מדריך קיבוע לקיר:**

סוג הכלים בהם תשתמשו לקיבוע שידת המגירות לקיר תלוי הן בדגם השידה והן בחומר ממנו עשוי הקיר בבייתכם.

החומר ממנו עשוי הקיר בביתכם:


תוכלו לזהות את החומר ממנו עשוי הקיר בביתכם ואת הצעדים בהם יש לנקוט בעזרת המדריך הבא.

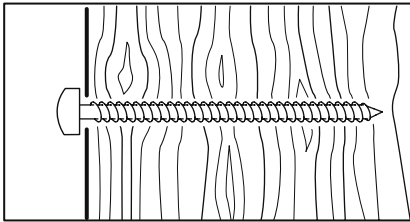קיר גבס עם יתד עץ:

- קדחו חור בקוטר של 8 מ"מ בעומק של 70 מ"מ בקיר.
- הכניסו את פקק הפלסטיק לתוך החור. השתמשו בפטיש אם יש צורך.
- פעלו בהתאם לתרשים הרלוונטי לדגם שברשותכם בעמודים הבאים.

התייעצו בחנות מקומית לחומרי בניין במידה והקיר שלכם עשוי מחומר שלא צוין כאן, או אם יש לכם שאלות נוספות.

- סמנו את נקודות החיבור בעיפרון בגובה המתאים מעל יתד העץ.
- קדחו חורים בקיר בקוטר של 3 מ"מ ביתד העץ ובגובה שסומן בעיפרון.

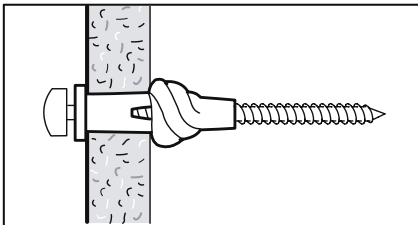קיר גבס ללא יתד עץ:

- סמנו את נקודות החיבור בעיפרון בגובה המתאים.
- קדחו חורים בקיר בקוטר של 8 מ"מ בגובה שסומן בעיפרון.
- הכניסו דיבל לתוך החור/ים. השתמשו בפטיש, ככל שיידרש.