


GODMORGON

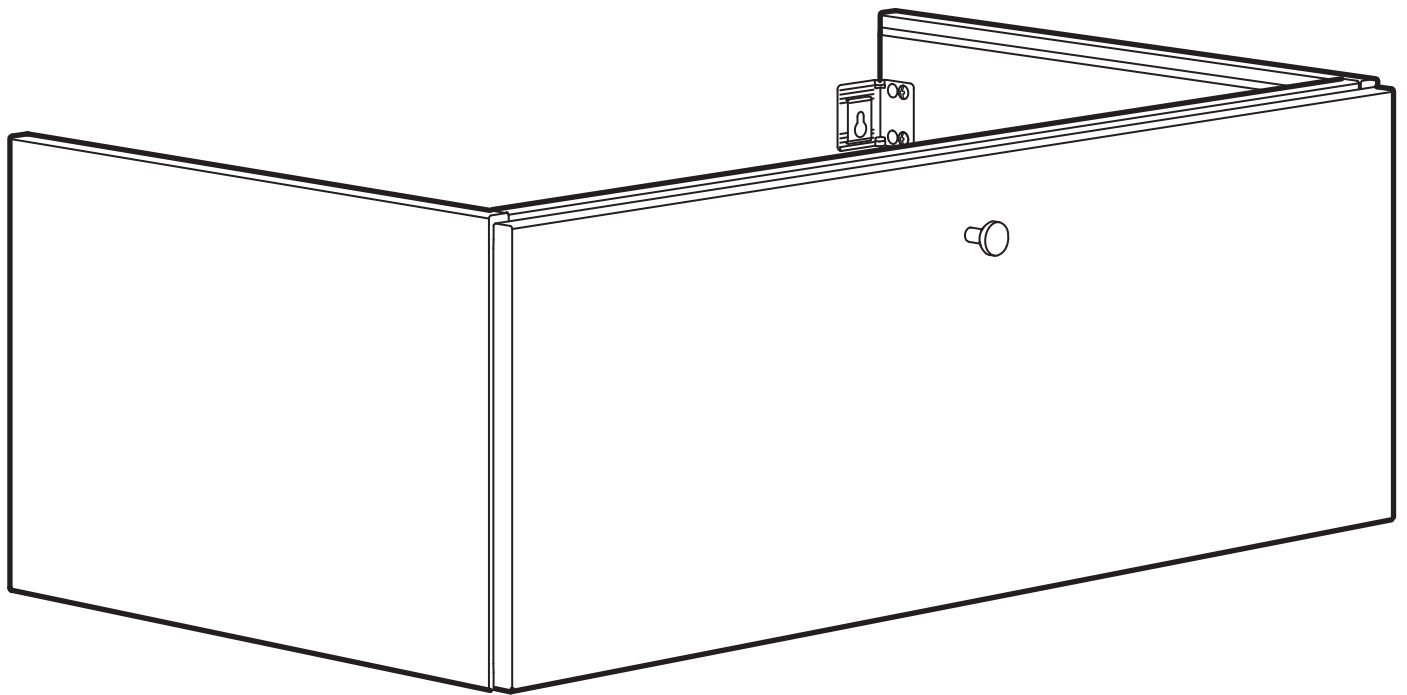

Design and Quality
IKEA of Sweden



English

WARNING!

Children have died from furniture tip over. To prevent tip over this furniture must be used with the wall attachment device(s) provided.

The screw(s) and plug(s) supplied can be used with most solid and hollow walls. For solid wood use the screw(s) without plug(s). Use screw(s) and plug(s) suitable for your walls. If you are uncertain, seek professional advice. Read and follow each step of the instruction carefully.

עברית

אזהרה!





נפילת הרהיט עלולה לגרום לפגיעה גופנית קשה או קטלנית. על מנת למנוע את נפילת הרהיט יש לקבע ריהוט לקיר באמצעות ערכת קיבוע המצורפת.



הברגים והדיבלים הכלולים מתאימים לרוב הקירות המוצקים והחלולים. עבור עץ מלא השתמשו בברגים ללא דיבלים. יש להתאים את הברגים והדיבלים לחומר שממנו עשויים קירותכם. לקבלת מידע נוסף על הברגים והדיבלים המתאימים לקיבוע, אנא פנו לאיש מקצוע. קראו ופעלו בהירות לפי כל שלב בהוראות.








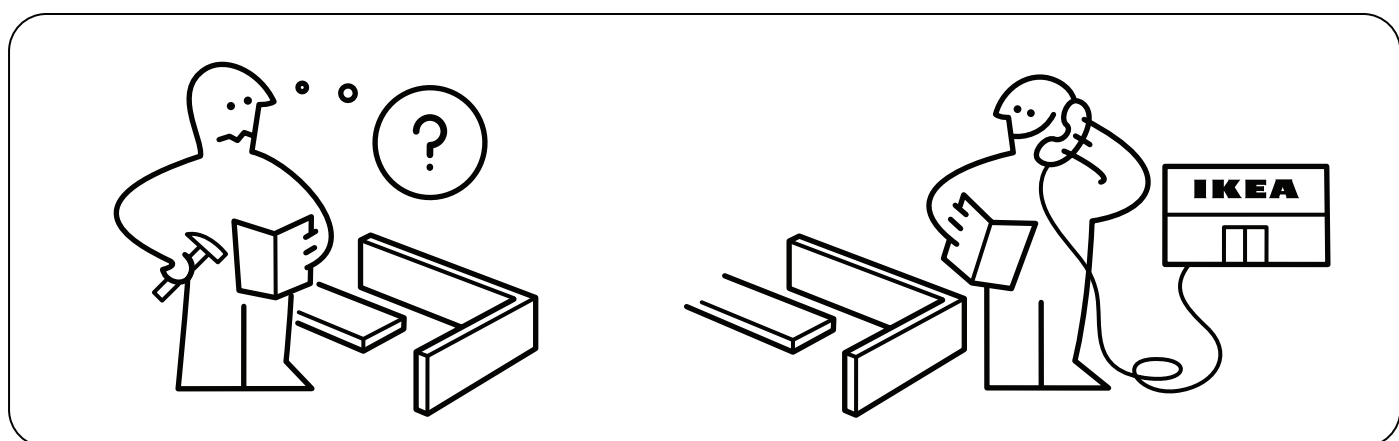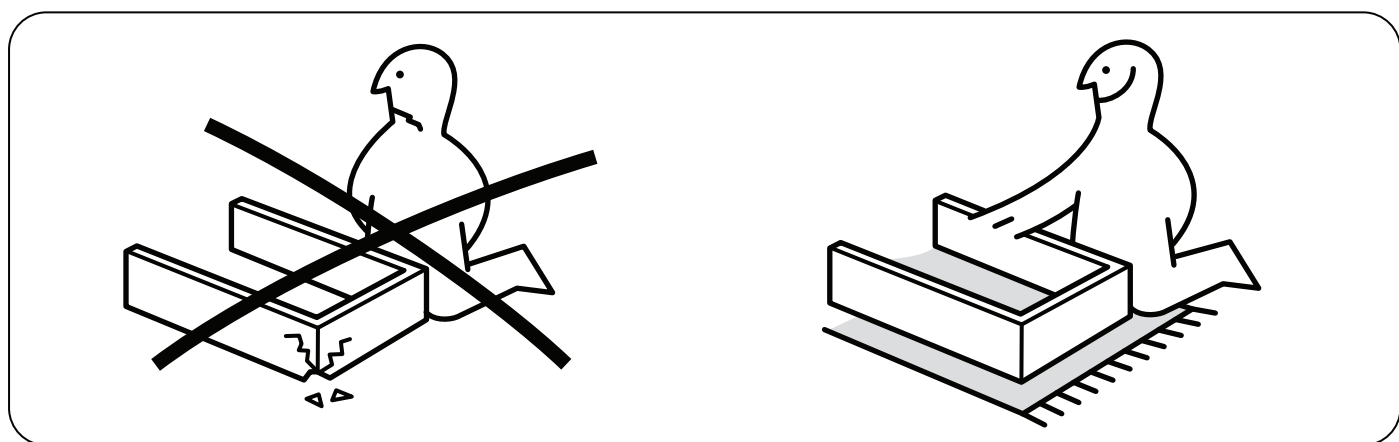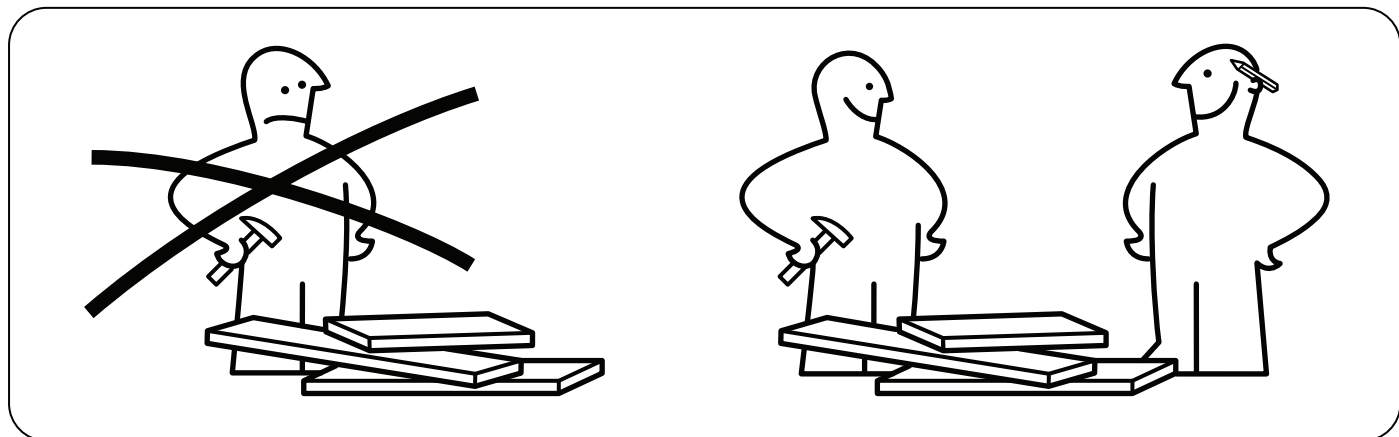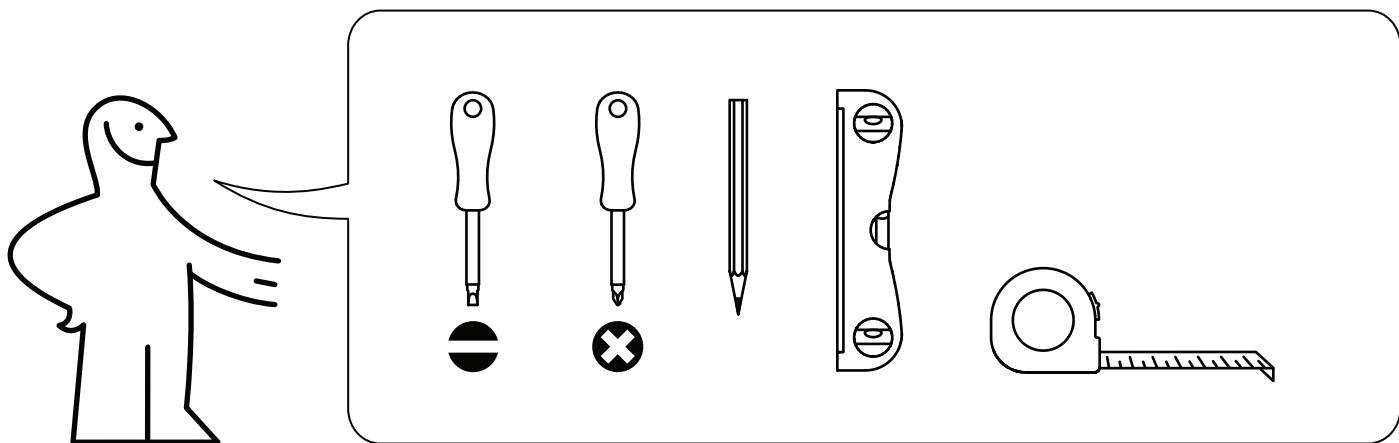


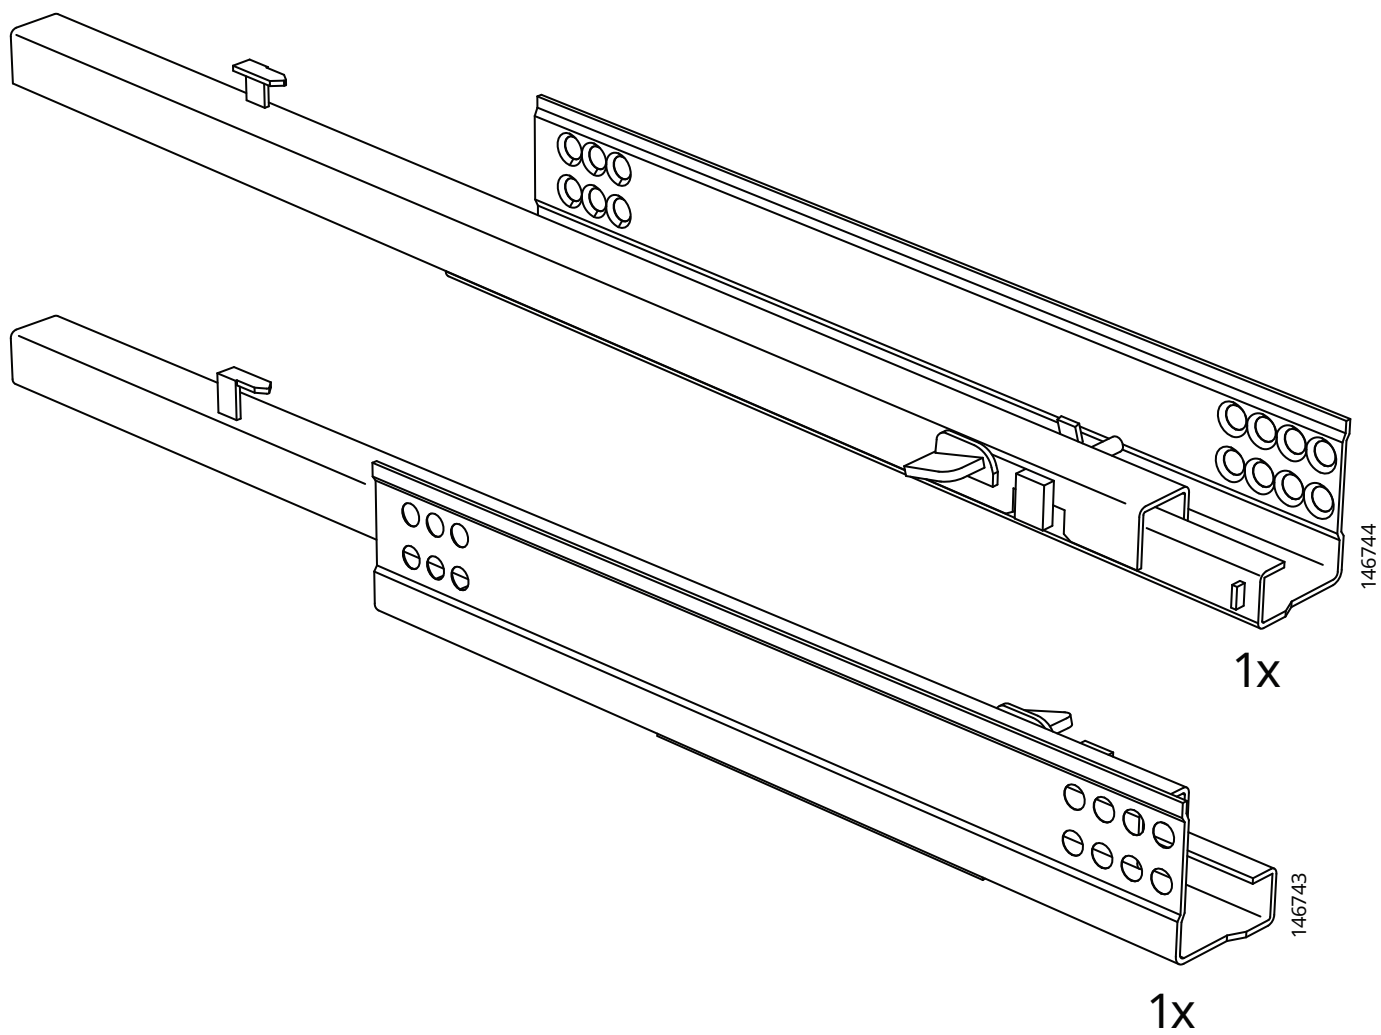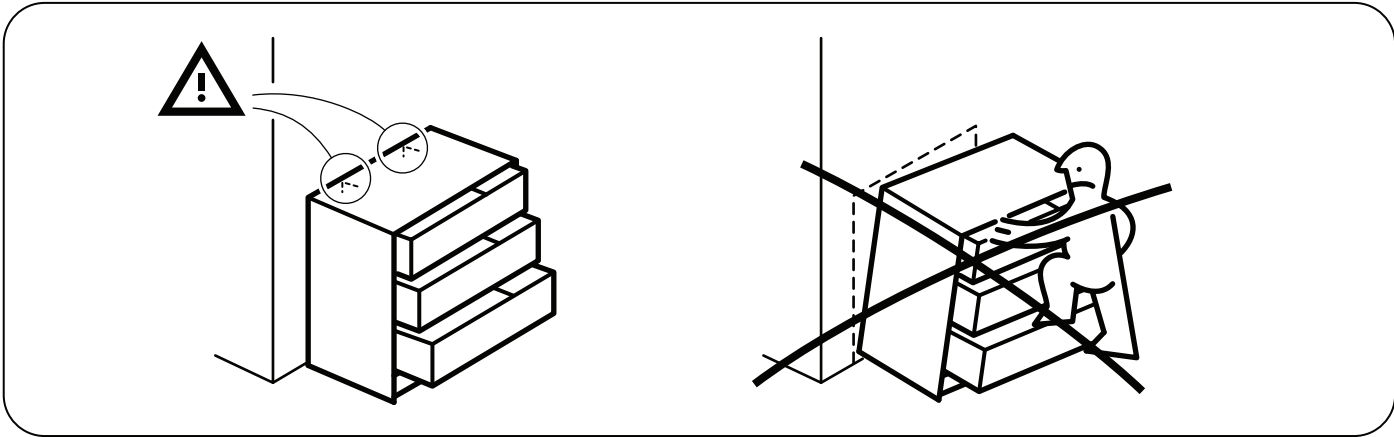

1



8x





14x




14x



12x

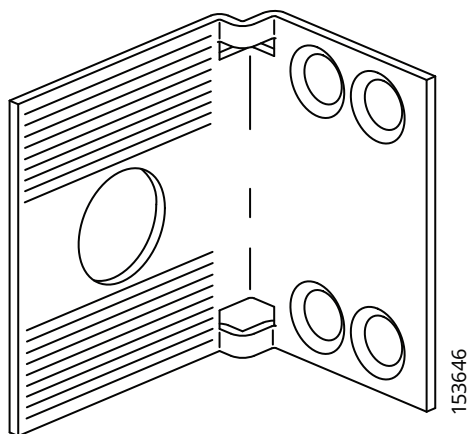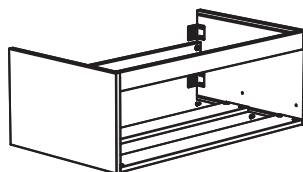


4x

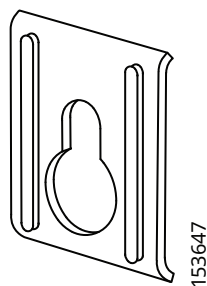

4x




1x




1x


2




4x





2x




4x




2x

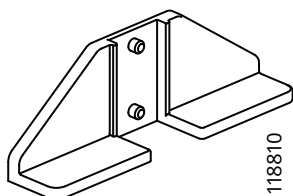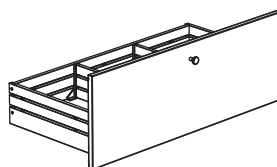


4x





2x

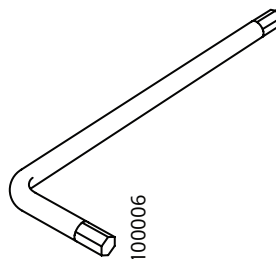


1x

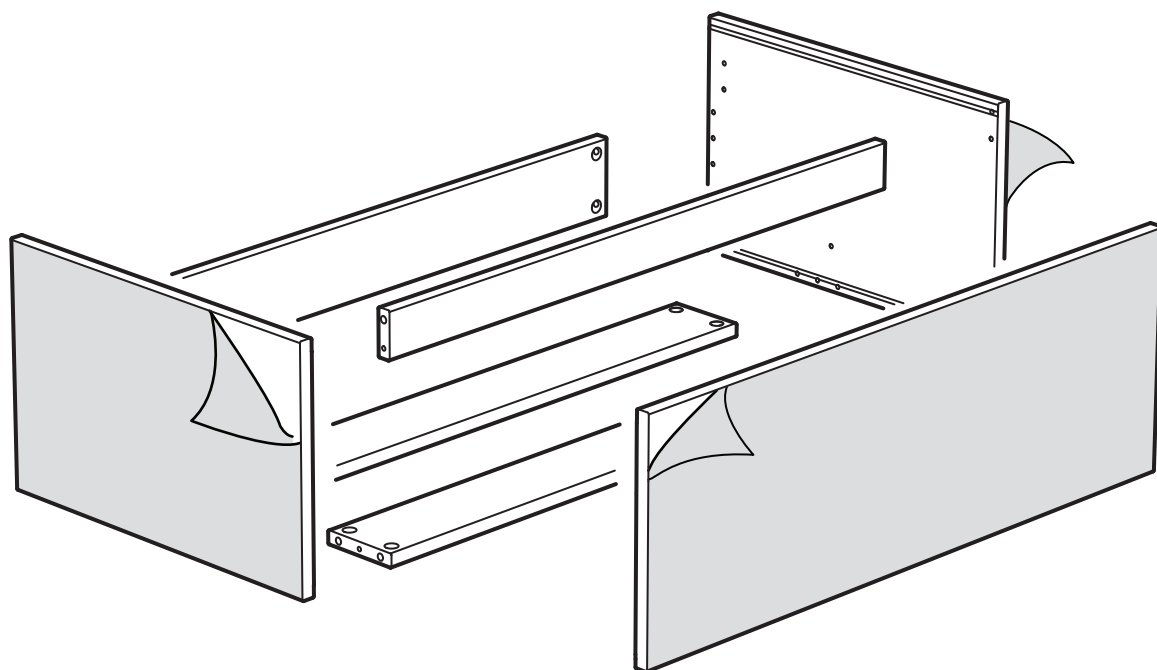


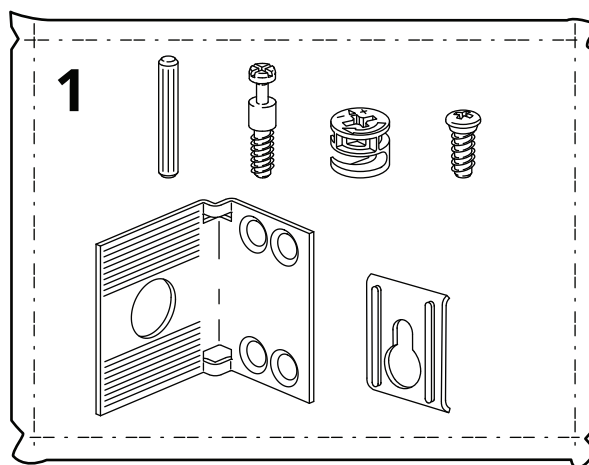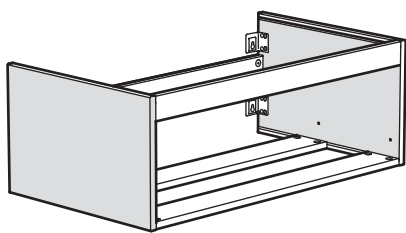


1

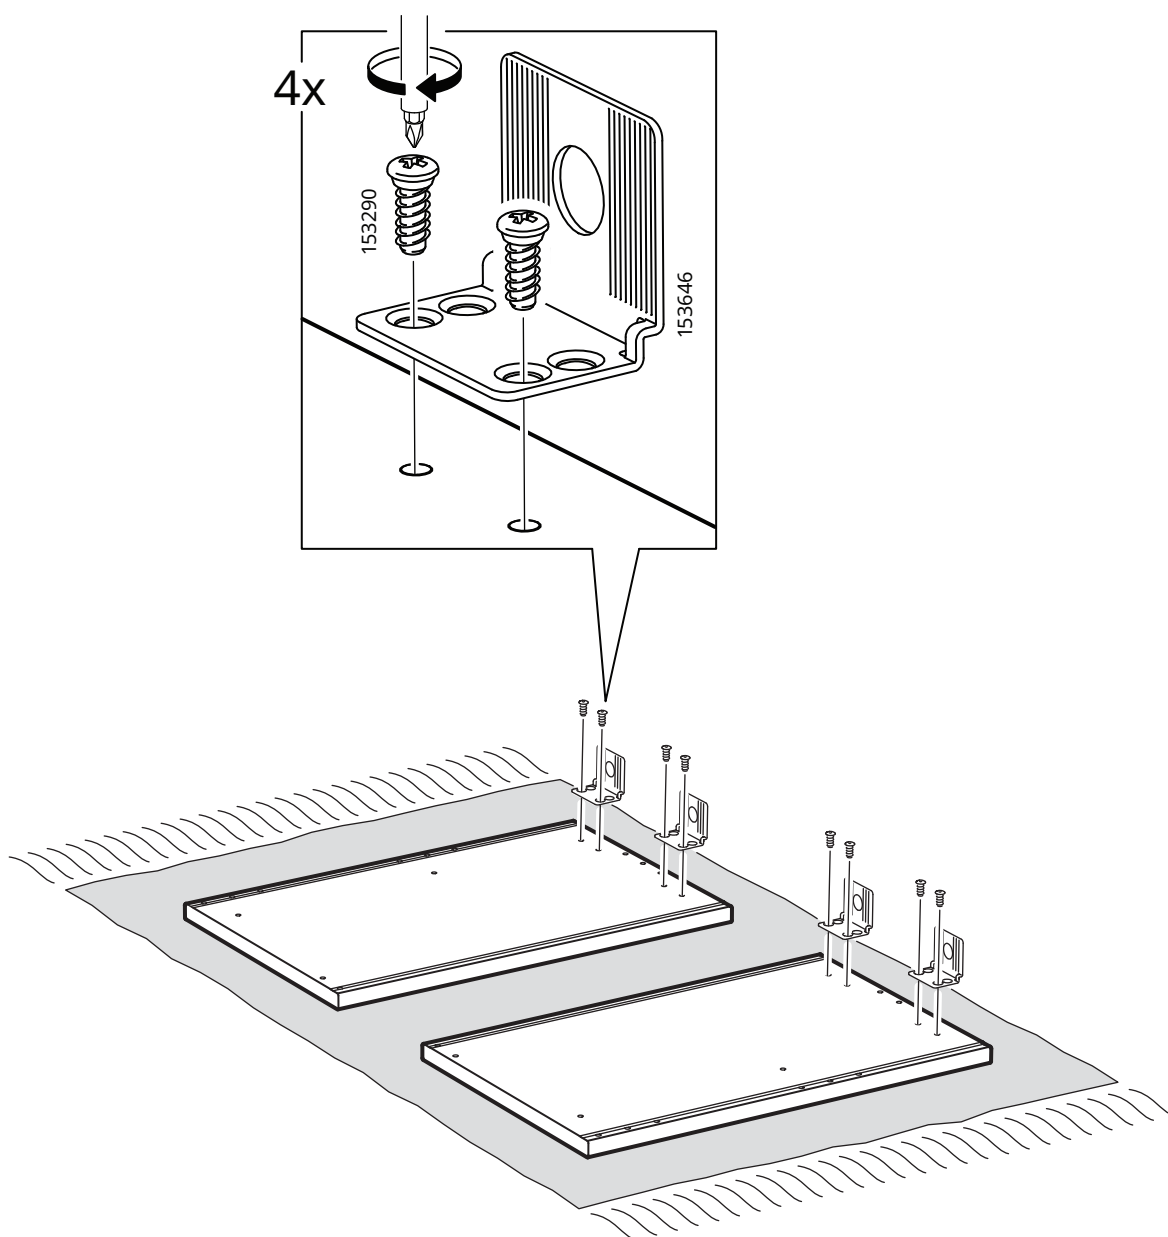


2

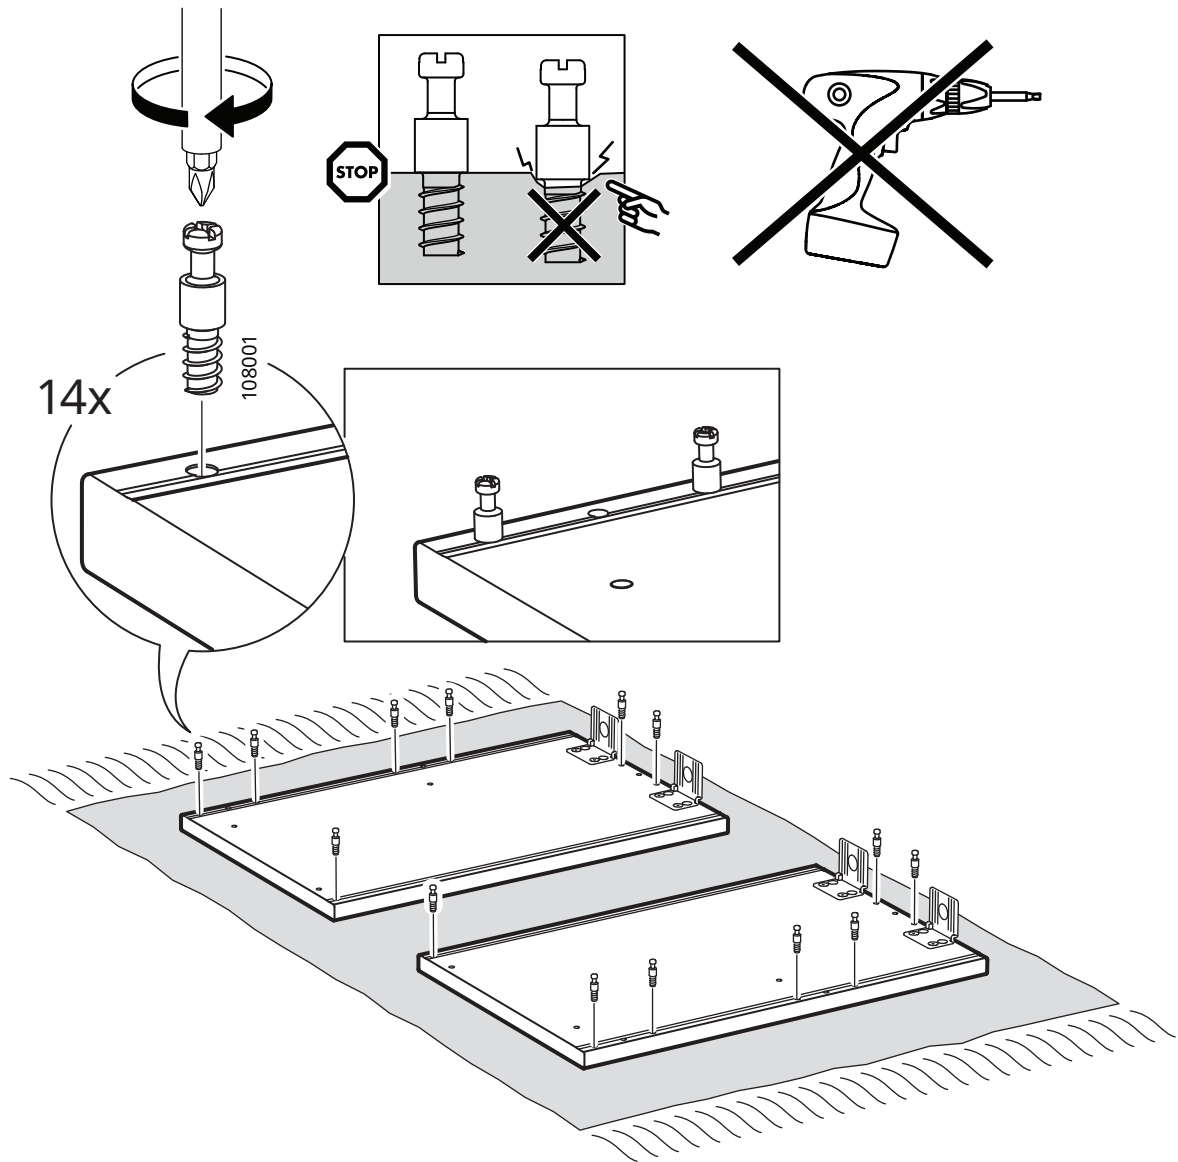


3

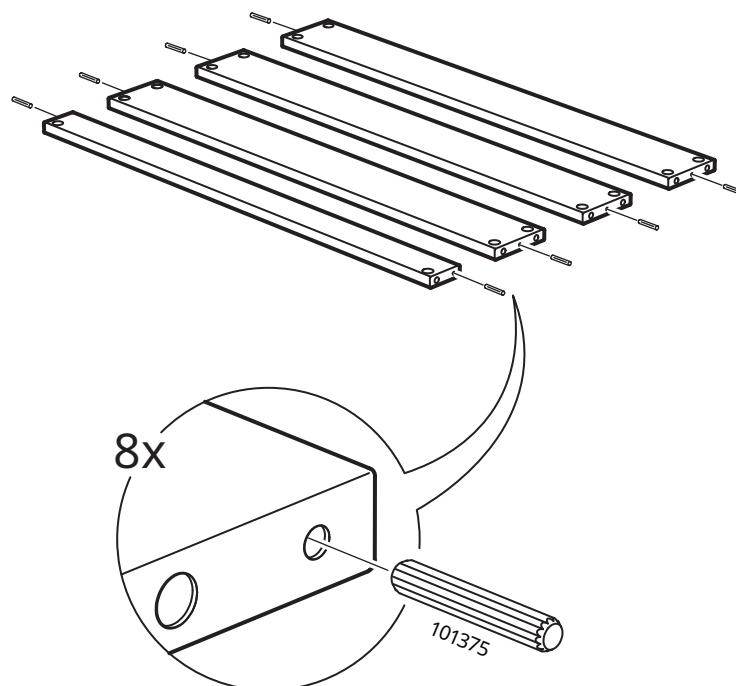


4

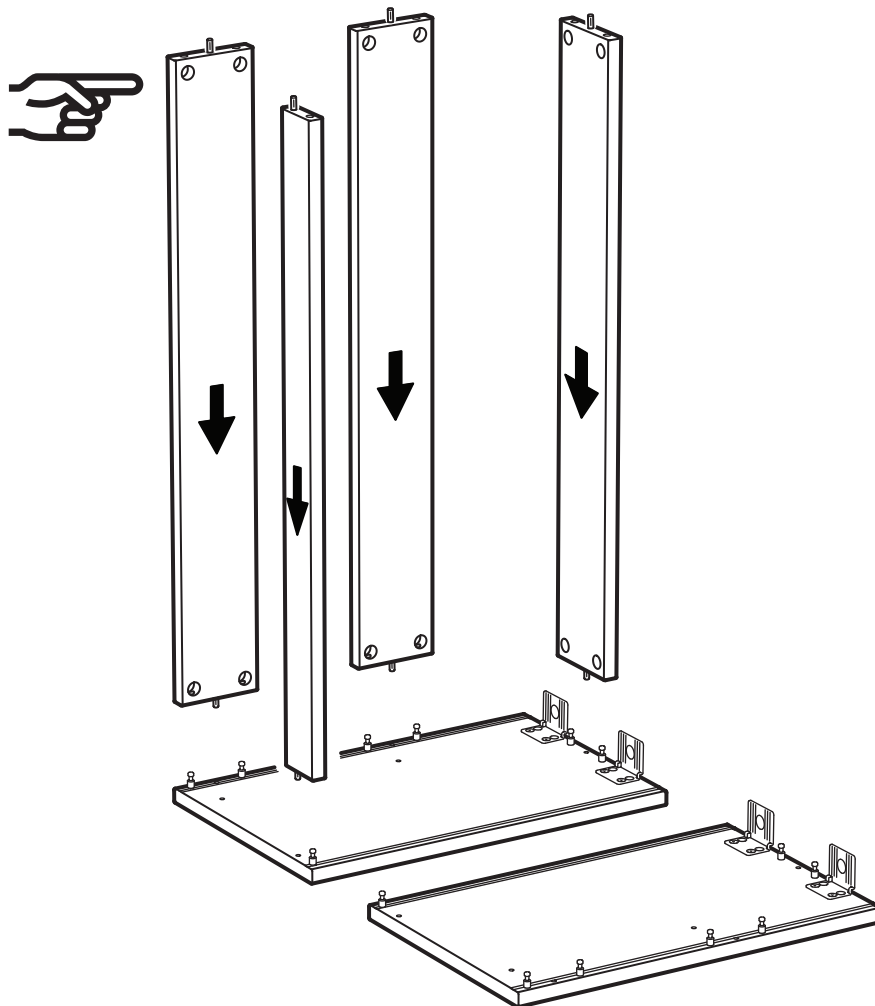


5

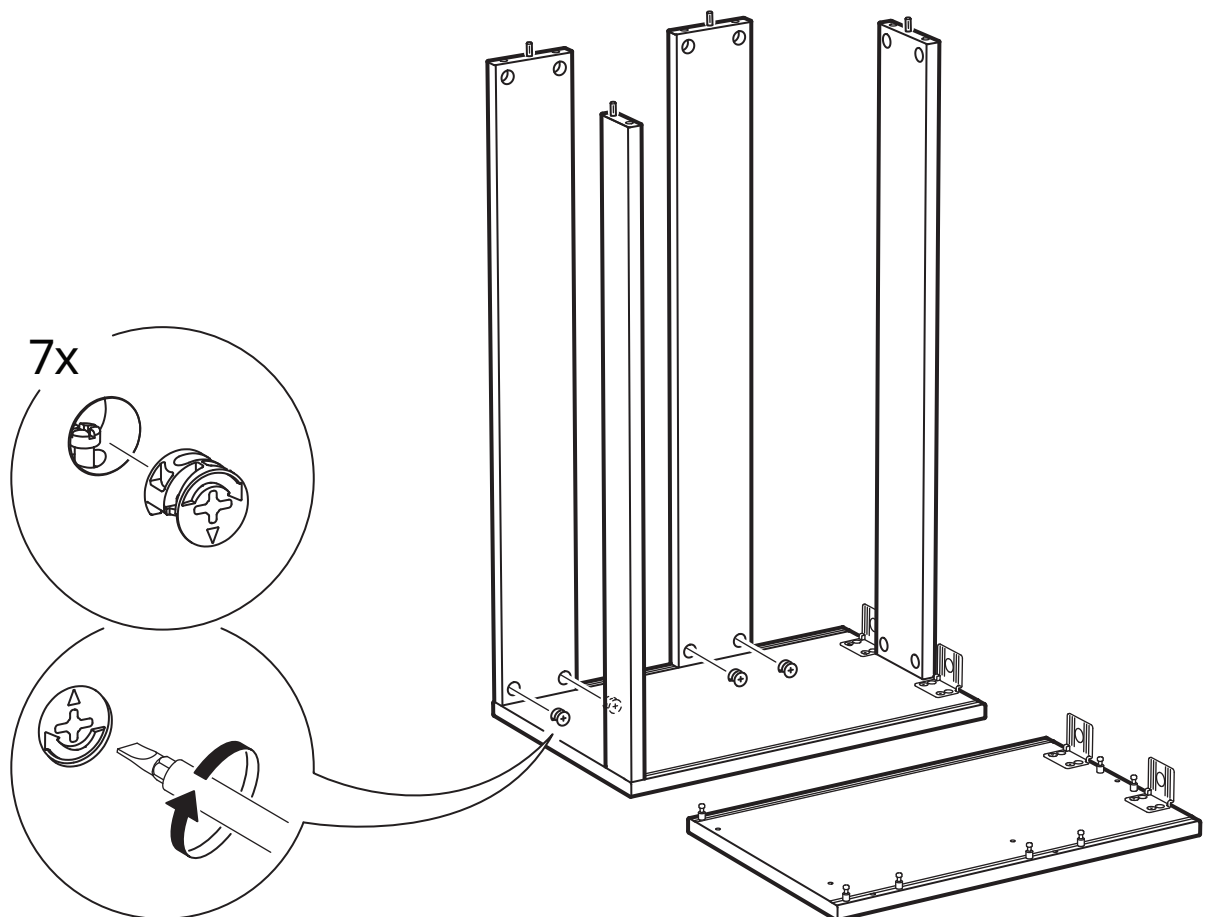




6

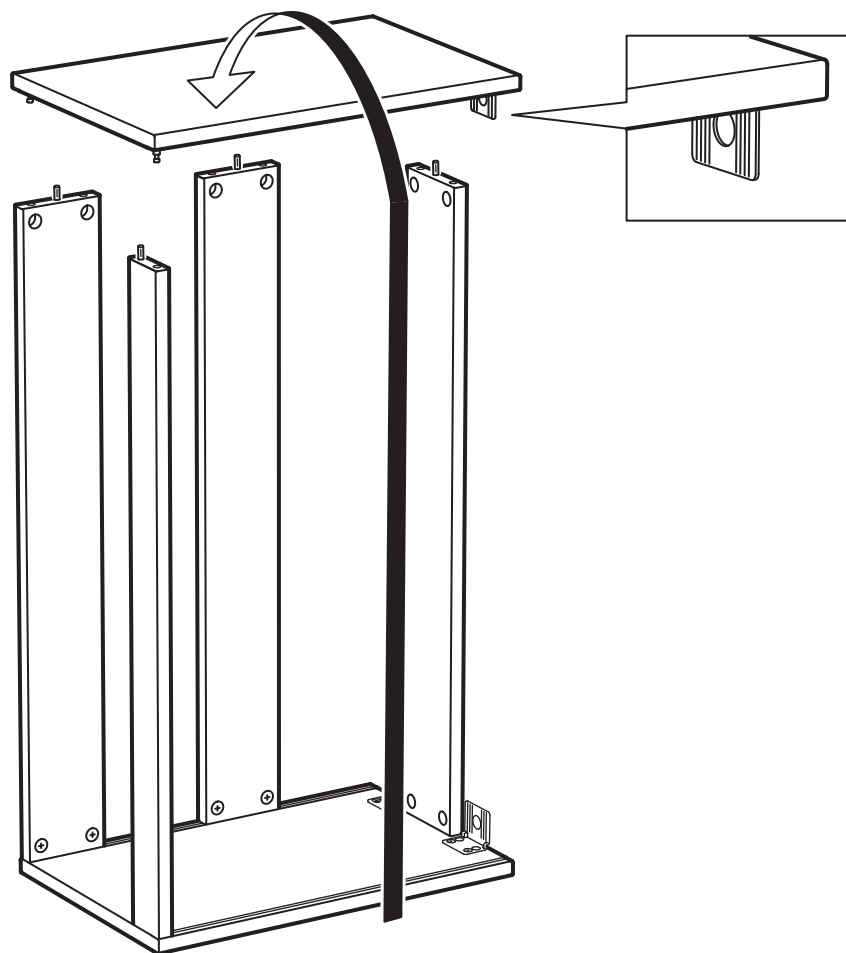


7

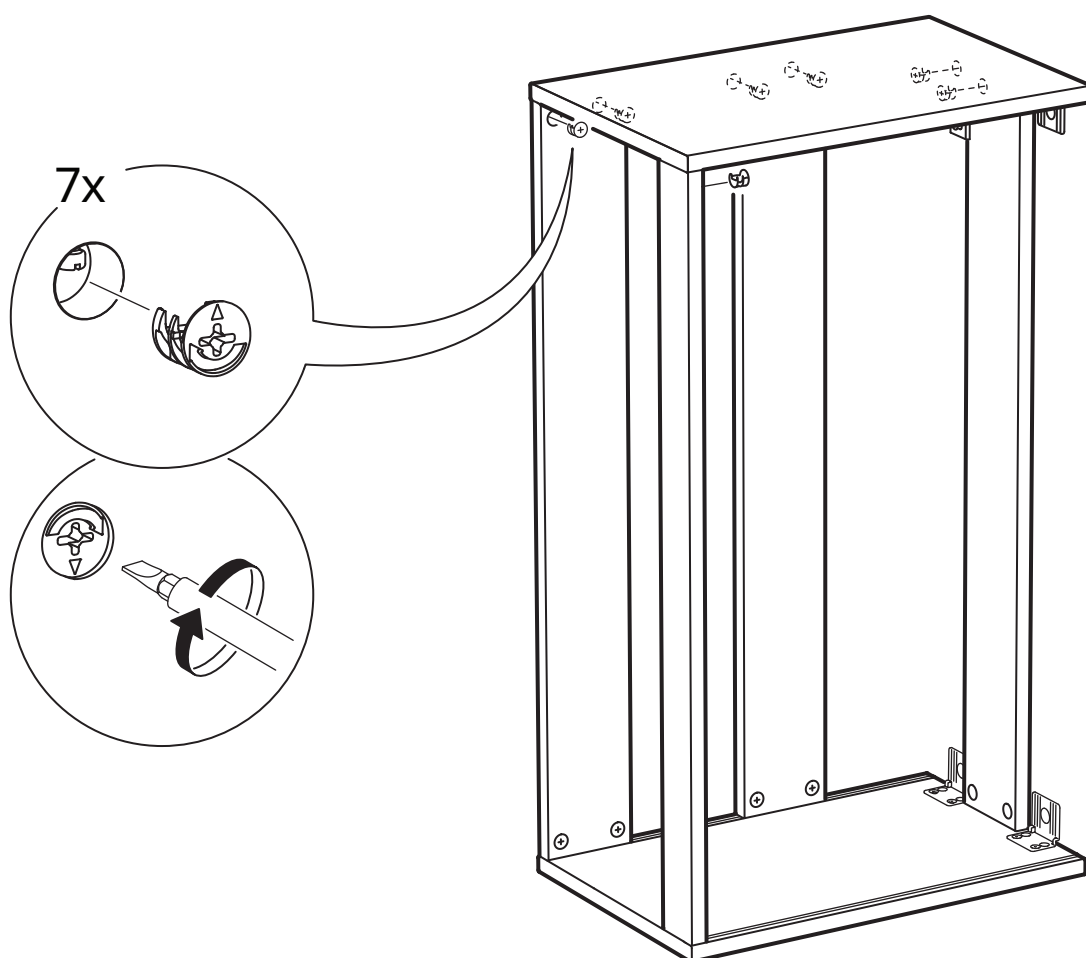

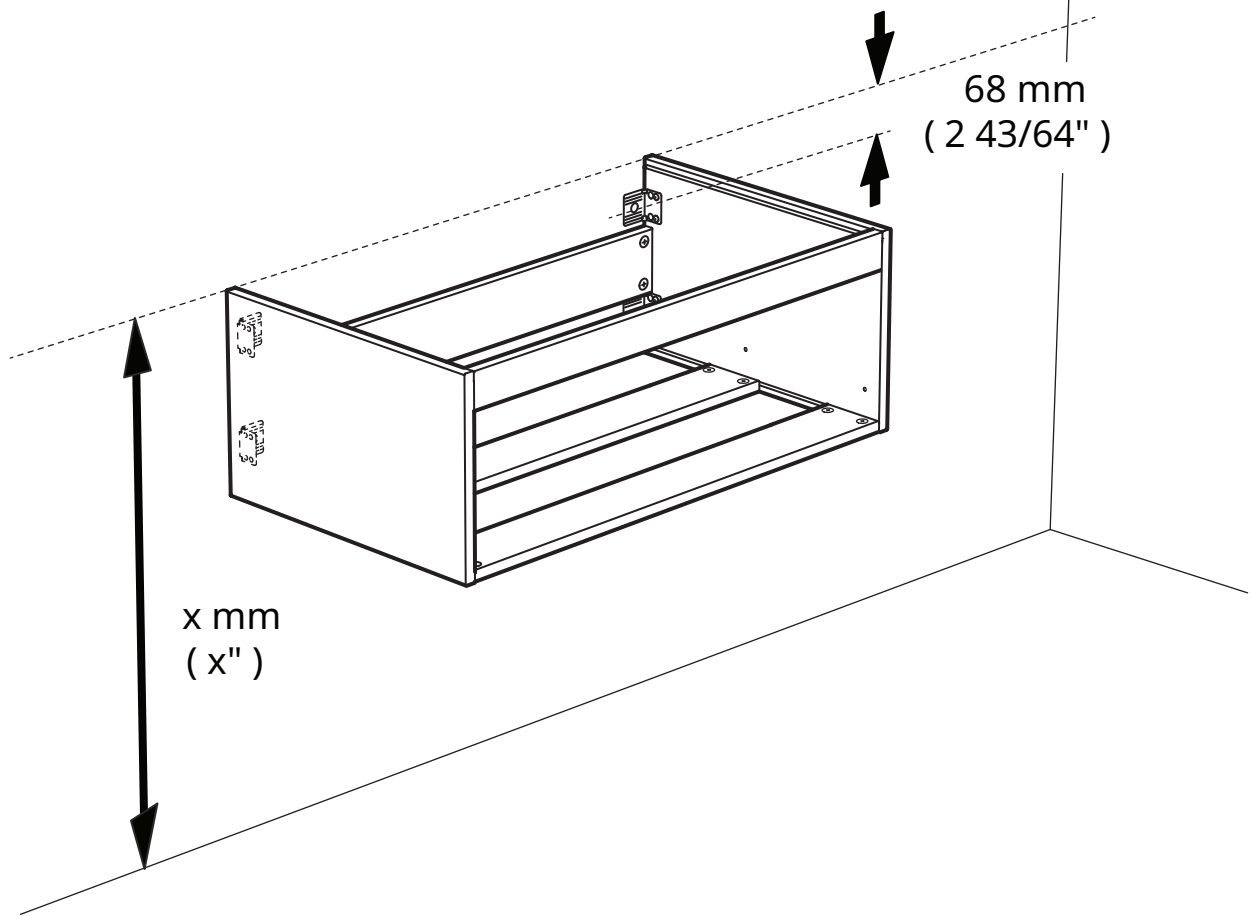


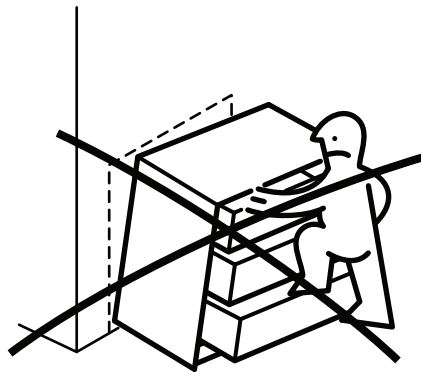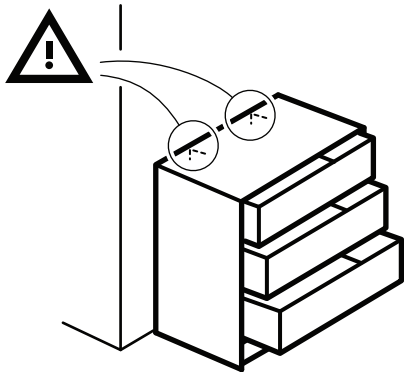


8

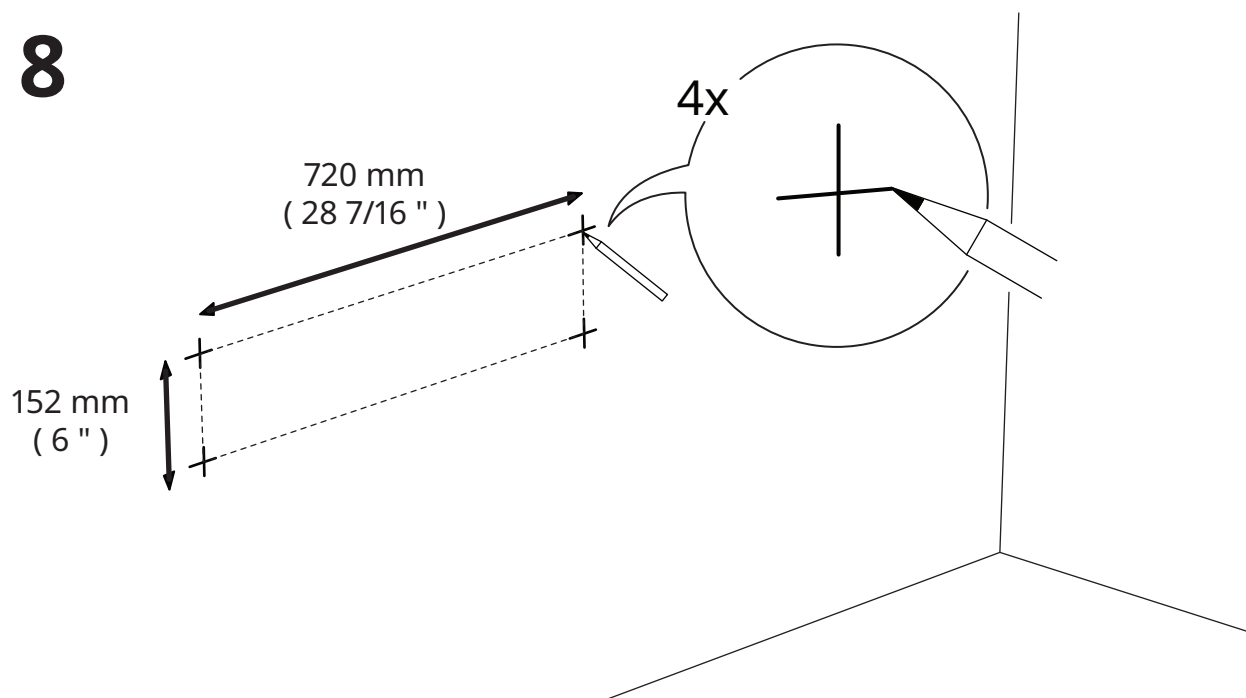

9

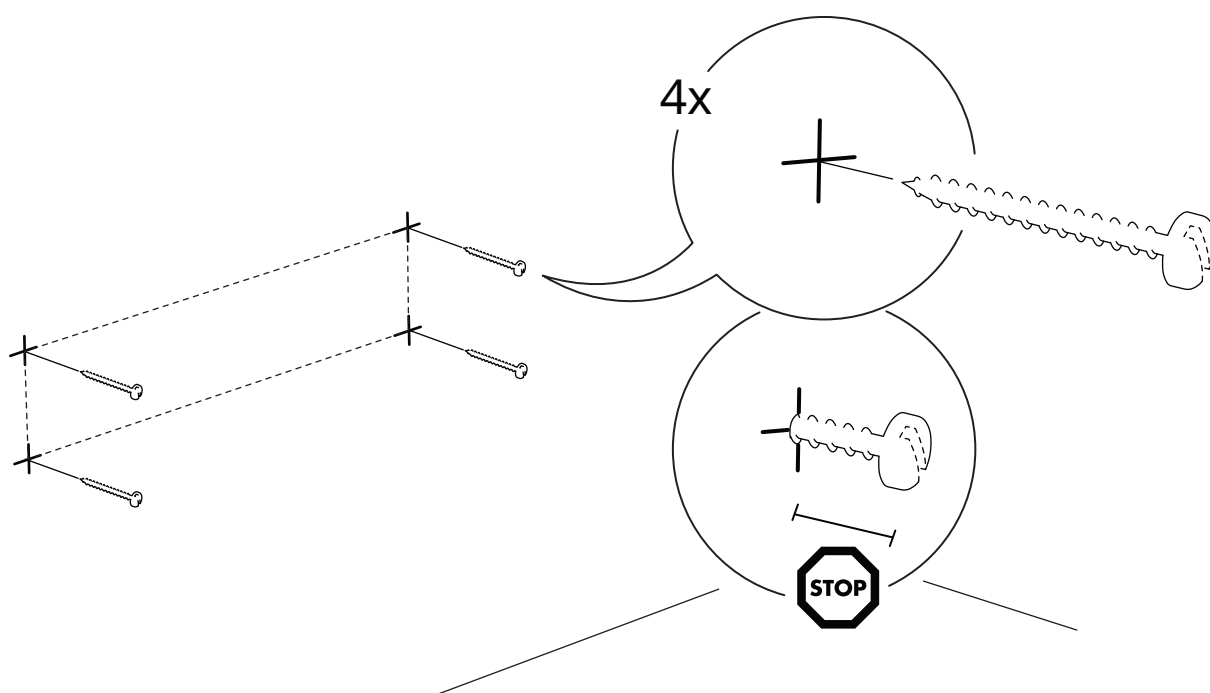

10

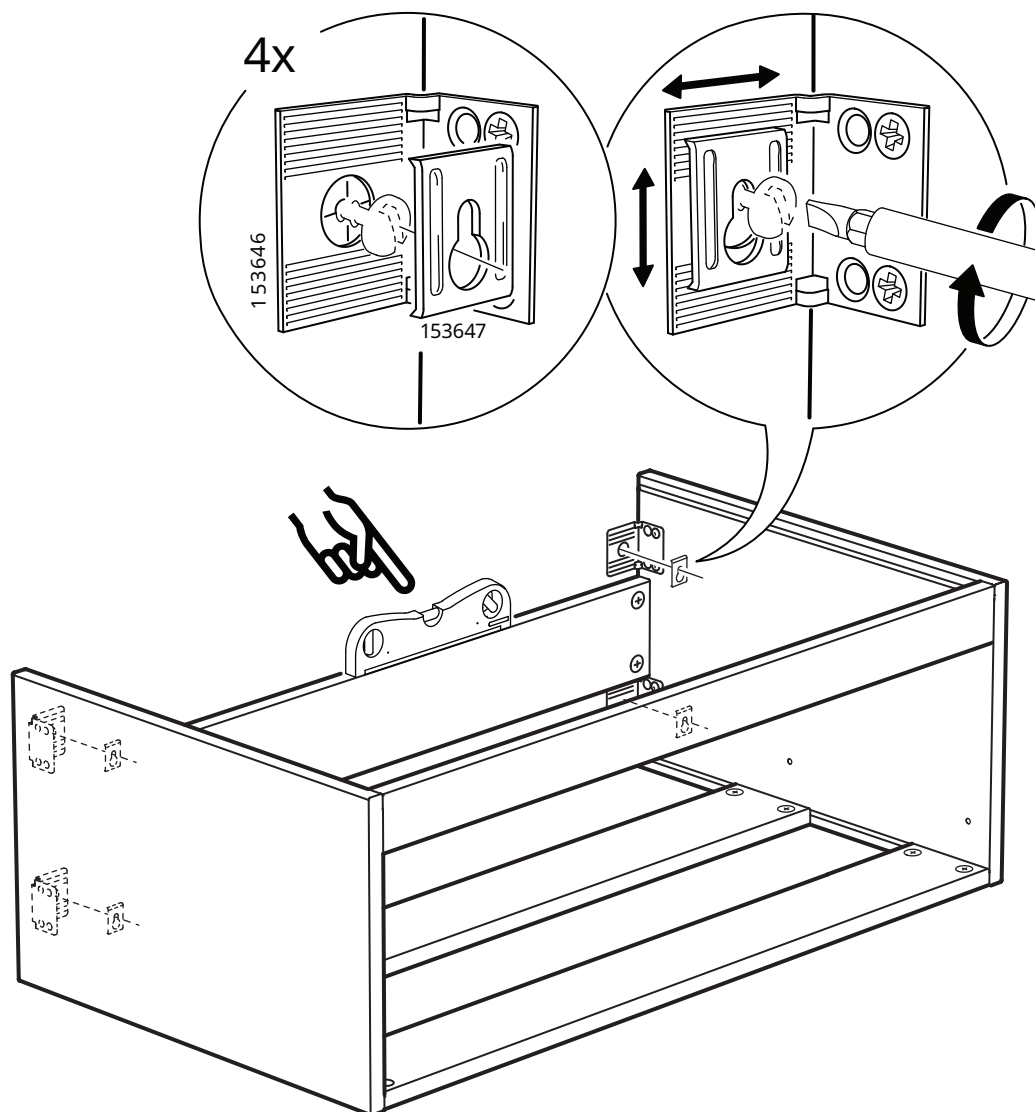



English


If you are uncertain about the ability of wall to support heavy weights, you can secure the cabinet at one or more additional points along the horizontal rail at the back of the cabinet.



עברית

אם אינכם בטוחים בנוגע ליכולת ההעמסה של הקיר שלכם, תוכלו לקבע את הארון בנקודה אחת נוספת או יותר לאורך המסילה האופקית בפנל האחורי.

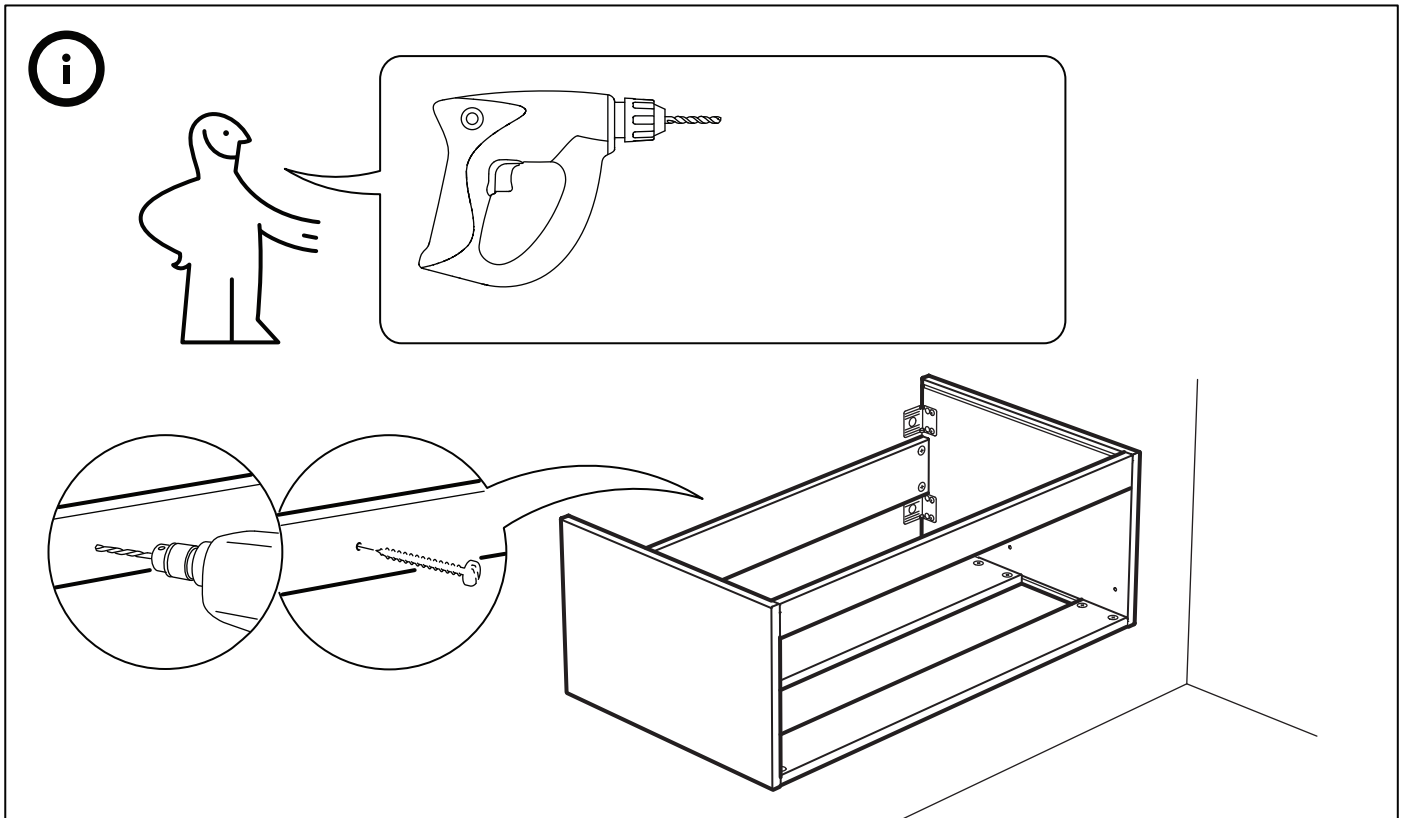


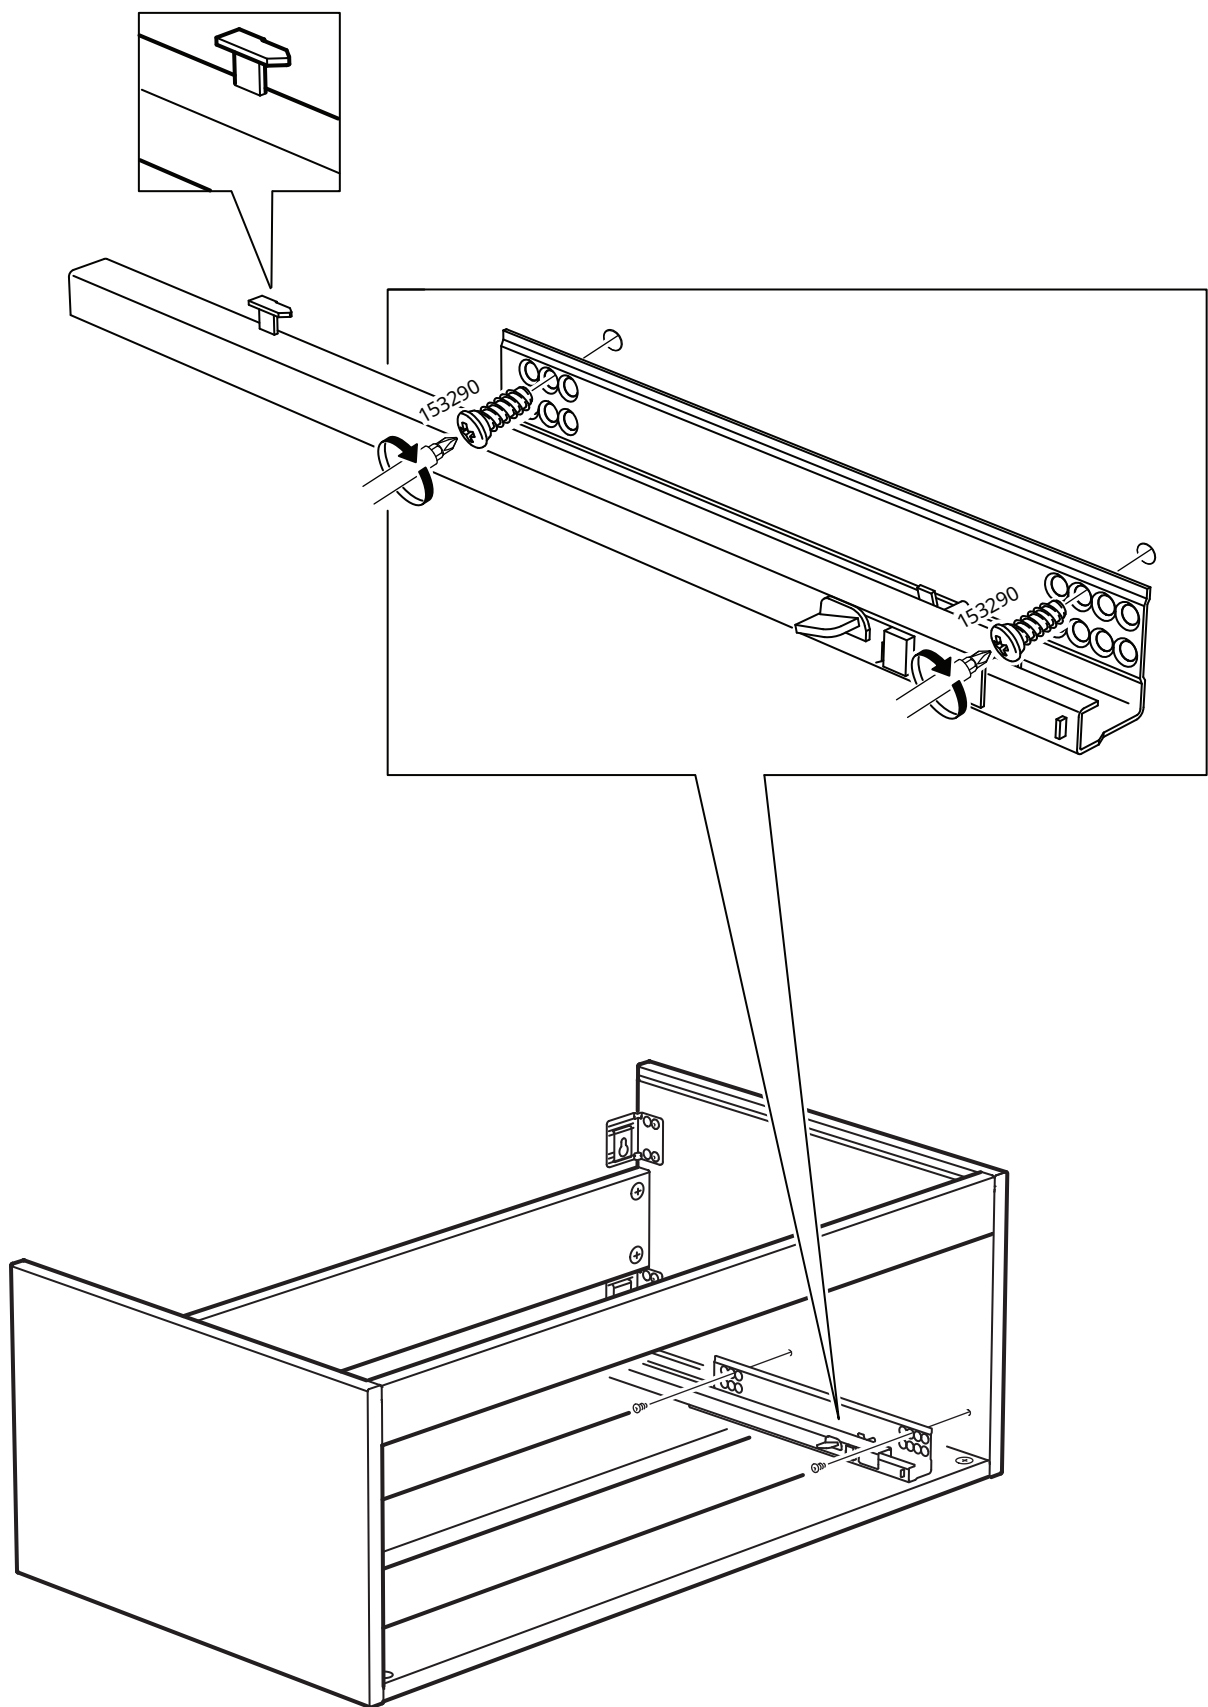

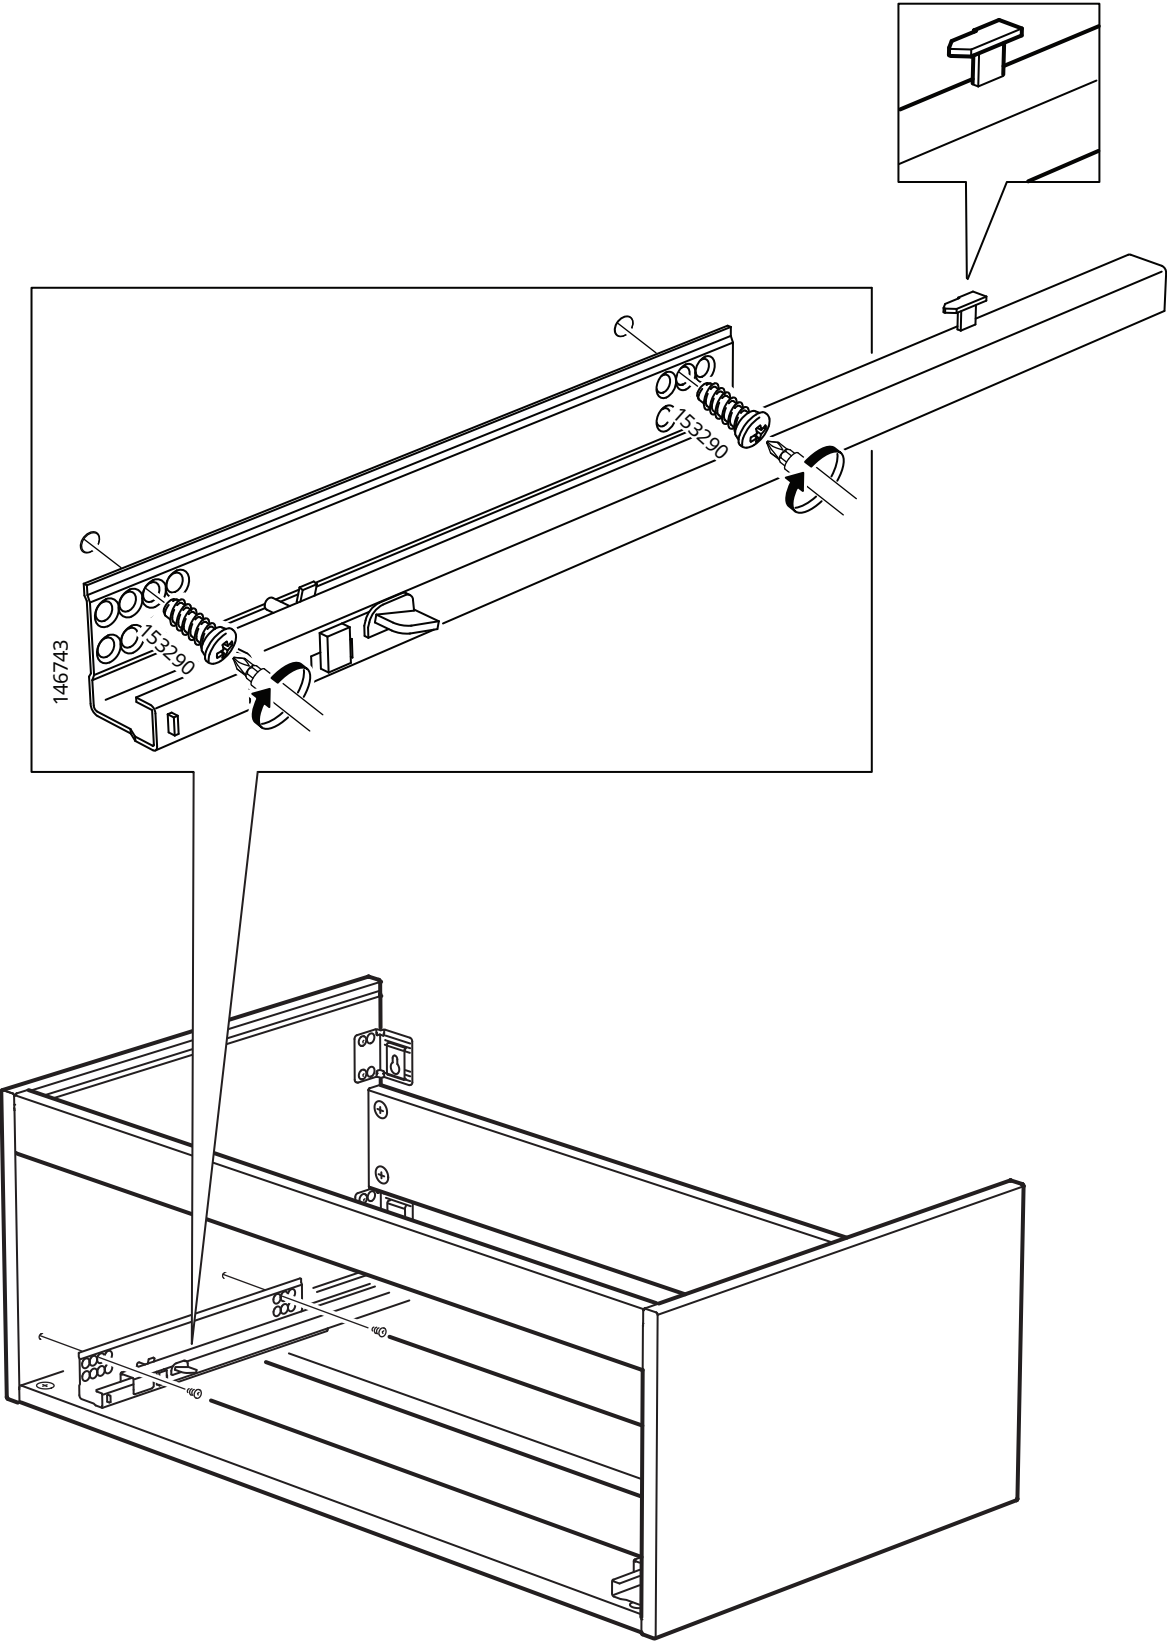


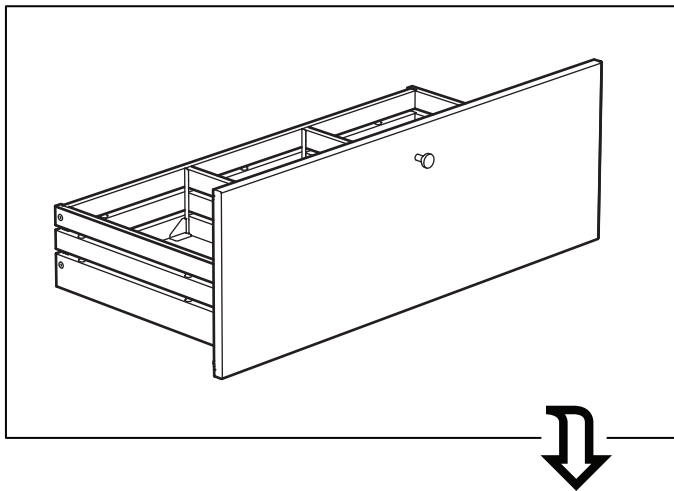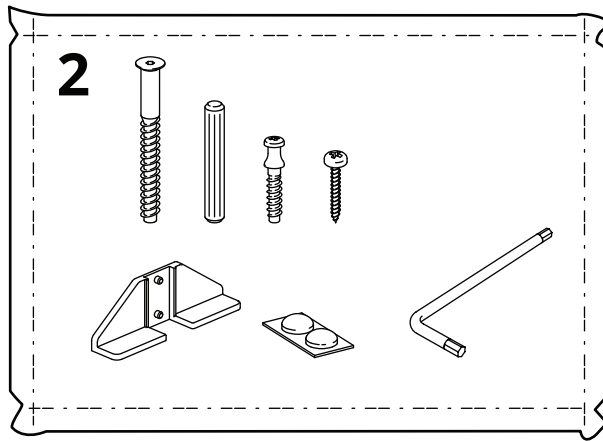


13

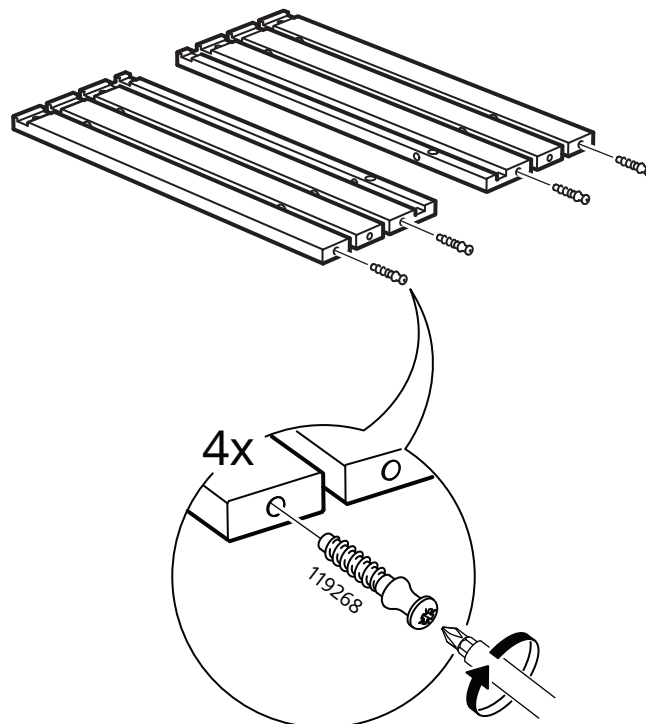


14

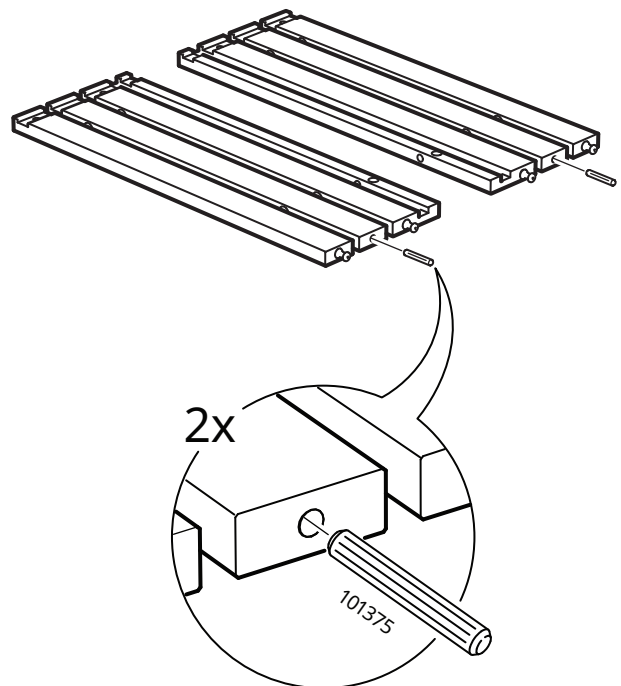


15

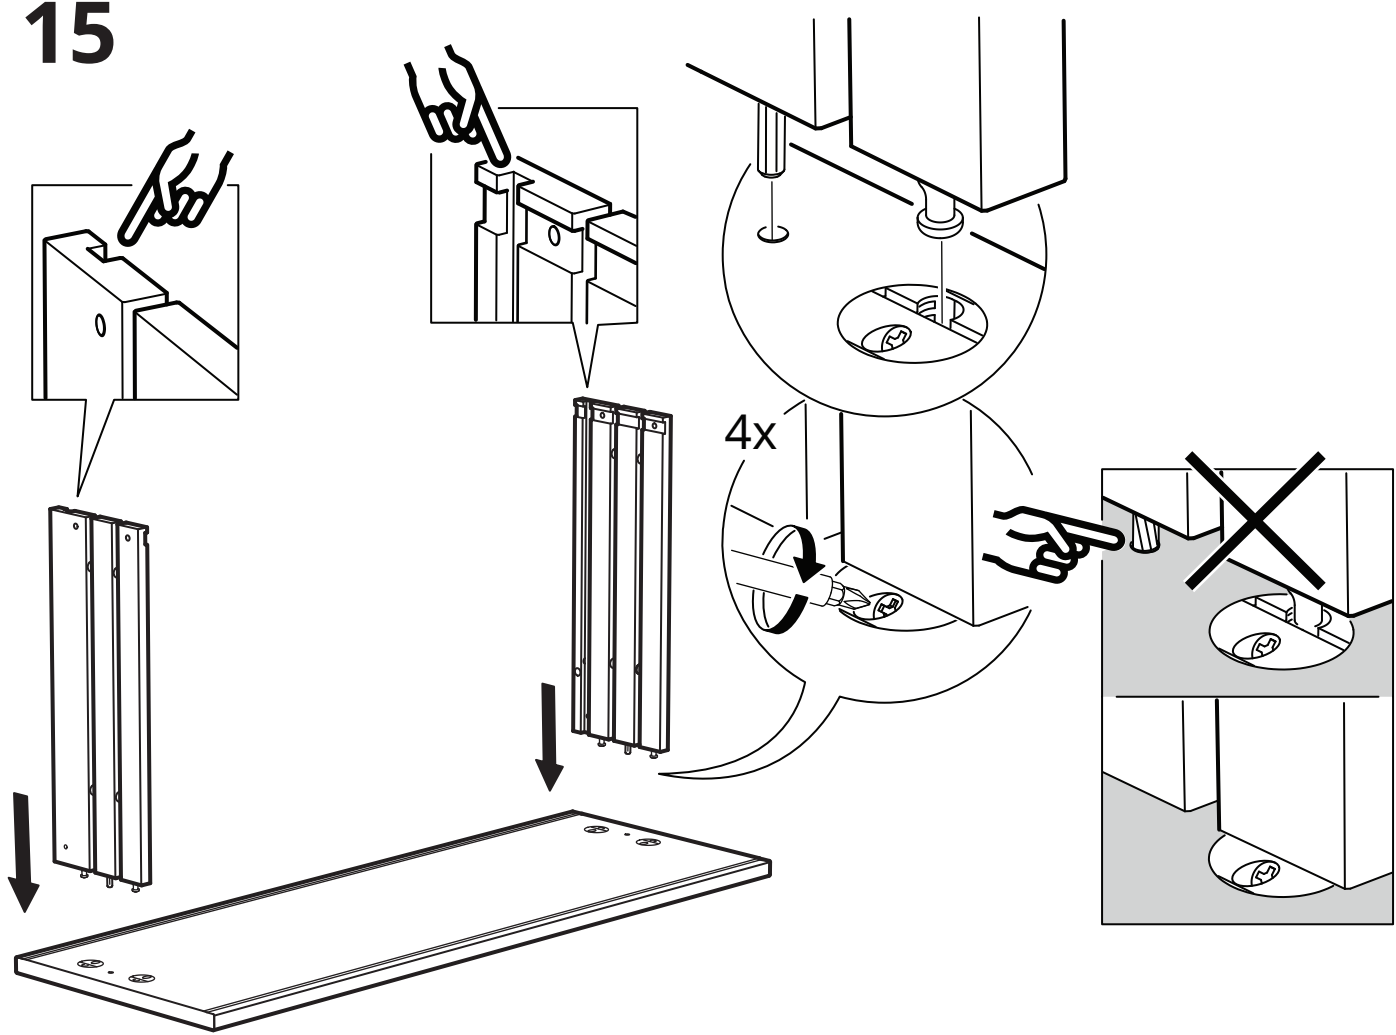


16

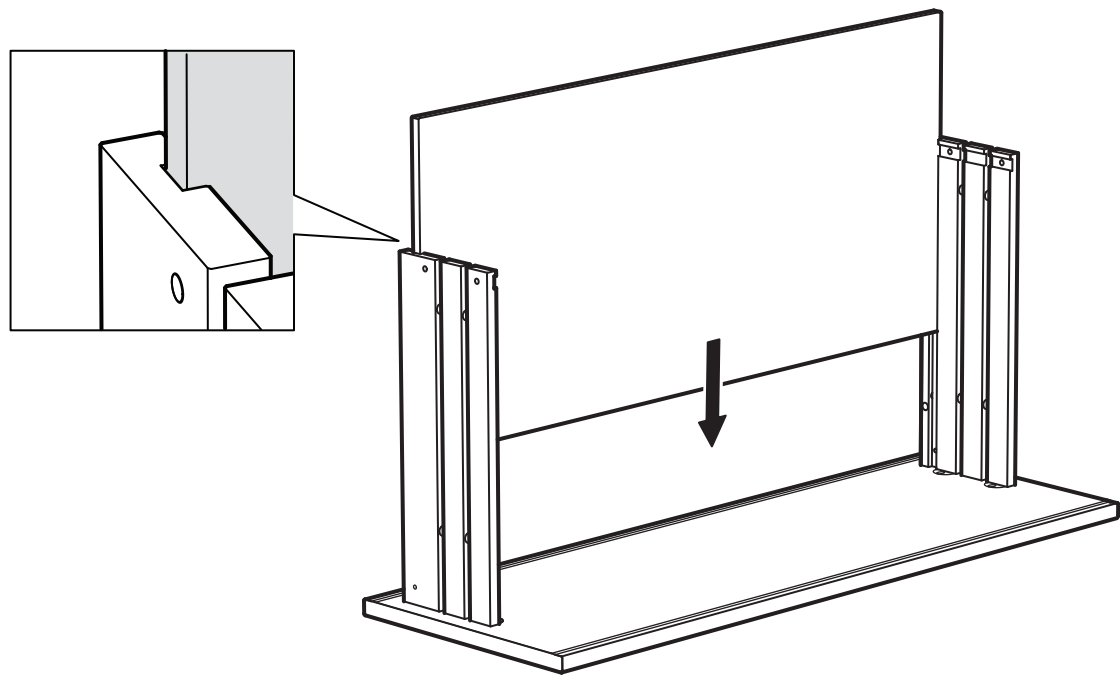


17

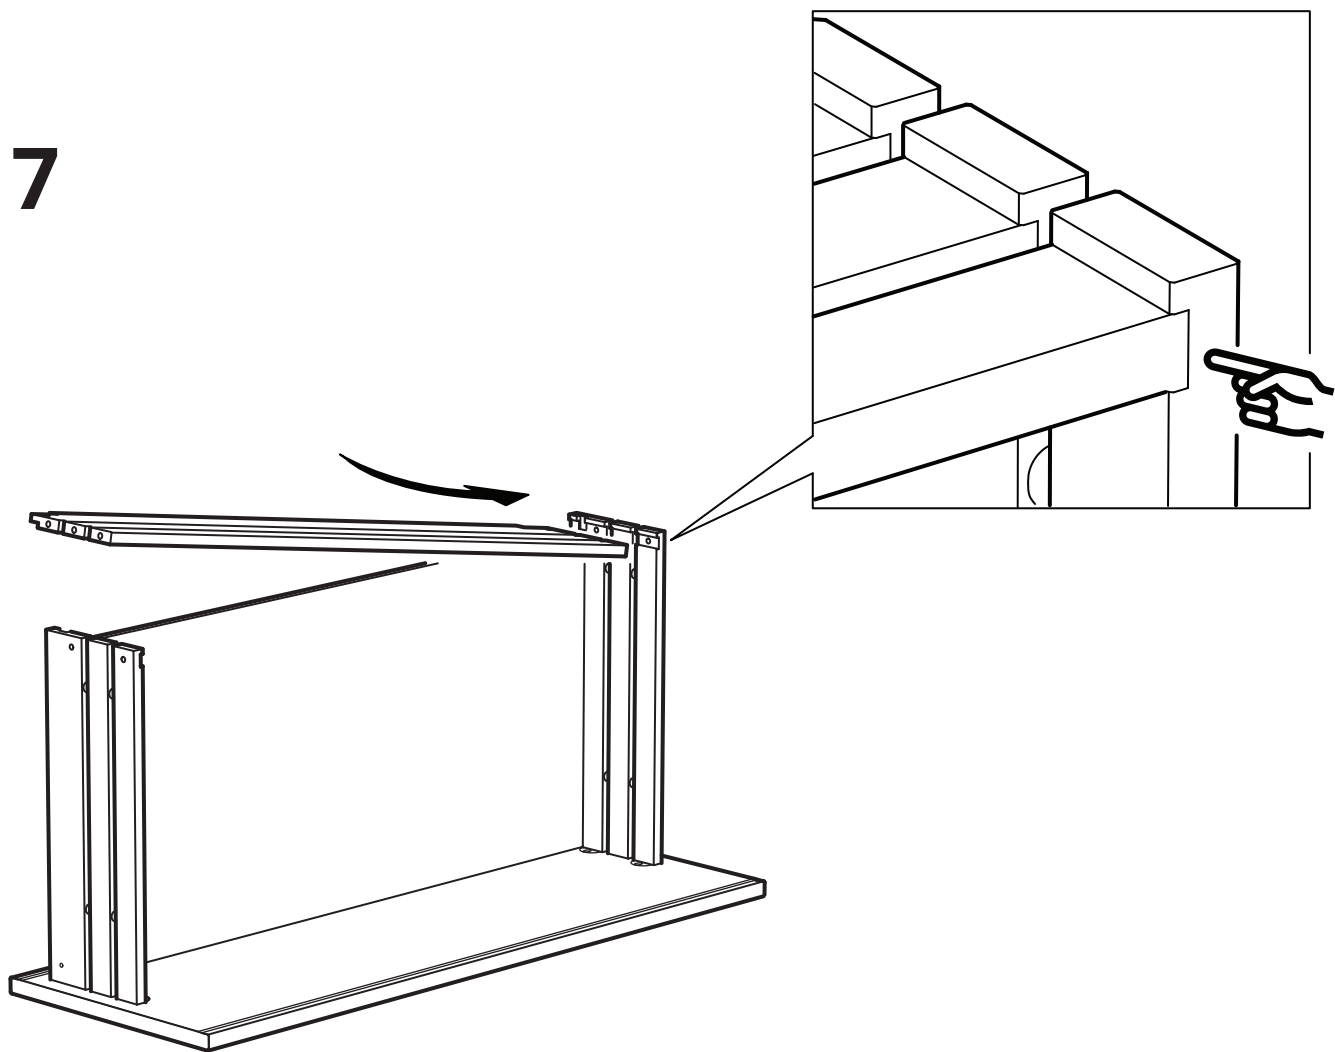


18

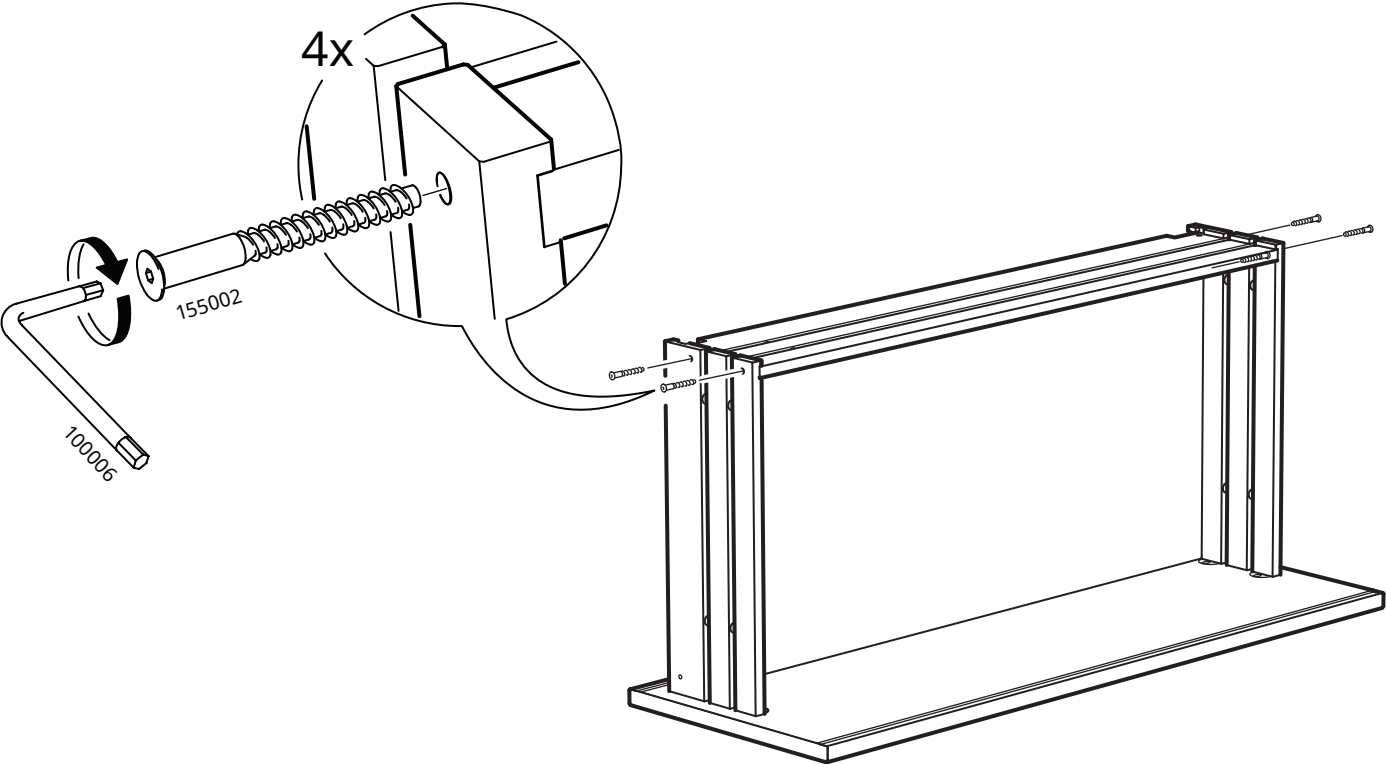


19

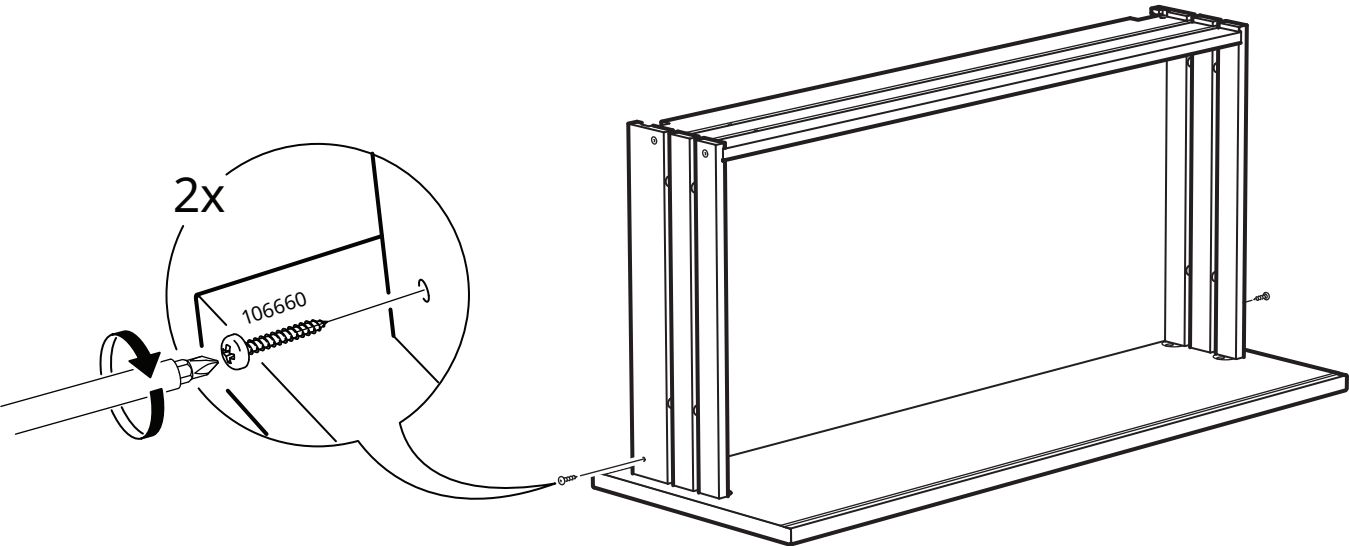


20

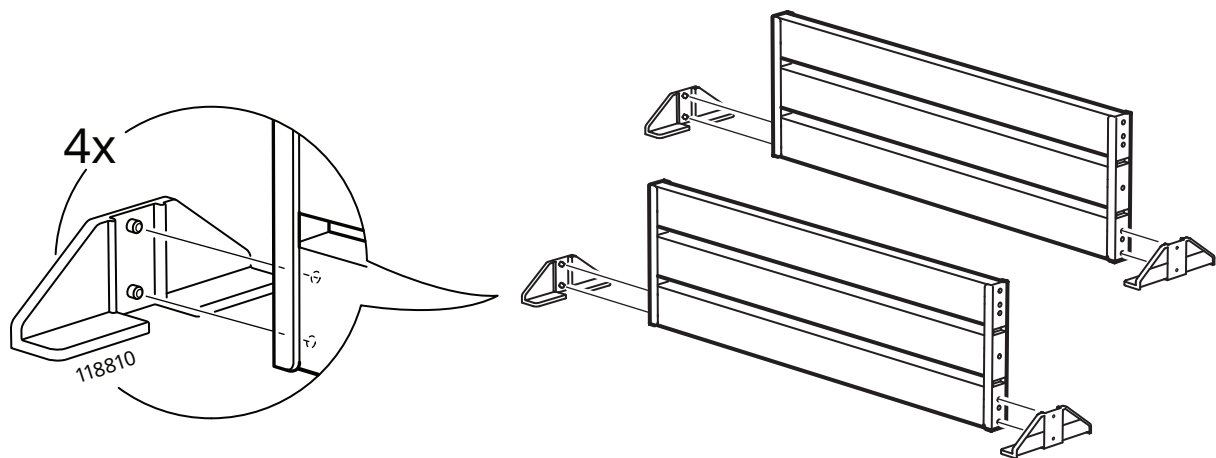


21

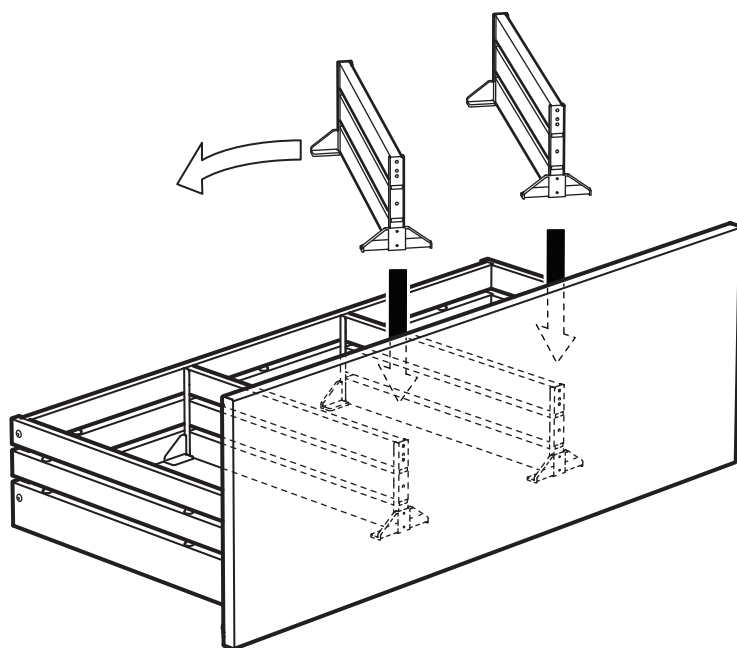


22

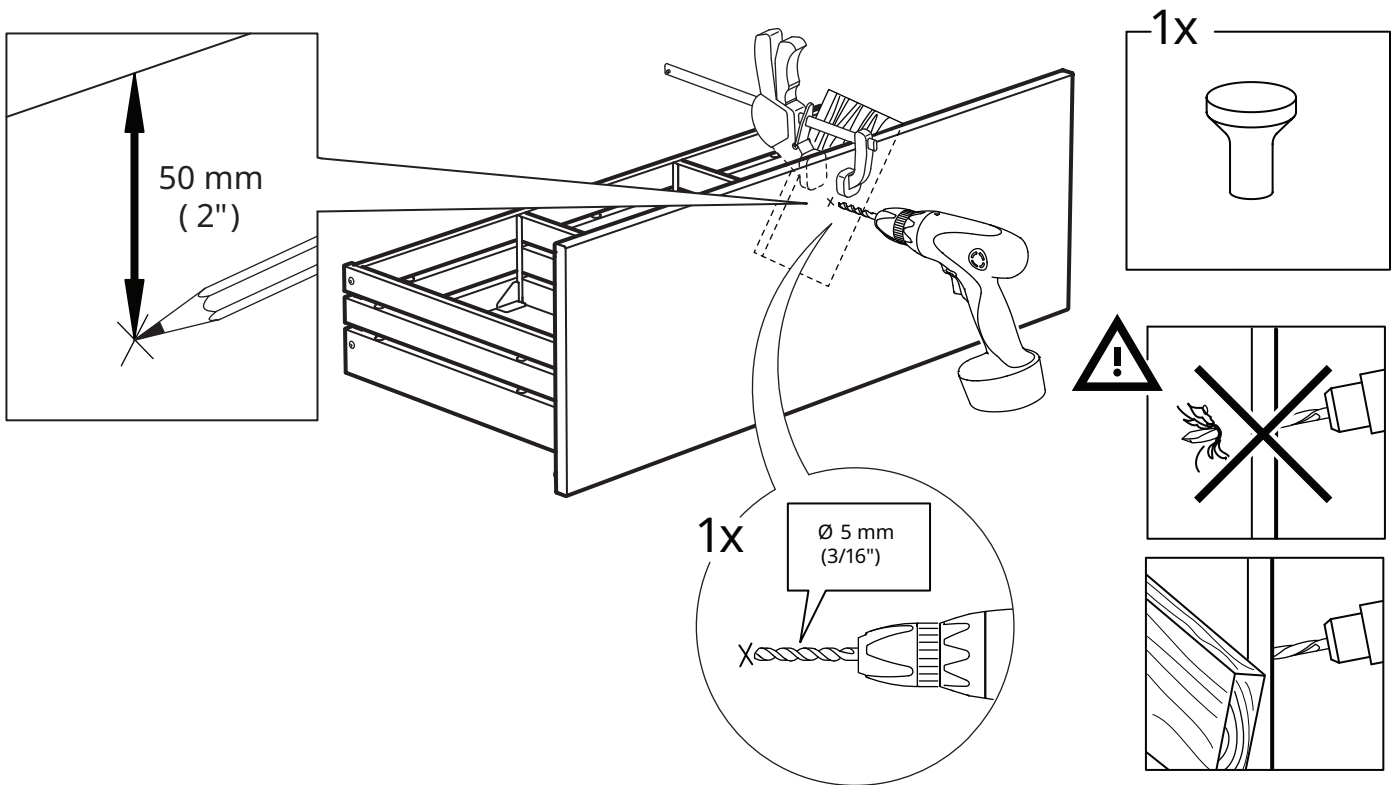


23

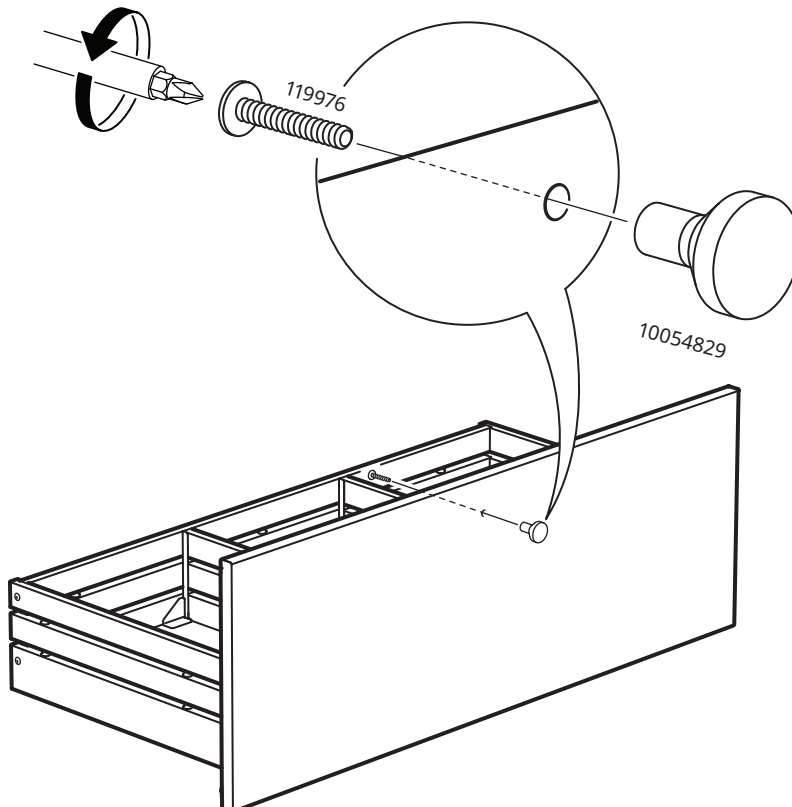


24

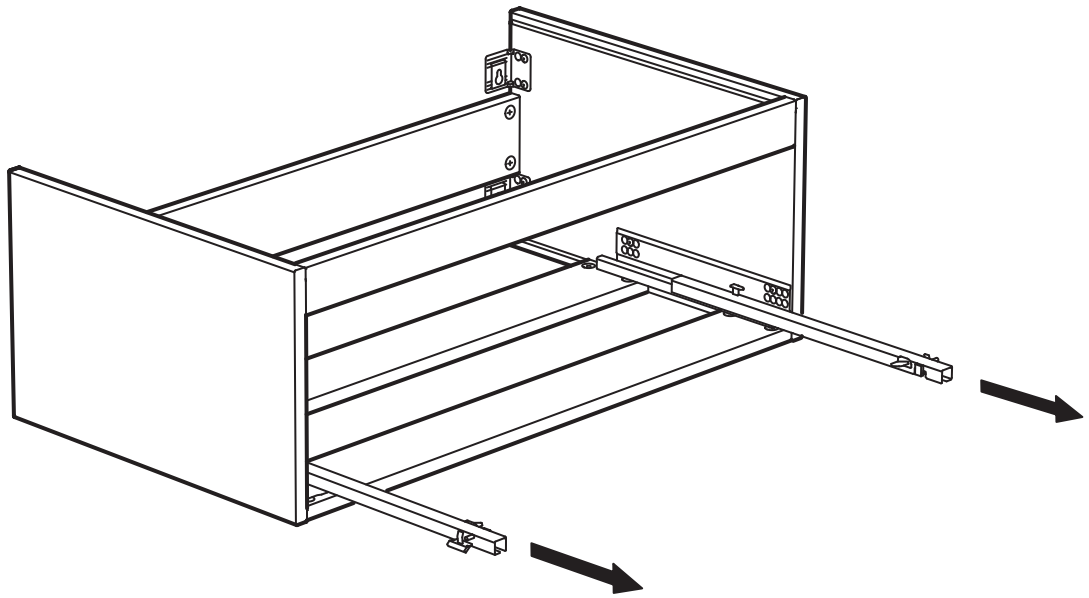

25

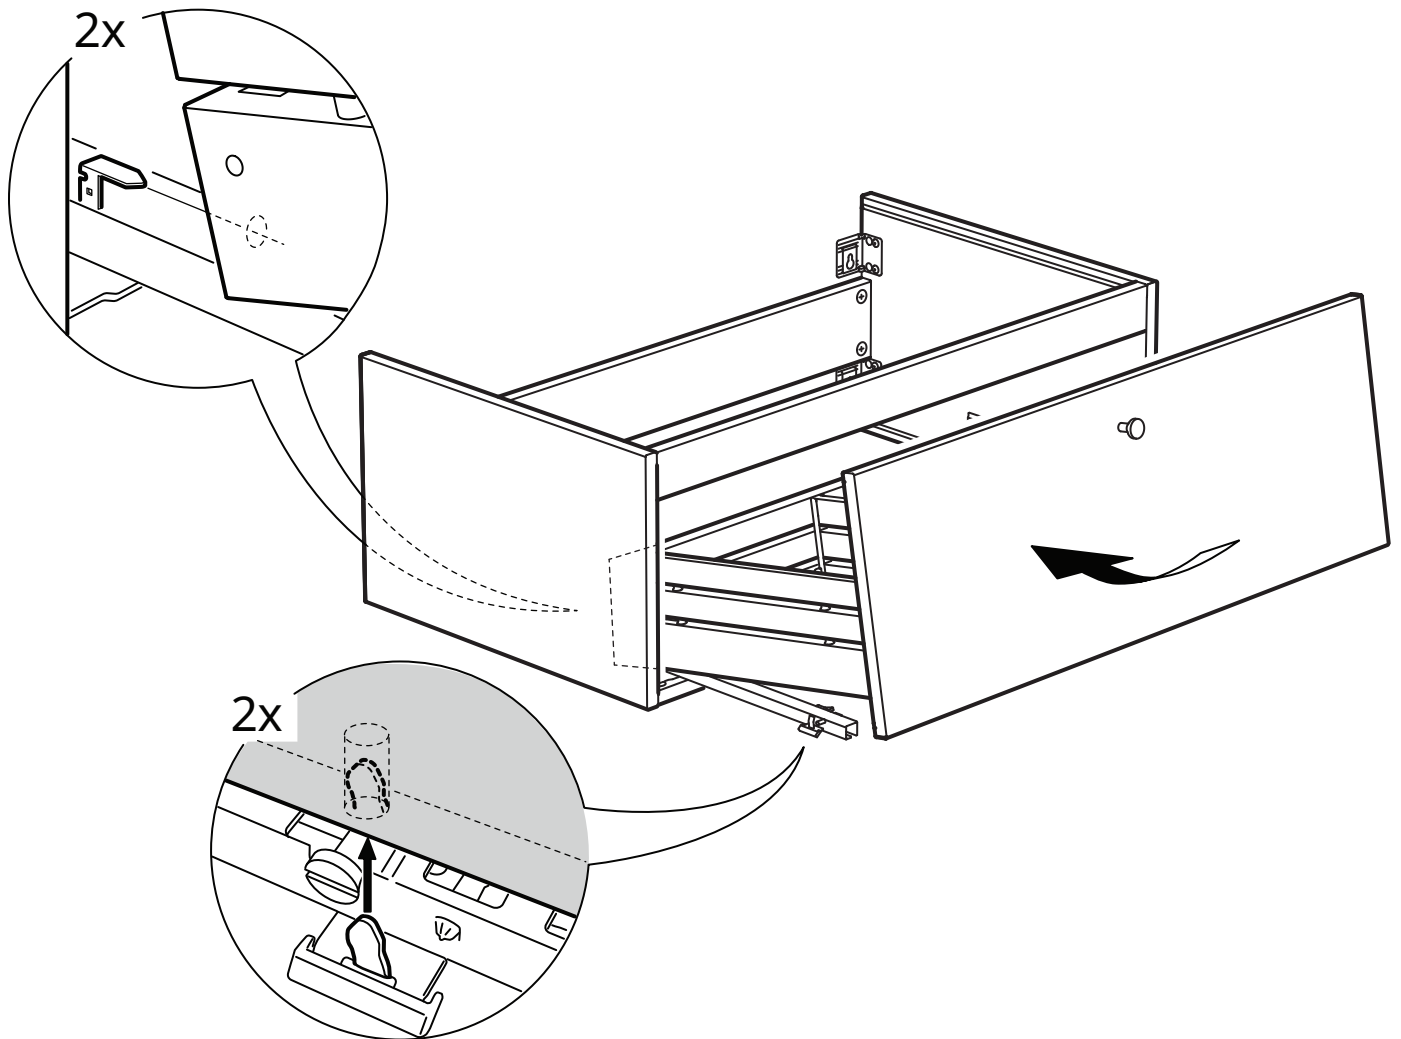

26

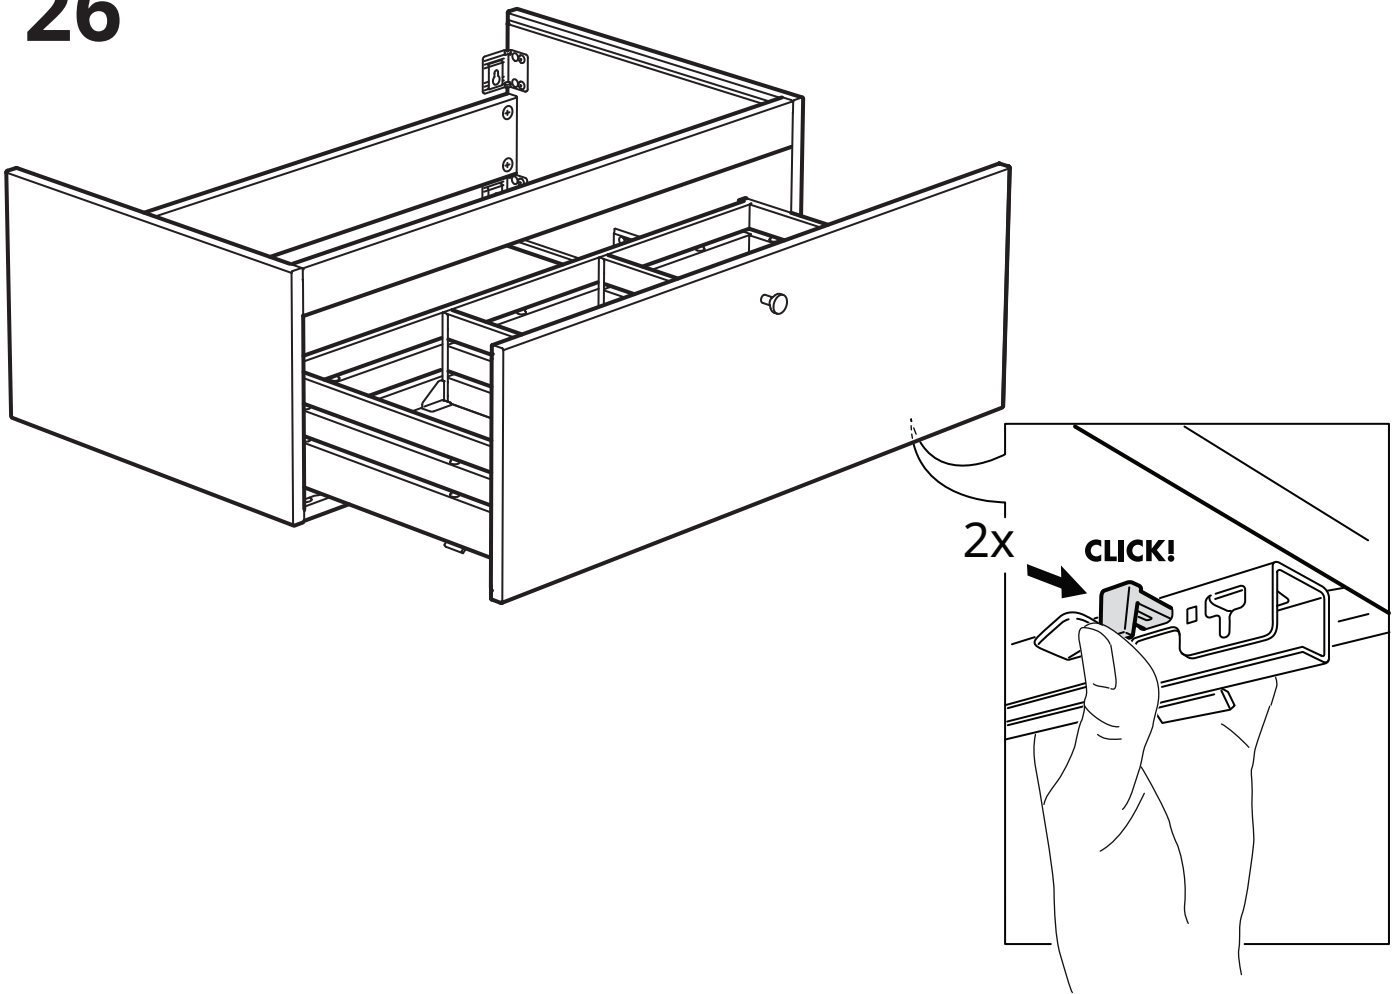

27

