

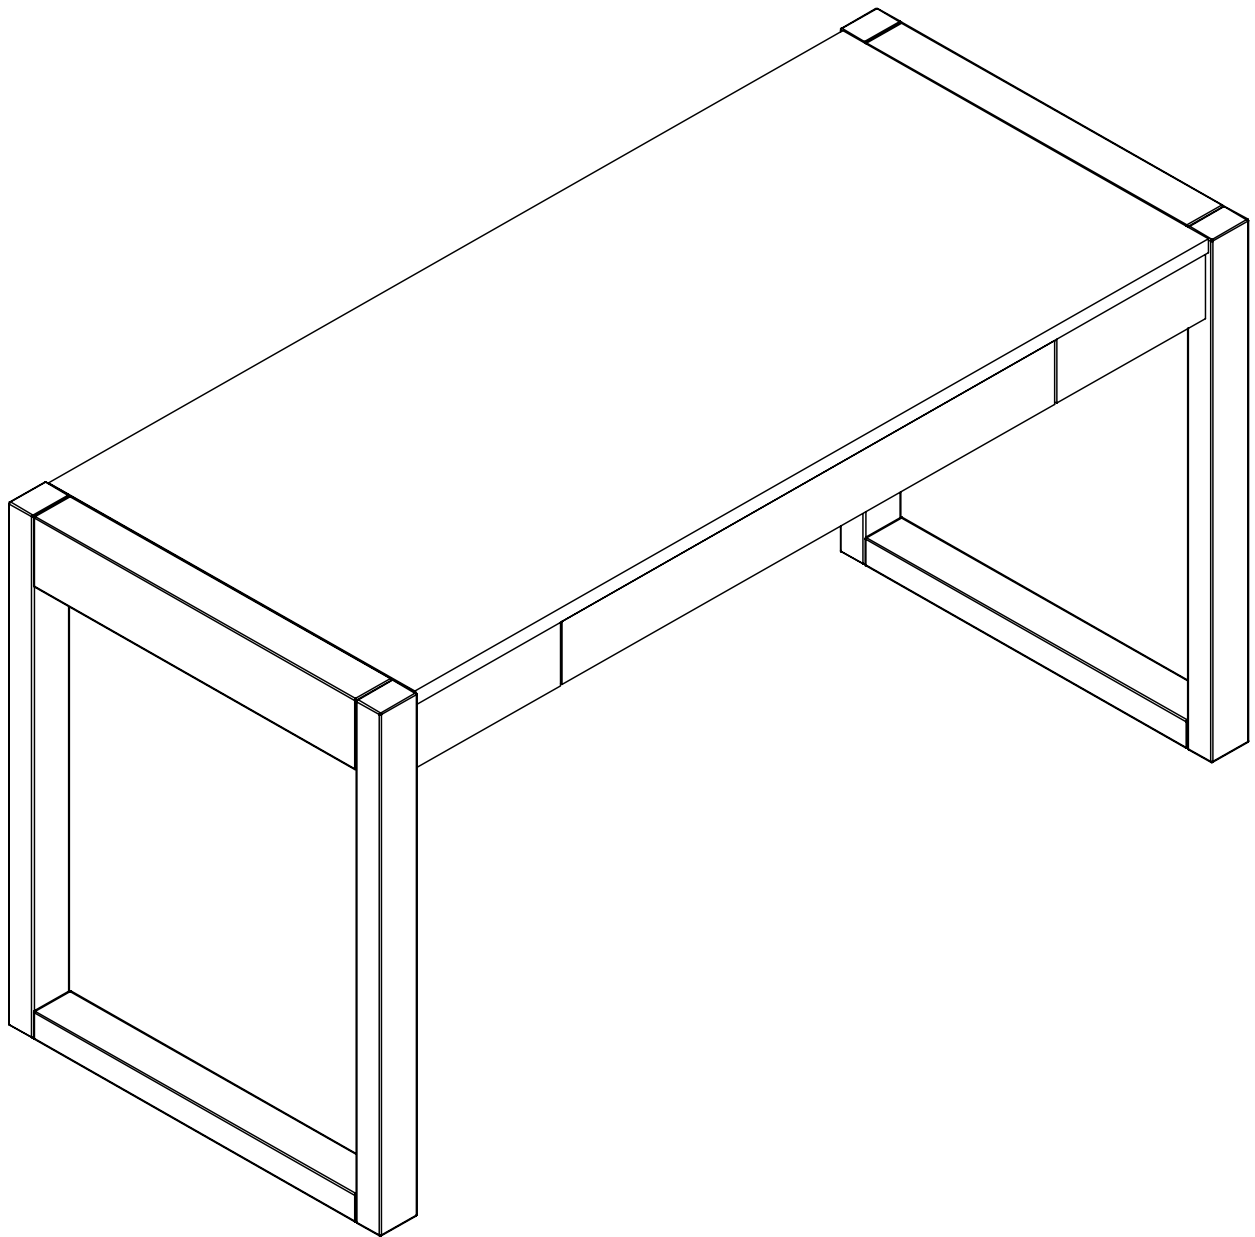
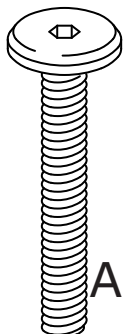
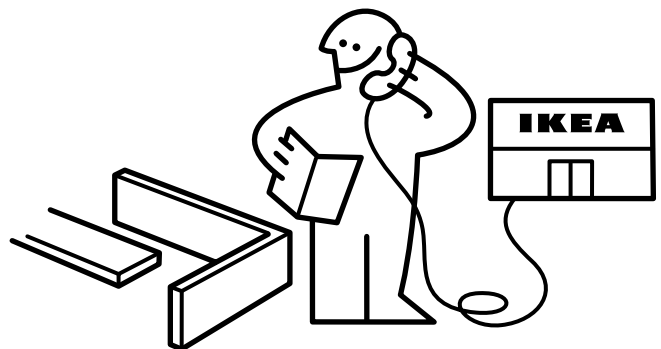
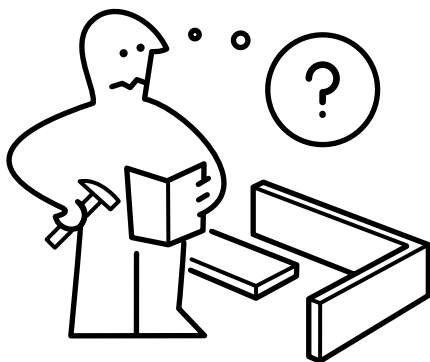
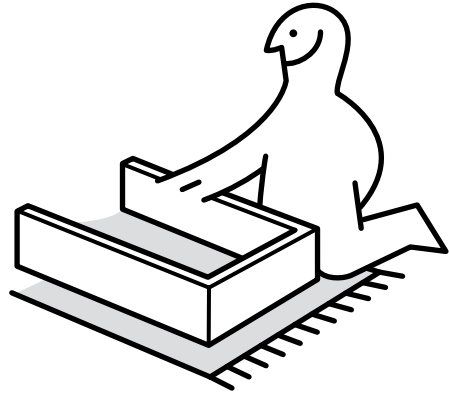
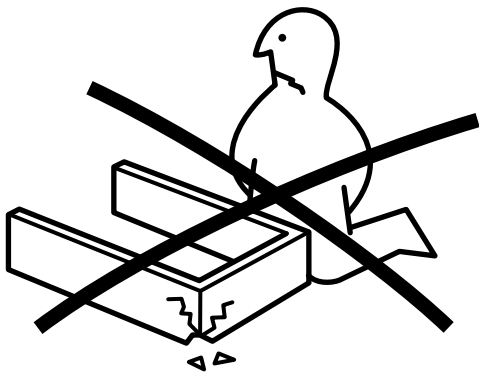



INHOPP

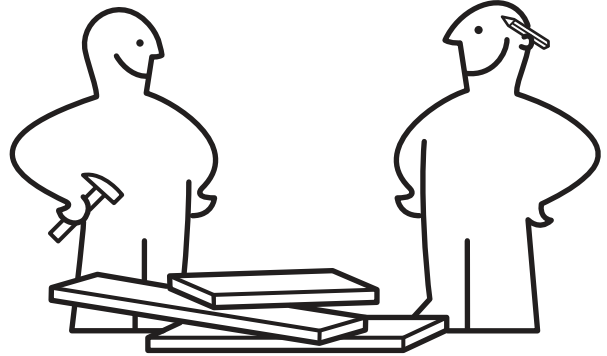

Design and Quality
IKEA of Sweden

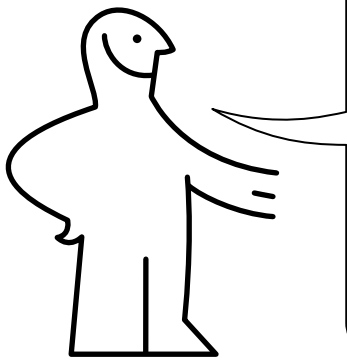


6x

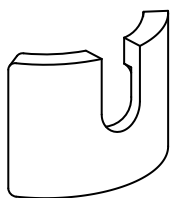

8x

115983




8x

123098




4x

100842





8x

101350



4x

128833

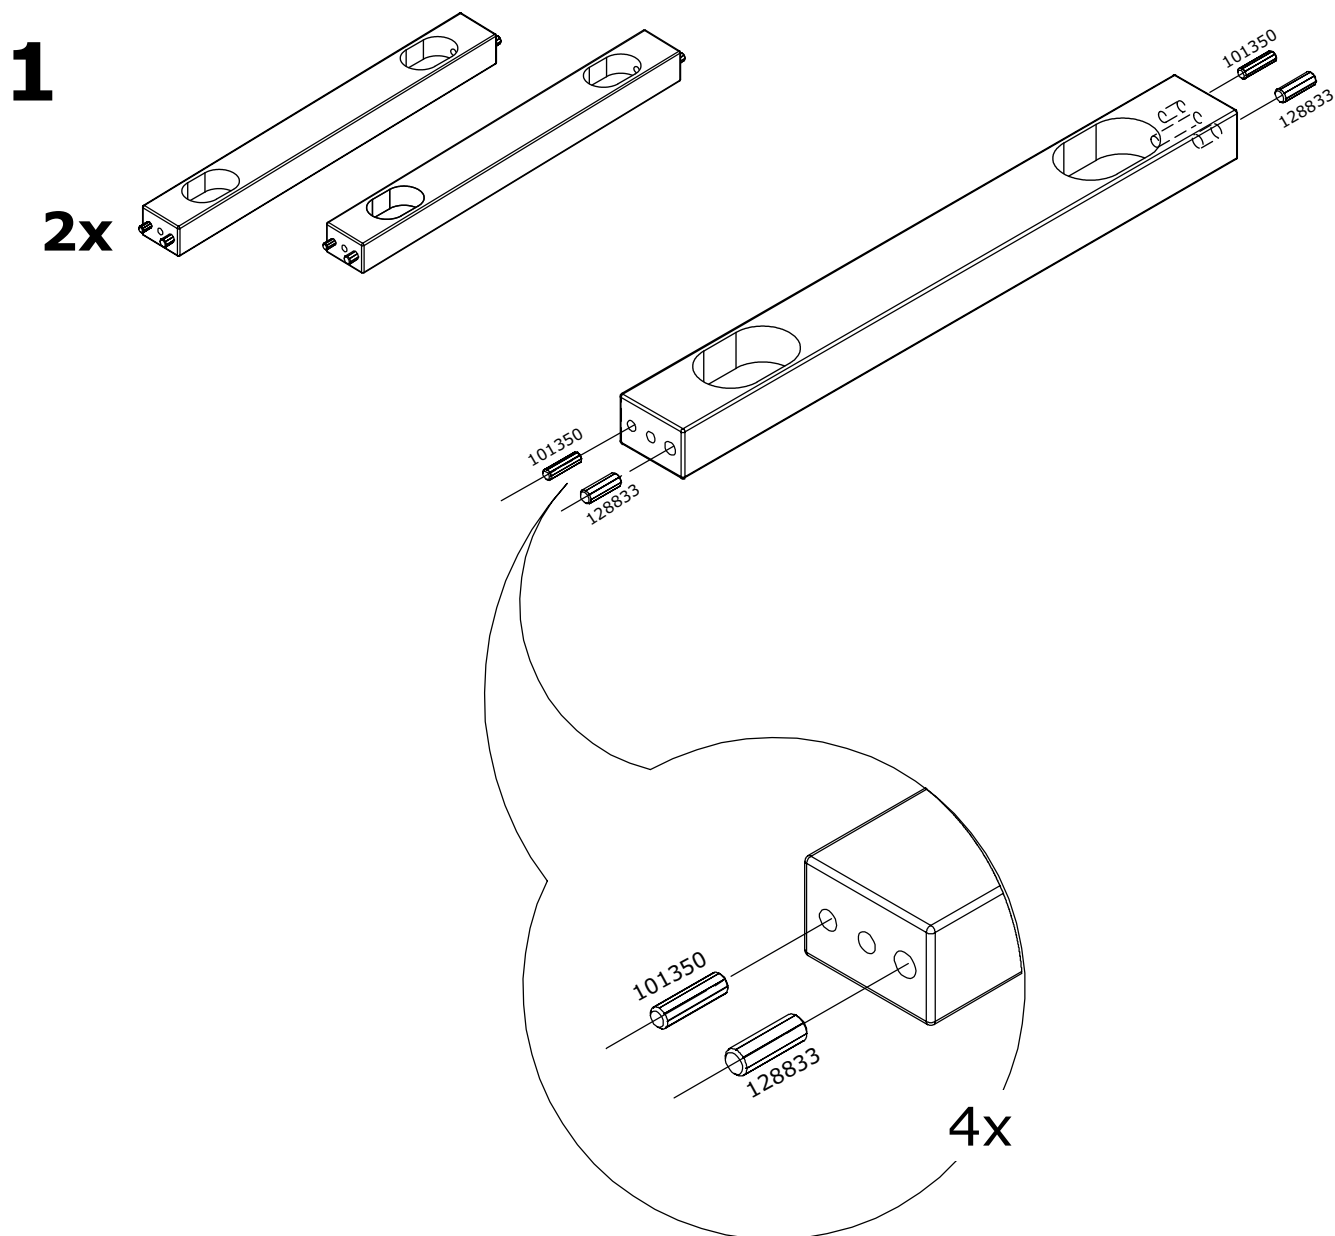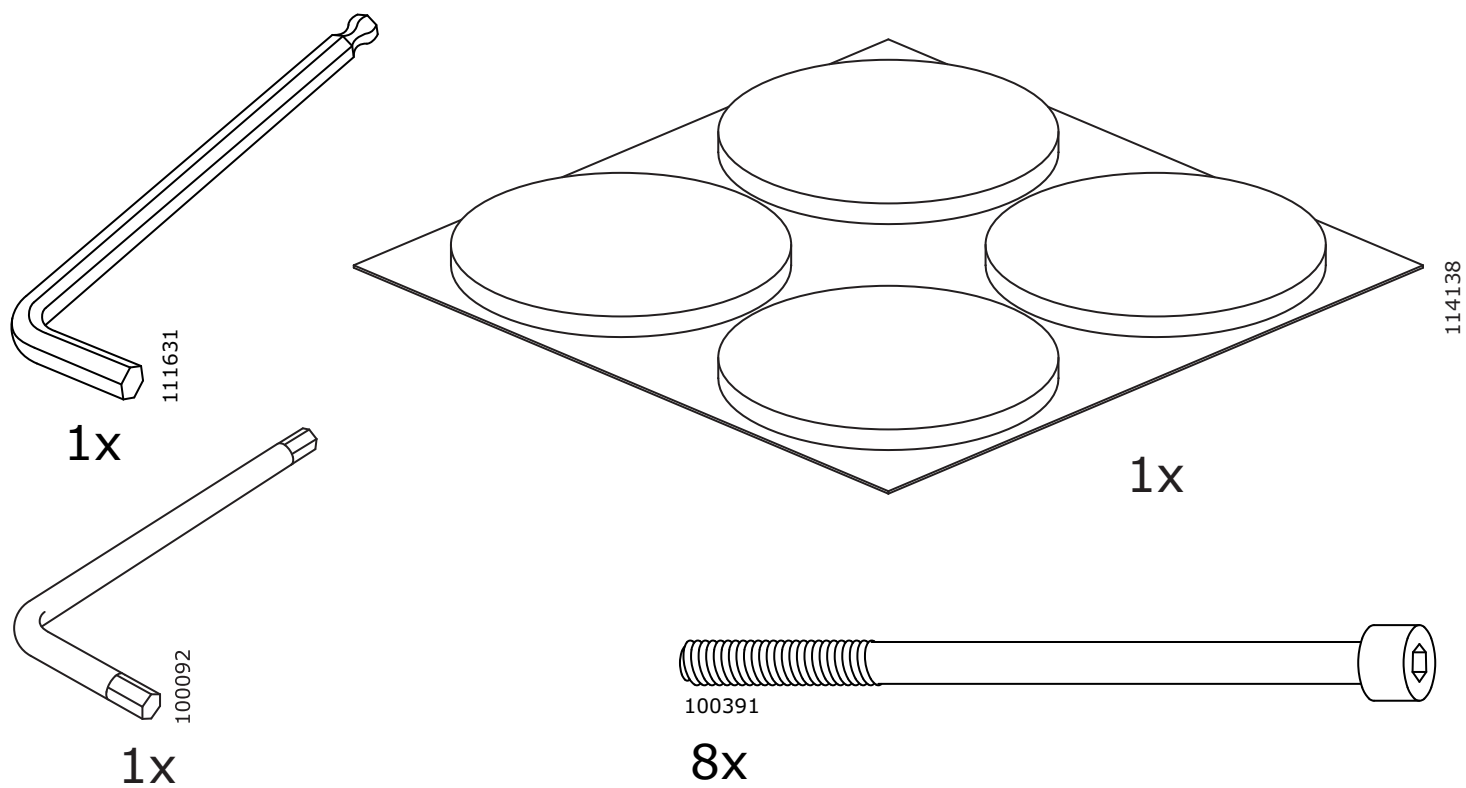


Assembly diagram for the backrest of a chair. The diagram shows two long backrest panels (2x) and four corner brackets (4x). The panels are attached to the chair frame using screws (163001) and corner brackets (100391). A height dimension of 8cm (3.15 inches) is indicated for the backrest. The corner brackets are also secured with screws (123098).


3

Diagram 3 illustrates the assembly of the side rails. Two long vertical side rails are shown being attached to the horizontal base rail. A circular inset provides a close-up view of the mounting bracket on the side rail. Arrows indicate the direction of assembly.


4

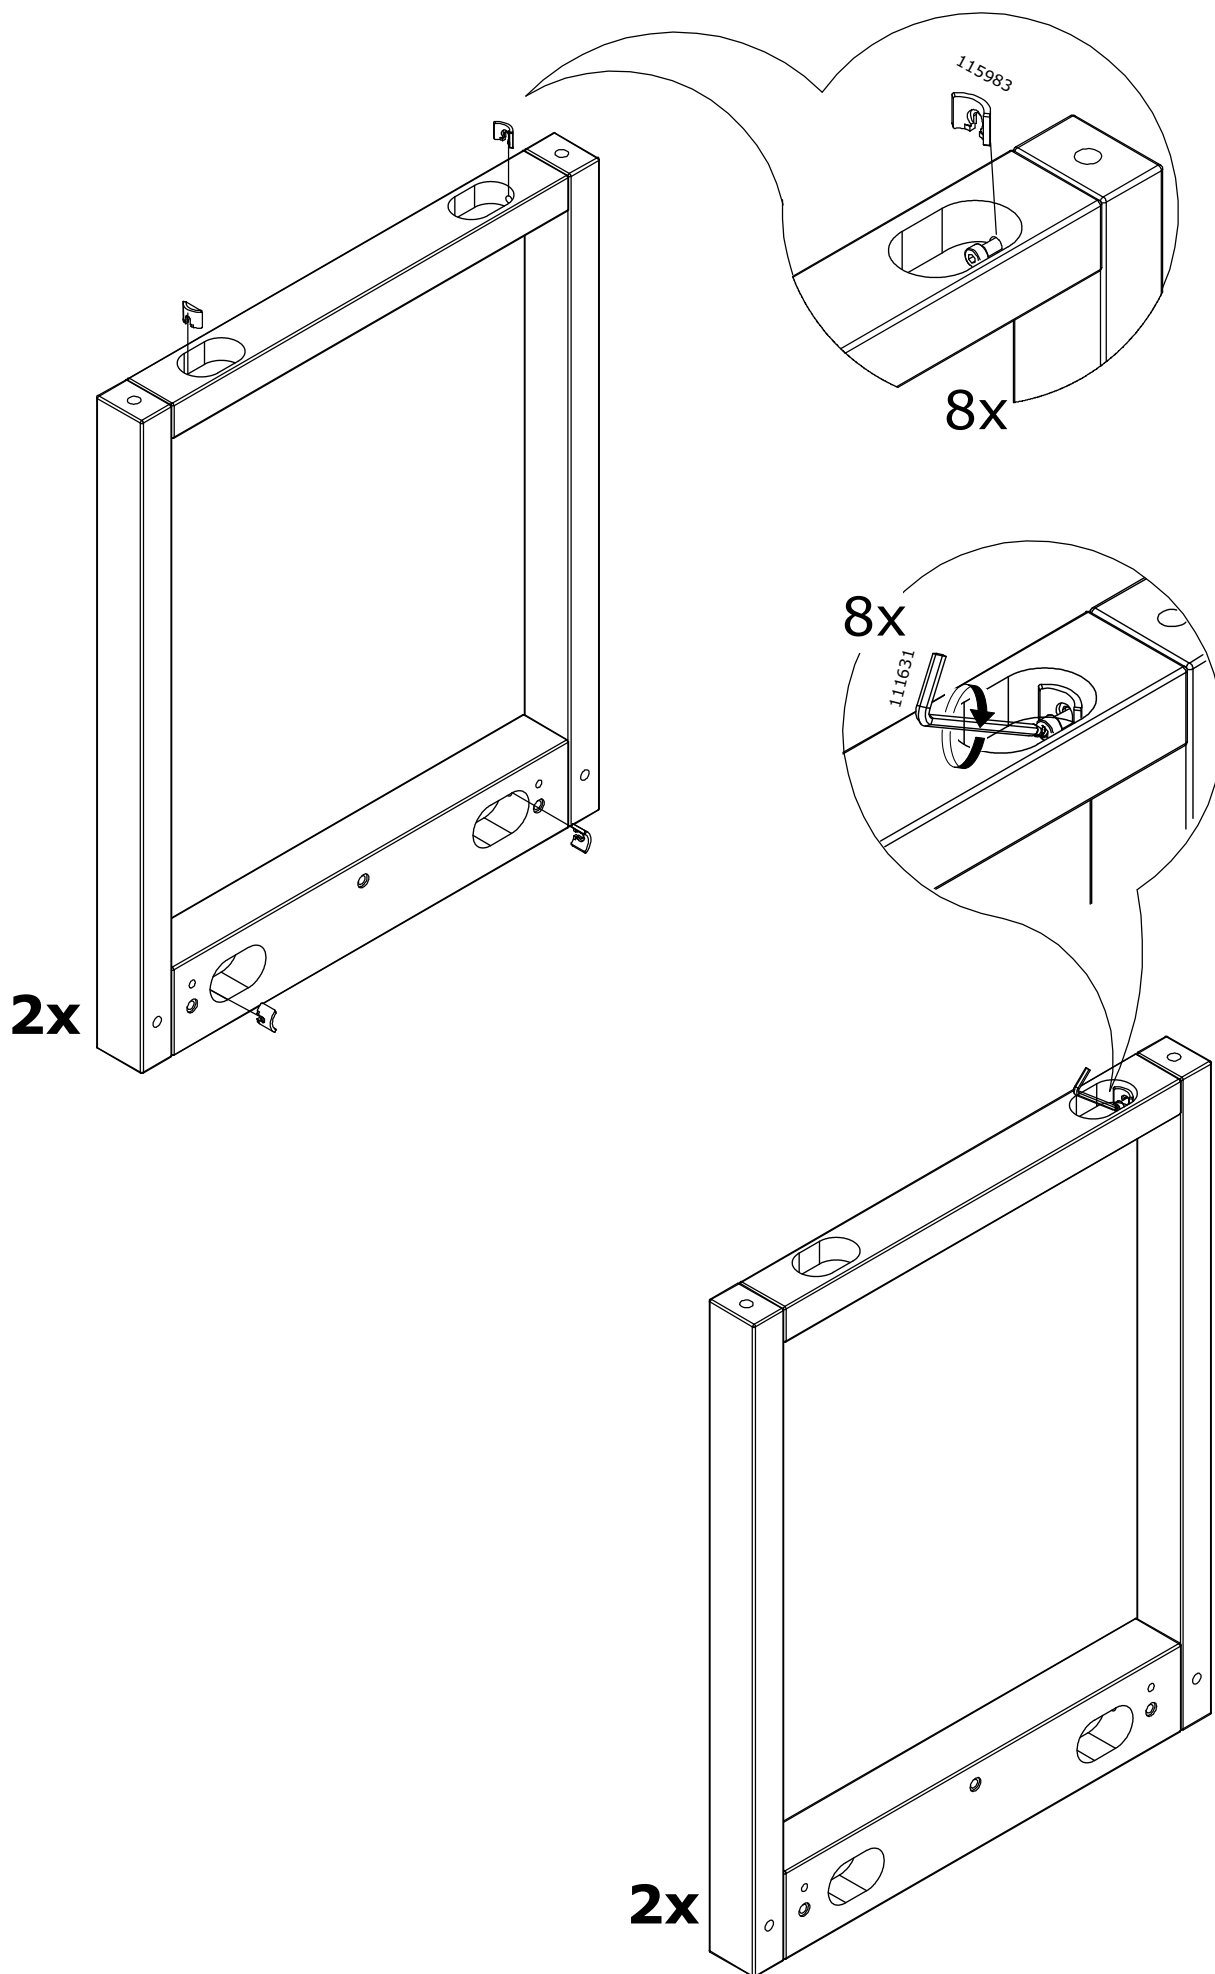


5

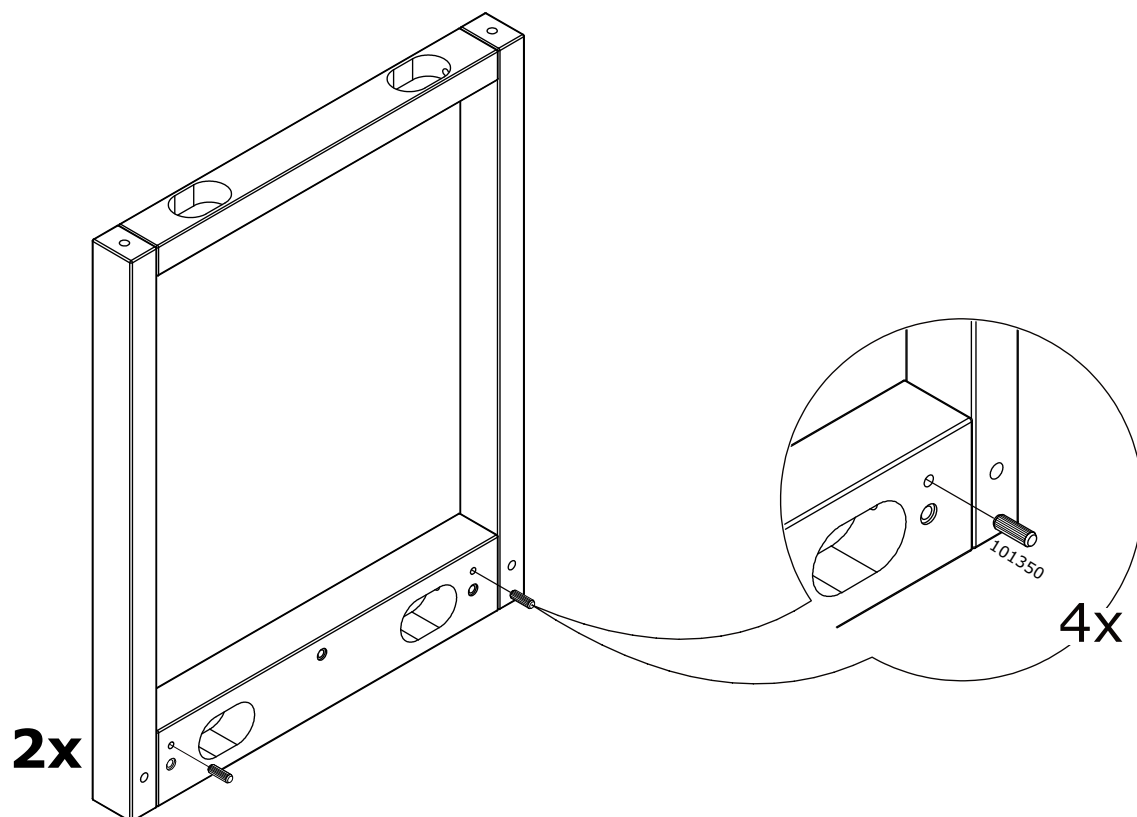

6

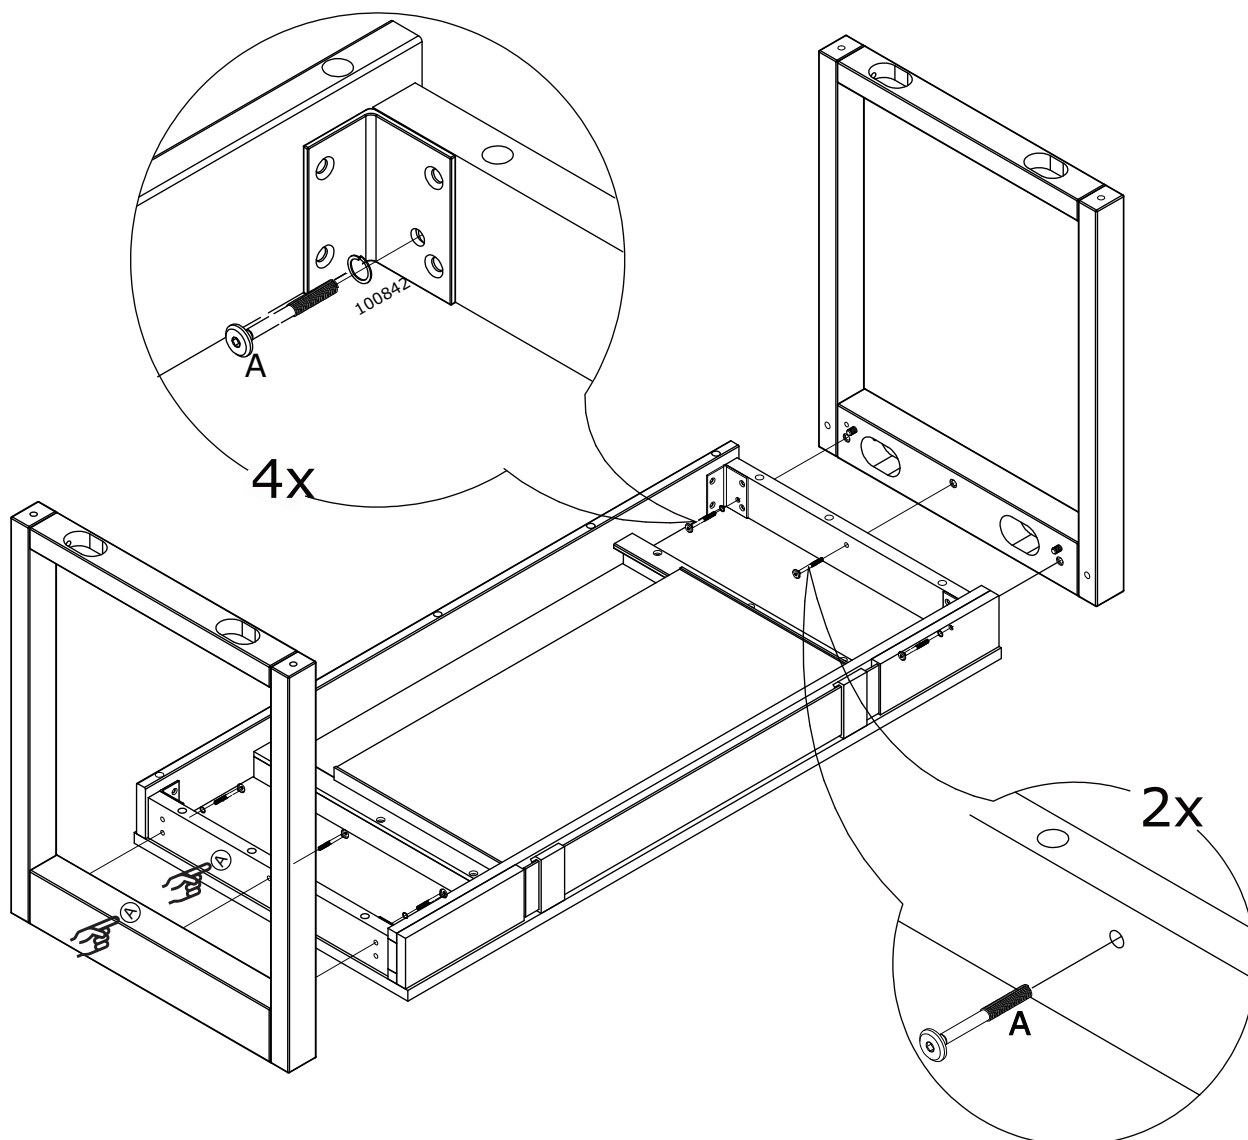

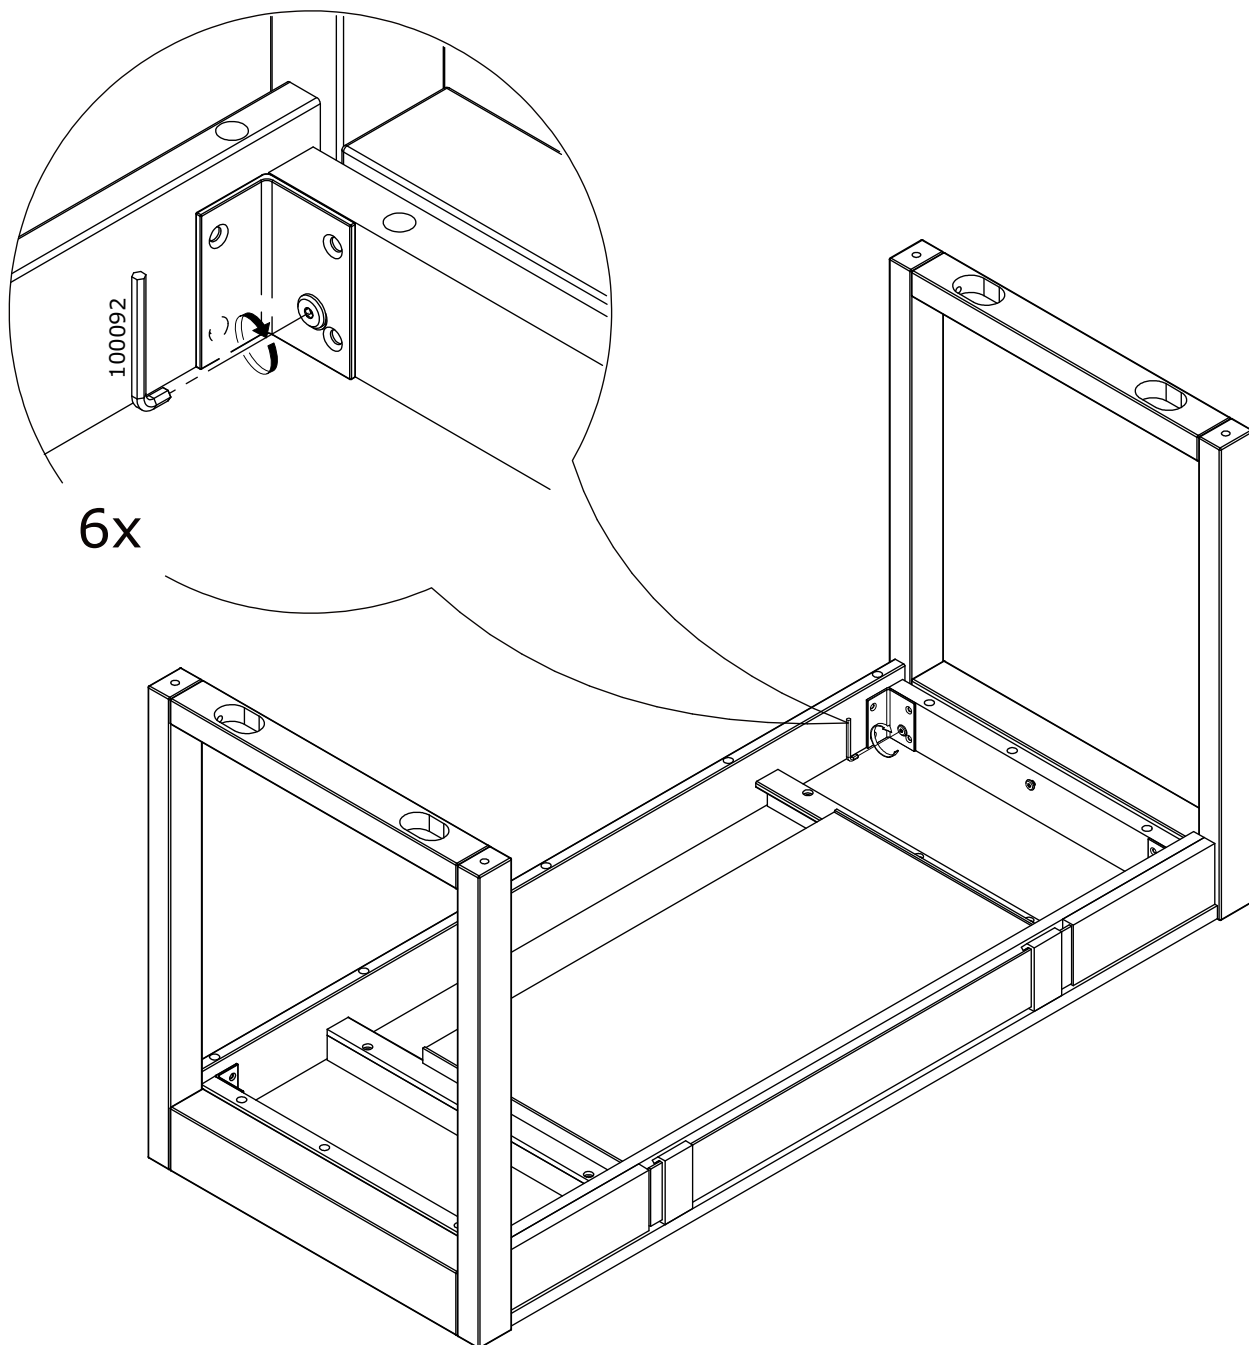

8

