

**Note:** it is very important to read and follow the directions in the installation instructions before proceeding with this rear wall template.

This rear wall template serves to position the bottom mounting plate and to locate the horizontal exhaust outlet.

1. Use a level to check that the template is positioned accurately.
2. Locate and mark at least one stud on the left or right side of the centerline.


**Note:** it is important to use at least one load bearing screw mounted firmly in a stud to support the weight of the microwave. Mark two additional, evenly spaced locations for the other two screws.

3. Drill holes in the marked locations.

**Note:** do not install the mounting plate at this time.

4. Remove the template from the rear wall.

5. Review the installation instruction book for your installation situation.

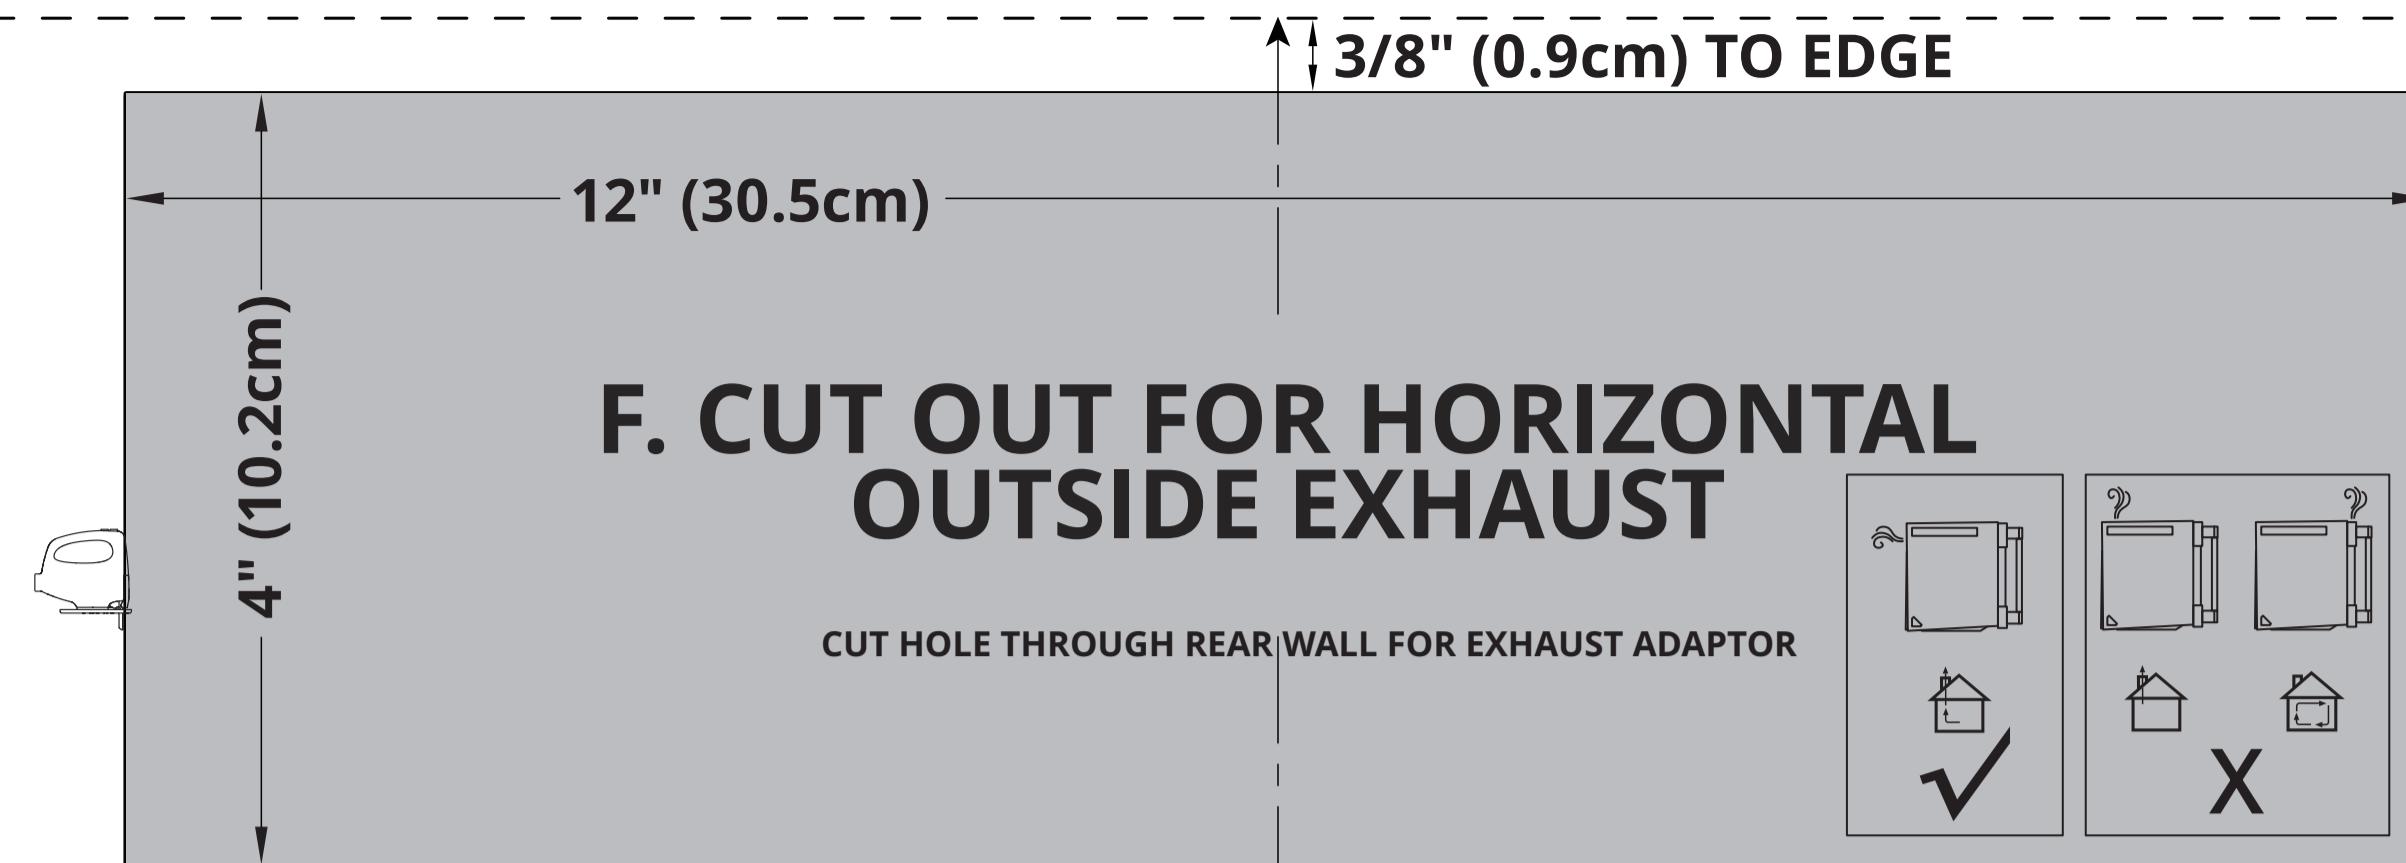

CAUTION - IF EXHAUST ADAPTOR IS POSITIONED OUTSIDE  
RECOMMENDED DIMENSION, GREASE-LADEN AIR WILL  
DISCHARGE INTO HOUSE STRUCTURE.


30" MINIMUM WIDTH REQUIRED

# REAR WALL TEMPLATE

C

**Note:** Depending on your stud locations, your installation may look different. You should mount to at least one stud.

Part No.:316902478

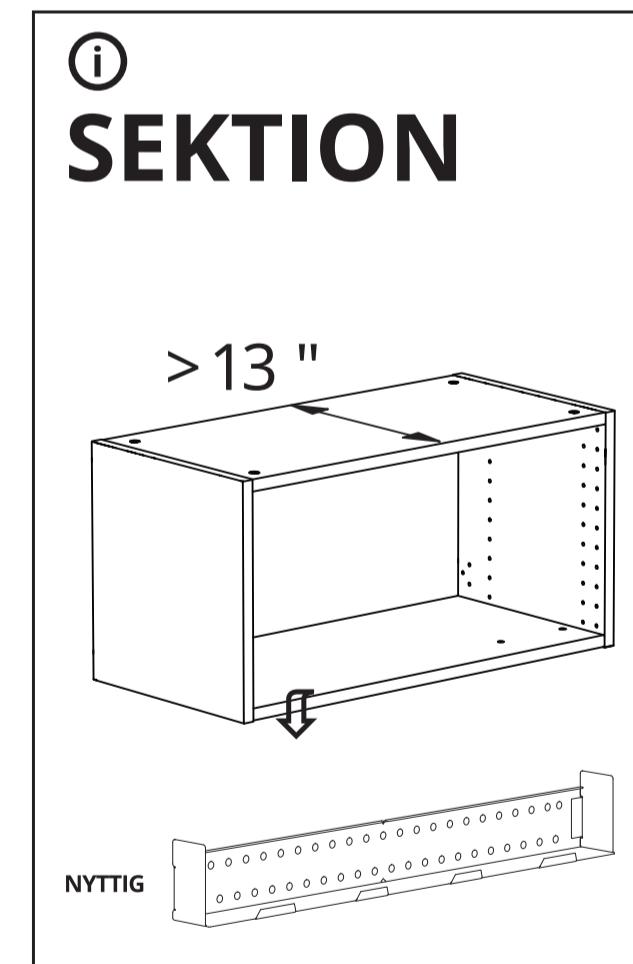

PN:16170004/23719

**Remarque :** il est très important de lire et de suivre les indications des instructions d'installation avant de procéder à l'installation de ce gabarit de paroi arrière.

Ce gabarit de paroi arrière sert à positionner la plaque de montage inférieure et à localiser la sortie d'échappement horizontale.


1. Utilisez un niveau pour vérifier que le gabarit est positionné avec précision.
2. Localisez et marquez au moins une cheville sur le côté gauche ou droit de l'axe central.

**Remarque :** il est important d'utiliser au moins une vis à bois insérée fermement dans une cheville pour supporter le poids du micro-ondes. Marquez deux emplacements supplémentaires, régulièrement espacés, pour les deux autres vis.

3. Percez des trous aux endroits marqués.

**Remarque :** ne pas installer la plaque de montage pour l'instant.

4. Retirer le gabarit de la paroi arrière.
5. Consultez le manuel d'instructions d'installation pour connaître votre situation d'installation.

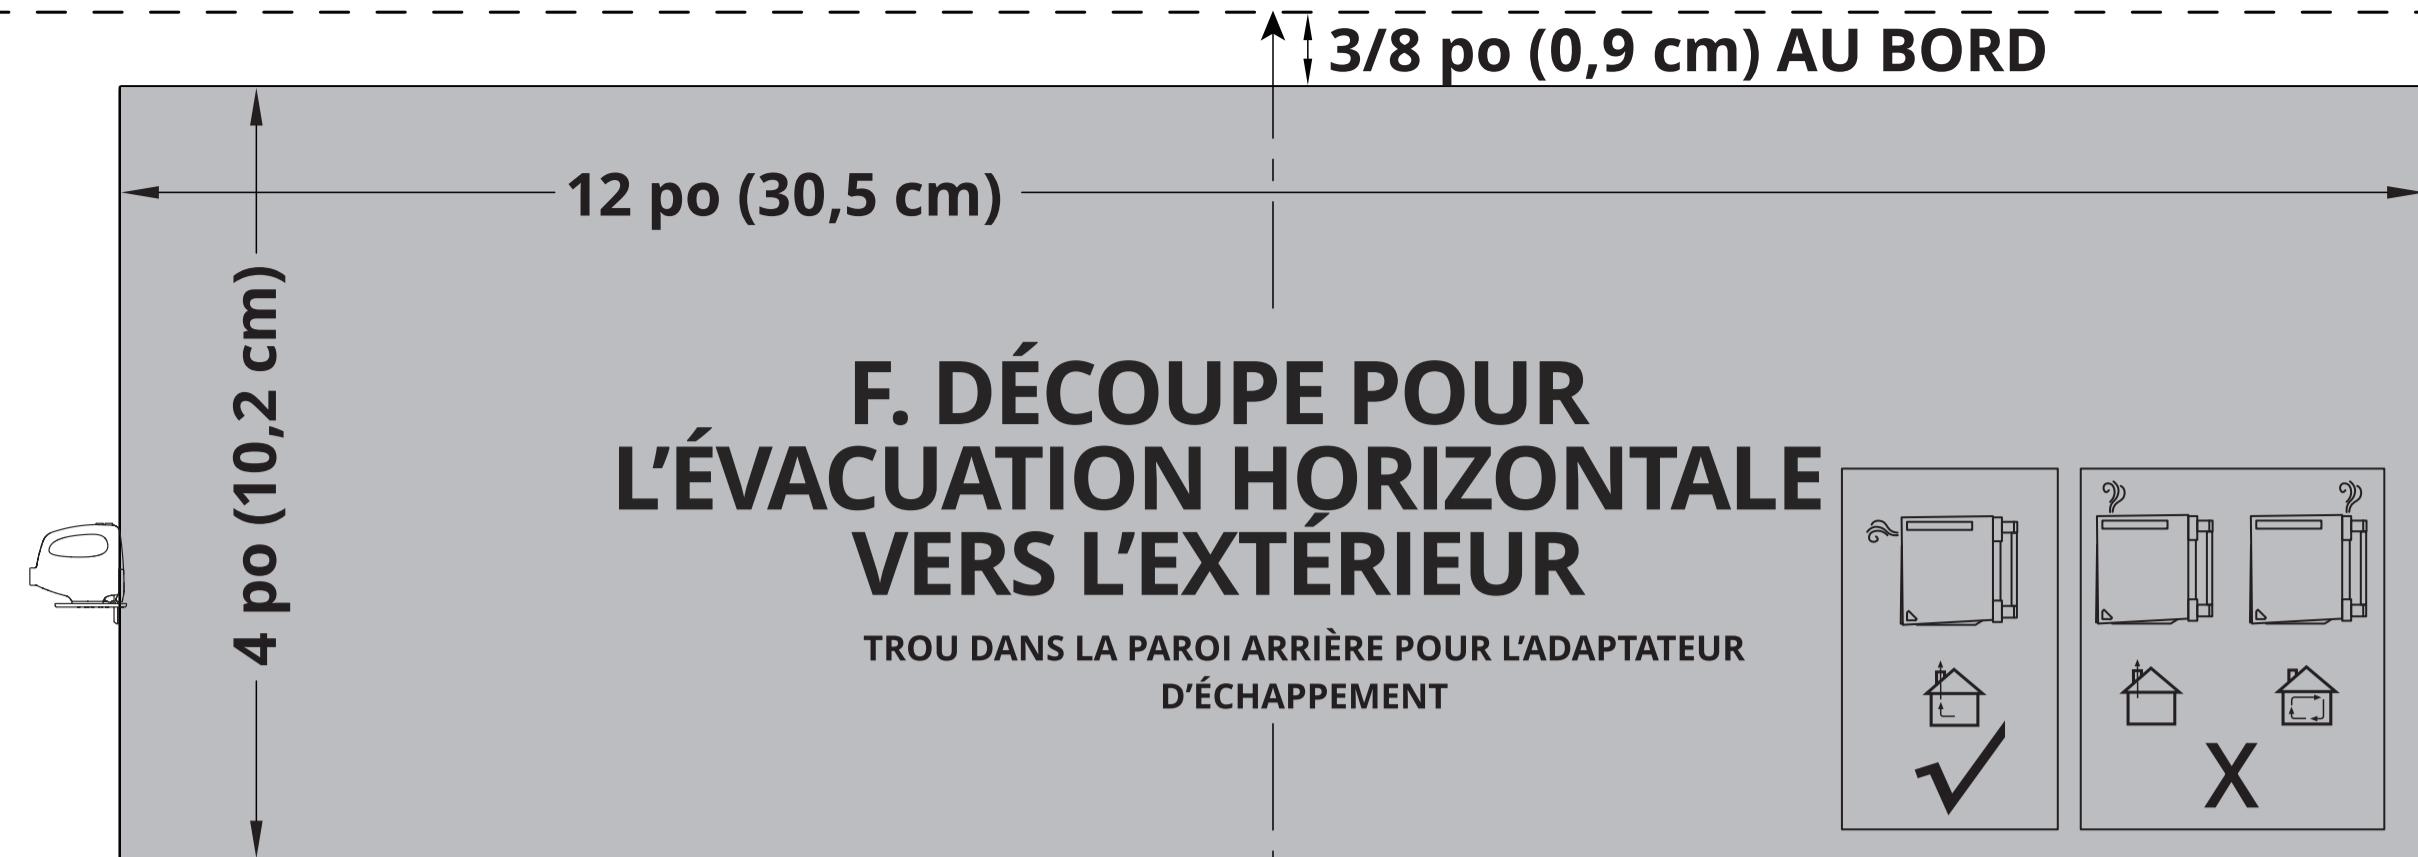

ATTENTION - SI L'ADAPTATEUR ÉCHAPPEMENT EST POSITIONNÉ EN DEHORS DES DIMENSIONS RECOMMANDÉES, L'AIR CHARGÉ DE GRAISSE S'ÉCOULERA DANS LA STRUCTURE DE LA MAISON.

LARGEUR MINIMALE DE 30 POUCES REQUISE

# GABARIT DE MUR ARRIÈRE

C

**Remarque :** En fonction de l'emplacement des montants, votre installation peut être différente. Vous devez vous fixer sur au moins un montant.

N° de pièce : 316902478

