

BETYDLIG/RÄCKA/HUGAD

Curtain rod system

PARTS


Wall/ceiling bracket

Curtain rod holder

Curtain rod

Finial

Curtain rod corner connector

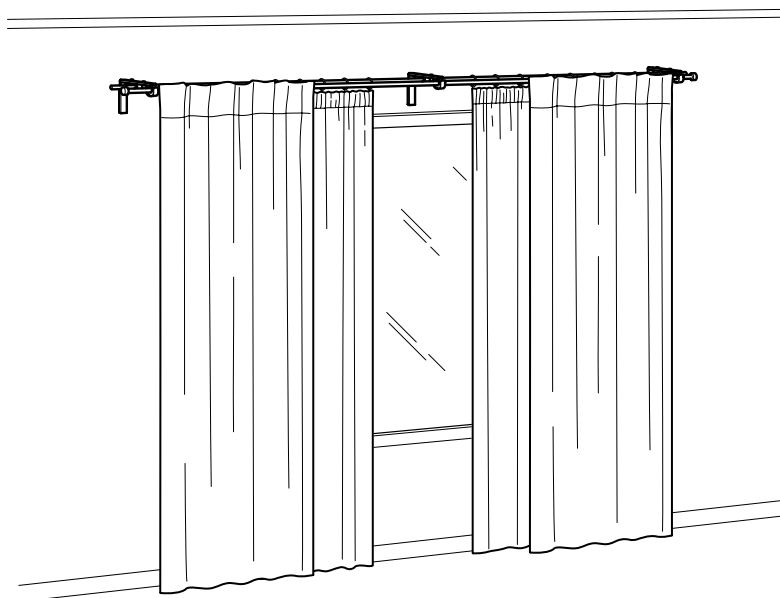

Simplicity and variety hand in hand

We all have different needs and preferences when it comes to dressing the windows in our home. But no matter what style you choose, you will need basic hardware like brackets, rods and finials to complete the job.

You can combine the different hardware in our range to create just the solution to suit your needs. You may want to mount a rod on the wall or the ceiling to create a simple one-layer curtain or a magnificent triple-layer curtain for your large windows.

The bracket and rod come in two colors: black and white. If you would like to give your window a new look, simply change finials. And you can change them any time you like — it's fun, easy and makes a big difference!

A high standard of accuracy has been sought in the preparation of this buying guide. We apologize for, but will not be bound by or responsible for, errors and omissions in this buying guide.

Not all products may be available in all stores. See what is available at your local store by visiting IKEA-USA.com. For more detailed product information, see the price tag or visit IKEA-USA.com. All products shown require assembly. All textiles shown are imported.




HOW TO BUILD

1



Two wall/ceiling brackets are needed for curtain rods up to 55 1/8".

2

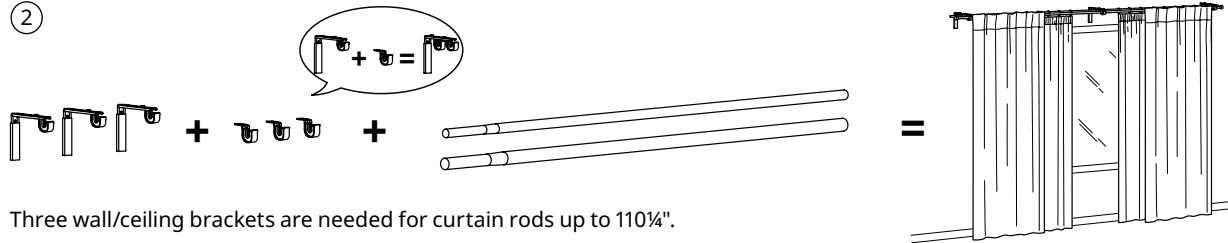


Three wall/ceiling brackets are needed for curtain rods up to 110 1/4".

1. The brackets can be mounted on the wall or the ceiling. And the position of the curtain rod holder can be adjusted, allowing curtains to be hung either close to the window or farther out.

The curtain rods come in two diameters, three lengths and two colors. All are extendable in length. You can complete the expression easily with finials from the IKEA range.

2. To create a layered solution, you just need to buy extra curtain rod holders and mount them on the brackets. Then add extra curtain rods.

COMBINATIONS

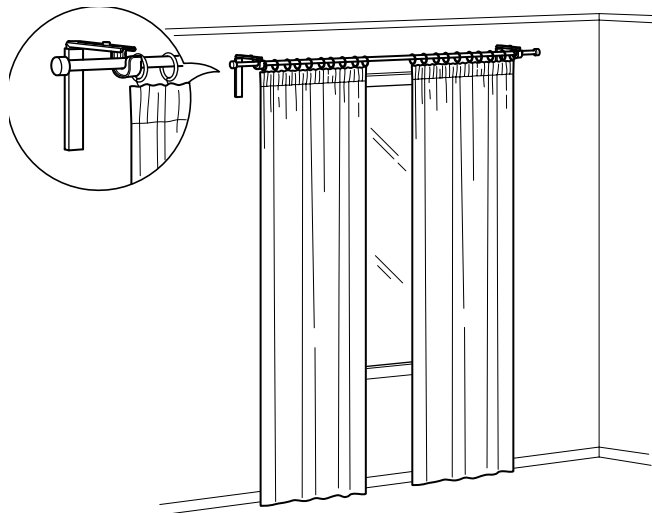


A single window, for example 36", with a single-layer solution.

Window hardware

RÄCKA Curtain rod 28-47". Black	002.171.65	1 pc
BETYDLIG Wall/ceiling bracket. Black	602.172.28	2 pcs
RAFFIG Finials. Black, 2pk	202.199.36	1 pc

This rod configuration
(Curtains, rings and hooks are sold separately.)

COMBINATIONS

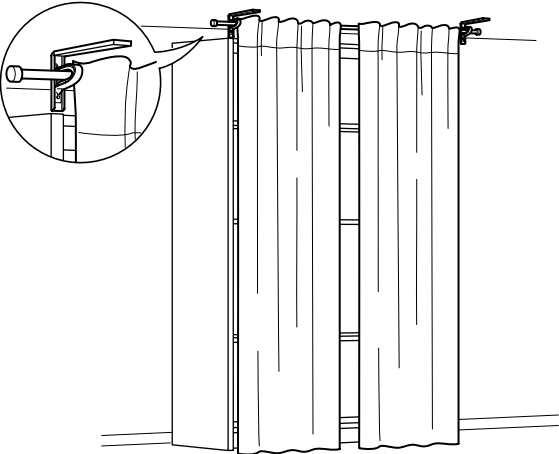

Ceiling mounted:


To create a cover for an open storage solution or to create a simple room divider, the brackets can be mounted on the ceiling.

Window hardware

RÄCKA Curtain rod 47-83". Black	302.171.59	1 pc
BETYDLIG Wall/ceiling bracket. Black	602.172.28	2 pcs
RAFFIG Finials. Black, 2pk	202.199.36	1 pc

This rod configuration

(Curtains are sold separately.)

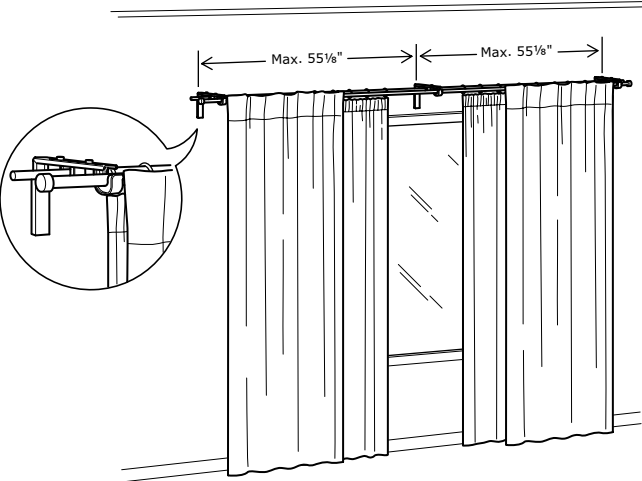

For a wide window:

96", with a double-layer solution using a sheer curtain inside and a thick curtain outside. Remember, for curtain rods extending between 55-110", you will need **3** BETYDLIG wall/ceiling brackets to ensure stability.


Window hardware

RÄCKA Curtain rod 83-152". Black	702.171.57	1 pc
HUGAD Curtain rod 83-152". Black	502.171.39	1 pc
BETYDLIG Wall/ceiling bracket. Black	602.172.28	3 pcs
BETYDLIG Curtain rod holder. Black	502.198.93	3 pcs
RAFFIG Finials. Black, 2pk	202.199.36	2pk 1 pc

This rod configuration 699.292.47

(Curtains, rings and hooks are sold separately.)

COMBINATIONS

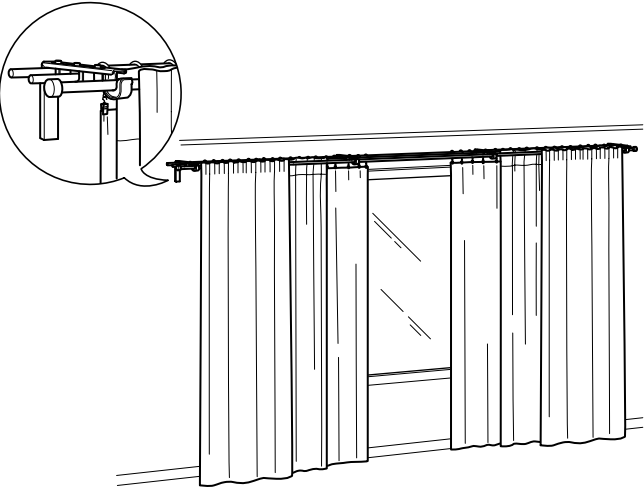

An extra large window solution:


120", using a triple-layer solution. There is room to hang panels, sheer curtains and heavy curtains at the same time. For curtain rods longer than 110", you will need **4** BETYDLIG wall/ceiling brackets to ensure stability.

Window hardware

RÄCKA Curtain rod 83-152". Black	702.171.57	2 pcs
HUGAD Curtain rod 83-152". Black	502.171.39	1 pc
BETYDLIG Wall/ceiling bracket. Black	602.172.28	4 pcs
BETYDLIG Curtain rod holder. Black	502.198.93	8 pcs
RAFFIG Finials. Black, 2pk	202.199.36	2pk 1 pc

This rod configuration 999.295.85
(Curtains, rings and hooks are sold separately.)

ALL THE PARTS

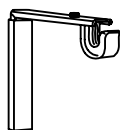

BETYDLIG Wall/ceiling bracket Max load 22 lbs.

Black	602.172.28
White	302.198.89



BETYDLIG Curtain rod holder L2¾". Needed for a double or triple curtain rod solution.

Black	502.198.93
White	602.198.97



RÄCKA Curtain rod L28-47". Max load 11 lbs.

Black	002.171.65
White	702.213.95



RÄCKA Curtain rod L47-83". Ø¾". To be completed with BETYDLIG wall/ceiling brackets. Two brackets needed for lengths up to 55" and three brackets for lengths 55-83". Max load 11 lbs.

Black	302.171.59
White	902.171.61



RÄCKA Curtain rod L83-152". Ø¾". To be completed with BETYDLIG wall/ceiling brackets. Three brackets needed for lengths up to 110" and four brackets for lengths 110-152". Max load 11 lbs.

Black	702.171.57
White	402.171.49




HUGAD Curtain rod L47-83". Ø1½". To be completed with BETYDLIG wall/ceiling brackets. Two brackets needed for lengths up to 55" and three brackets for lengths 55-83". Max load 22 lbs.

Black	302.171.35
White	102.171.41



HUGAD Curtain rod L83-152". Ø1½". To be completed with BETYDLIG wall/ceiling brackets. Three brackets needed for lengths up to 110" and four brackets for lengths 110-152". Max load 22 lbs.

Black	502.171.39
White	302.171.40

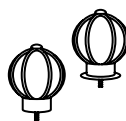

BLÅST Finials

Black	402.172.48	2pk
White/glass	303.331.87	2pk



RAFFIG Finials L1".

Black	202.199.36	2pk
White	502.171.82	2pk



SYRLIG Curtain rings with clip and hook
Max load 7 lbs. Ø1".

Black	102.172.40	10pk
White	402.240.98	10pk
Nickel-plated	103.057.98	10pk



SYRLIG Curtain rings with clip and hook
Max load 7 lbs. Ø1½".

Black	802.240.96	10pk
White	502.172.38	10pk
Nickel-plated	804.897.89	10pk
Brass-color	104.952.08	10pk

MEASURE YOUR WINDOW

When it comes to windows, one size does not fit all. Windows are built in different ways, and we all have different needs regarding curtains — whether your needs are privacy, light control, noise reduction, or just creating a beautiful window. Part of the secret to creating a functional window using several layers is to measure your window properly.

1. Measure the width of window

This determines the width of the curtain rod or track rail needed.

- Measure the width of your window from edge to edge of the wood frame.
- Add at least 6" for each side of the window.
- Ensuring maximum width for the curtain rod allows the curtains to be pulled fully to the side when opened.

2. Measure the height of window

This determines the length of your curtains.

- Measure from the top of the window frame and stop where you want the curtains to end.
- Adding 6" to the upper measurement gives space for your curtain rod or track rail.
- Hanging the curtains from ceiling to floor will create a visual appearance that the room is larger.

3. How many panels do I need?

To create a full window solution, the right number of panels are needed.

- Multiply the curtain rod width by 2, or for a fuller look by 2.5.
- Divide that number by the panel width to determine the number of panels needed.

